

SERVICE MANUAL (TROUBLESHOOTING)

ORIGINAL MANUAL ISSUE DATE: 2023.11

9-888-906-21

DISCLAIMER: USE AT OWN RISK. SONY AND ITS AFFILIATES ARE NOT LIABLE FOR ANY DAMAGE OR INJURY CAUSED TO ANY DIGITAL ELECTRONIC EQUIPMENT, PERSON, OR PROPERTY, WHICH OCCURS DUE TO USE OF THE TOOLS, PARTS, DOCUMENTATION, OR OTHER MATERIALS HEREIN PROVIDED, WHETHER FOR REPAIR, DIAGNOSIS, MAINTENANCE, MODIFICATION, OR OTHERWISE, INCLUDING BUT NOT LIMITED TO: ANY INDIRECT, INCIDENTAL, SPECIAL, OR CONSEQUENTIAL DAMAGES; ANY LOSS OF DATA, PRIVACY OR PROFITS; OR ANY INABILITY TO USE, OR REDUCED FUNCTIONALITY OF, THE DIGITAL ELECTRONIC EQUIPMENT.

The manual is intended for a trained professional and the use of the manual is at your own risk.

OLED TV

SONY®

Sony EMCS (Malaysia) Sdn. Bhd. HES-M
© 2023.11

MODEL LISTS

THIS SERVICE MANUAL CONTAINS TROUBLESHOOTING INFORMATION FOR BELOW REGIONS AND MODELS:



MODEL

XR-55A75L	XR-65A75L	-	-
XR-55A80K	XR-65A80K	XR-77A80K	-
XR-55A80L	XR-65A80L	XR-77A80L	XR-83A80L
XR-55A80CK	XR-65A80CK	XR-77A80CK	-
XR-55A80CL	XR-65A80CL	XR-77A80CL	XR-83A80CL

TABLE OF CONTENTS

Title	Page
SAFETY NOTES	4
SELF DIAGNOSIS FUNCTION	12
TROUBLESHOOTING	15
SOFTWARE UPDATE & RESET	143
DIAGRAMS	146
HANDLING GUIDE	155

Please refer Service Manual (Disassembly) for below information:

- Tools and Equipments
- FFC Precautions
- Disassembly and Removal Caution
- Wire Dressing
- Circuit Board Location
- Exploded Views and Part Lists
- Smart Core
- Appendix - Sharp Edge
- FFC Replacement Cautions

Note: Pictures provided in this manual may have difference from actual sets

SAFETY NOTES

1-1. Warnings and Caution.

- 1) CAUTION :These servicing instructions are for use by qualified service personnel only.
- 2) To reduce the risk of electric shock, do not perform any servicing other than that stated in the operating instructions unless you are qualified to do so.
- 3) WARNING!!: An isolation transformer should be used during any service to avoid possible shock hazard, because of live chassis. The chassis of this receiver is directly connected to the ac power line. The replaceable fuse should be in the neutral of the mains supply. When replacing the fuse, the mains must be disconnected to de-energize the phase conductors. (*Except AC ADAPTOR, because it does not carry out replacing an internal fuse.)
- 4) CARRYING THE TV: be sure to follow these guidelines to protect your property and avoid causing serious injury:
 - Carry the TV with an adequate number of people; larger size TVs require two or more people.
 - Correct hand placement while carrying the TV is very important for safety and to avoid damages.
- 5) SAFETY-RELATED COMPONENT WARNING!!: Components identified by shading and  mark on the exploded views, and in the parts list are critical for safe operations. Replace these components with Sony parts whose part numbers appear as shown in this manual or in supplements published by Sony. Circuit adjustments that are critical for safe operations are identified in this manual. Follow these procedures whenever critical components are replaced, or improper operation is suspected.

6) IMPORTANT REMINDER FOR TV MAIN BOARD REPLACEMENT:

It is mandatory for service centers to confirm the TV's system information after each repair is carried out with Main board replacement. Whenever a TV Main board is replaced, the correct TV Model and Serial number must be reinserted into memory. This is a MANDATORY procedure that each service center must apply.


1-2. Caution for OLED Panel.

1) Handling.

- When repairing the TV set, be sure you are grounded by using a wrist band.
- *Do not press on the panel or frame edge to avoid the risk of electric shock.
- *Do not scratch or press on the panel with any sharp objects.
- *Do not leave the module in high temperatures or in areas of high humidity for an extended period.
- *Do not expose the panel to direct sunlight.
- *Avoid contact with water. It may cause a short circuit within the module.
- *Disconnect the AC power when replacing.
- *Always clean the panel with a soft cloth material.
- *Use care when handling the wires or connectors. Damaging the wires may cause a short.
- *Protect the panel from ESD to avoid damaging the electronic circuit.
- *It is not recommended to POWER ON when the panel is laid facing down during repair activity. Refer Figure 1 (Next page)

SAFETY NOTES

*When transporting by hand, do not put pressure on the panel and the frame around the screen.

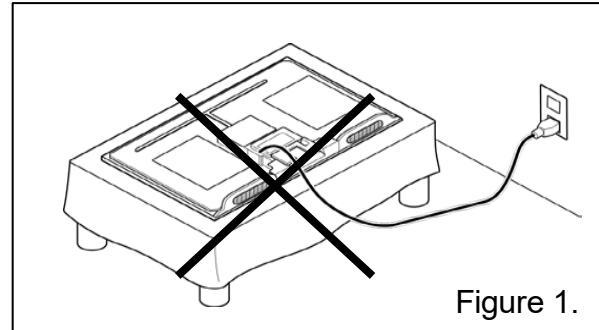

Refer to the panel handling chapter of each Service manual, or the "Transporting" information of the Reference Guide of each model on how to hold it.

2) OLED Screen.

- Although the OLED screen is made with high-precision technology and 99.99% or more of the pixels are effective, black dots may appear or bright points of light (white, red, blue, or green) may appear constantly on the OLED screen. This is a structural property of the OLED screen and is not a malfunction.
- Do not push or scratch the front filter or place objects on top of this TV set. The image may be uneven, or the OLED screen may be damaged.

- The screen and cabinet get warm when this TV set is in use. This is not a malfunction.

3) Precautions to Protect the Screen from Damage.

Image retention.

OLED TVs are susceptible to image retention (burn-in) due to the characteristics of the materials used. Image retention may occur if images are displayed in the same location on the screen repeatedly or over extended periods of time. This is not a malfunction of the TV. Avoid displaying images that may cause image retention.

The following are examples of images that may cause image retention:

- Content with black bars either on the top and bottom and/or the left and right sides of the screen. (for example, Letterboxed, 4:3 screen, Standard definition).
- Static images such as photos.
- Video games that might have static content in some part of the screen.
- On-screen menus, program guides, channel logos etc.
- Static content from applications.
- On-screen tickers, such as those used for news and headlines.

SAFETY NOTES

To reduce the risk of image retention:

- Fill the screen by changing [Wide mode] to eliminate the black bars. Select [Wide mode] other than [Normal].
- Turn off the OSD (On Screen Display) by pressing the DISPLAY button and turn off the menus from connected equipment. For details, refer to the instruction manuals for the connected equipment.
- Avoid displaying static images with bright colours (including white), clocks or logos on any portion of the screen.
- Set the picture settings based on the ambient conditions. The Standard Picture is recommended for home use and when viewing content that often displays the station logos, etc. The TV has following features to help reduce/prevent image retention. Press the HOME button, then select [Settings] – [Picture & Display] – [Expert panel settings] – the desired option.

Panel refresh

Panel refresh will automatically run to adjust the uniformity of the TV screen after it has been in use for long periods. Panel refresh can also be performed manually and should only be used if image retention is very noticeable, or you see the following message: [Panel refresh did not finish...]

Caution:

- The Panel refresh function may affect the panel. As a reference, perform the Panel refresh only once a year, do not perform it more than once a year as it may affect the usable life of the panel.
- Panel refresh takes about one hour to complete.
- A white line may be displayed on the screen during the Panel refresh, this is not a malfunction of the TV.
- Panel refresh will only work when the room temperature is between 10-40°C.

Pixel shift.

Automatically moves the image on the screen to prevent image retention.

Another feature.

The screen brightness is automatically reduced when displaying still images, clocks, bright colors or logos etc.

SAFETY NOTES

1-3. Caution_for_Board_handling.

The following problems will occur due to handling of the IC mounted on the board

- Solder crack due to substrate handling (stress).
- IC breakdown due to static electricity (ESD).

When repairing the TV at the customer's home or service station or Repair of defect board, please pay attention to the handling of the board.

Substrate that needs attention for handling :

- Main Board(B** Board)
- Backend Board(D** Board)

※Things to prepare in advance.

ESD wrist-strap.



※Caution: ESD wrist-strap to be checked daily.

Use Multi-meter to make sure resistance of ESD wrist-strap is OK.

(R=750K Ohms to 35Mega Ohms)

ESD cushion / sheet

Please use a bag containing the board or a special seat



1) Caution for Board handling(Stress).Be sure to observe the following contents.

① Hold the board with both hands



② Do not hold/push Heat-Sink



SAFETY NOTES

- ③ Handle with care. Do not swing



- ④ Regardless of Good board or Defective board, always put it on ESD cushion / sheet slowly.





- ⑤ Do not stack up



- ⑥ Keep vertical position and put in/take out from Box.
Always put into ESD bag then place into Box/Container Box



- ⑦ After take defective board out from TV, put it into ESD bag. Do not place on floor mat/carpet direct and always put it on ESD cushion

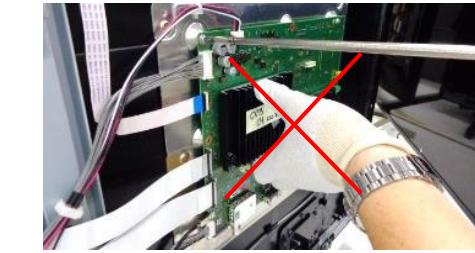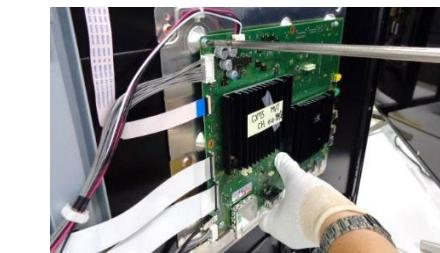


2) Caution for Board handling (ESD).Be sure to observe the following contents

- ① When take off Rear-Cover, do not touch to board




- ② Use ESD wrist-strap

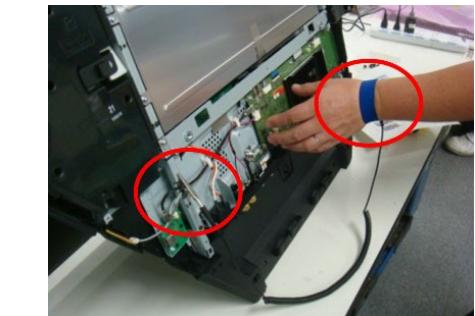


SAFETY NOTES

※ Installation example of wrist-strap.

Please connect the clip to the metal part of the chassis of the TV with the wristband grounded. Below is a grounding example of each model.

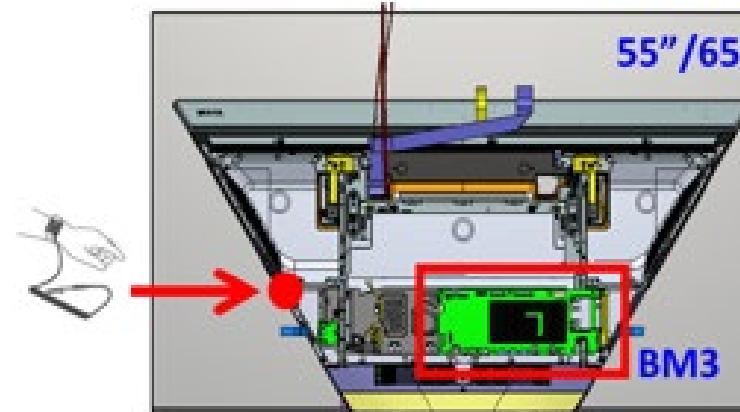

<K*-65Z9F>

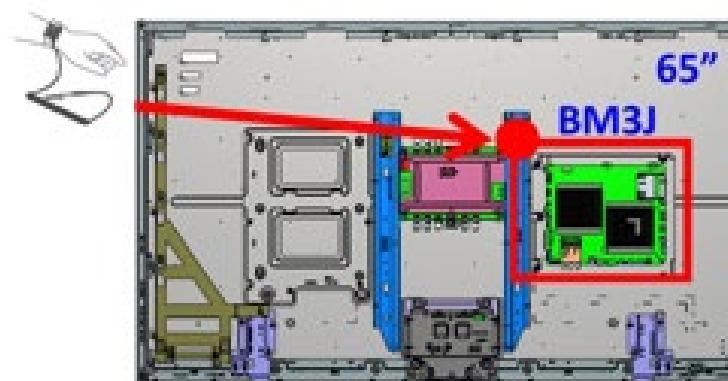

※ Caution : ESD wrist-strap to be checked daily.

Use Multi-meter to make sure resistance of ESD wrist-strap is OK.
(R=750K Ohms to 35Mega Ohms)

③ When holding board, do not hit or touch to Plastic part(s)



④ After take defective board out from TV, put it into ESD bag.
Do not place on floor mat/carpet direct. And, always put it on ESD cushion



1-4. Caution About the Lithium Battery.

- 1) Danger of explosion if battery is incorrectly replaced.
Replace only with the same or equivalent type.
- 2) Outer case broken battery should not contact to water.

SAFETY NOTES

1-5. Safety Check-Out

After correcting the original service problem, perform the following safety checks before releasing the set to the customer:-

- 1) Check the area of your repair for unsoldered or poorly soldered connections.
Check the entire board surface for solder splashes and bridges.
- 2) Check the inter board wiring to ensure that no wires are pinched or contact high-wattage resistors.
- 3) Check all control knobs, shields, covers, ground straps and mounting hardware have been replaced. Be certain you have replaced all the insulators.
- 4) Look for unauthorized replacement parts, particularly transistors that were installed during a previous repair. Point them out to the customer and recommend them replacement.
- 5) Look for parts which show obvious signs of deterioration even though functioning. Point them to the customer and recommend for replacement.
- 6) Check the line cords for cracks and abrasion. Recommend the replacement of any such line cord to the customer.
- 7) Check the antenna terminals, metal trim, metalized knobs, screws and all other exposed metal parts for AC leakage. Check leakage test as described next.
- 8) For safety reasons, repairing the Power board and/or Inverter board is prohibited.

1-6. Leakage Test.

(To protect electric shock when customer touch the terminal.). Leakage current can be measured by V: Voltmeter or oscilloscope (r.m.s or peak reading).

Stabilized power supply instrument and isolated voltage transformer:

Use too much current capacity and isolated voltage transformer does not need to use stabilized power supply equipment.

Specification of RMS voltmeter: Input resistance > 1 Mohm, Input capacitance < 200 pF, Frequency range: 15 Hz – 1MHz . Refer Figure 2. Isolated type volt - meter (FLUKE 8921A etc *1).

*1 Not use FLUKE 8920A that connected to protective earth by diode.

Leakage current of measurement instrument is less than 10 μ Arms when under test equipment AC plug is opened.

Set up the following condition and turn on the set. Applied voltage: Nominal input voltage (Description on Nameplate).

Measure the leakage current between one phase conductor and neutral for terminal A and terminal B.

Read rms value, and then calculate to peak value PEAK VALUE = $\sqrt{2}$ RMS VALUE.

Comply with the following requirement.

Class II equipment (2-pin plug): for each terminal, the worst value of measurement must not exceed AC 350 μ A peak).

Note: including AC adaptor, AC adaptor/DC operated unit combination.

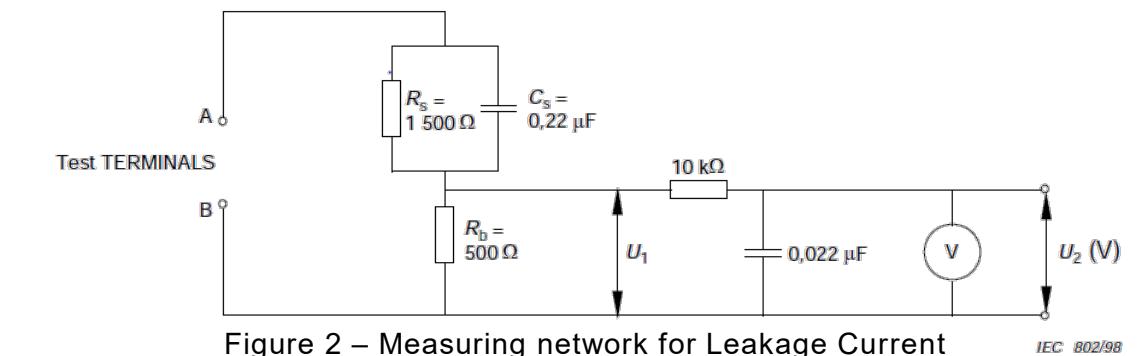


Figure 2 – Measuring network for Leakage Current

IEC 802/98

SAFETY NOTES

1-7. How to Find a Good Earth Ground.

- 1) A cold-water pipe is a guaranteed earth ground; the cover-plate retaining screw on most AC outlet boxes is also at earth ground.
- 2) If the retaining screw is to be used as your earth ground, verify that it is at ground by measuring the resistance between it and a cold-water pipe with an ohmmeter. The reading should be zero ohms.
- 3) If a cold-water pipe is not accessible, connect a 60- to 100-watt trouble-light (not a neon lamp) between the hot side of the receptacle and the retaining screw. Try both slots, if necessary, to locate the hot side on the line; the lamp should light at normal brilliance if the screw is at ground potential (see Figure 3).

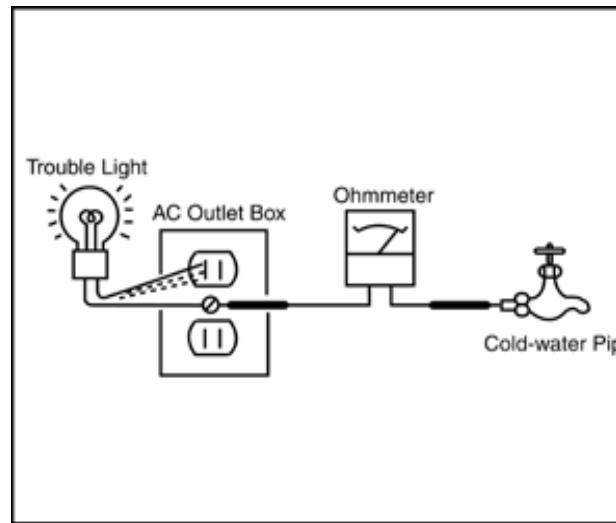


Figure 3. Checking for earth ground.

1-8. Lead Free Information

The circuit boards used in these models have been processed using Lead Free Solder. The boards are identified by the LF logo located close to the board designation.



Figure 4: LF Logo

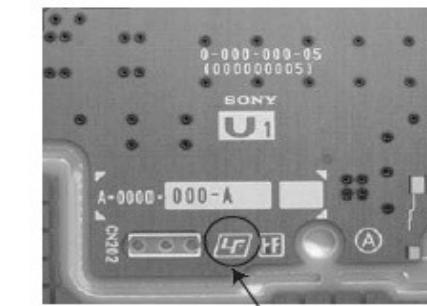


Figure 5: LF logo on circuit board

The servicing of these boards requires special precautions. It is strongly recommended to use Lead Free Solder material in order to guarantee optimal quality of new solder joints.

SELF DIAGNOSIS FUNCTION

The units in this manual contain a self-diagnostic function. If an error occurs, the Smart Core Red LED will automatically begin to flash. The number of times the LED flashes translates to a probable source of the problem.

A definition of the Smart Core Red LED flash indicators is listed in the instruction manual for the user's knowledge and reference.

If an error symptom cannot be reproduced, the remote commander can be used to review the failure occurrence data stored in memory to reveal past problems and how often these problems occur.

DIAGNOSTIC TEST INDICATORS

When an error occurs, the Smart Core Red LED will flash a set number of times to indicate the possible cause of the problem. If there is more than one error, the LED will identify the first of the problem areas.

Result for all of the following diagnostic items are displayed on screen. If the screen displays a "0", no error has occurred .

Self Diag. Quick Reference (LED blinking)

Smart Core RED LED blinking count	Error Item	Detection items – 55" / 65"/ 77"	Detection items – 83"
2x	MAIN_POWER	<B/G> Main 12V over voltage	
3x	DC_ALERT	<B/G> Main 5.0V failure	
	AUD_ERR	<B/S> Audio amp. protection	
4x	LD_ERR	'LD_ERR' for T-con internal error	<P/T/B/G> TCON internal error/TCON I2C communication failure
	BCM_ERR	'BCM_ERR' for EVDD_ERR	<P/T/G/B> EVDD failure
5x	P_ID_ERR	<B/T/P/G> <i>Panel ID EEPROM I2C No ACK (Also panel power failure is a suspect)</i>	<P/T/G/B> <i>Panel ID EEPROM I2C No ACK (Also, panel power failure is a suspect)</i> <T/B> <i>Data corruption in EEPROM</i>
6x	BACKLIGHT_ERR	<B/G/P/LD> Backlight failure	<P/G/B> EVDD over voltage
7x	TEMP_ERR	<B/H/P> Over temperature protection	
8x	4KBE_ERR		 4KBE WDT

Blue italic: detect at startup sequence only.

<G>: Power Supply board, : Main board, <T>: T-con board, <LD>: LD board, <P>: Panel module, <S>: Speaker, <H>: H-board

SELF DIAGNOSIS FUNCTION

Self Diag. Quick Reference (Not LED blinking [Record Only])

Error Item	Detection items – 55" / 65"/ 77"	Detection items – 83"
TCON ERR		None
AUD_ERR_I2C		 Audio amp I2C communication failure
TEMP_ERR_I2C		<B/H> Temp sensor I2C communication failure
TU_DEMOD_I2C		 Tuner & Demodulator I2C communication failure
AMB_ERR_I2C	None	<B/H> Ambient sensor I2C communication failure

: Main board, <H>: H-board

SELF DIAGNOSIS FUNCTION

Retry Limitation by Remote/Power Key

Smart Core Red LED blinking count	Error Name	Retry Permission Times *1	Note
2x	MAIN_POWER	STDWN_RTRY_LIMIT_MAINPOWR = 1	
3x	DC_ALERT (5V)	STDWN_RTRY_LIMIT = 2	
	AUD_ERR	STDWN_RTRY_LIMIT = 2	
4x	LD_ERR	STDWN_RTRY_LIMIT = 2	
	BCM_ERR	STDWN_RTRY_LIMIT = 2	
5x	P_ID_ERR	STDWN_RTRY_LIMIT = 2	
6x	BACKLIGHT	STDWN_RTRY_LIMIT = 2	
7x	TEMP_ERR	STDWN_RTRY_LIMIT = 2	
8x	4KBE_ERR	STDWN_RTRY_LIMIT = 2	

Number of off/on action for MAIN_POWER shutdown is recorded to STDWN_OFFON_CNT_MAIN_POWER*2.

Number of off/on action during the error shutdown is recorded to STDWN_OFFON_CNT*2.

*1) If $\text{STDWN_OFFON_CNT} \leq \text{STDWN_RTRY_LIMIT}$, and $\text{STDWN_OFFON_CNT_MAIN_POWER} \leq \text{STDWN_RTRY_LIMIT_MAINPOWR}$, you can turn the set on by a remote/power key. At this time, if the error occurs again, the STDWN_OFFON_CNT is incremented by 1.

*2) When the main micro operates normally for $\text{STDWN_OFFON_CLR} = 60$ minutes, STDWN_OFFON_CNT and $\text{STDWN_OFFON_CNT_MAIN_POWER}$ are cleared.

TROUBLESHOOTING

Triage Chart: XR-*80K / *80CK

Before you make the service call:

1. Confirm the symptom from the customer.
2. Select that symptom from the chart.
3. Bring all the boards and cables listed for that symptom.
4. Follow the troubleshooting charts in the technical guides to isolate the board.

5. Chart Color Code:
● : Most likely defective part
▲ : Secondary possible defective part

■ : Tertiary possible defective part

BLACK TEXT: Board that may correct the symptom

Reference	Symptoms - Shutdown. Power LED blinking red diagnostics sequences								Symptoms - no shutdown Error log record only								No Power	Video - missing or distorted					Remote	Network	Audio	Smart Core	Bluetooth (BT)	
	2	3	4	5	6	7	8	TU_DEMOD	TU_DEMOD_I2C	TCON_ERR	FRCTC_I2C	AUD_ERR_I2C	4KPQ_ERR_I2C	TEMP_ERR_I2C	EARC_ERR_I2C	AMB_ERR_I2C		No White Power LED & does not respond to remote (Dead Set)	Stationary colored lines or dots	No video One of Inputs	NO RF input	No video of Camera	No video all Inputs					
Main Board	▲	●	■	■	■	●	●	●	●	●	●	●	●	▲	●	●	▲	●	●	●	●	●	●	●	●	●		
Power Board	●	▲	■	■	■											●				●				▲				
Receiver Board																●		▲					●			●		
Speaker		▲																							●			
Wi-fi & BT Module																								●			●	
LD-Board			▲																									
V By One FFC				▲														▲		▲								
T-con					●													▲		■								
OLED Panel				●	▲	●	▲										●			■								
Camera (bundle or accessory)																			●									
Problem	Power	Power	Panel	Panel (Communication)	Panel (Backlight)	TEMP	4KBE																					
	Audio	LD	T-con																									

TROUBLESHOOTING

Triage Chart: XR-*A80L / *A80CL / XR-*A75L

Before you make the service call:

1. Confirm the symptom from the customer.
2. Select that symptom from the chart.
3. Bring all the boards and cables listed for that symptom.
4. Follow the troubleshooting charts in the technical guides to isolate the board.
5. Chart Color Code:
 - : Most likely defective part
 - : Tertiary possible defective part
 - ▲ : Secondary possible defective part

BLACK TEXT: Board that may correct the symptom

Reference	Symptoms - Shutdown. Power LED blinking red diagnostics sequences								Symptoms - no shutdown Error log record only								No Power	Video - missing or distorted					Remote	Network	Audio	Smart Core	Bluetooth (BT)
	2	3	4	5	6	7	8	TU_DEMOD	TU_DEMOD_I2C	TCON_ERR	FRCTC	AUD_ERR_I2C	4KPQ_ERR_I2C	TEMP_ERR_I2C	EARC_ERR_I2C	AMB_ERR_I2C	No White Power LED & does not respond to remote (Dead Set)	Stationary colored lines or dots	No video One of Inputs	NO RF input	No video of Camera	No video all Inputs	No Remote Operation	Cannot connect to Wireless Network	No Audio	Smart Core no LED (Set is still alive)	Bluetooth / One Step Remote (OSR) can't connect
Main Board	▲	●	■	■	■	●	●		●			●		▲			▲	▲	●	●	▲	●	▲	●	▲	▲	
Power Board	●	▲	■	■	■												●					▲		▲			
Receiver Board														●			▲					●			●		
Speaker		▲																							●		
Wi-fi & BT Module																							●			●	
V By One FFC				▲														▲				▲					
T-con			▲	●														▲				■					
OLED Panel			●	▲	●	●	▲										●					■					
Camera (bundle or accessory)																				●							
Problem	Power	Power	Panel	Panel (Communication)	Panel (Backlight)	TEMP	4KBE																				
		Audio	LD	T-con																							

TROUBLESHOOTING

Triage Chart: XR-83A80*

Before you make the service call:


1. Confirm the symptom from the customer.
2. Select that symptom from the chart.
3. Bring all the boards and cables listed for that symptom.
4. Follow the troubleshooting charts in the technical guides to isolate the board.
5. Chart Color Code:
 - : Most likely defective part
 - : Tertiary possible defective part
 - ▲ : Secondary possible defective part

BLACK TEXT: Board that may correct the symptom

Reference	Symptoms - Shutdown. Power LED blinking red diagnostics sequences								Symptoms - no shutdown Error log record only								No Power	Video - missing or distorted					Remote	Network	Audio	Smart Core	Bluetooth (BT)	
	2	3	4	5	6	7	8	TU_DEMOD	TU_DEMOD_I2C	TCON_ERR	FRCTC_I2C	AUD_ERR_I2C	4KPQ_ERR_I2C	TEMP_ERR_I2C	EARC_ERR_I2C	8KBE_ERR_I2C	AMB_ERR_I2C	No White Power LED & does not respond to remote (Dead Set)	Stationary colored lines or dots	No video One of Inputs	NO RF input	No video of Camera	No video all Inputs	No Remote Operation	Cannot connect to Wireless Network	No Audio	Smart Core no LED (Set is still alive)	Bluetooth / One Step Remote (OSR) can't connect
Main Board	▲	●	■	■	■	●	●		●			●	▲			▲	▲	▲	●	●	▲	▲	●	▲	▲	▲	▲	
Power Board	●	▲	■	■	▲												●				▲				▲			
Receiver Board														●		●	▲					●					●	
Actuator (Panel module)		▲																									●	
Speaker (Sub woofer)		▲																									●	
Wi-fi & BT Module																											●	
V By One FFC				▲														▲				▲						
T-con (Panel module)			▲		●													▲				■						
OLED Panel (Panel module)			●	▲	●	▲											●				■							
Camera (accessory)																				●								
Problem	Power	Power	Panel module	Panel (Communication)	Panel Power	TEMP	4KBE																					
		Audio	T-con Power	T-con																								

TROUBLESHOOTING


1.0 No Power - PSU

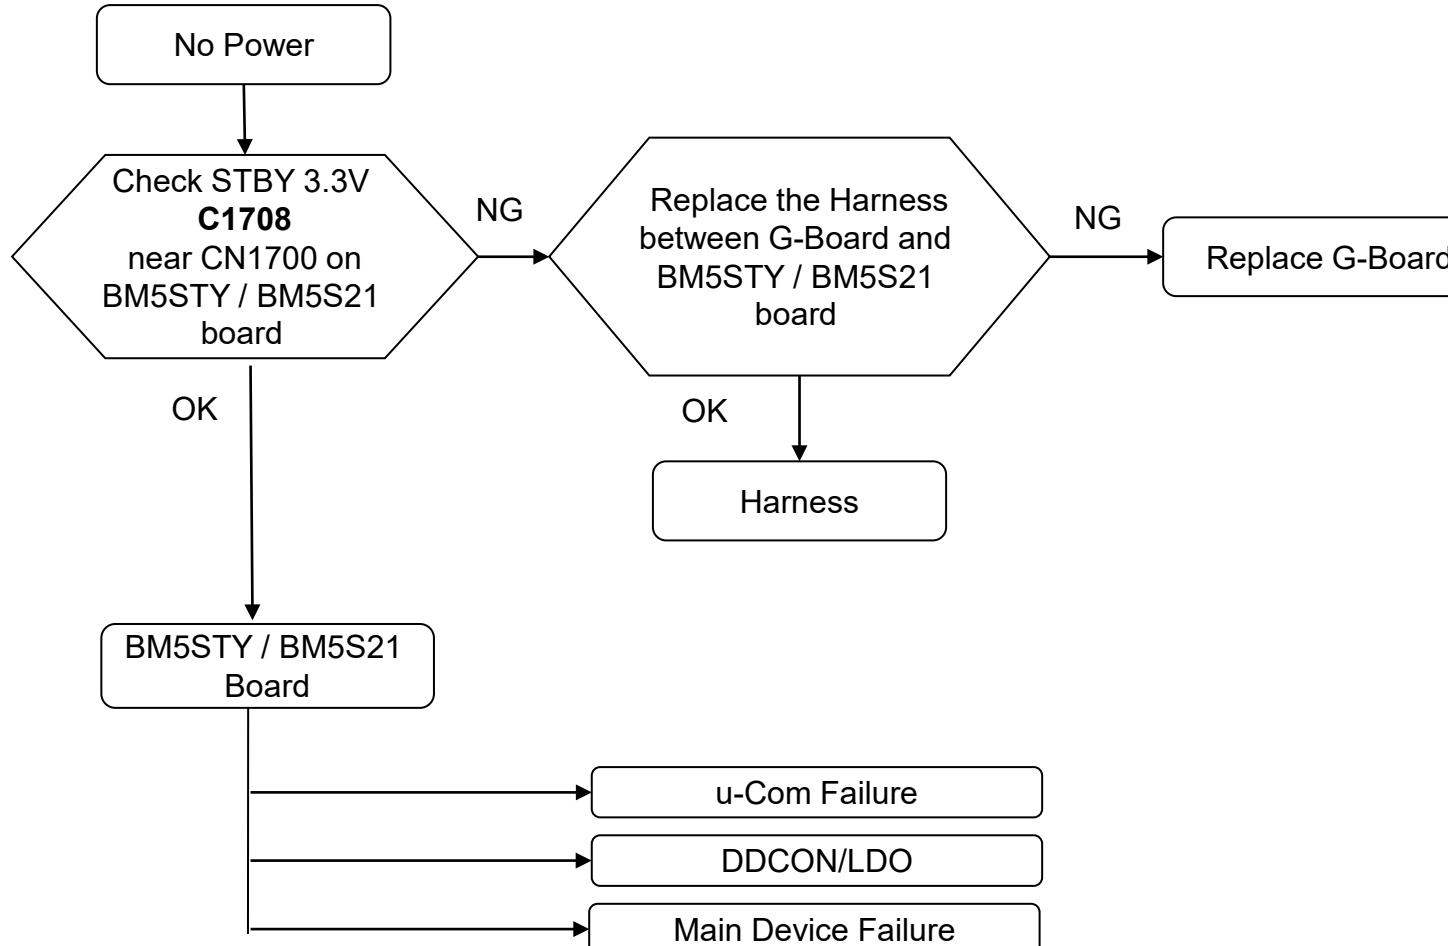

TROUBLESHOOTING


Board View

B-Side

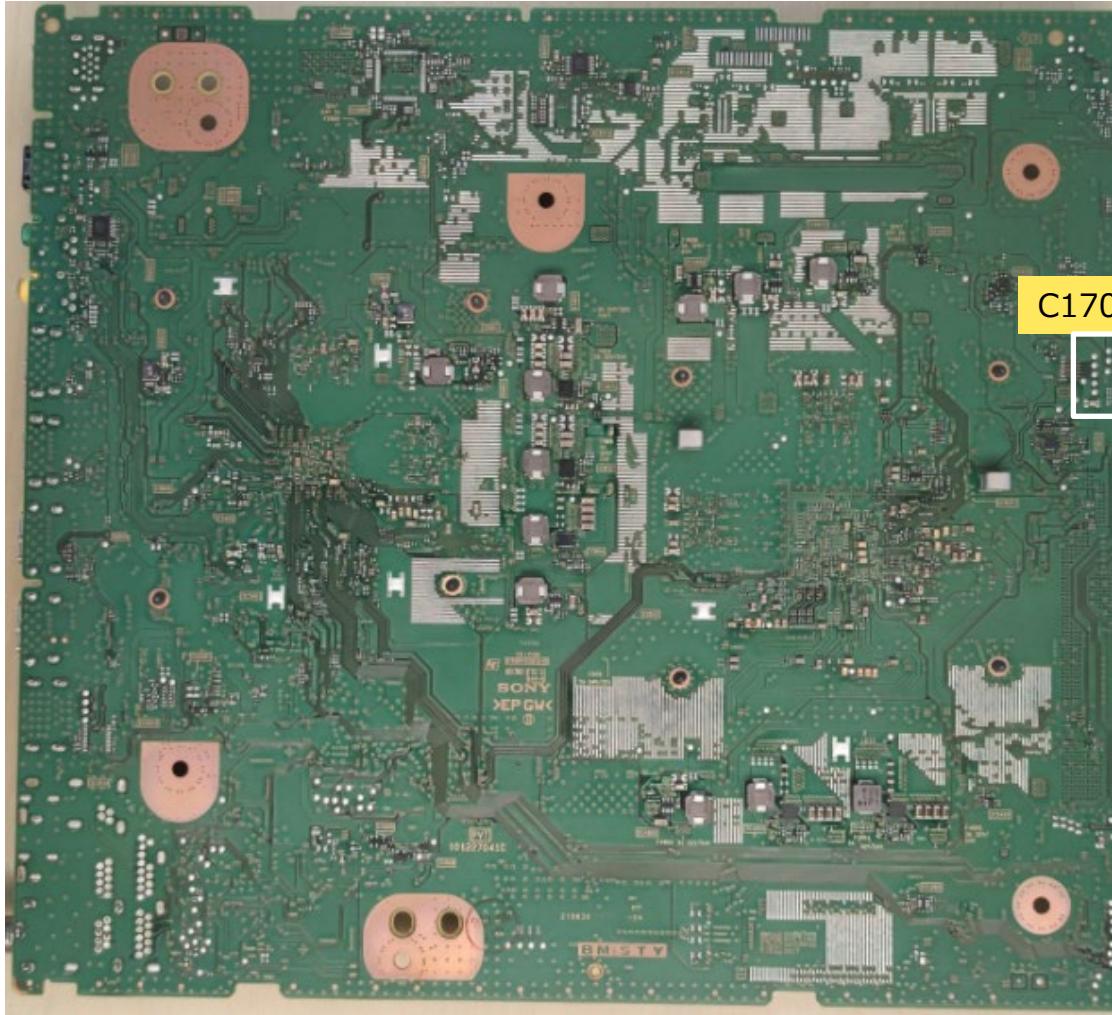


TROUBLESHOOTING

Checking Point

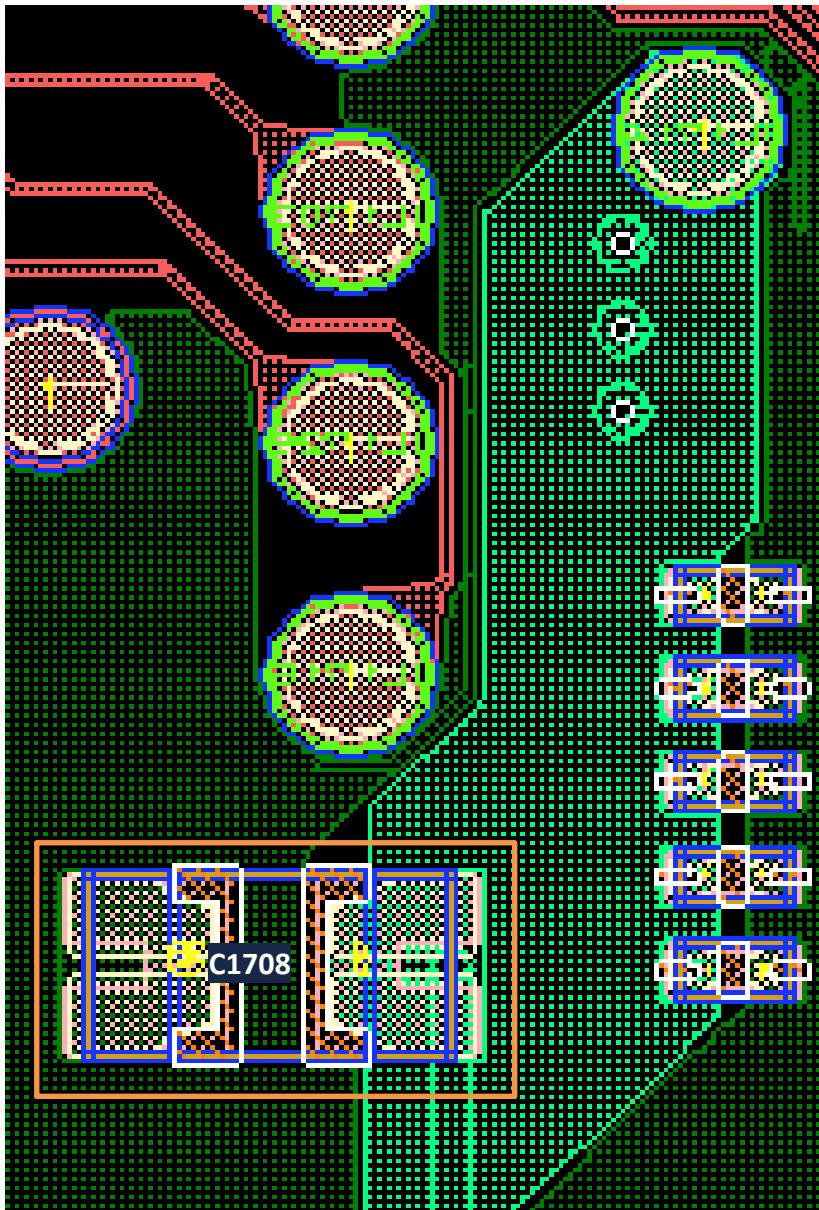


TROUBLESHOOTING

1.2 No Power u-com Failure

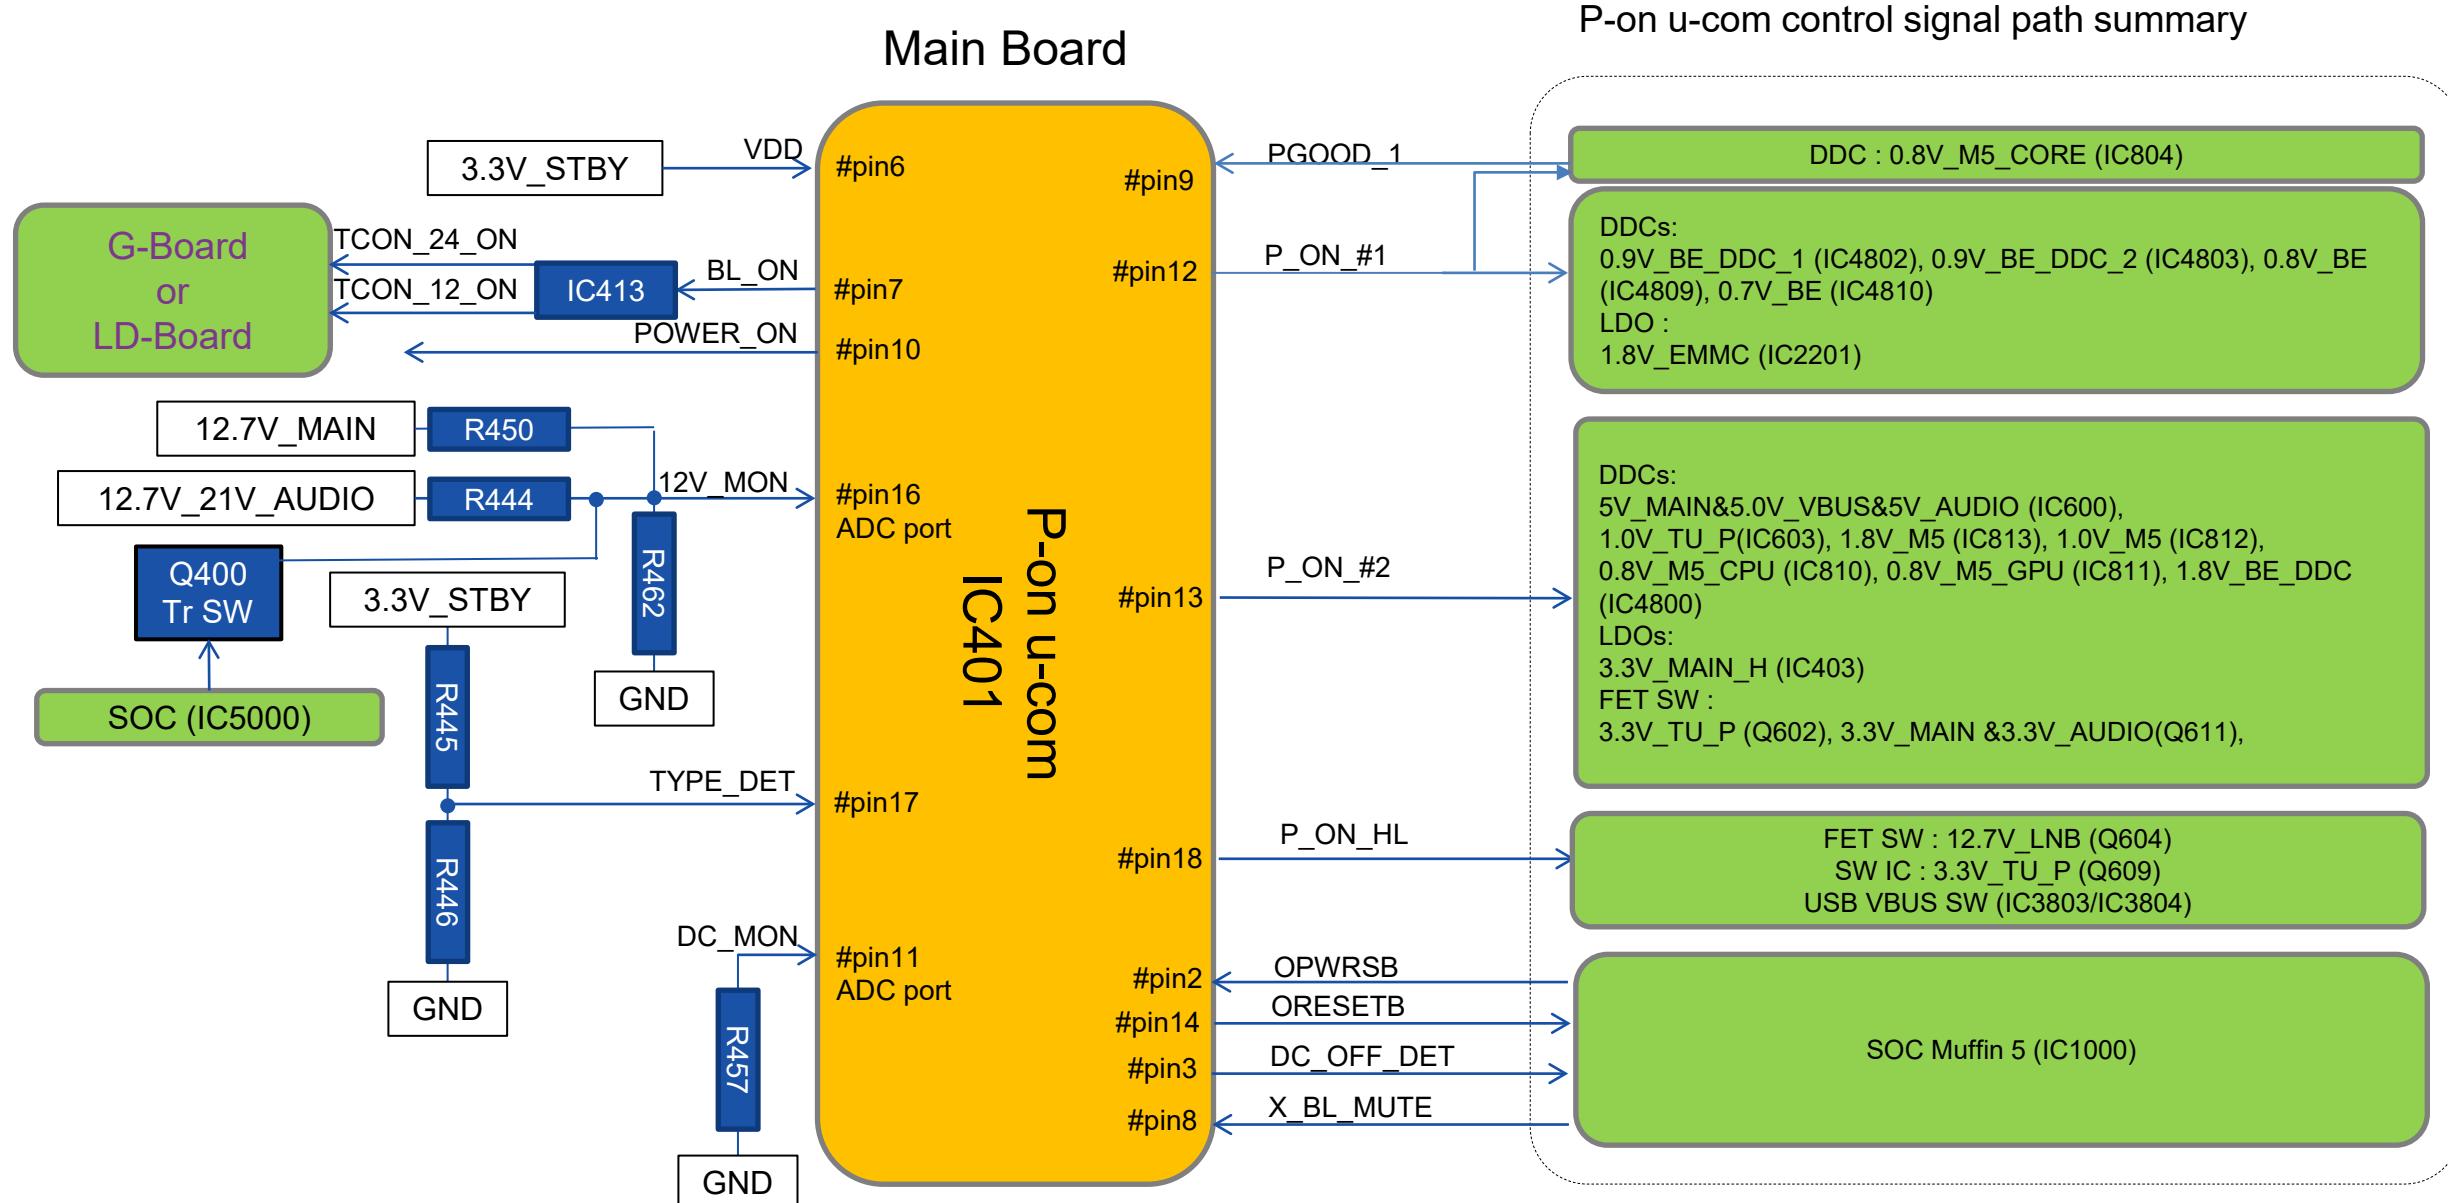


TROUBLESHOOTING

1.2 No Power u-com Failure – XR-83A80*

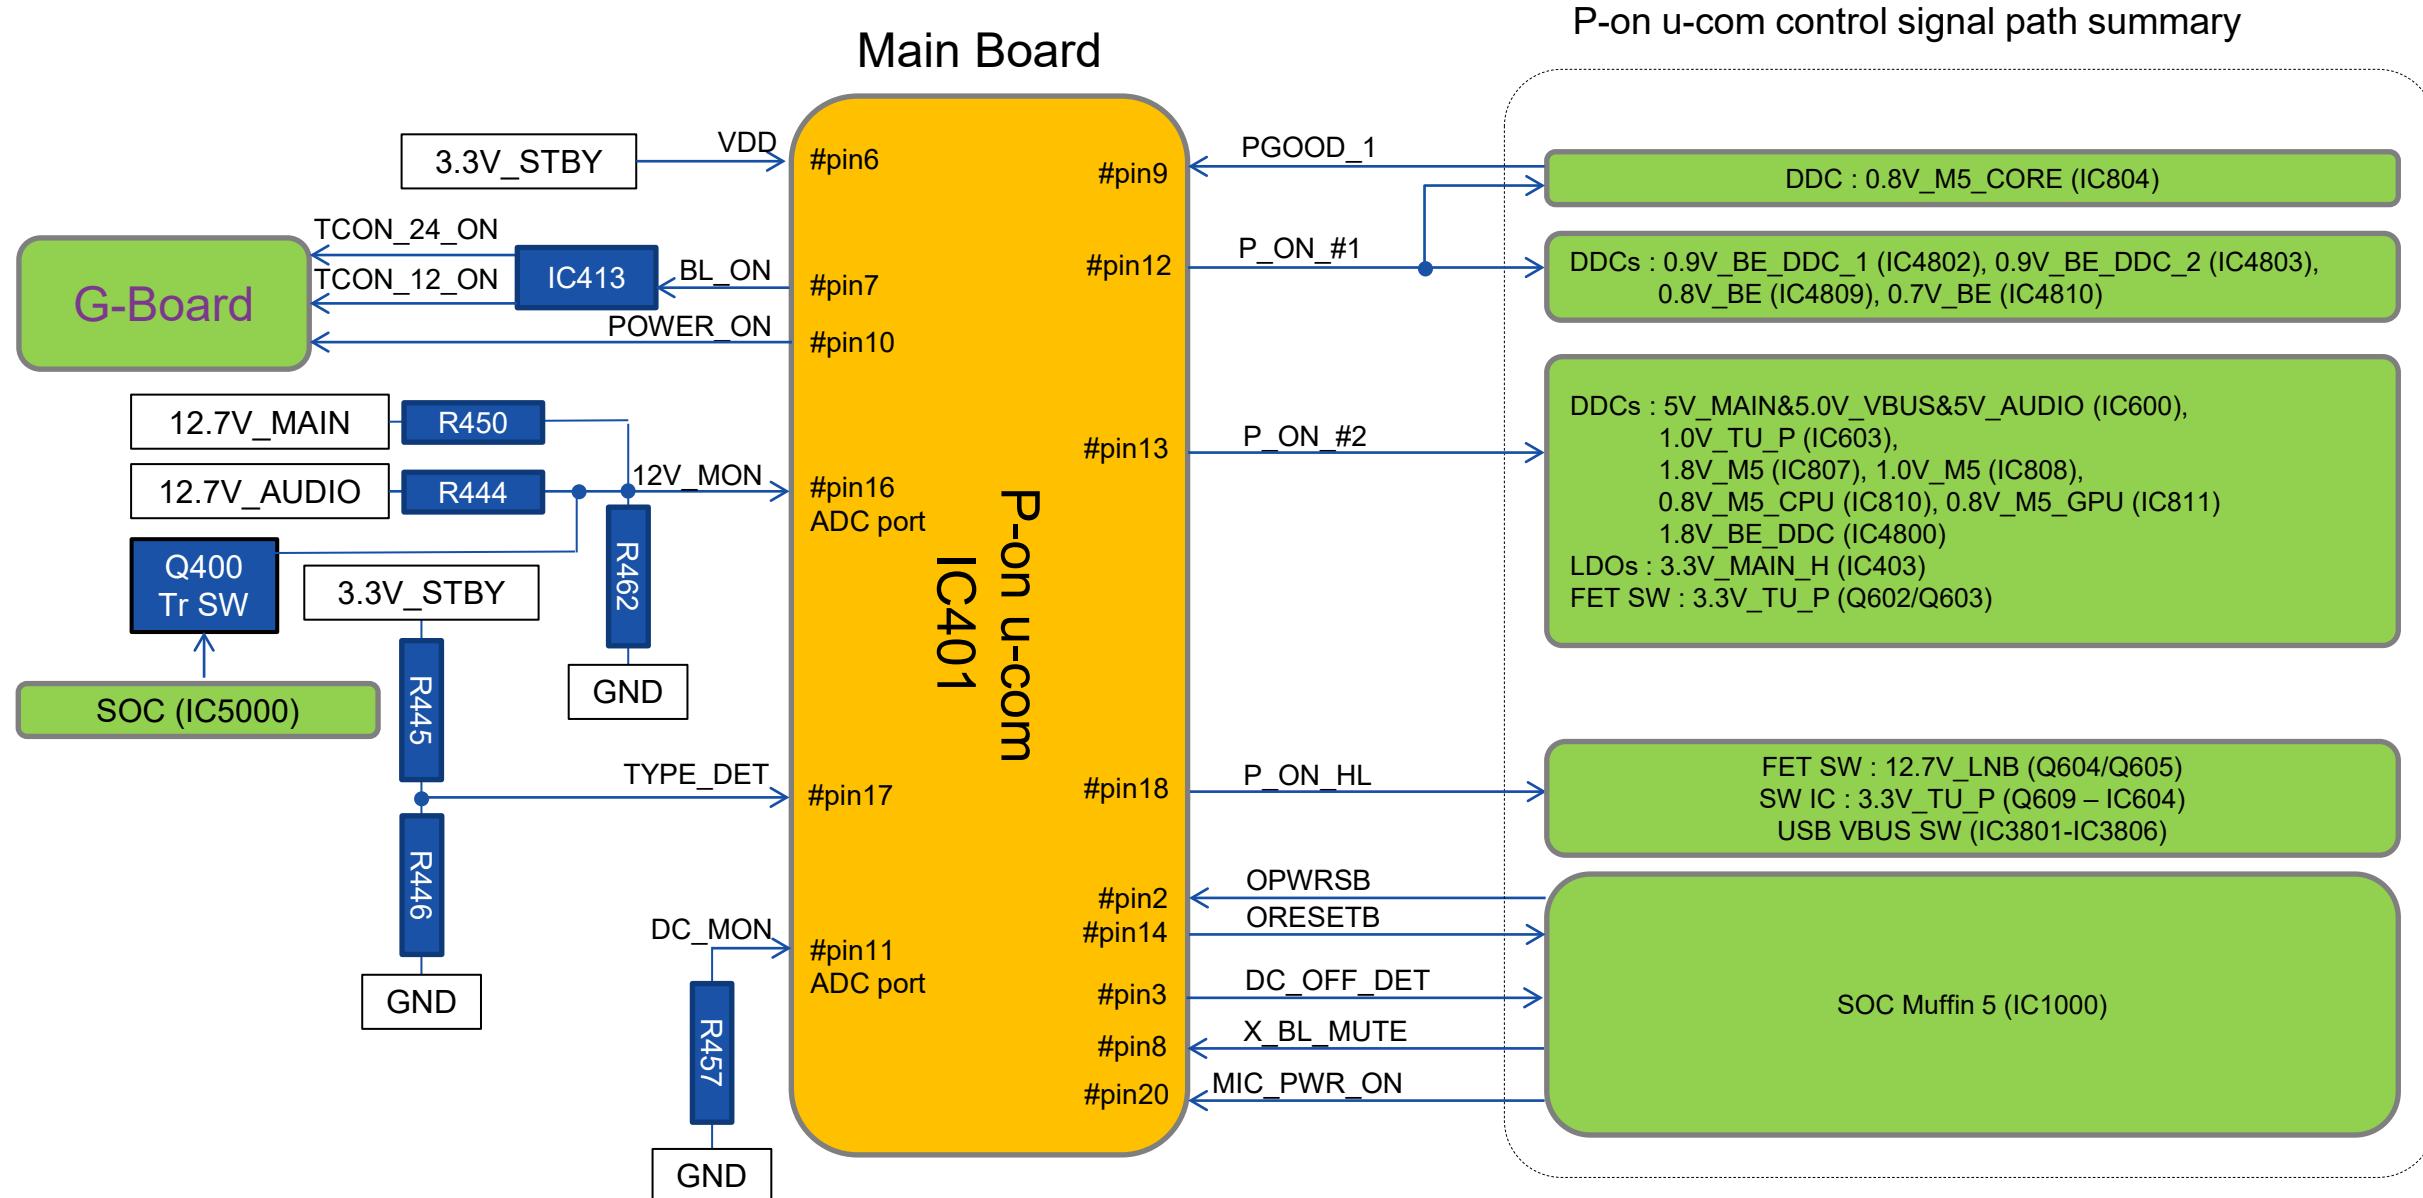



TROUBLESHOOTING

1.2 No Power u-com Failure

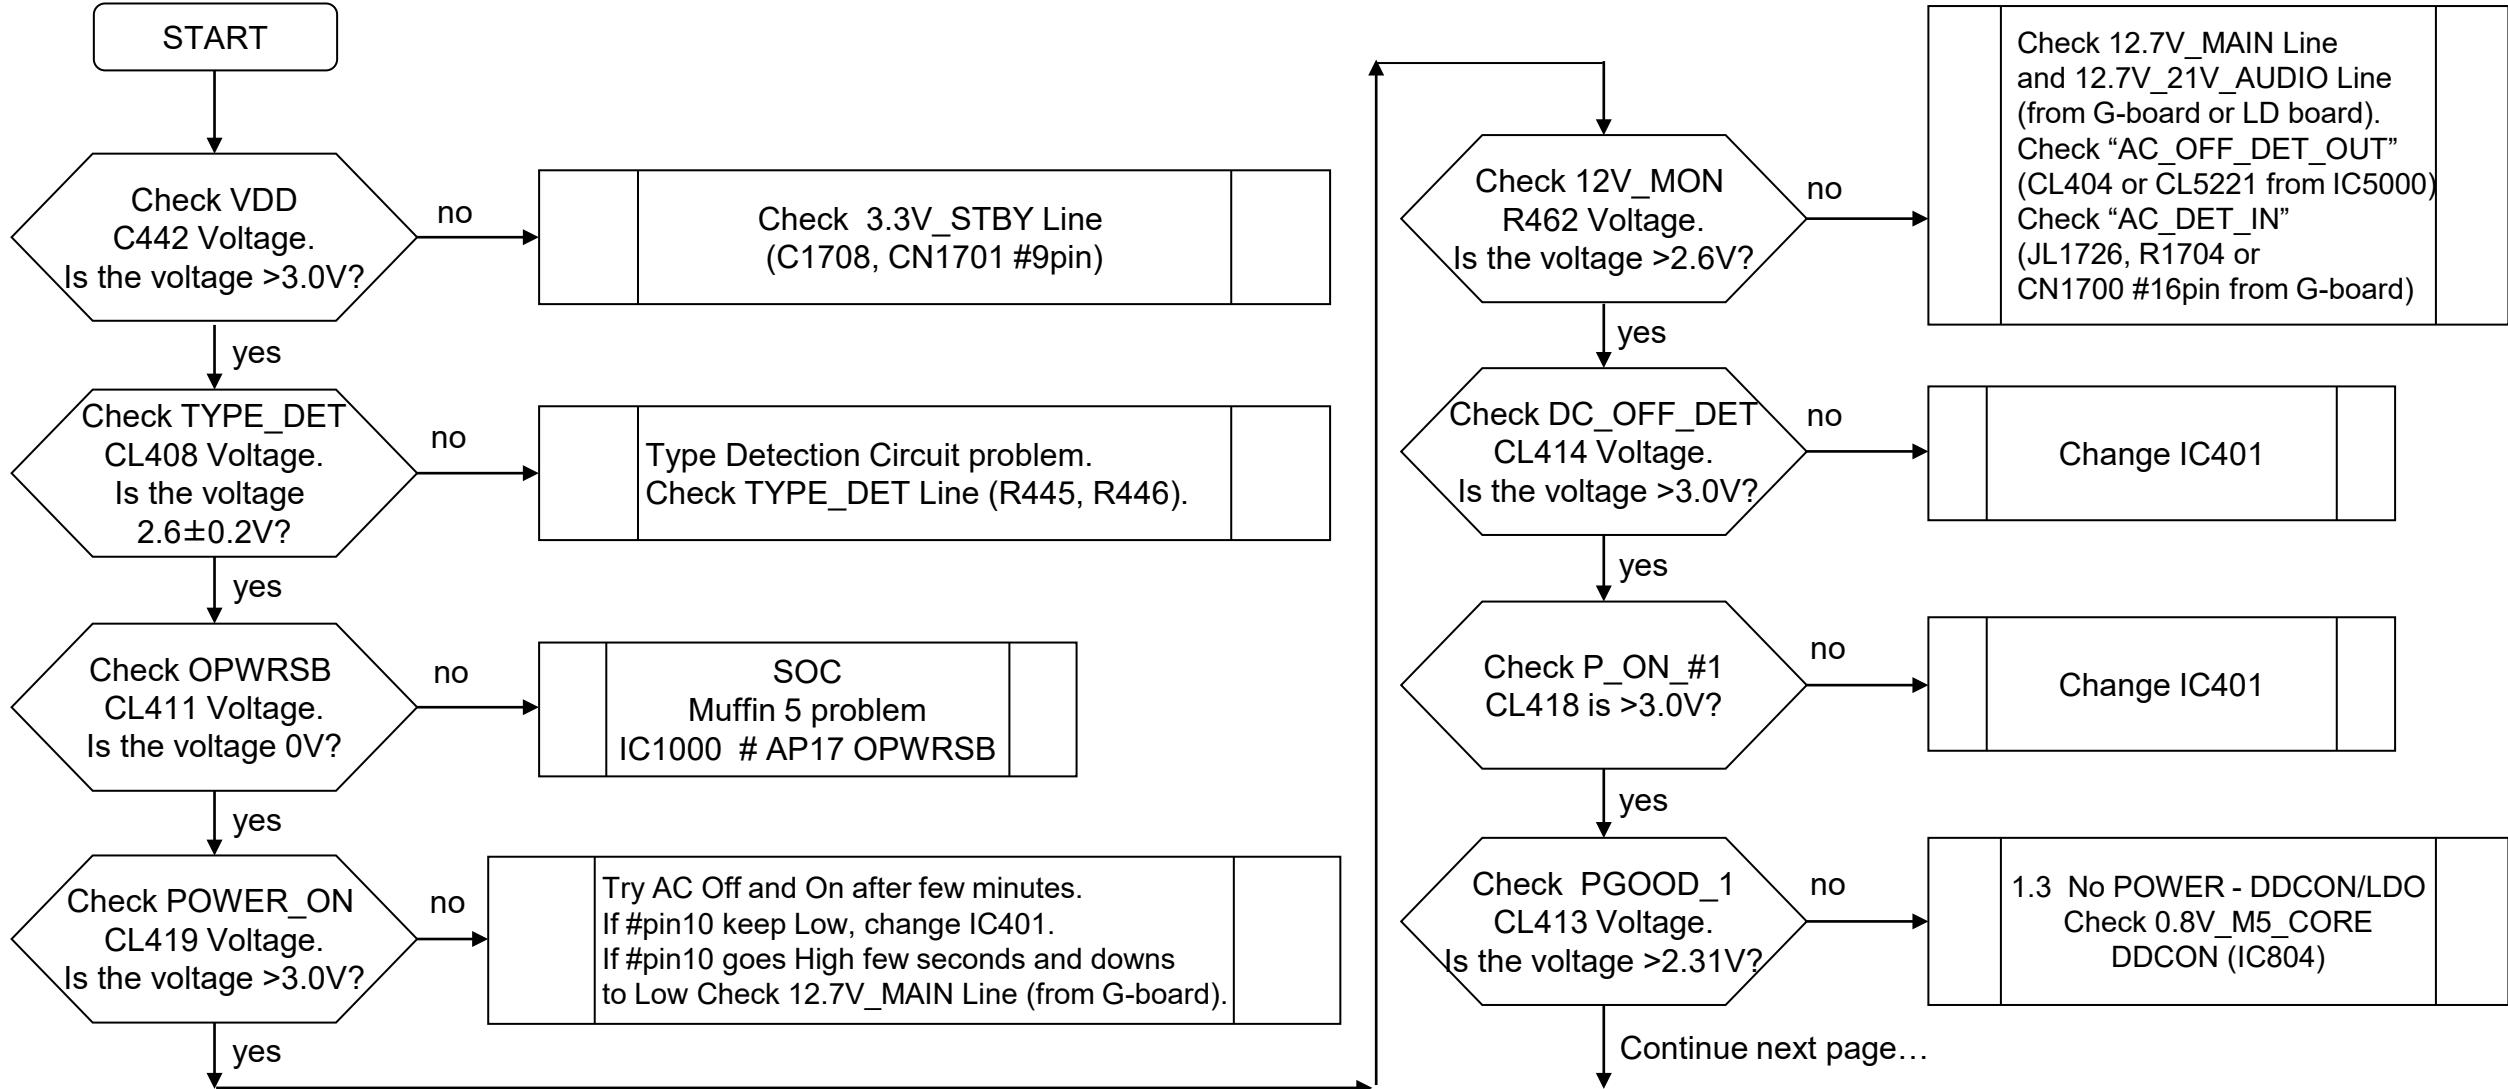


TROUBLESHOOTING

1.2 No Power u-com Failure

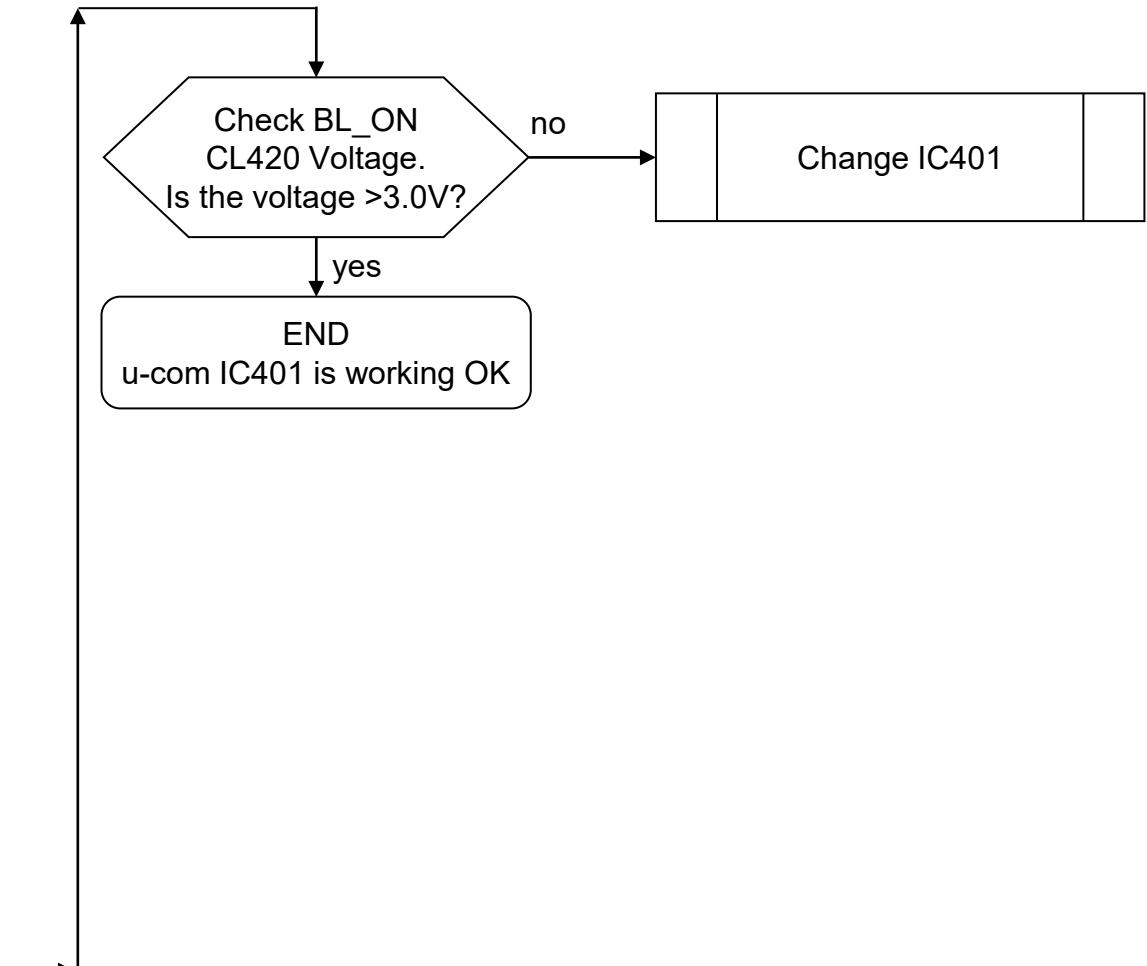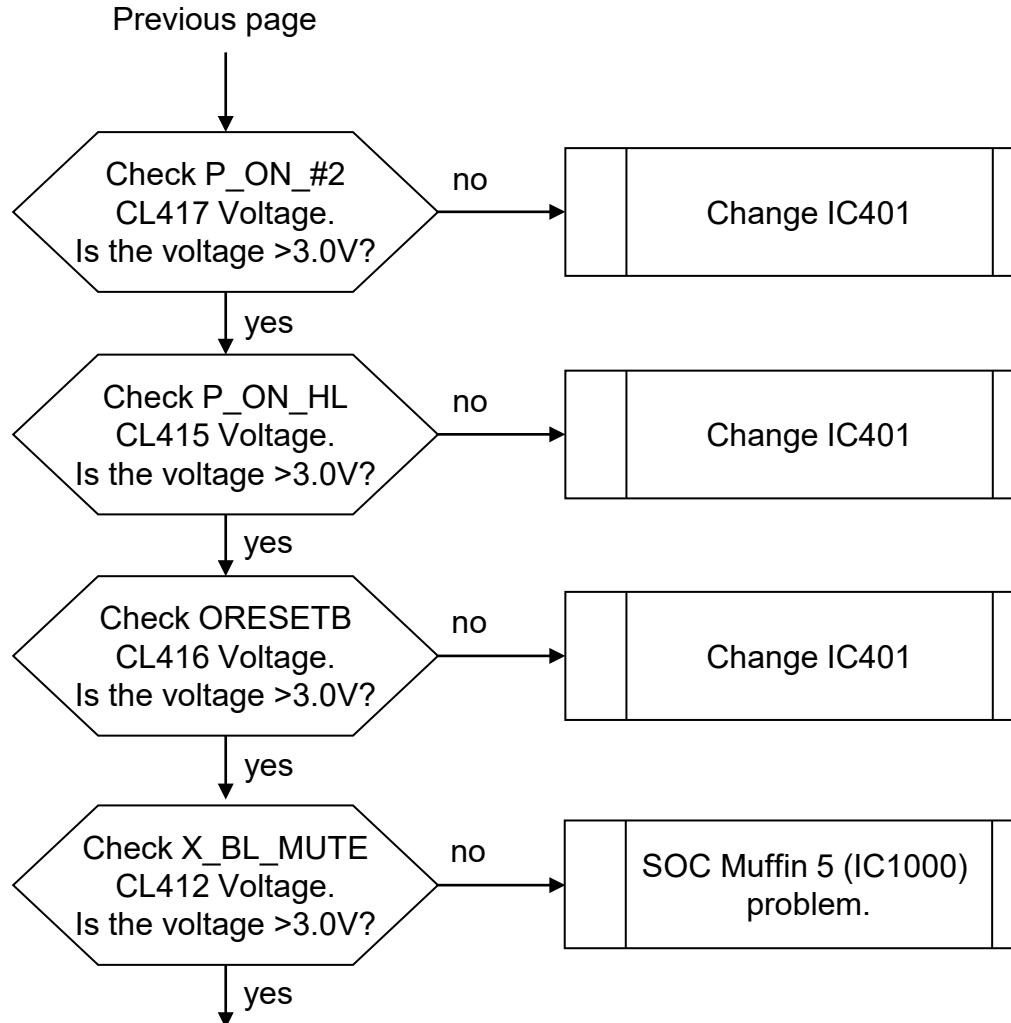


TROUBLESHOOTING

1.2 No Power u-com Failure – XR-83A80*

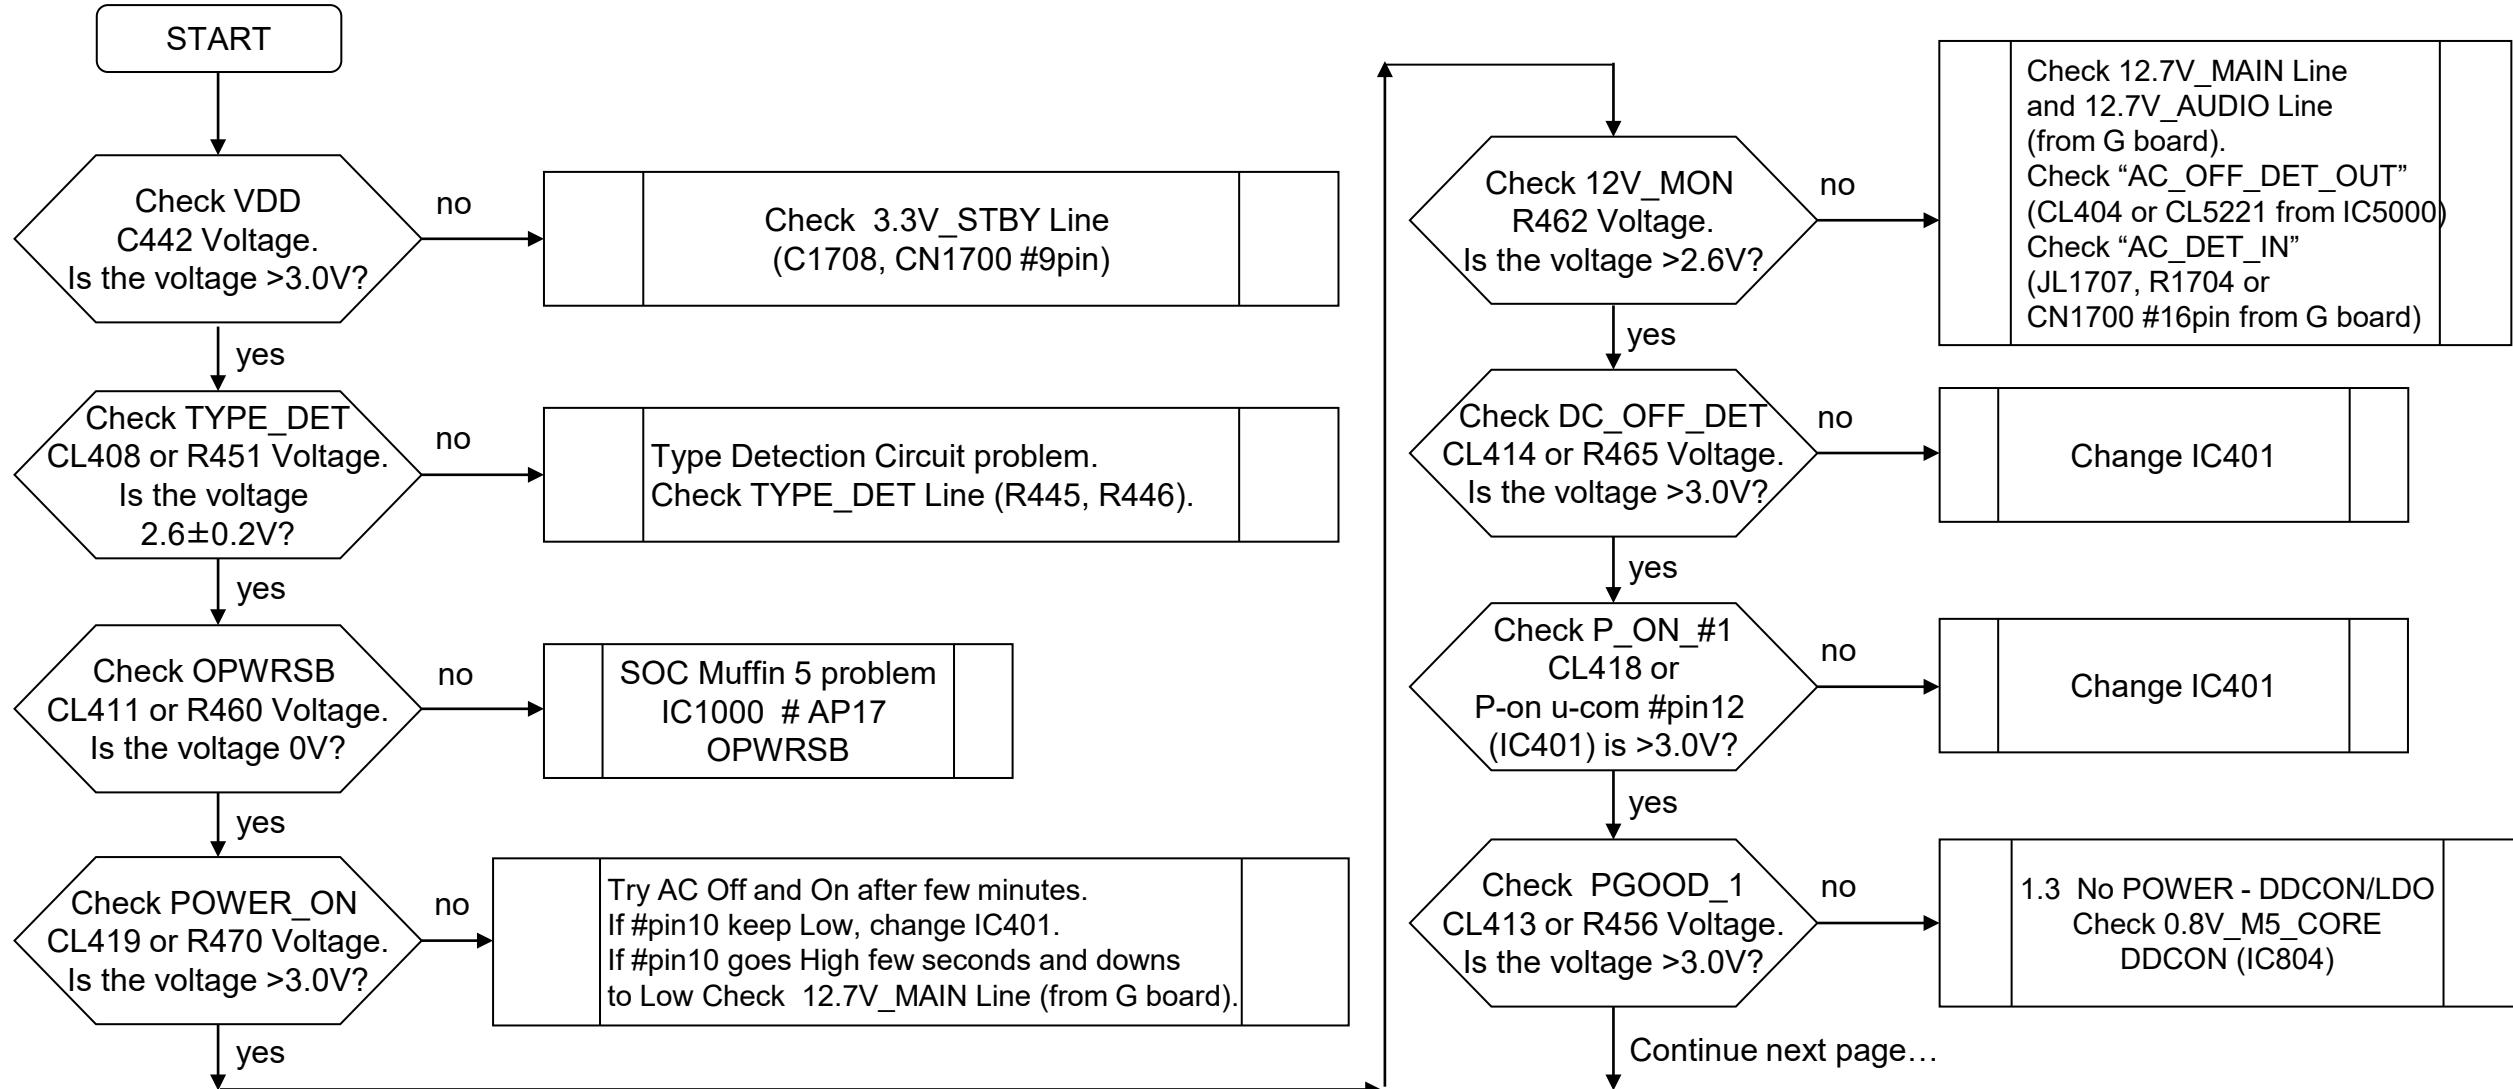

TROUBLESHOOTING


1.2 No Power u-com Failure – XR-83A80*

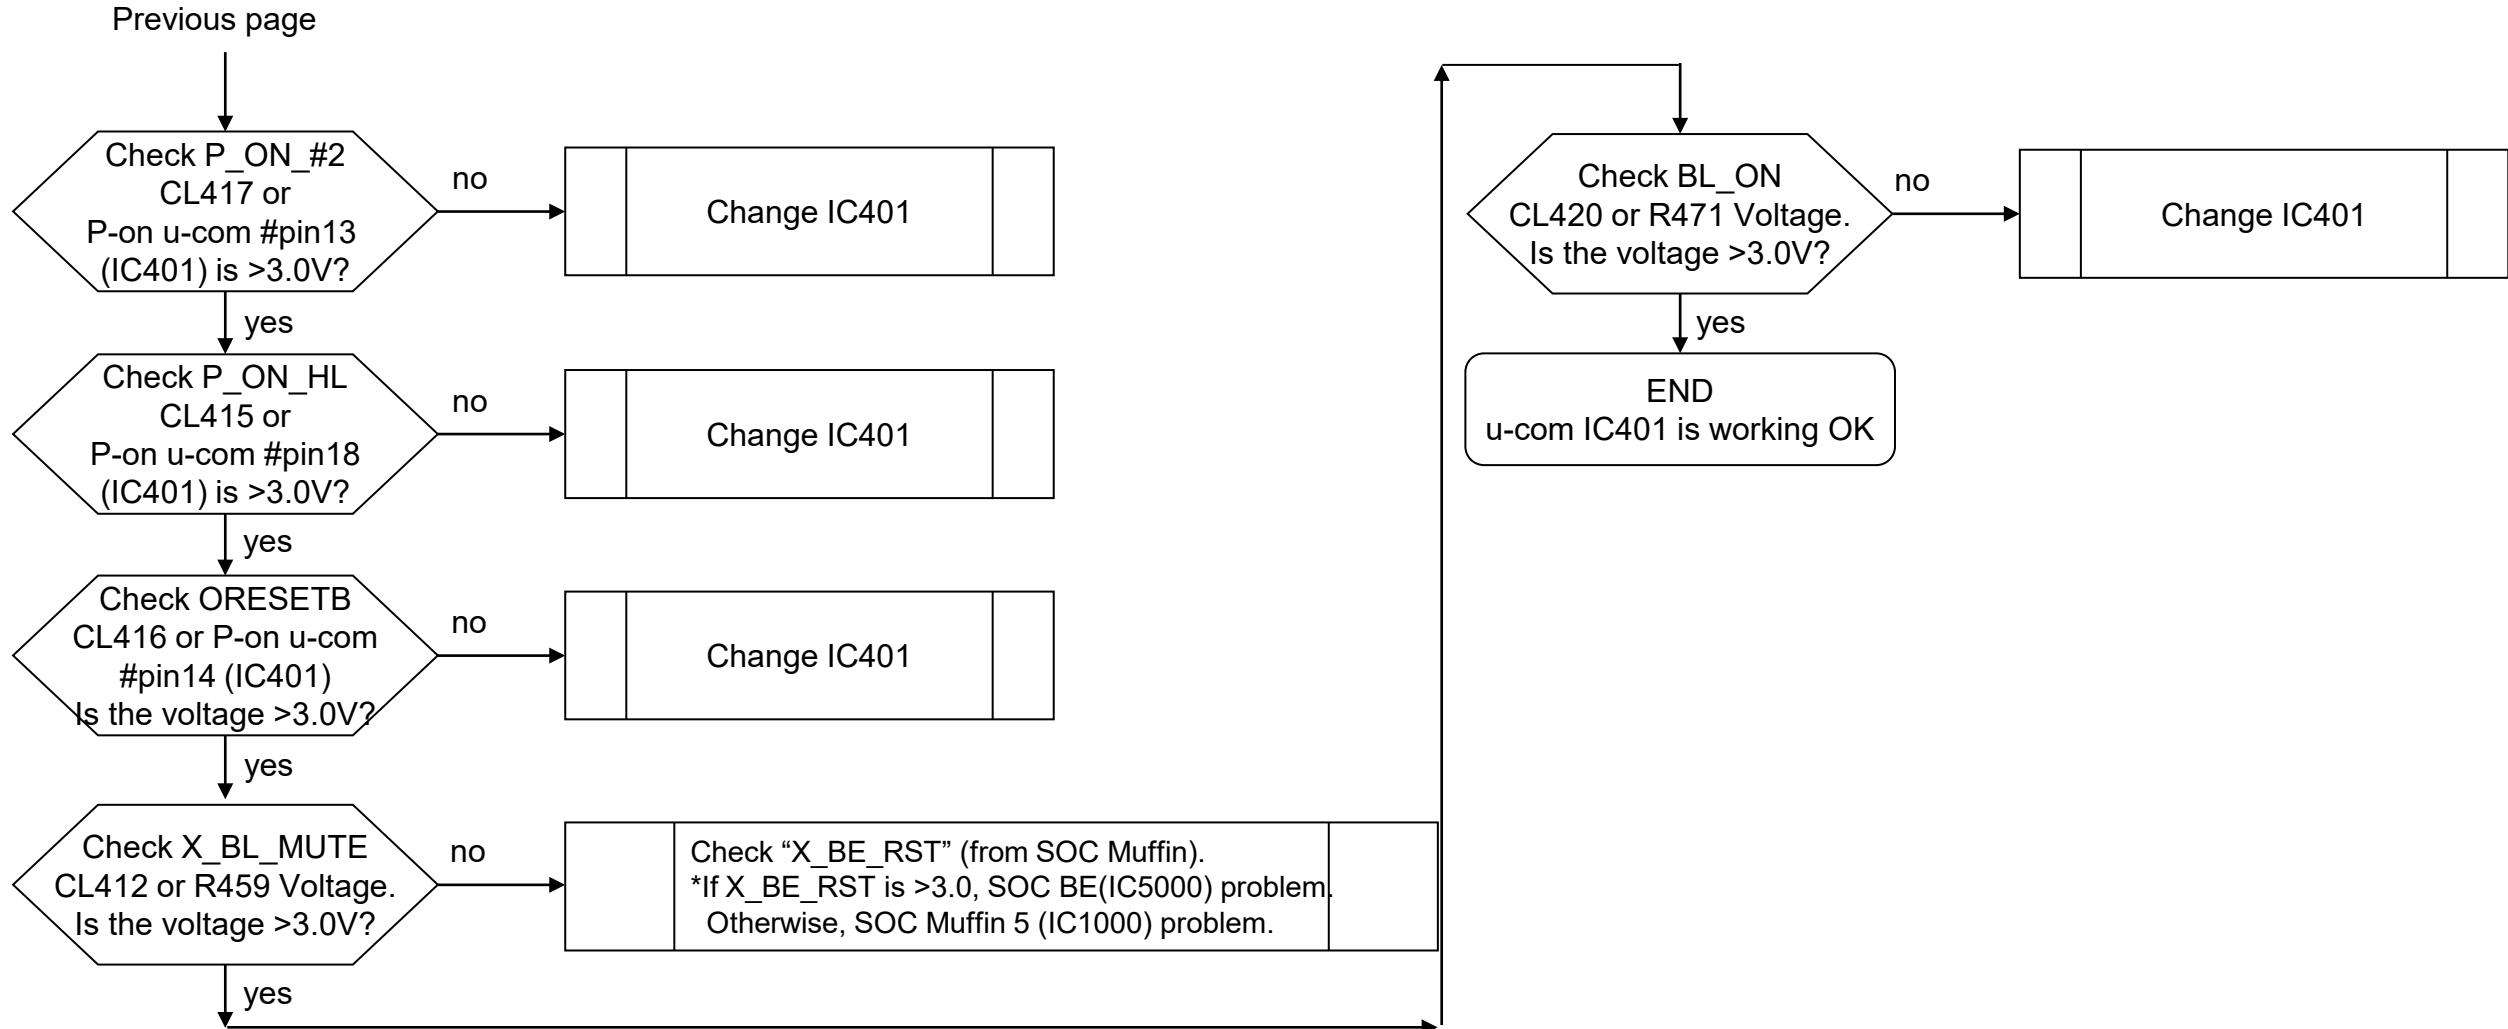


TROUBLESHOOTING

Board View

Top Side


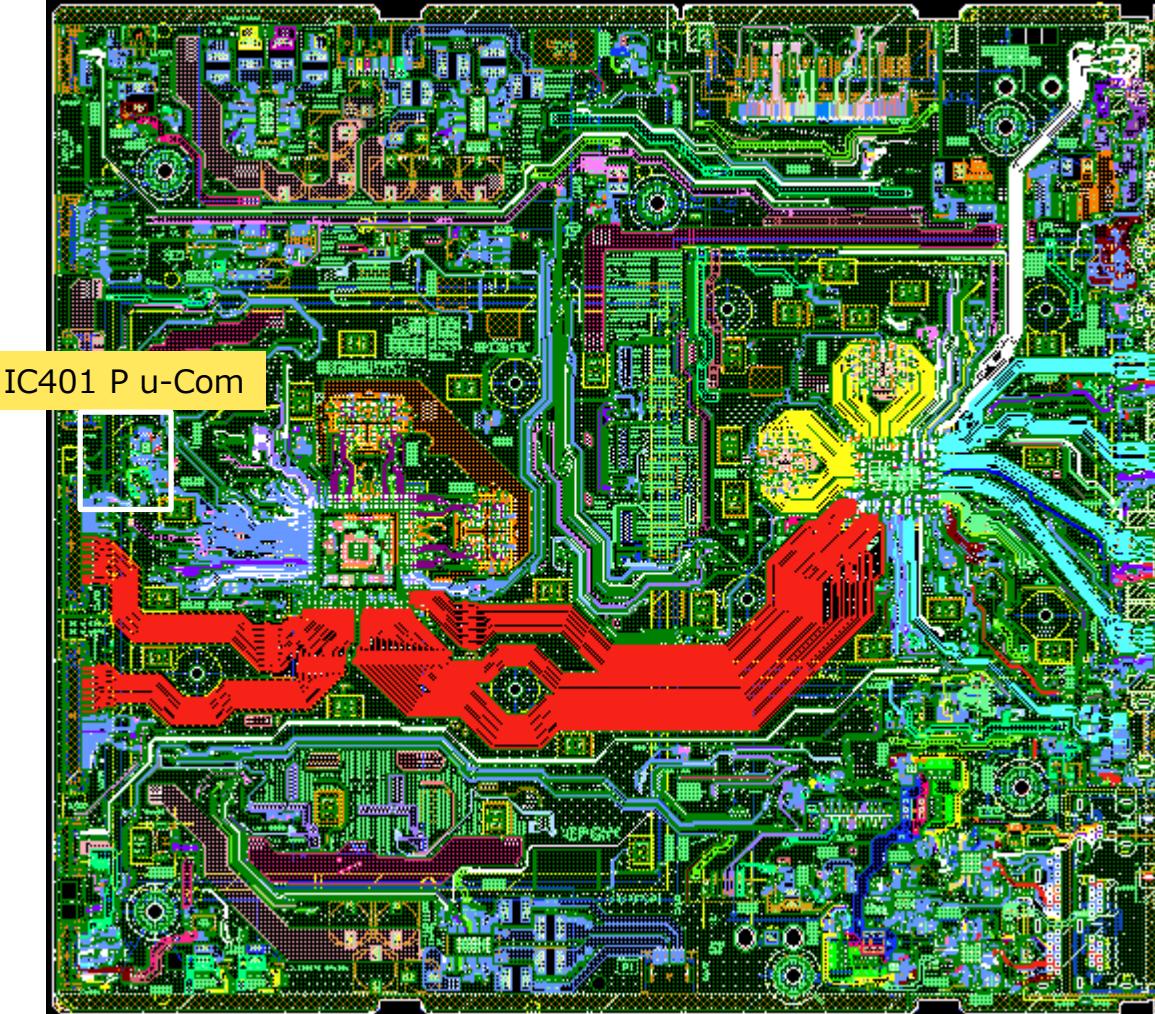


B-Side

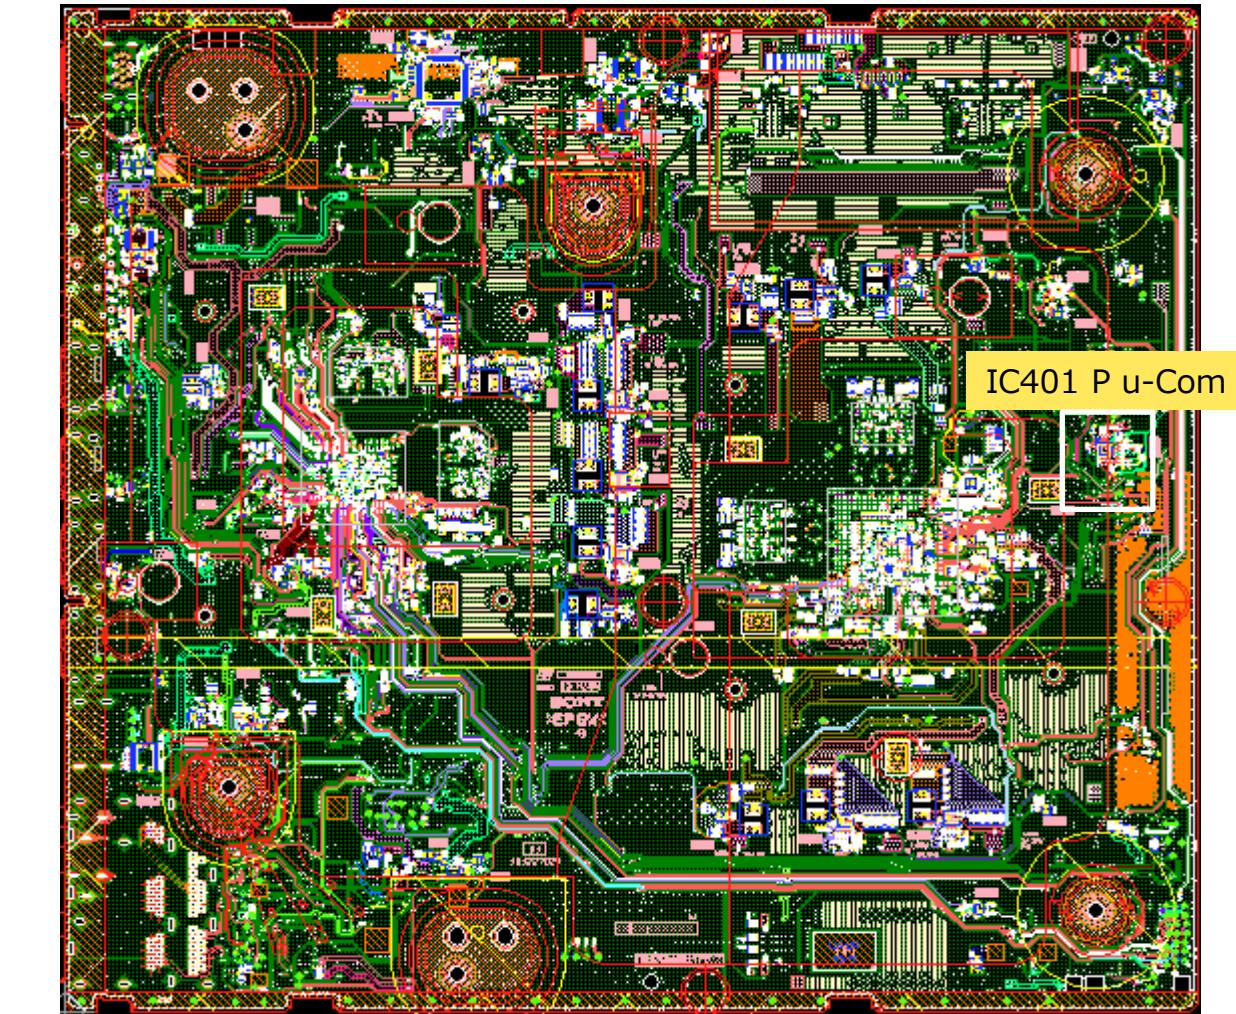

TROUBLESHOOTING


Board View

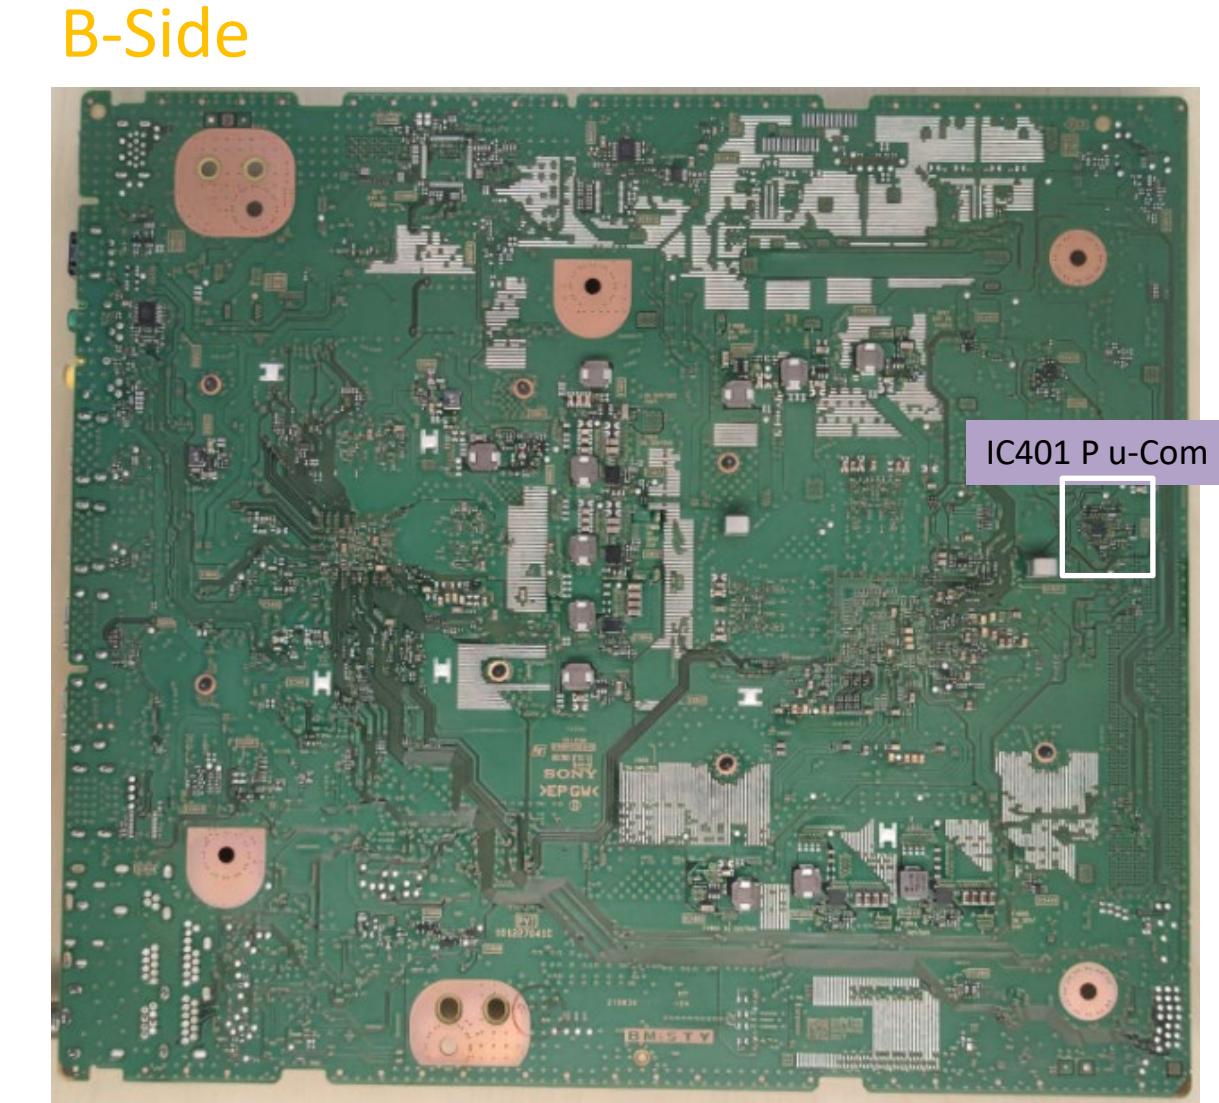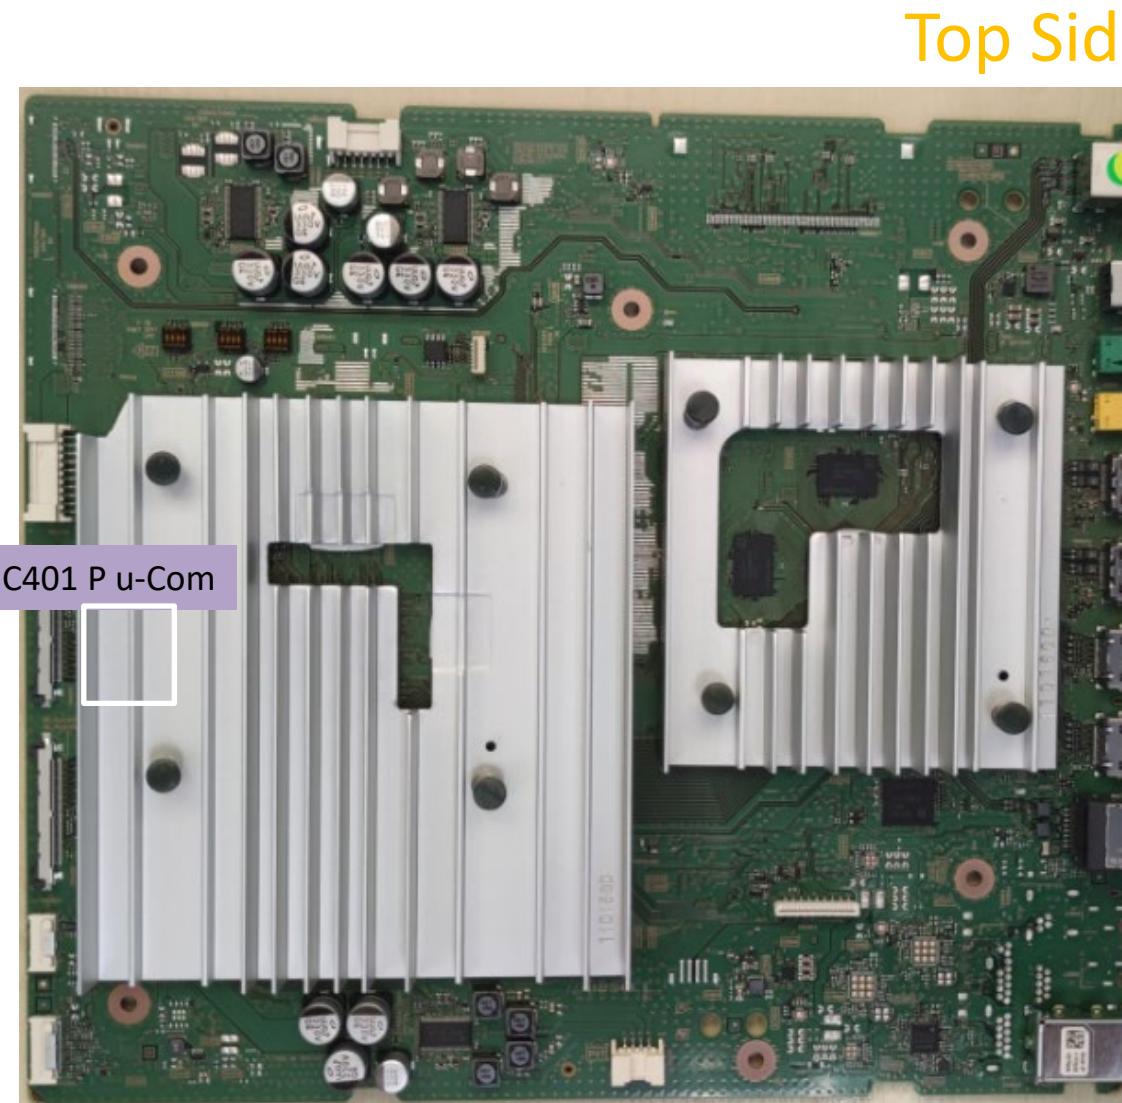


TROUBLESHOOTING

Checking Point

Top Side

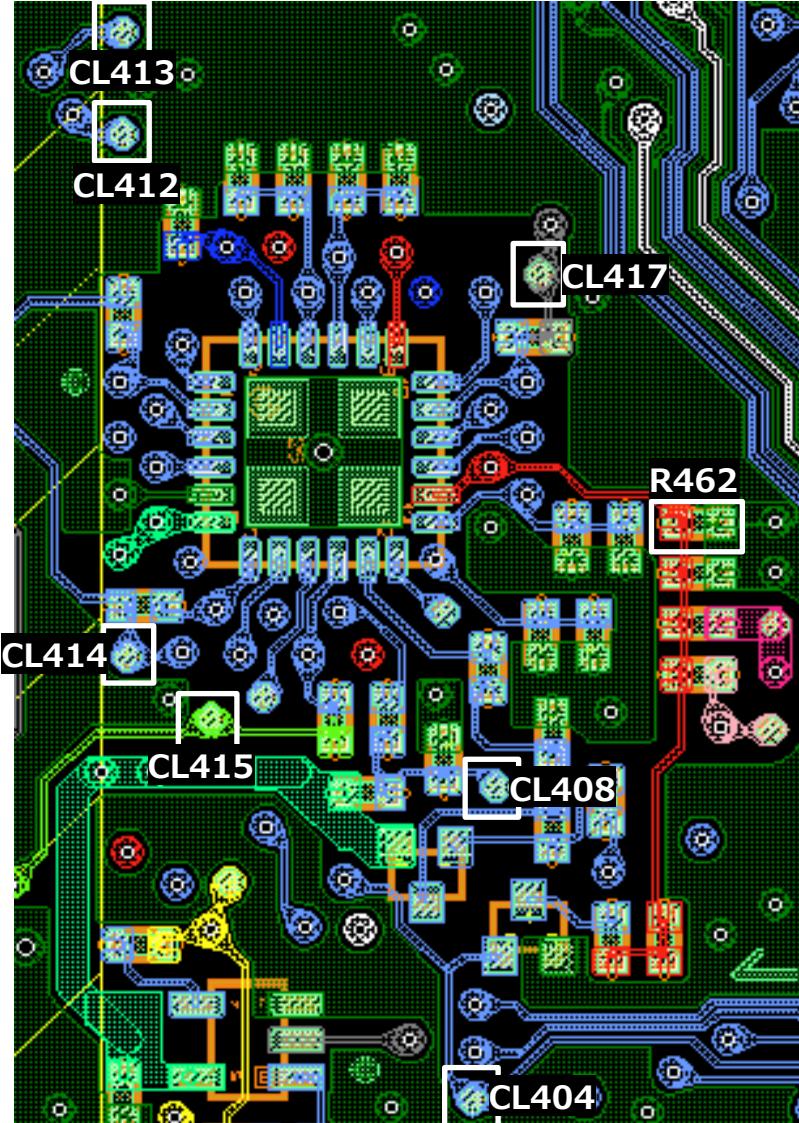

B-Side

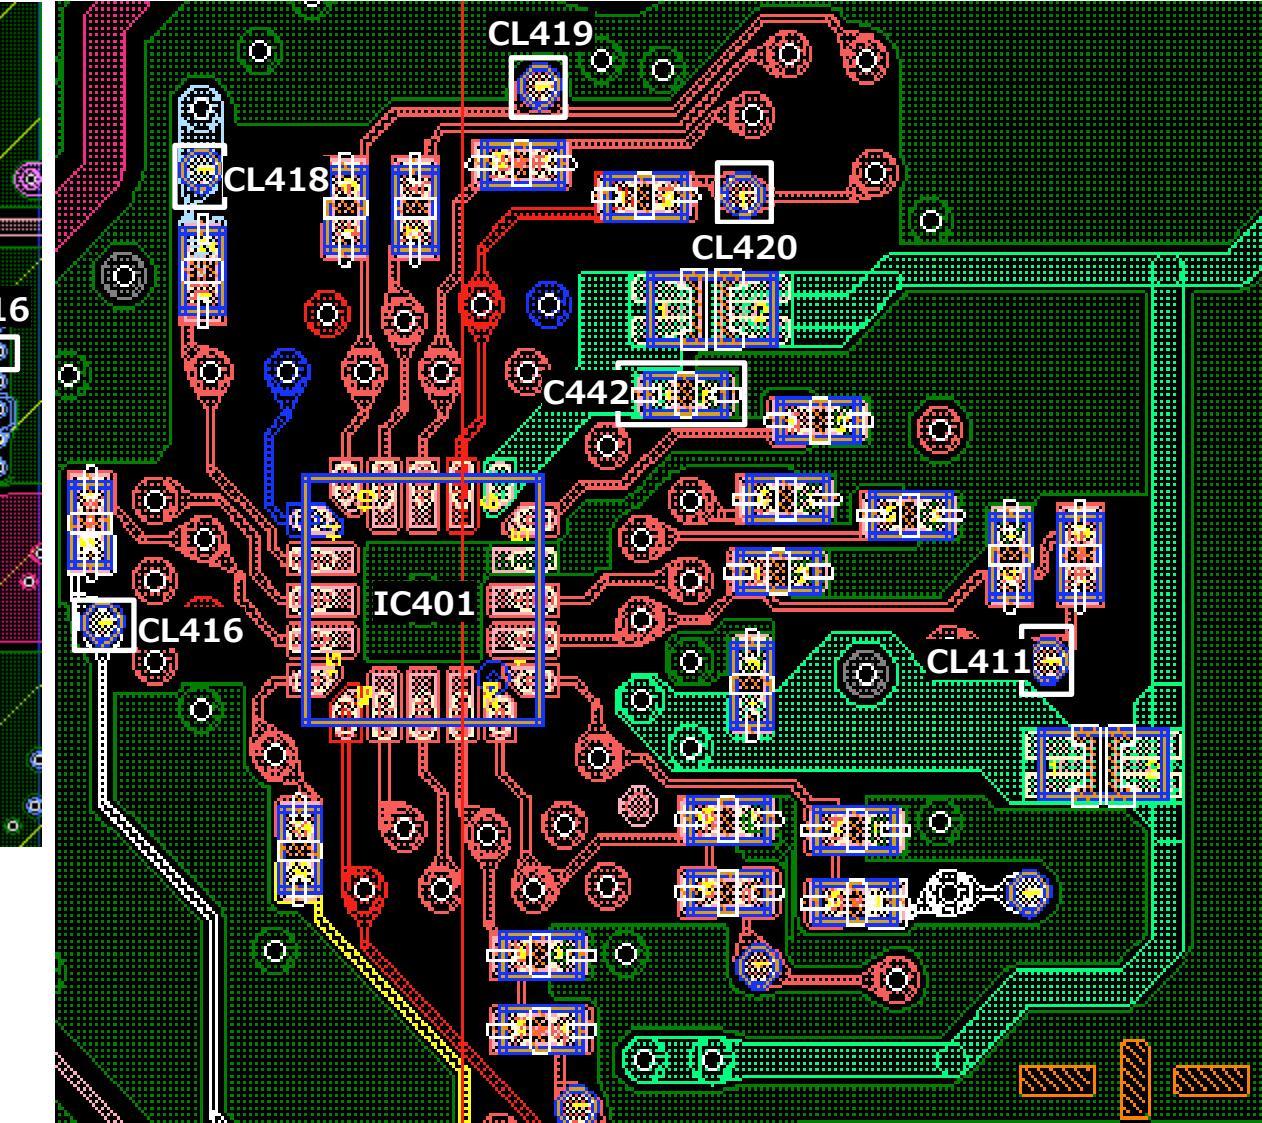

TROUBLESHOOTING

1.3 No Power DDCON/LDO

Board	Operation	IC Ref	Voltage supply	Output ref.	Enable pin	Enable source	Fuse	Vcc ref.
BM5STY	DC/DC	IC418	5.0V_STBY_H	C510	R557	Vin	-	C505
	LDO	IC403	3.3V_MAIN_H	C416	IC403 Pin#3	P_ON_#2	-	C415
	DC/DC	IC600	5V_MAIN/5.0V_VBUS/5V_AUDIO	C610	IC600 Pin#15	P_ON_#2	F600	C601
	DC/DC	IC618	3.3V_MAIN	C727	IC618 Pin#4	1.8V_BE_DDC	F609	C726
	DC/DC	IC613	5.0V_VBUS_CAMERA	C708	IC613 Pin#4	P_ON_#2	F607	C707
	DC/DC	IC603	1.0V_TU_P	C630	IC603 Pin#4	P_ON_#2 or IC1000 #AL18 (EWS_PWR_ON)	-	C628
	DC/DC	IC801	1.1V_M5_DDR	C806	IC801 Pin#4	R804/R907 (3.3V_STBY)	-	C801
	DC/DC	IC802	0.9V_M5_STBY	C809	IC802 Pin#4	R804/R907 (3.3V_STBY)	-	C807
	DC/DC	IC803	1.8V_STBY	C812	IC803 Pin#4	R804 (3.3V_STBY)	-	C810
	DC/DC	IC804	0.8V_M5_CORE	C846	IC804 Pin#8	P_ON_#1	F802	C831
	LDO	IC806	1.8V_M5_ET_STBY	C818	IC806 Pin#3	IC1000 #AN19 (ETHER_PWR_EN)	-	C817
	DC/DC	IC813	1.8V_M5	C904	IC813 Pin#4	P_ON_#2	F807	C902
	DC/DC	IC812	1.0V_M5	C898	IC812 Pin#4	P_ON_#2	F805	C896
	LDO	IC809	3.3V_M5_STBY	C816	R917	R917 (3.3V_STBY)	-	C815
	DC/DC	IC810	0.8V_M5_CPU	C861	IC810 Pin#19	P_ON_#2	F803	C855
	DC/DC	IC811	0.8V_M5_GPU	C874	IC811 Pin#19	P_ON_#2	F804	C868
	LDO	IC2201	1.8V_EMMC	C2216	IC2201 Pin#3	P_ON_#1 or ORESETB	-	C2214
	DC/DC	IC4800	1.8V_BE_DDC	C4805	IC4800 Pin#4	P_ON_#2	F4800	C4803
	DC/DC	IC4801	1.1V_BE	C4813	IC4801 Pin#4	1.8V_BE_DDC	F4801	C4812
	DC/DC	IC4802	0.9V_BE_DDC_1	C4820	IC4802 Pin#4	P_ON_#1	F4802	C4819
	DC/DC	IC4803	0.9V_BE_DDC_2	C4828	IC4803 Pin#4	P_ON_#1	F4803	C4827
	DC/DC	IC4809	0.8V_BE	C4860	IC4809 Pin#8	P_ON_#1	F4804	C4845
	DC/DC	IC4810	0.7V_BE	C4876	IC4810 Pin#8	P_ON_#1	F4805	C4863

P_ON_#1 : P-on u-com IC401 #pin12

P_ON_#2 : P-on u-com IC401 #pin13

ORESETB : P-on u-com IC401 #pin14

TROUBLESHOOTING

1.3 No Power DDCON/LDO – XR-83A80*


Board	Operation	IC Ref	Voltage supply	Output ref.	Enable pin	Enable source	Fuse	Vcc ref.
BM5S21	DCDC	IC418	5.0V_STBY_H	C508/JL1212	R557	R557(3.3V_STBY)	-	C505
	LDO	IC403	3.3V_MAIN_H	C416/CL402	R413(shorted)	P_ON_#2	-	C415
	DC/DC	IC600	5V_MAIN/5V_AUDIO	C610/JL601	R600(shorted)/CL604	P_ON_#2	F600	C601
	DC/DC	IC601	3.3V_MAIN/3.3V_AUDIO	C619/JL603	R658/CL605	R658(1.8V_BE_DDC)	F601	C618
	DC/DC	IC603	1.0V_TU_P	C630/CL607	R631(shorted)/JL607	P_ON_#2 or IC1000 #AL18 (EWS_PWR_ON)	-	C628
	DC/DC	IC801	1.1V_M5_DDR	C806/JL801	R913(shorted)	R804/R907 (3.3V_STBY)	-	C801/CL819
	DC/DC	IC802	0.9V_M5_STBY	C809/CL803	R908(shorted)	R804/R907 (3.3V_STBY)	-	C807/CL822
	DC/DC	IC803	1.8V_STBY	C812/CL811	R822(shorted)	R804 (3.3V_STBY)	-	C810/CL824
	DC/DC	IC804	0.8V_M5_CORE	C846/JL803	R849(shorted)/CL816	P_ON_#1	F802	C831
	LDO	IC806	1.8V_M5_ET_STBY	C818/JL808	R832(shorted)	IC1000 #AN19 (ETHER_PWR_EN)	-	C817/CL826
	DC/DC	IC807	1.8V_M5	C823/JL811	R833(shorted)/CL827	P_ON_#2	F800	C822
	DC/DC	IC808	1.0V_M5	C829/JL813	R839(shorted)/CL828	P_ON_#2	F801	C828
	LDO	IC809	3.3V_M5_STBY	C816/CL831	R917	R917(3.3V_STBY)	-	C815
	DC/DC	IC810	0.8V_M5_CPU	C861/JL816	R914/CL829	P_ON_#2	F803	C855
	DC/DC	IC811	0.8V_M5_GPU	C874/JL818	R915/CL830	P_ON_#2	F804	C868
	DC/DC	IC4800	1.8V_BE_DDC	C4805/JL4801	R4801(shorted)/CL4816	P_ON_#2	F4800	C4803
	DC/DC	IC4801	1.1V_BE	C4813/JL4803	R4907/CL4817	R4907(1.8V_BE_DDC)	F4801	C4812
	DC/DC	IC4802	0.9V_BE_DDC_1	C4820/JL4805	R4819(shorted)/CL4818	P_ON_#1	F4802	C4819
	DC/DC	IC4803	0.9V_BE_DDC_2	C4828/JL4807	R4827(shorted)/CL4819	P_ON_#1	F4803	C4827
	DC/DC	IC4809	0.8V_BE	C4860/JL4819	R4849(shorted)/CL4808	P_ON_#1	F4804	C4845
	DC/DC	IC4810	0.7V_BE	C4878/JL4821	R4865(shorted)/CL4811	P_ON_#1	F4805	C4863

P_ON_#1 : P-on u-com IC401 #pin12

P_ON_#2 : P-on u-com IC401 #pin13

TROUBLESHOOTING

1.3 No Power DDCON/LDO (DDCON Check)

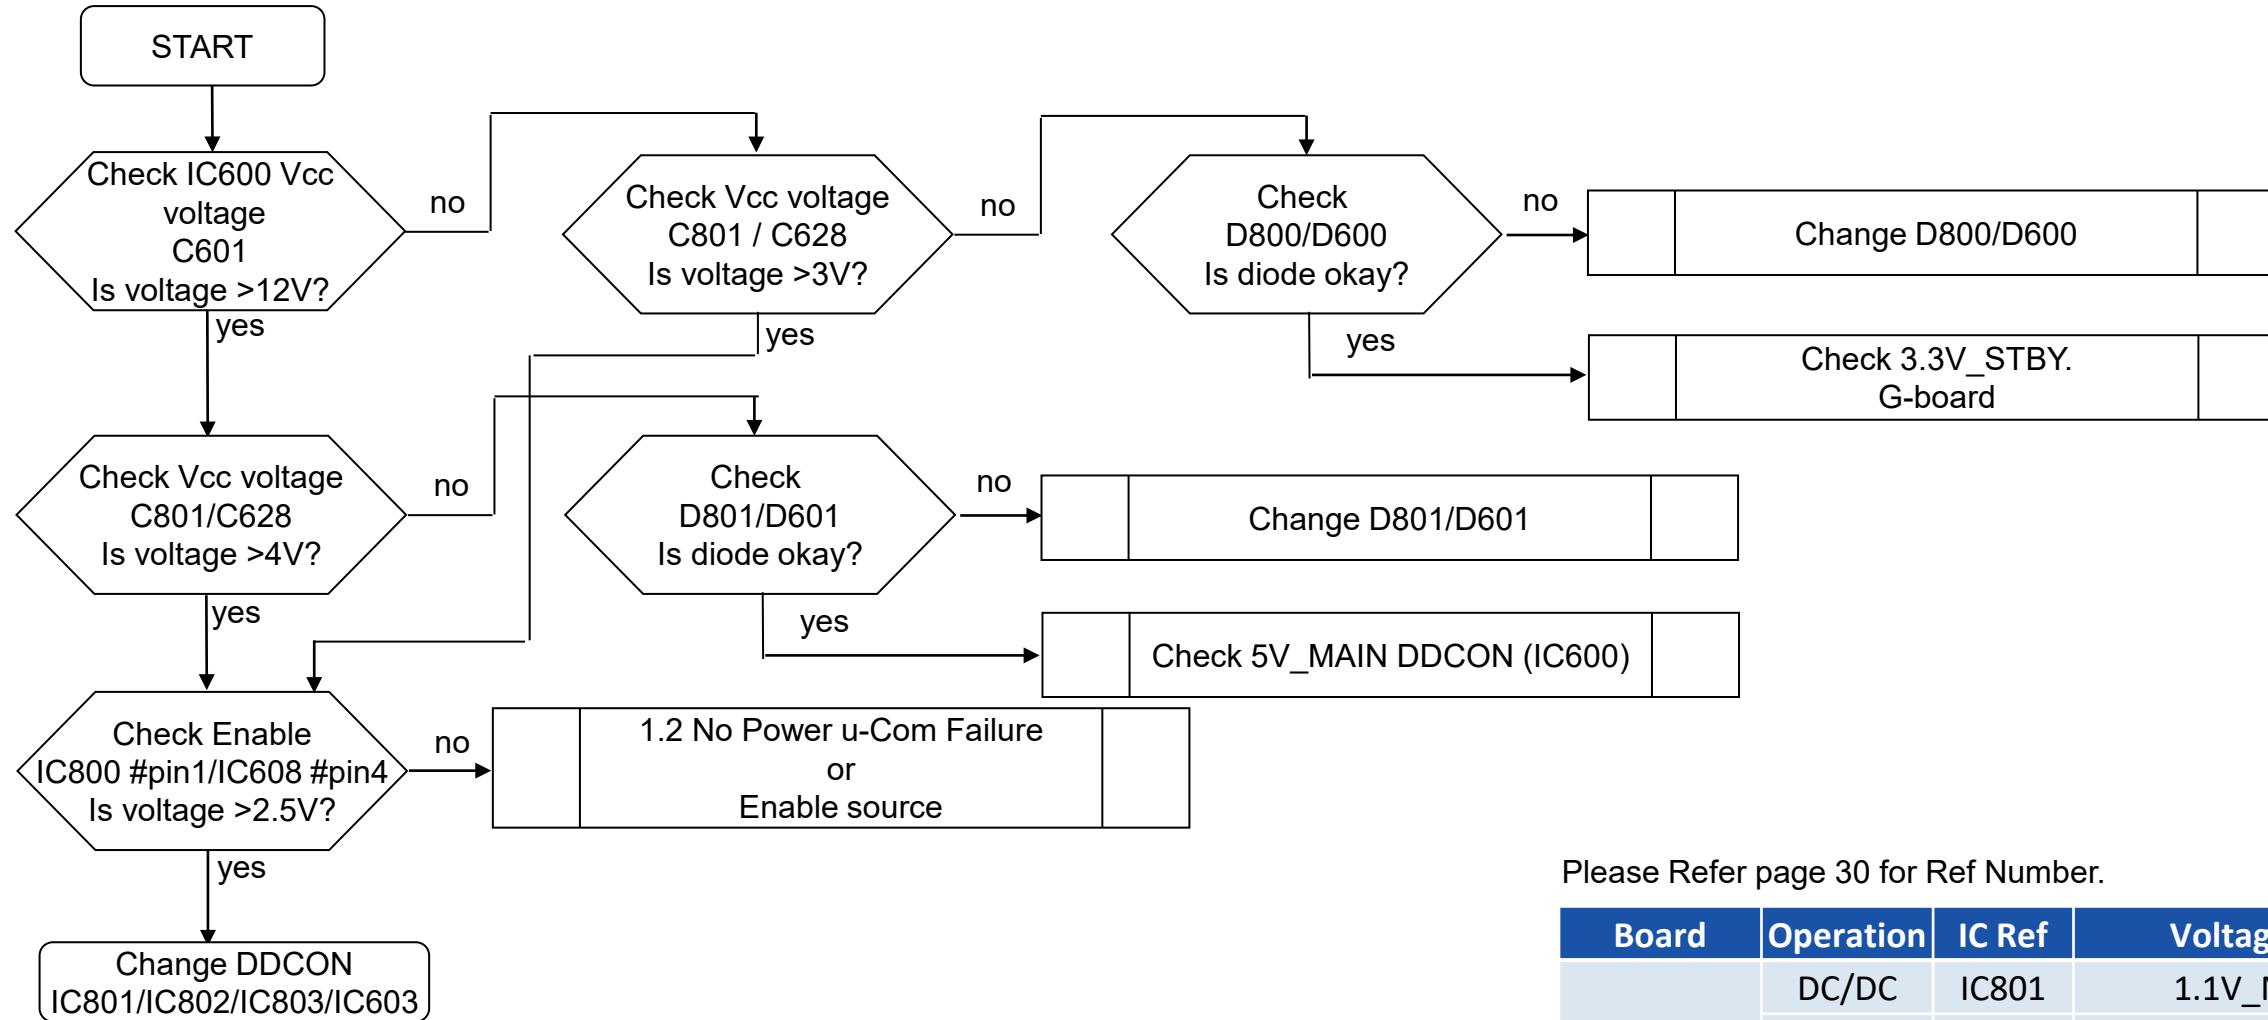


Please Refer page 30 for Ref Number.

Board	Operation	IC Ref	Voltage supply
BM5STY	DC/DC	IC801	1.1V_M5_DDR
	DC/DC	IC802	0.9V_M5_STBY
	DC/DC	IC803	1.8V_STBY
	DC/DC	IC603	1.0V_TU_P

TROUBLESHOOTING

1.3 No Power DDCON/LDO (DDCON Check)

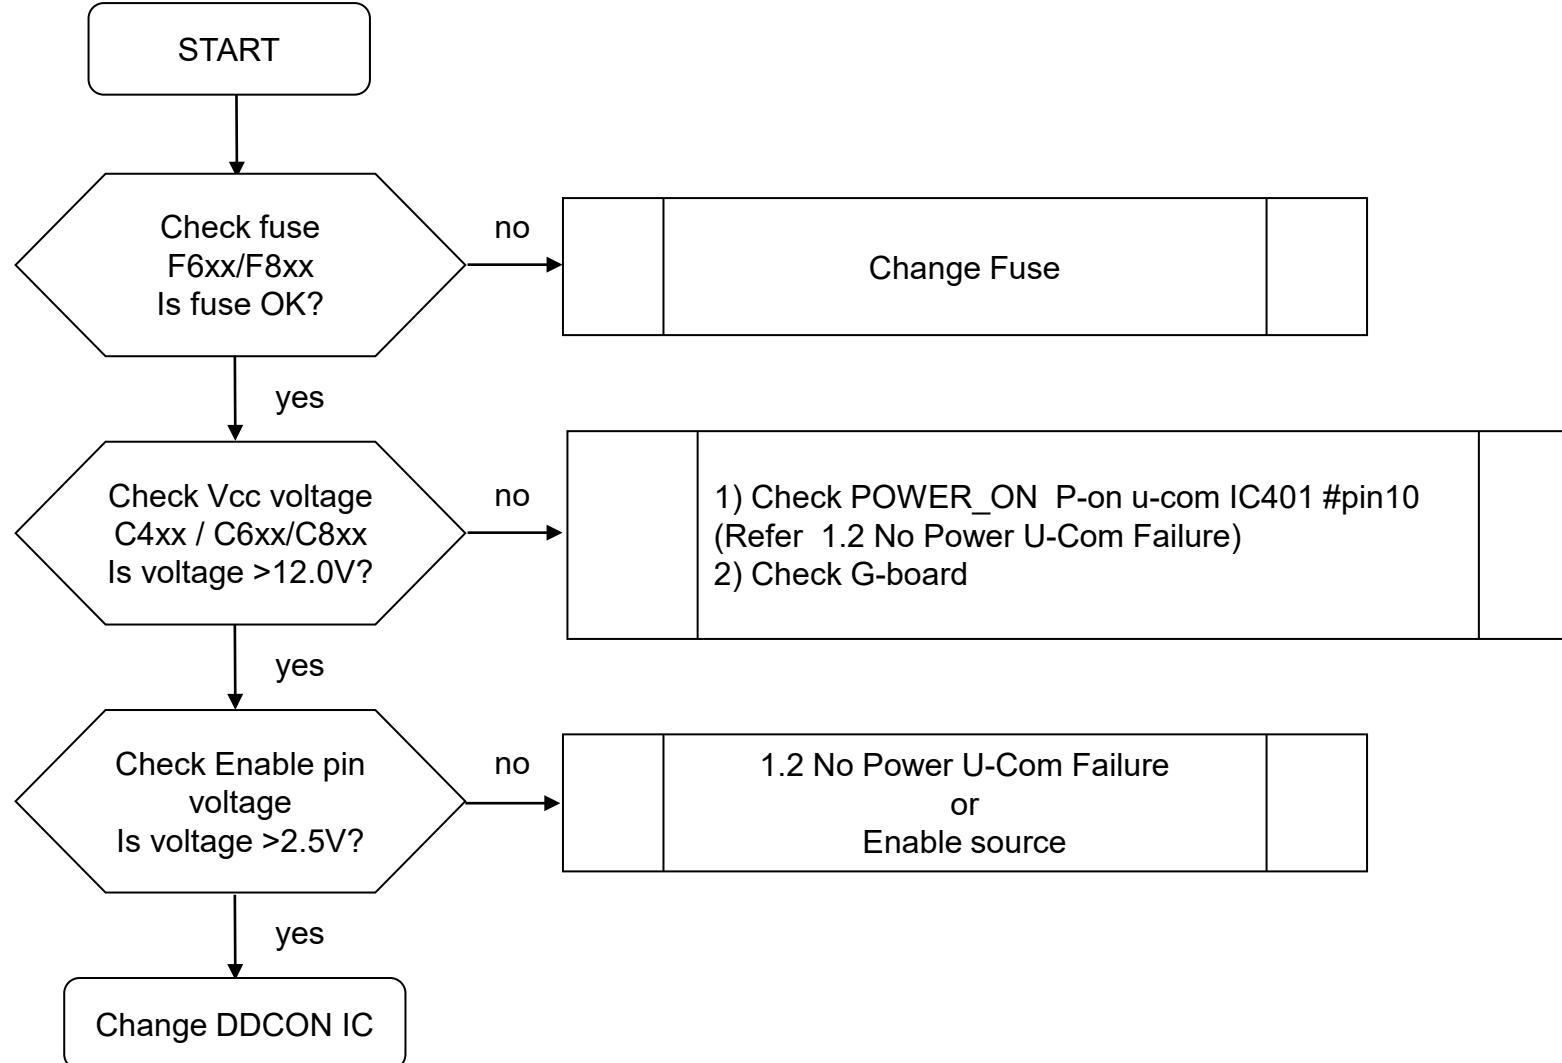


Please Refer page 30 for Ref Number.

Board	Operation	IC Ref	Voltage supply
BM5STY	DC/DC	IC418	5.0V_STBY_H
	DC/DC	IC600	5V_MAIN/5V_AUDIO
	DC/DC	IC618	3.3V_MAIN
	DC/DC	IC613	5.0V_VBUS_CAMERA
	DC/DC	IC804	0.8V_M5_CORE
	DC/DC	IC813	1.8V_M5
	DC/DC	IC812	1.0V_M5
	DC/DC	IC810	0.8V_M5_CPU
	DC/DC	IC811	0.8V_M5_GPU
	DC/DC	IC4800	1.8V_BE_DDC
	DC/DC	IC4801	1.1V_BE
	DC/DC	IC4802	0.9V_BE_DDC_1
	DC/DC	IC4803	0.9V_BE_DDC_2
	DC/DC	IC4809	0.8V_BE
	DC/DC	IC4810	0.7V_BE

TROUBLESHOOTING

1.3 No Power DDCON/LDO (DDCON Check) – XR-83A80*

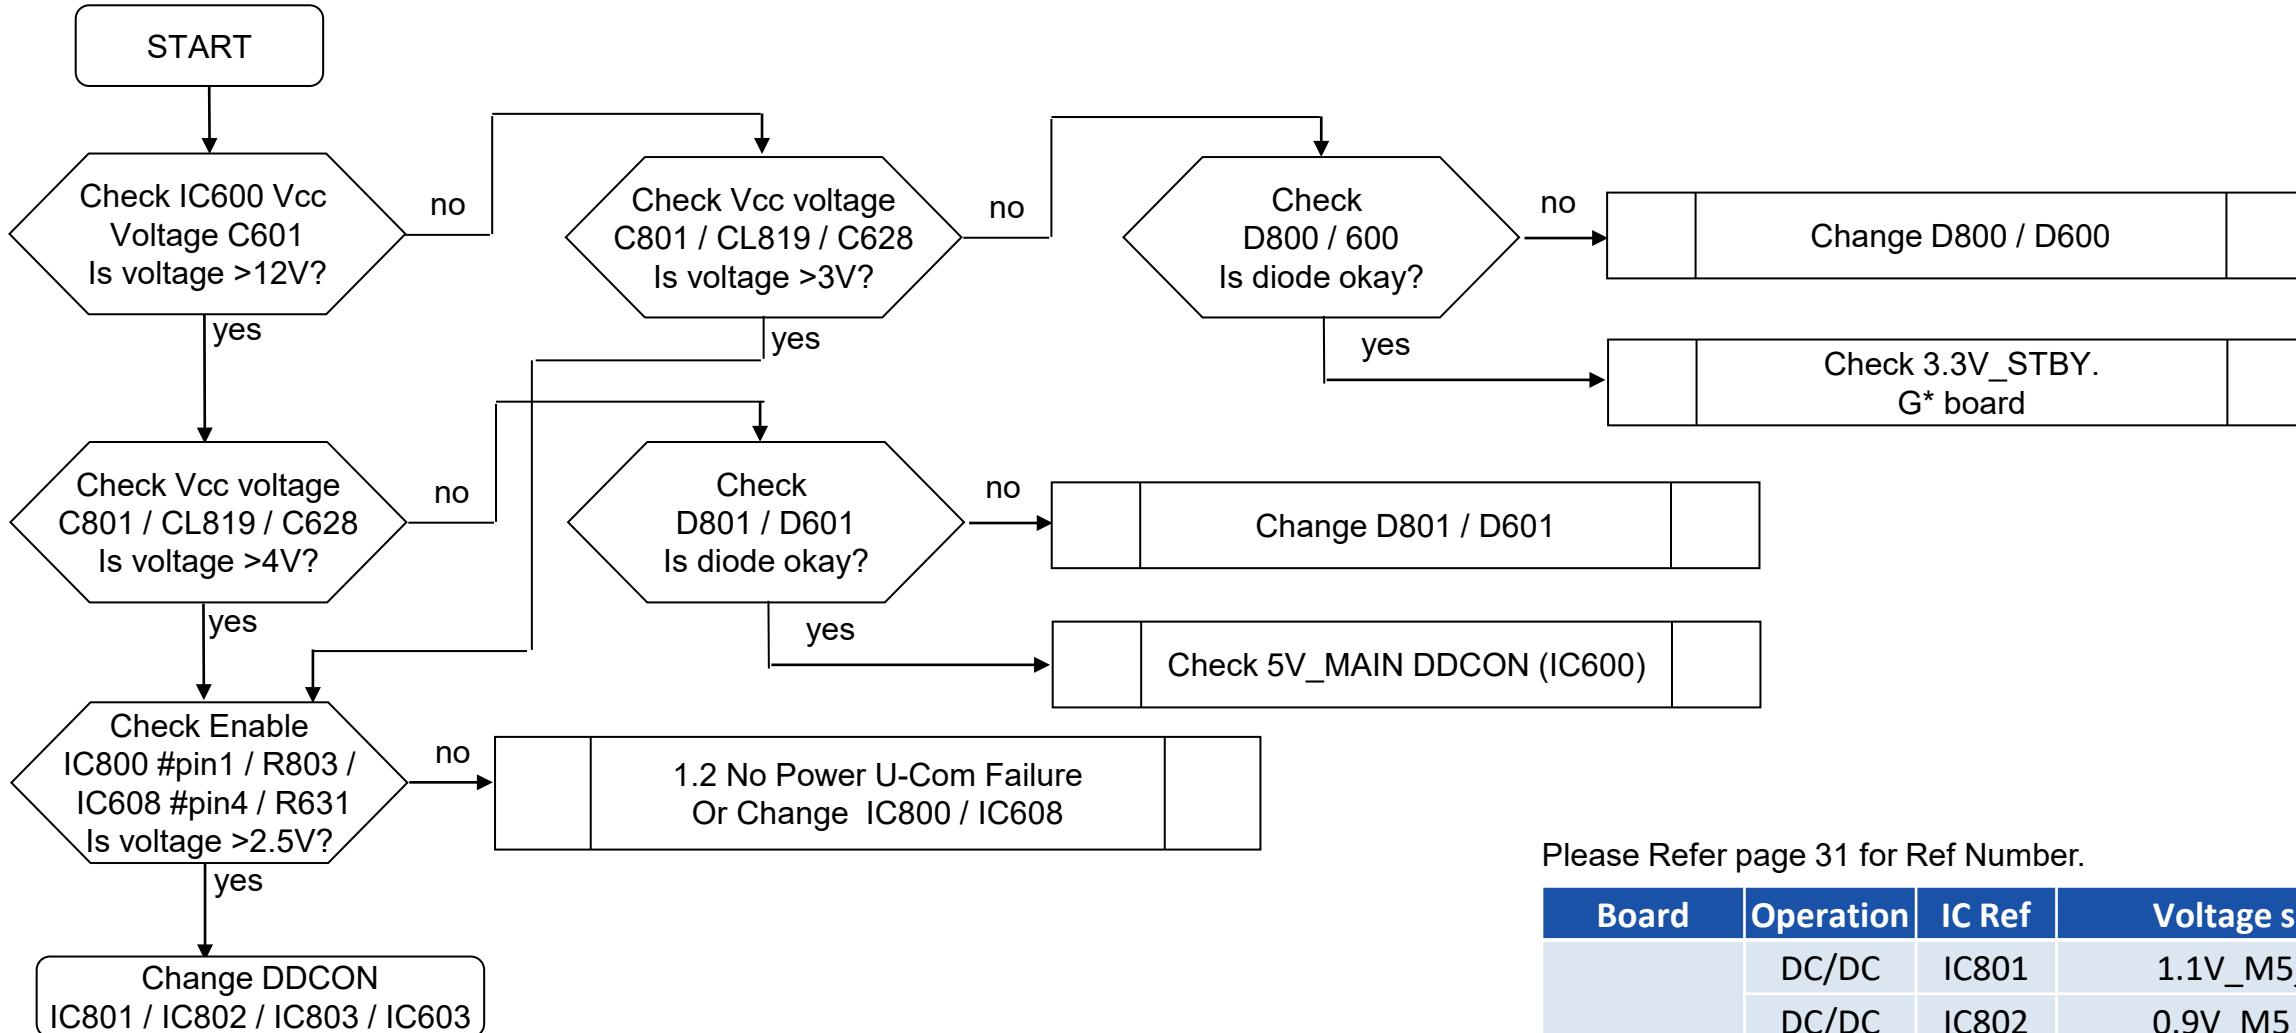


Please Refer page 31 for Ref Number.

Board	Operation	IC Ref	Voltage supply
BM5S21	DC/DC	IC801	1.1V_M5_DDR
	DC/DC	IC802	0.9V_M5_STBY
	DC/DC	IC803	1.8V_STBY
	DC/DC	IC603	1.0V_TU_P

TROUBLESHOOTING

1.3 No Power DDCON/LDO (DDCON Check) – XR-83A80*

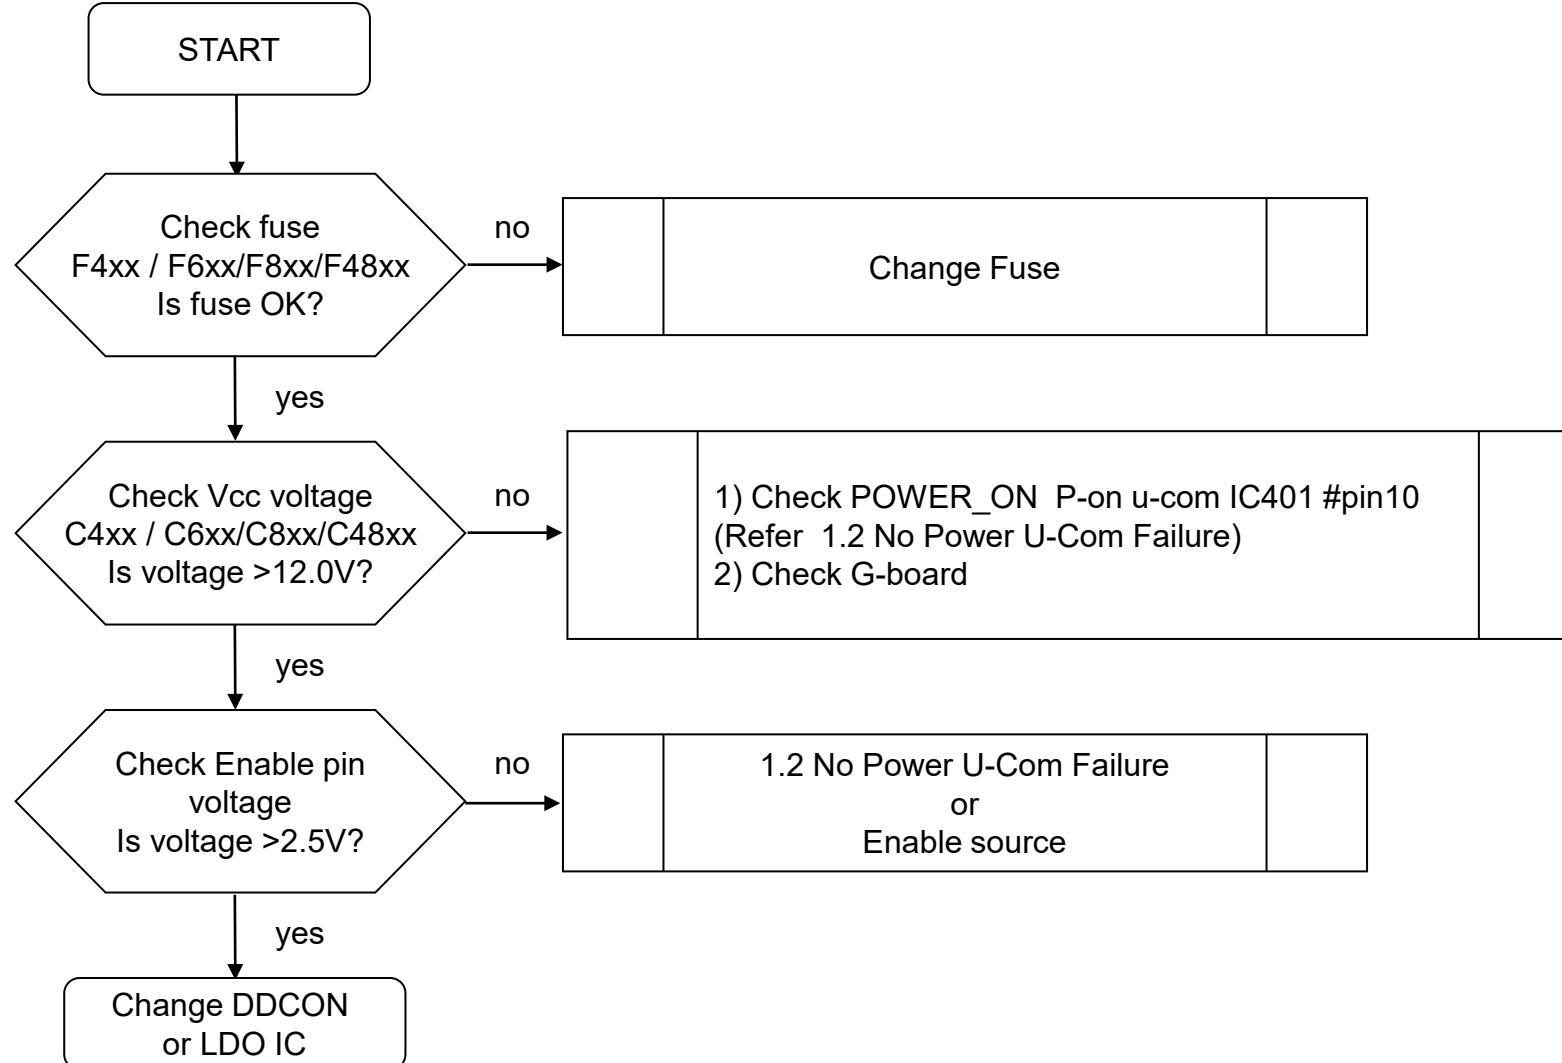


Please Refer page 31 for Ref Number.

Board	Operation	IC Ref	Voltage supply
BM5S21	DC/DC	IC600	5V_MAIN/5V_AUDIO
	DC/DC	IC601	3.3V_MAIN/3.3V_AU DIO
	DC/DC	IC804	0.8V_M5_CORE
	DC/DC	IC807	1.8V_M5
	DC/DC	IC808	1.0V_M5
	DC/DC	IC810	0.8V_M5_CPU
	DC/DC	IC811	0.8V_M5_GPU
	DC/DC	IC4800	1.8V_BE_DDC
	DC/DC	IC4801	1.1V_BE
	DC/DC	IC4802	0.9V_BE_DDC_1
	DC/DC	IC4803	0.9V_BE_DDC_2
	DC/DC	IC4809	0.8V_BE
	DC/DC	IC4810	0.7V_BE

TROUBLESHOOTING

1.3 No Power DDCON/LDO (DDCON Check) – XR-83A80*


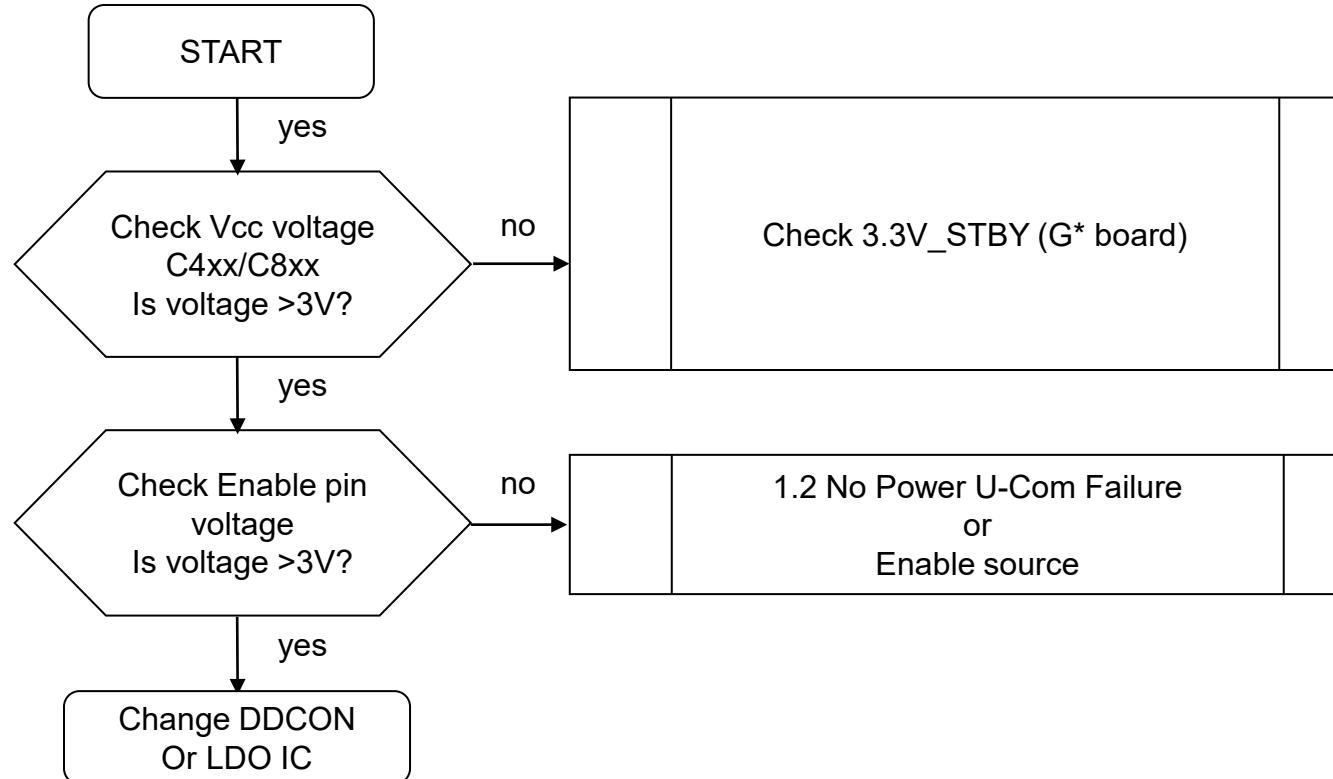


Please Refer page 31 for Ref Number.

Board	Operation	IC Ref	Voltage supply
BM5S21	DC/DC	IC418	5.0V_STBY_H
	LDO	IC403	3.3V_MAIN_H
	LDO	IC806	1.8V_M5_ET_STBY
	LDO	IC809	3.3V_M5_STBY


TROUBLESHOOTING

Board View

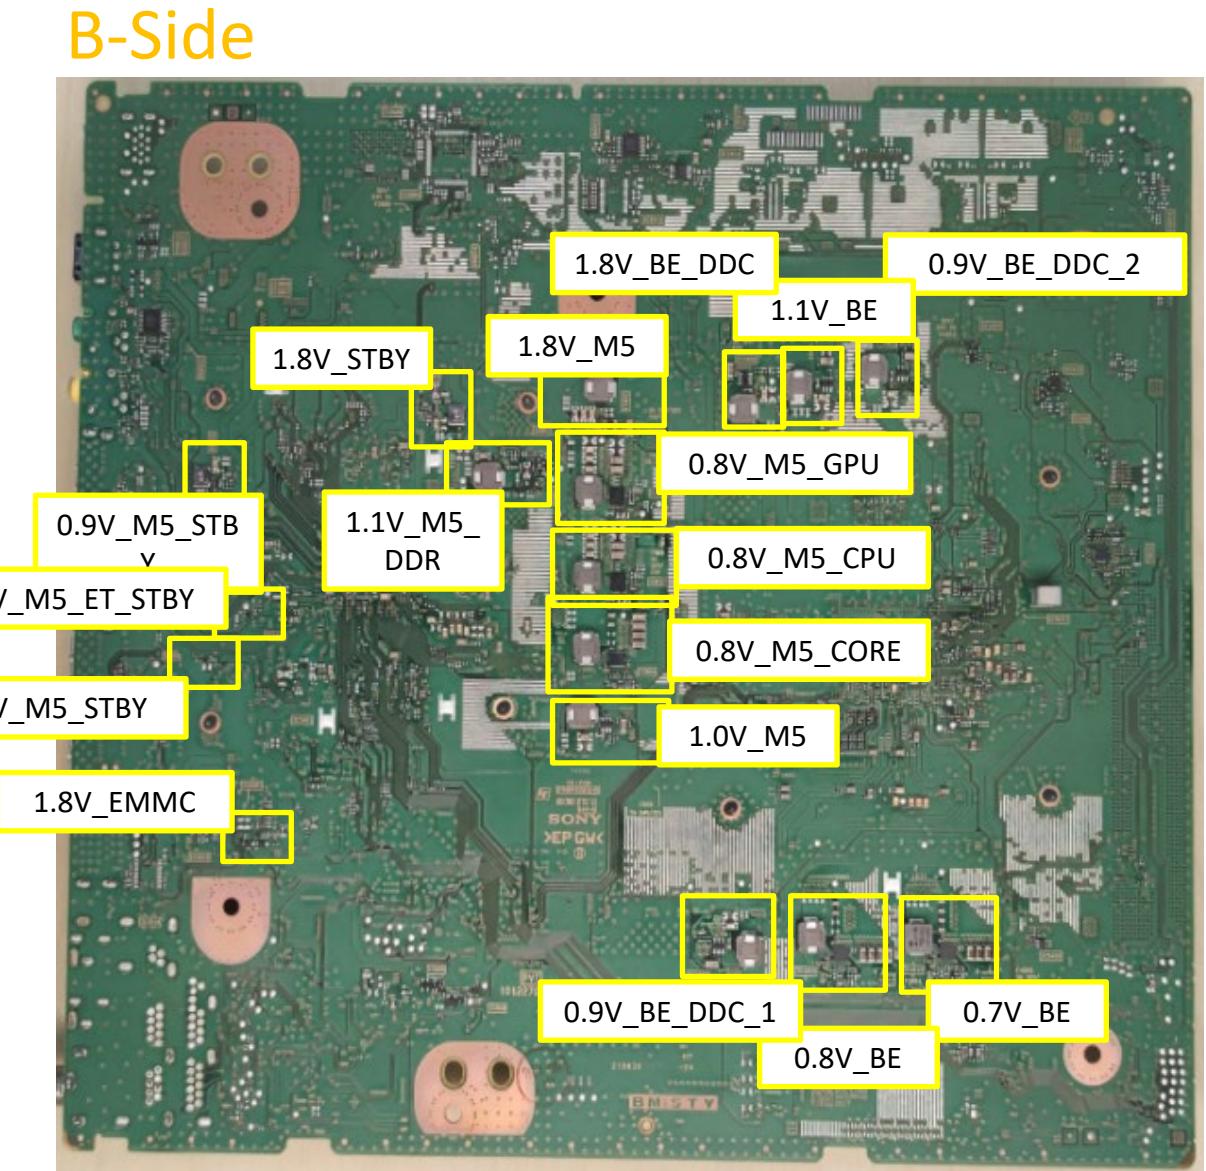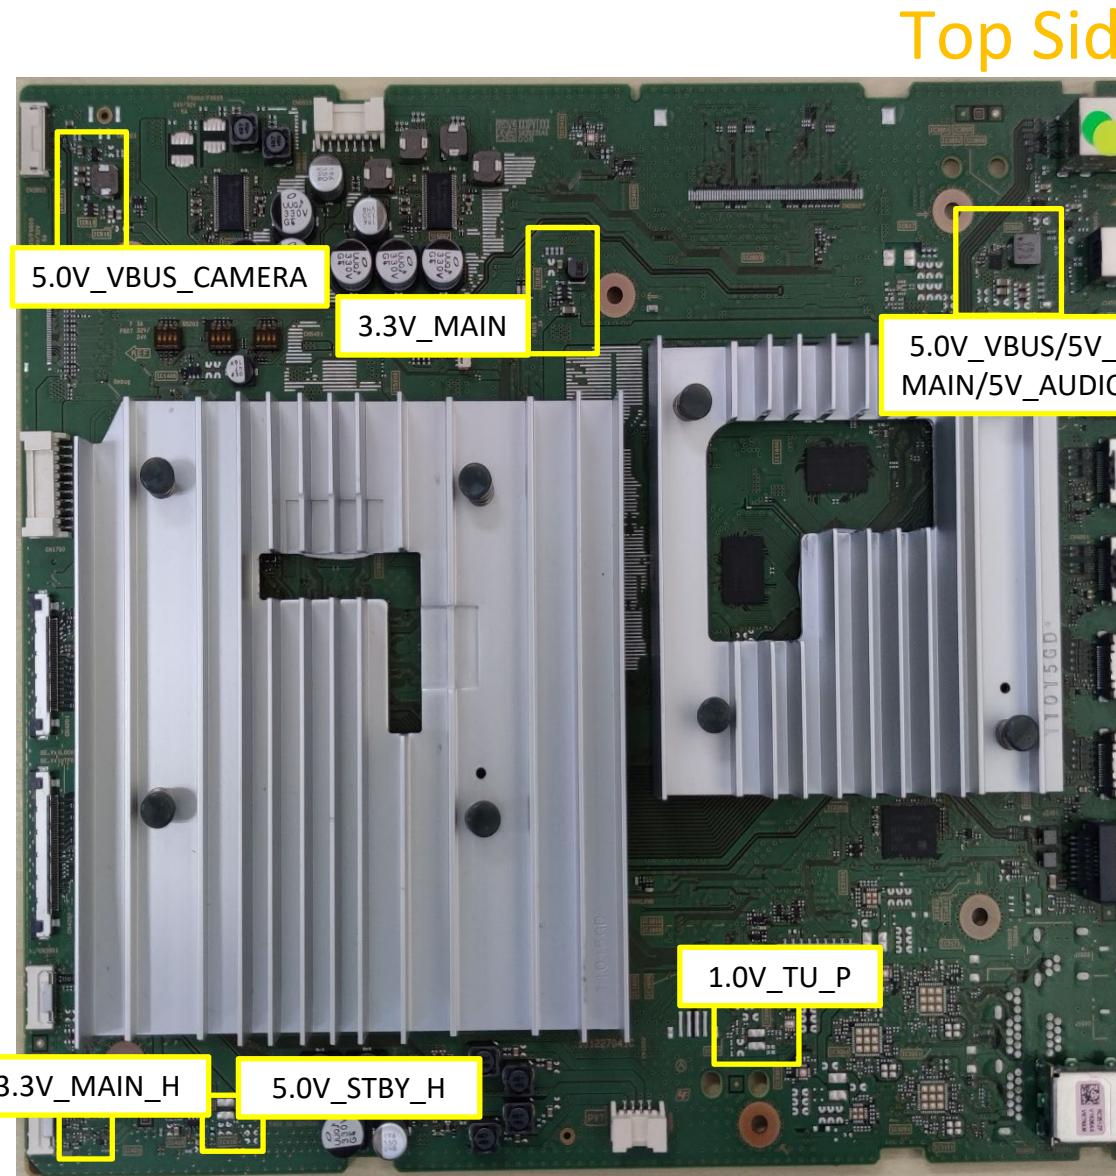

TROUBLESHOOTING


Board View

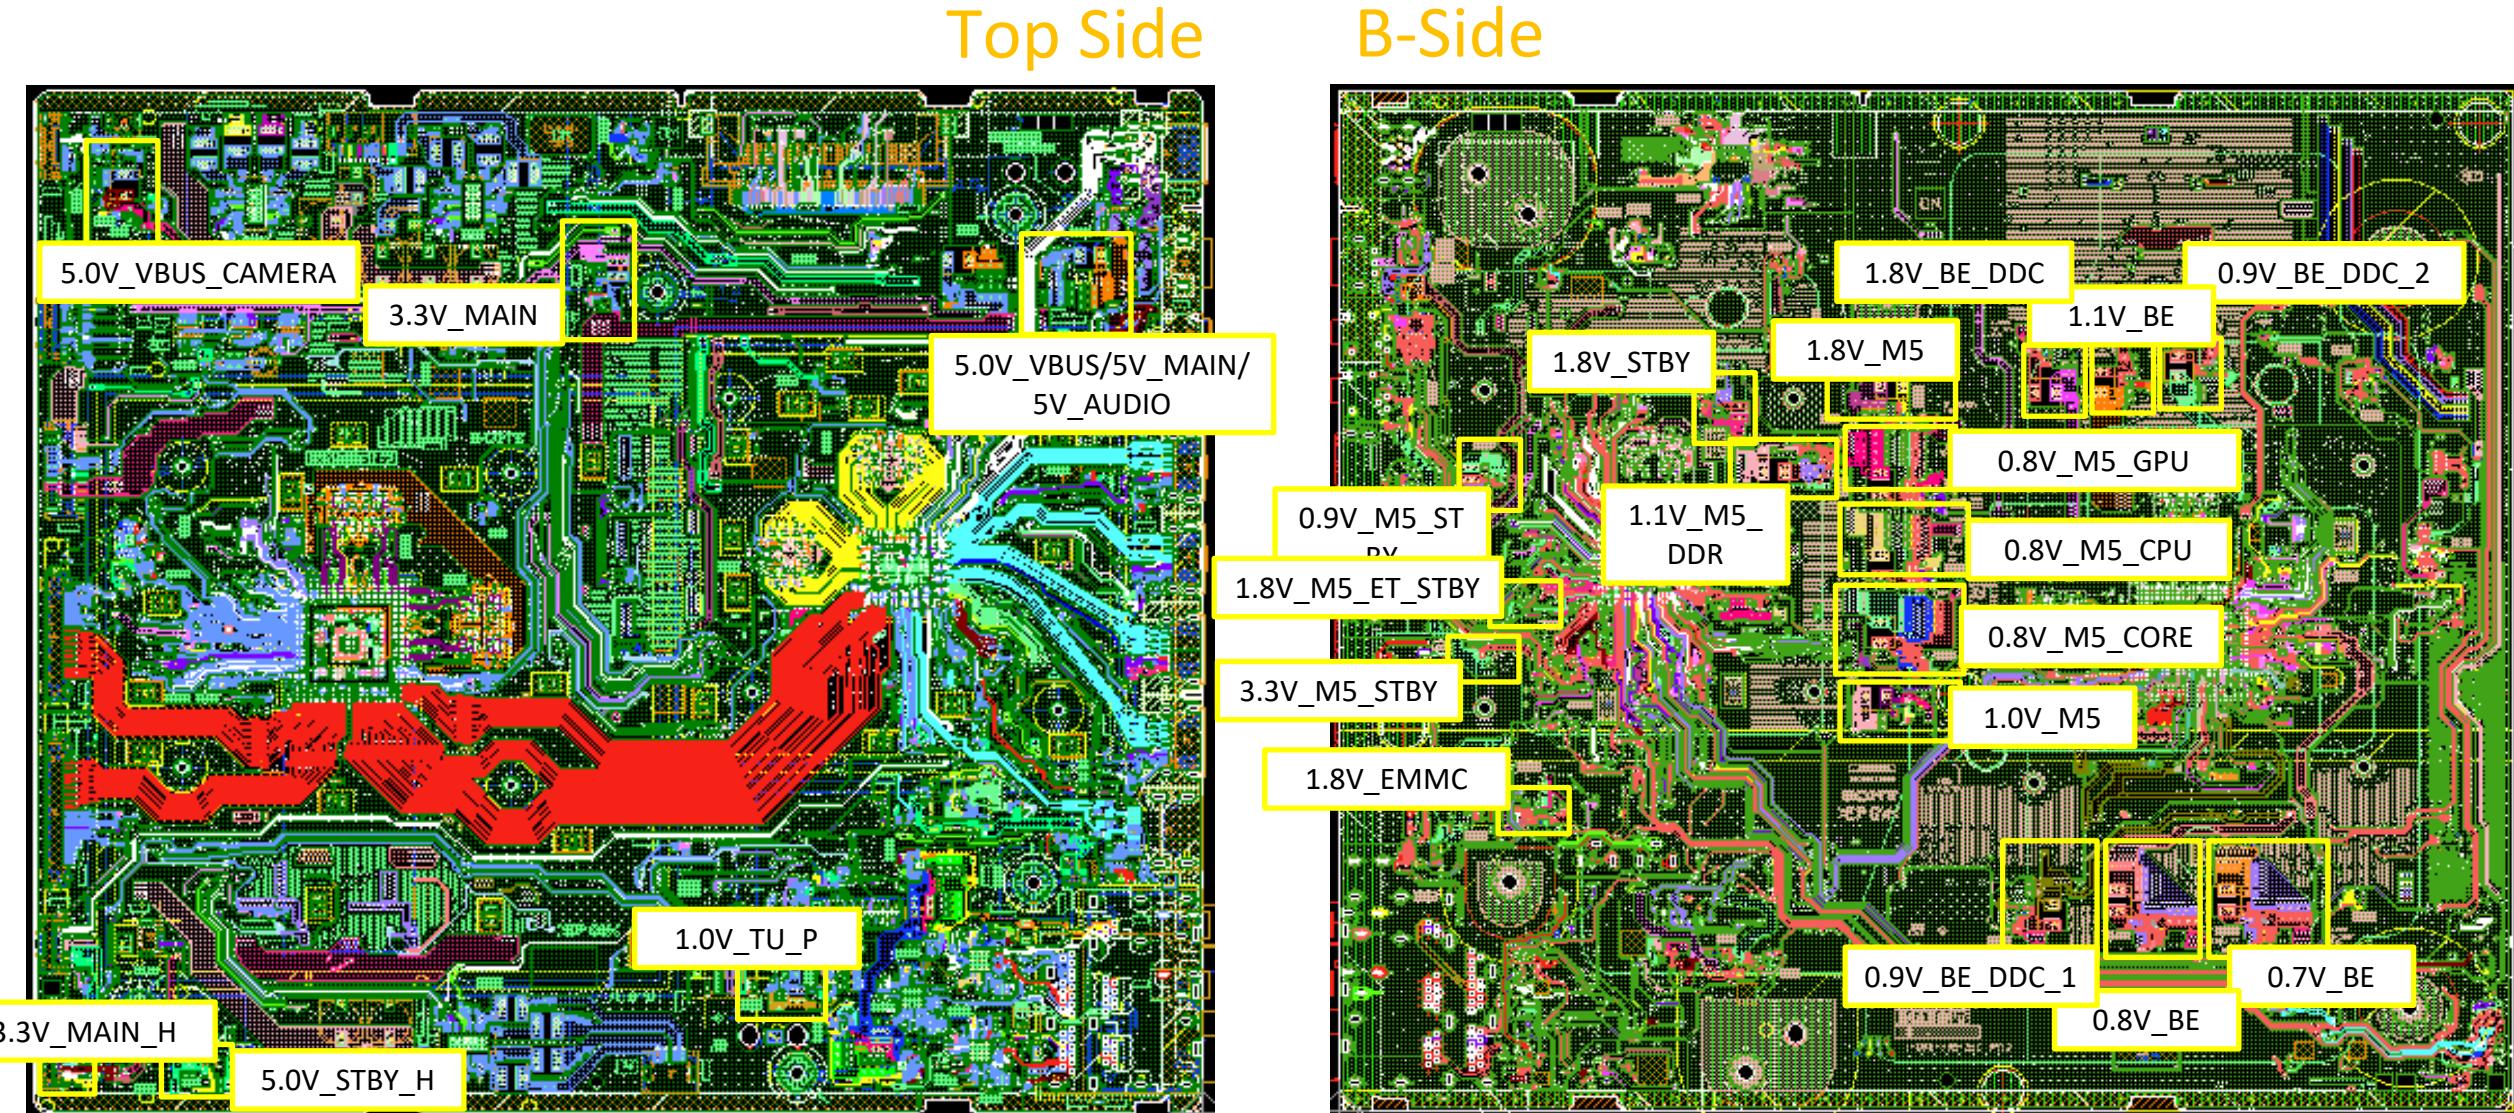


TROUBLESHOOTING

Checking Point

5.0V_STBY_H

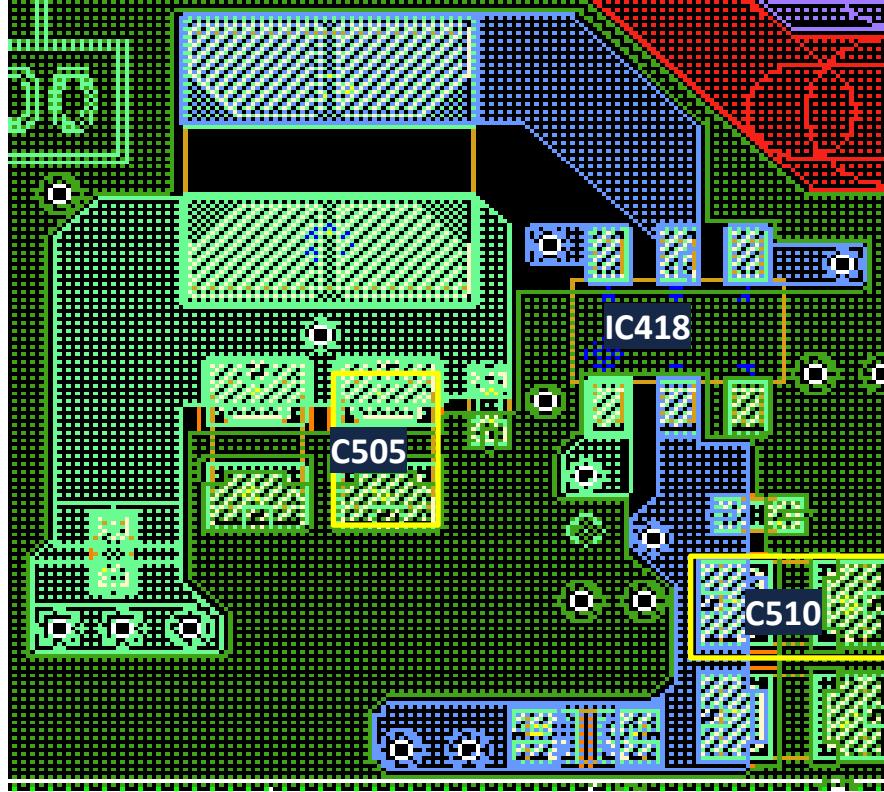


A-Side

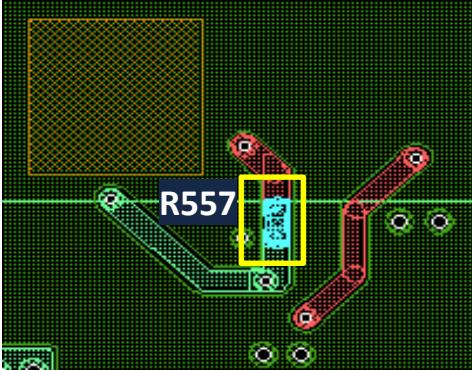

A-Side

5.0V_VBUS/5V_MAIN/5V_AUDIO

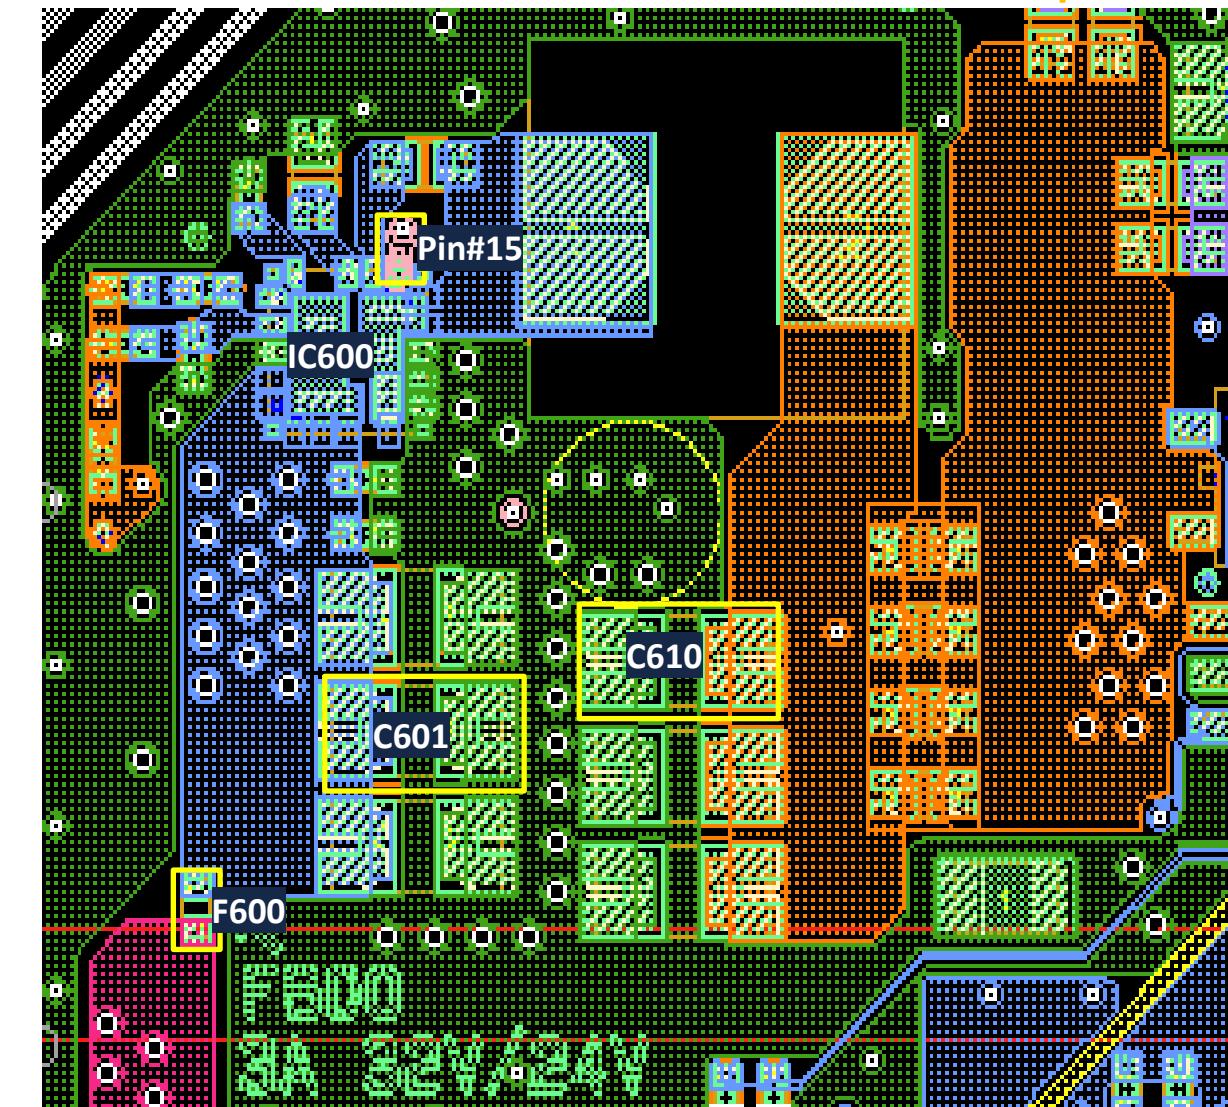


Top Side

TROUBLESHOOTING

Checking Point


3.3V_MAIN

Top Side

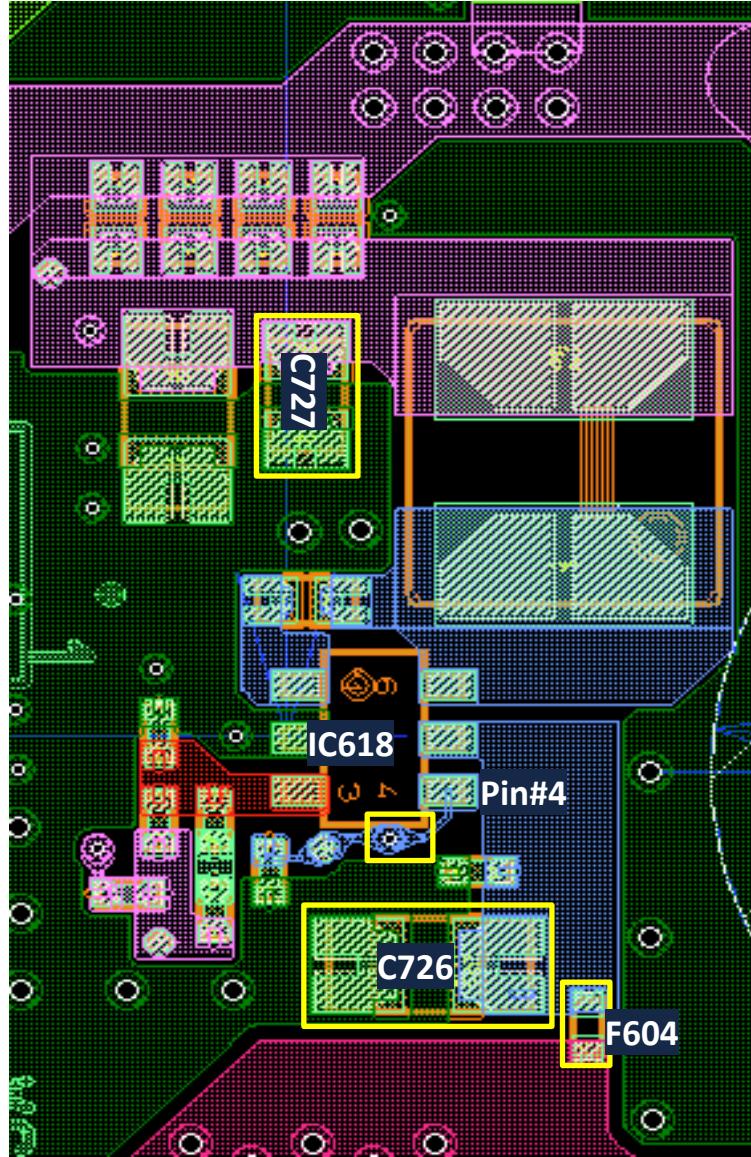

5.0V_VBUS_CAMERA


Top Side

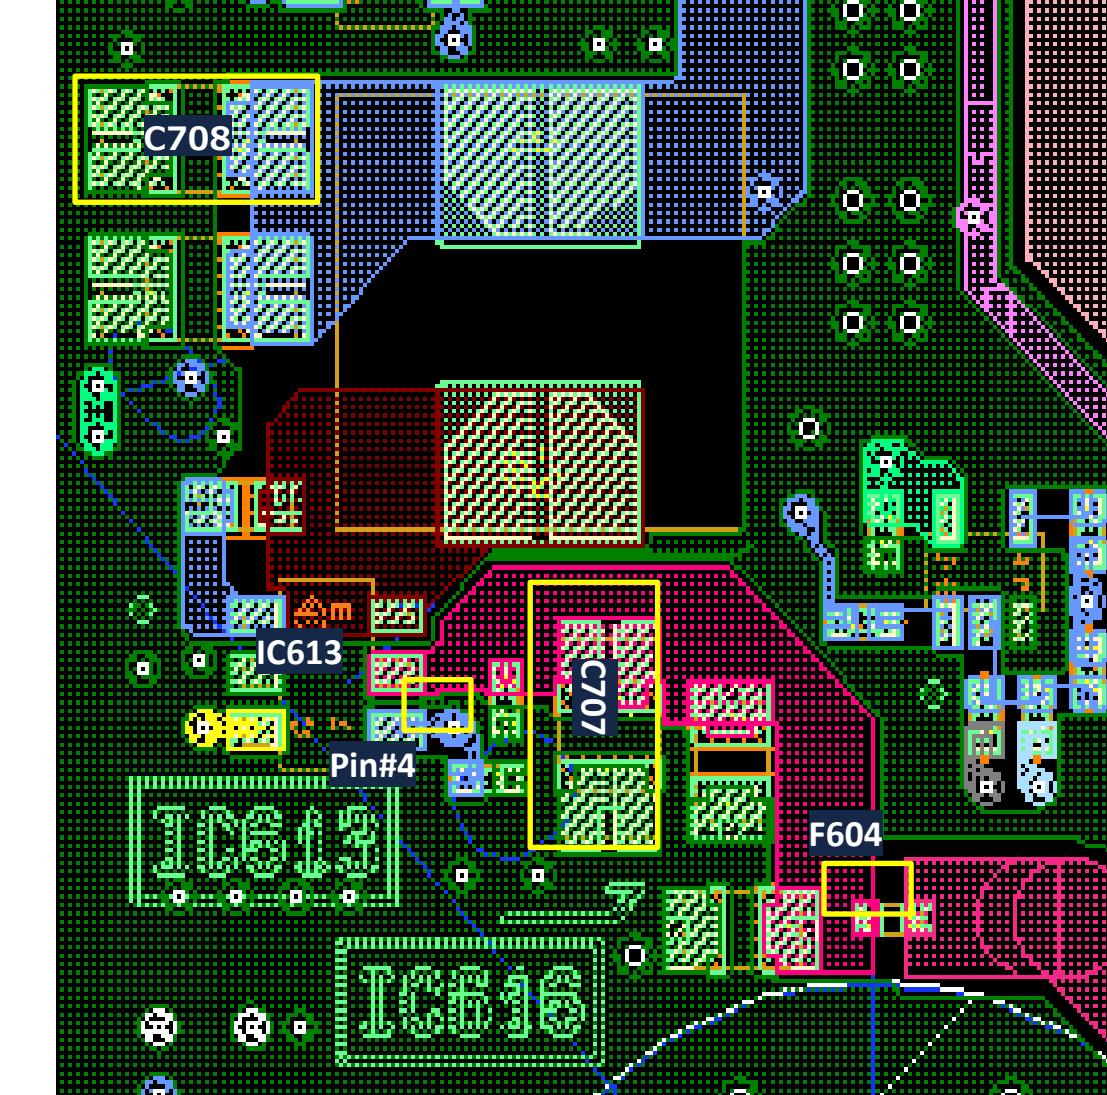

TROUBLESHOOTING


Checking Point

1.0V_TU_P

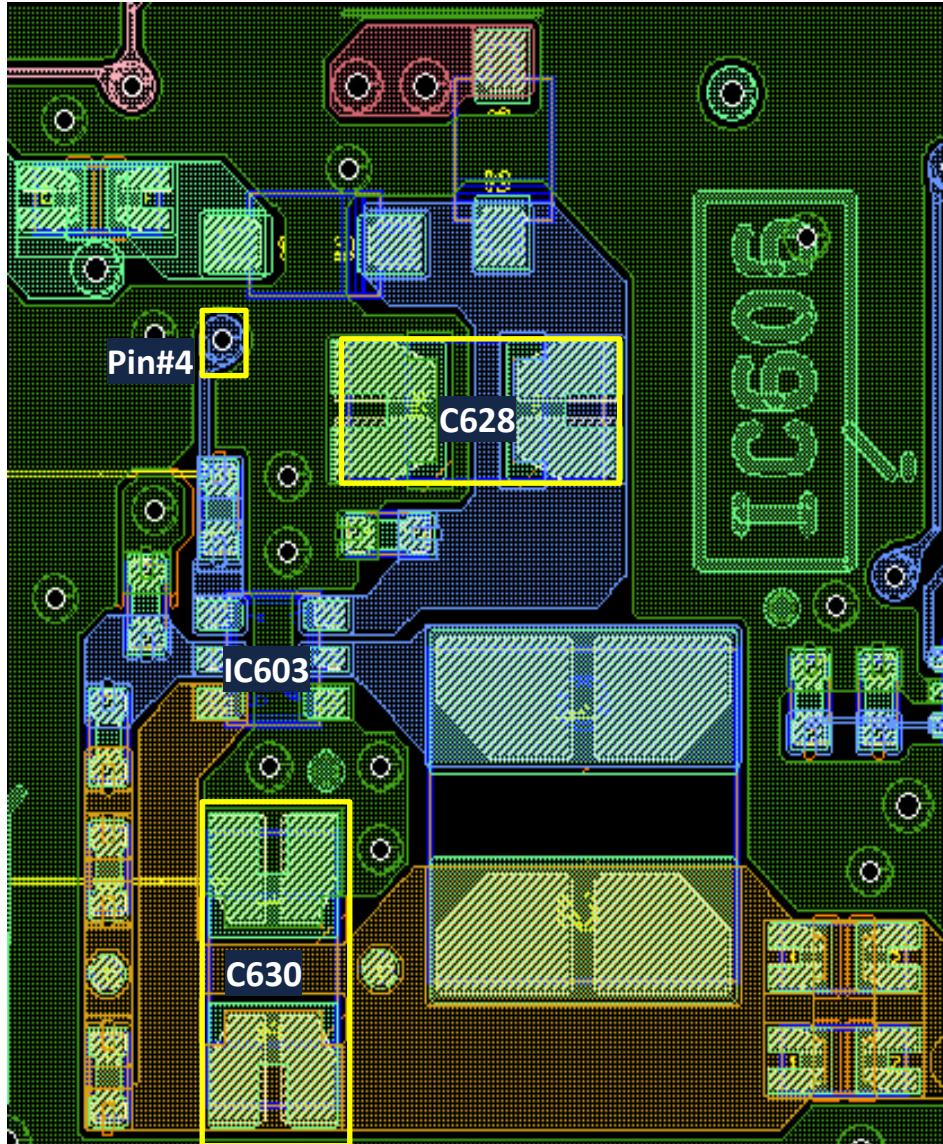

Top Side

1.1V_M5_DDR

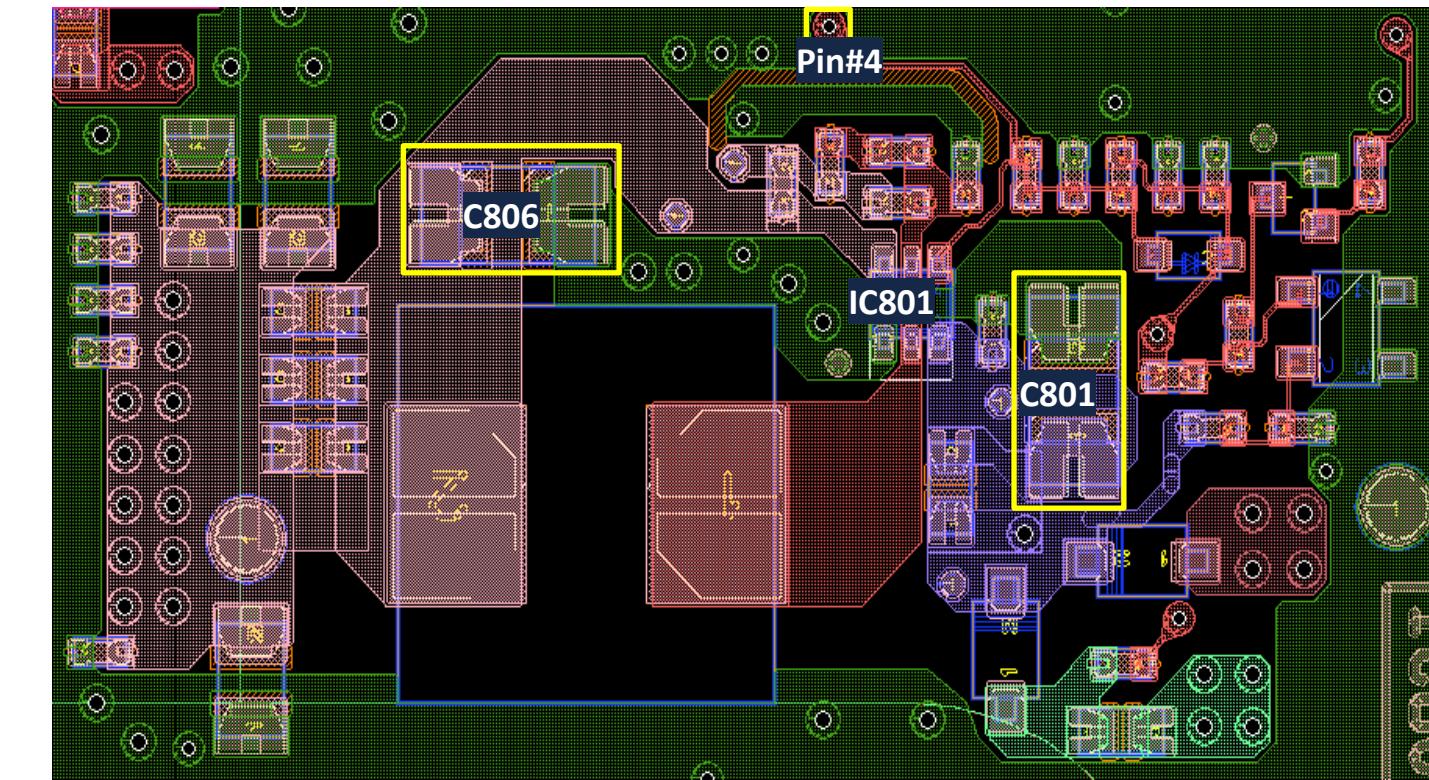


B-Side

TROUBLESHOOTING

Checking Point


0.9V_M5_STBY

B-Side

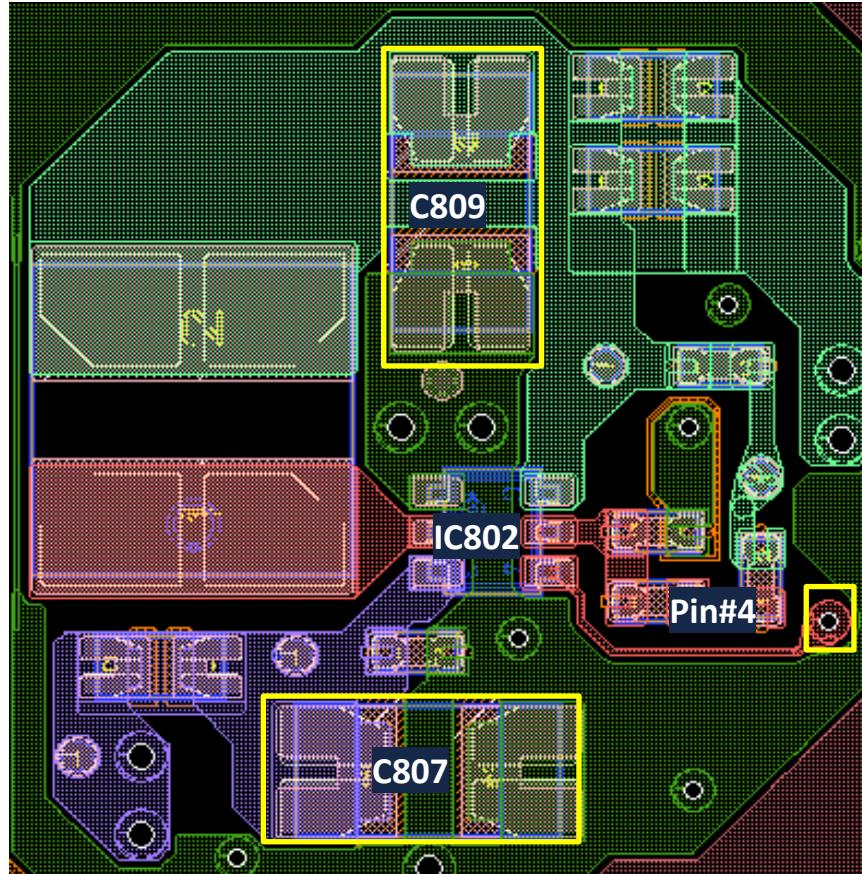

1.8V_STBY


B-Side

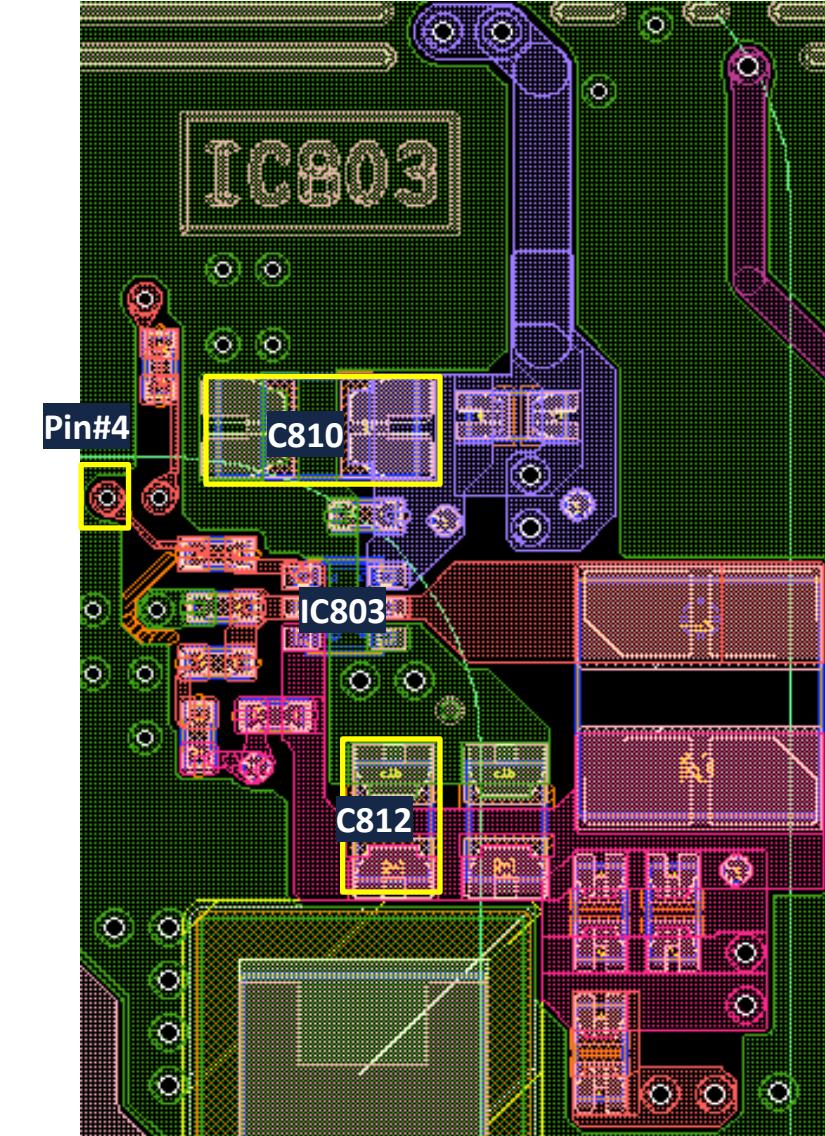


TROUBLESHOOTING

Checking Point

0.8V_M5_CORE

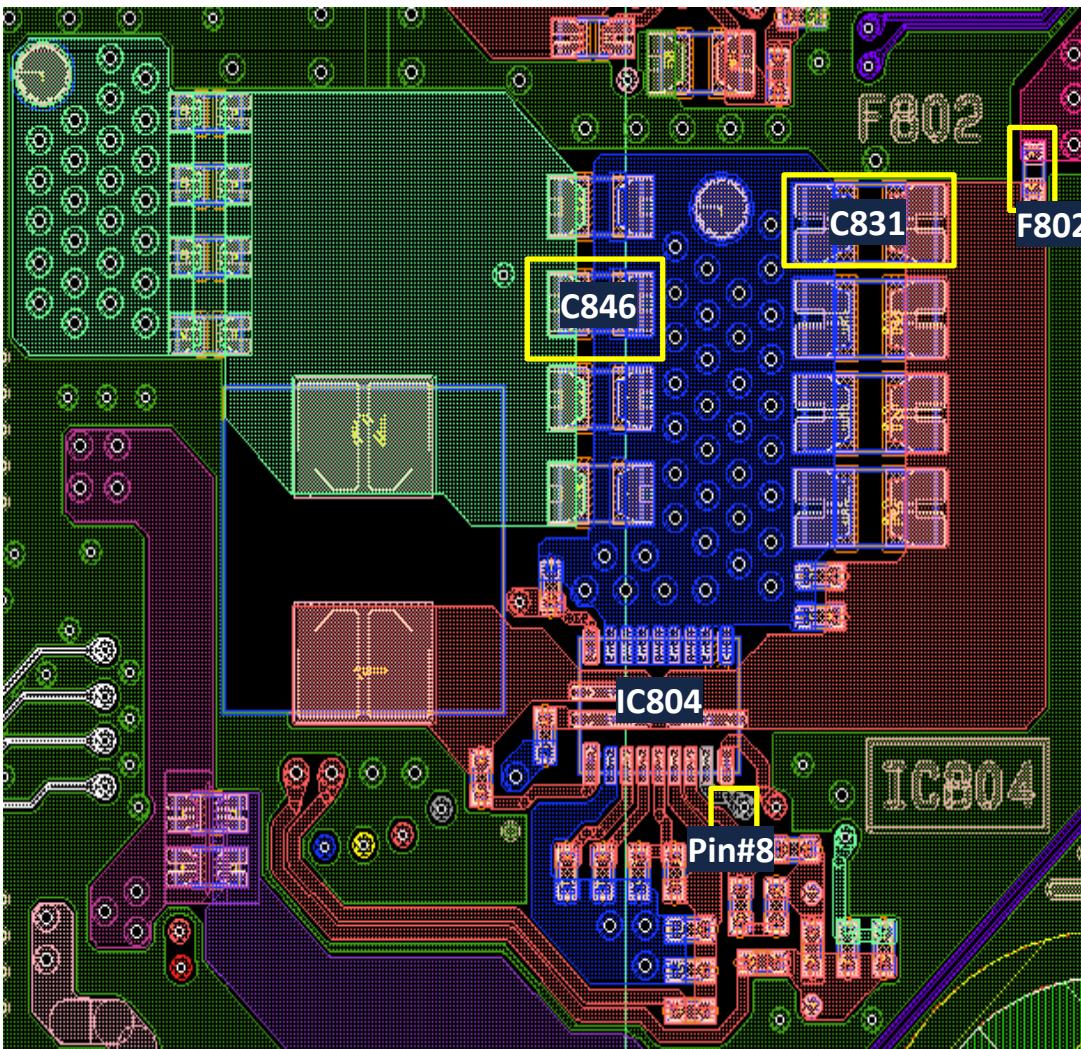


1.8V_M5

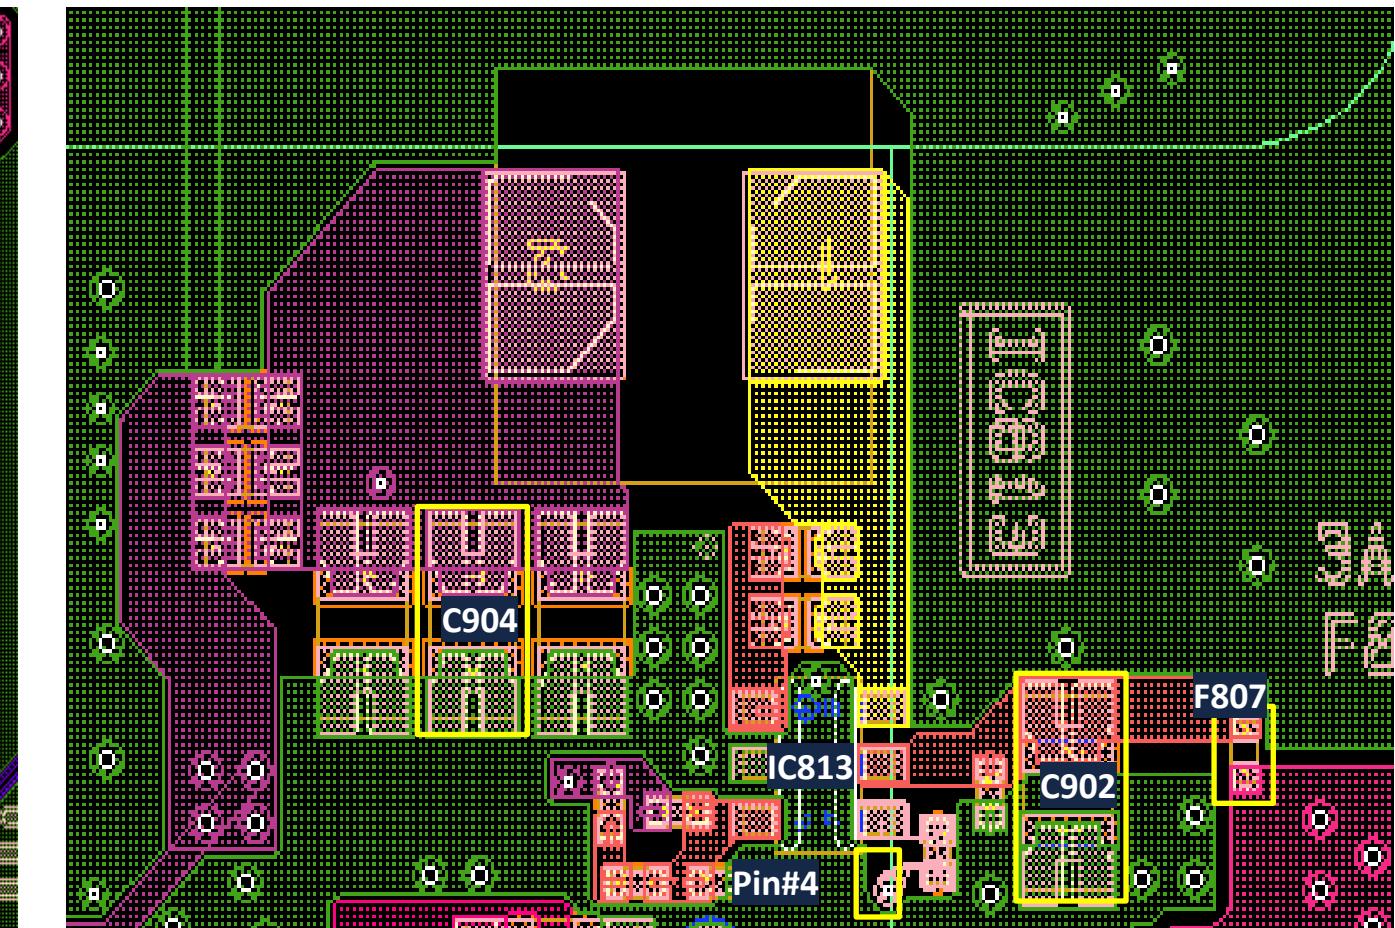

TROUBLESHOOTING


Checking Point

1.0V_M5

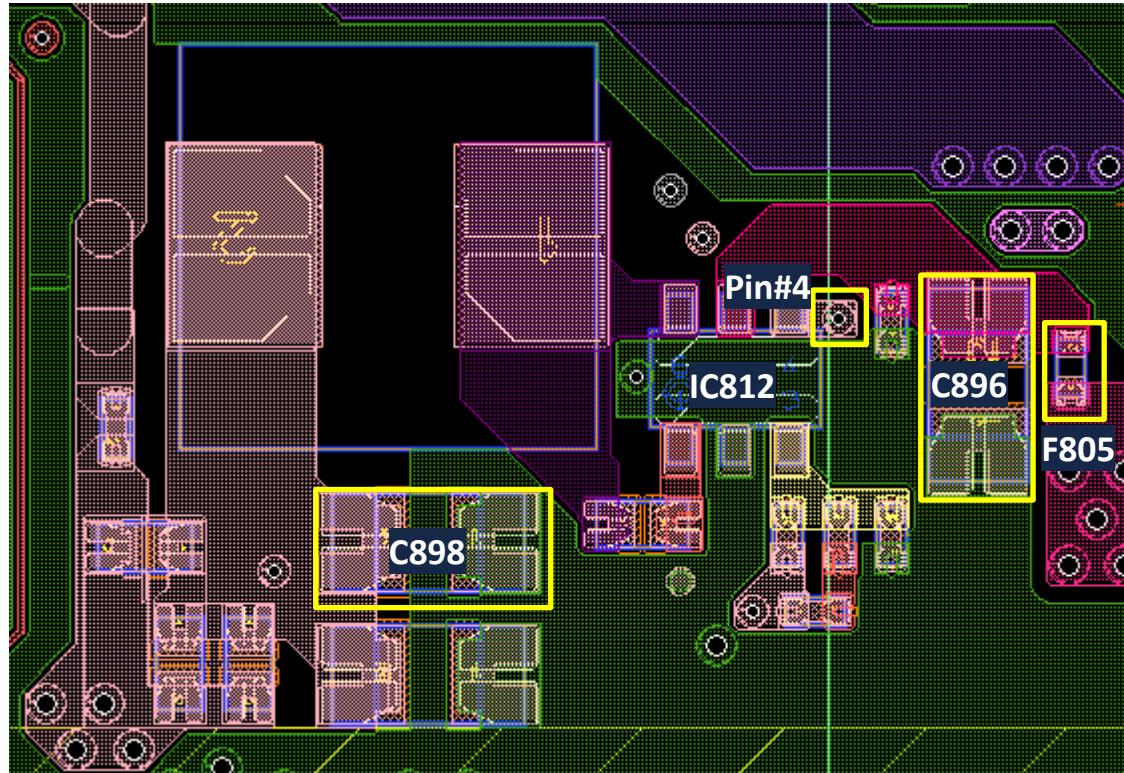

B-Side

0.8V_M5_CPU

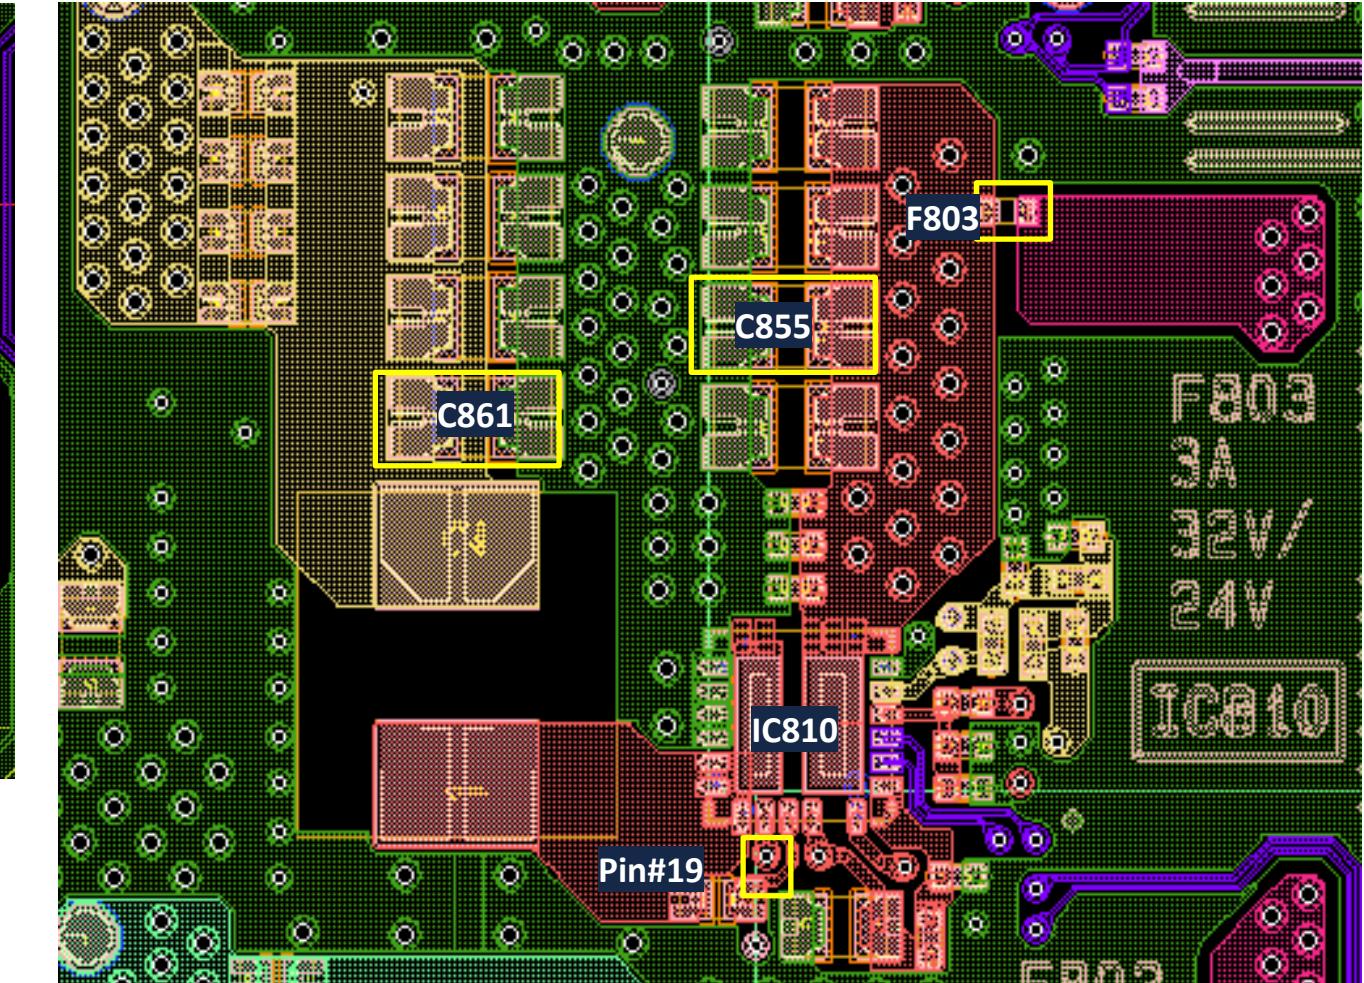


B-Side

TROUBLESHOOTING

Checking Point



0.8V_M5_GPU

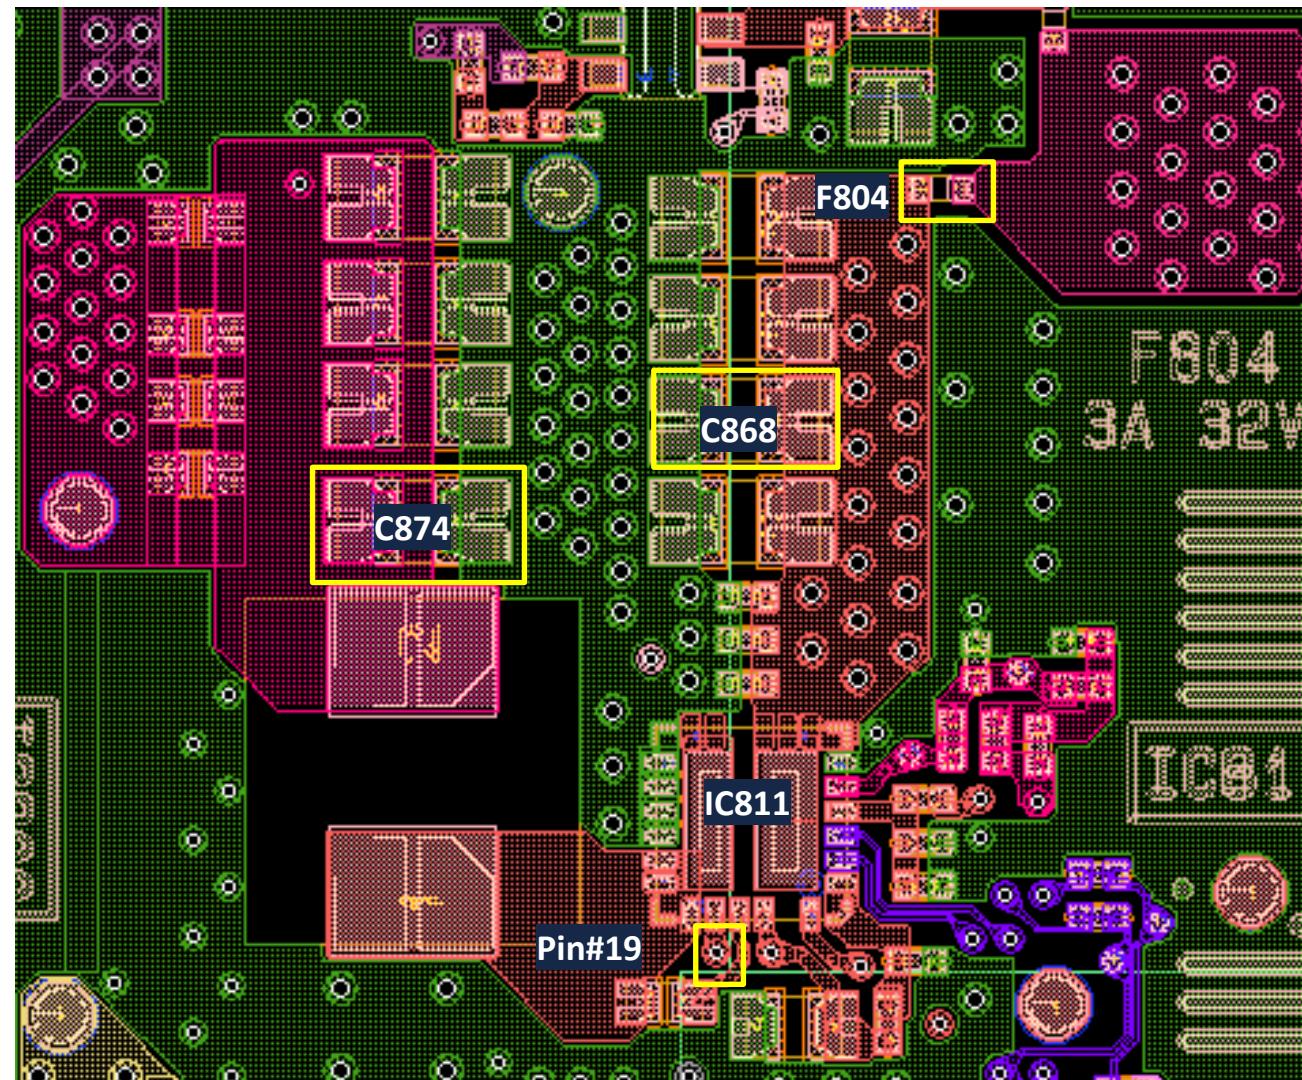

B-Side



TROUBLESHOOTING

Checking Point

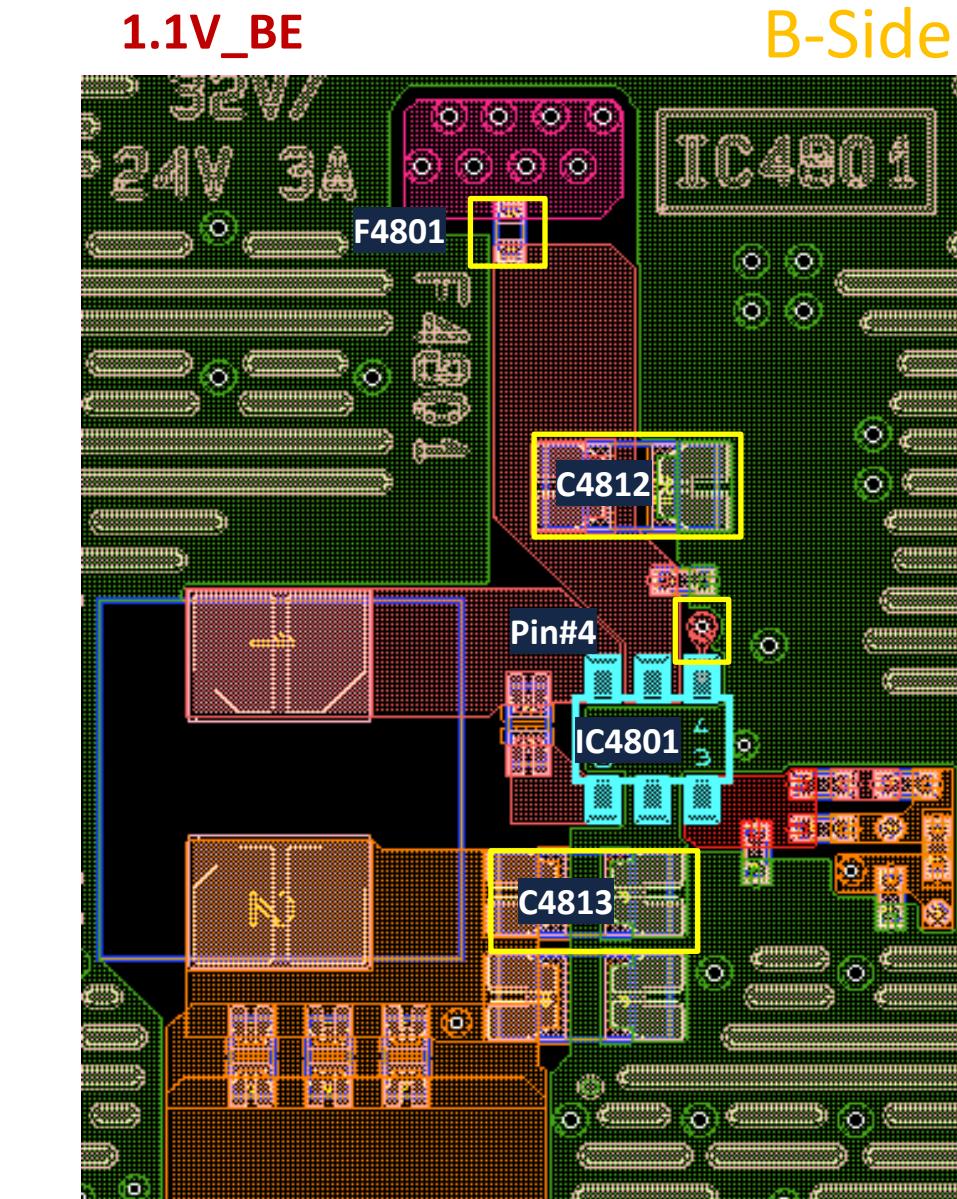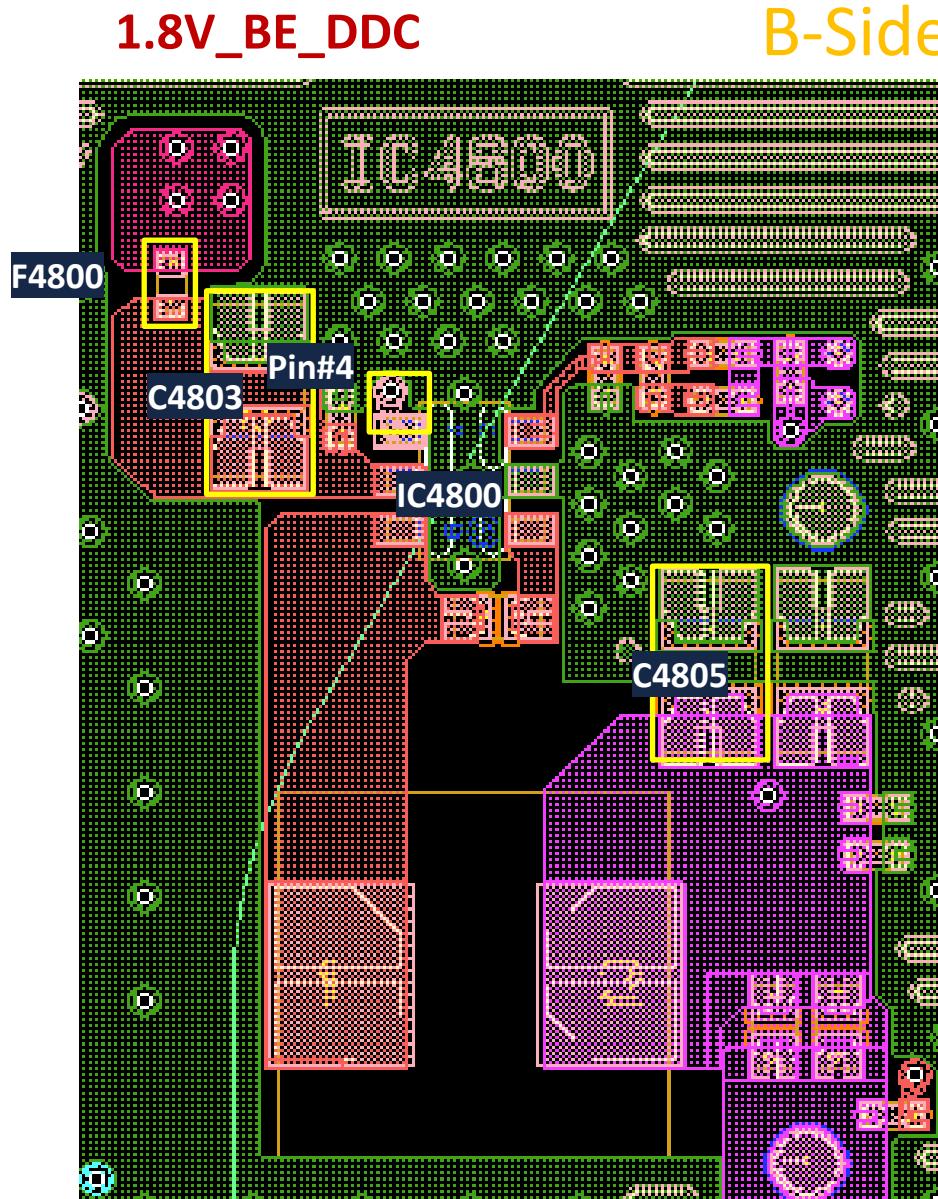

TROUBLESHOOTING


Checking Point

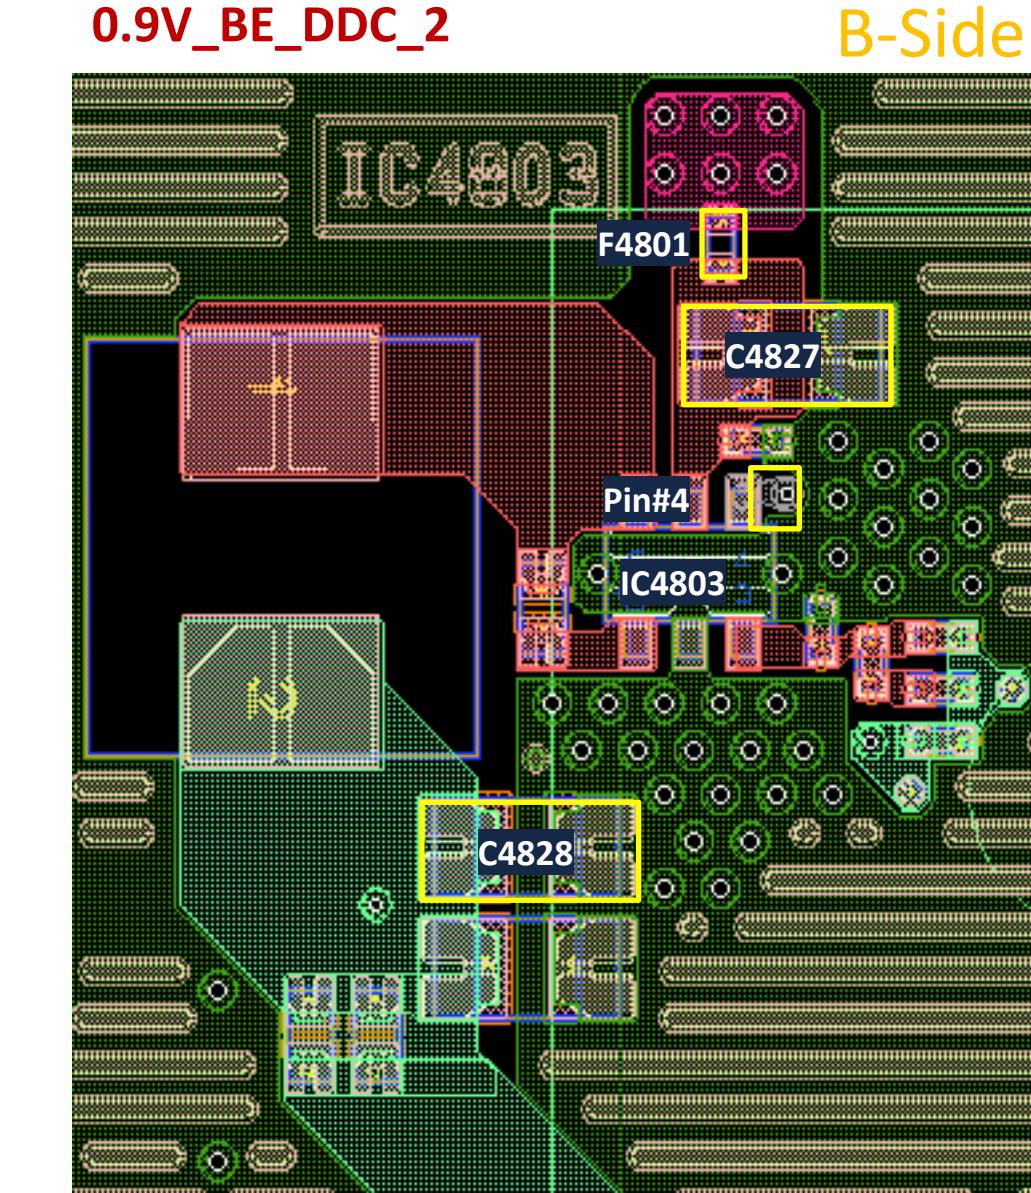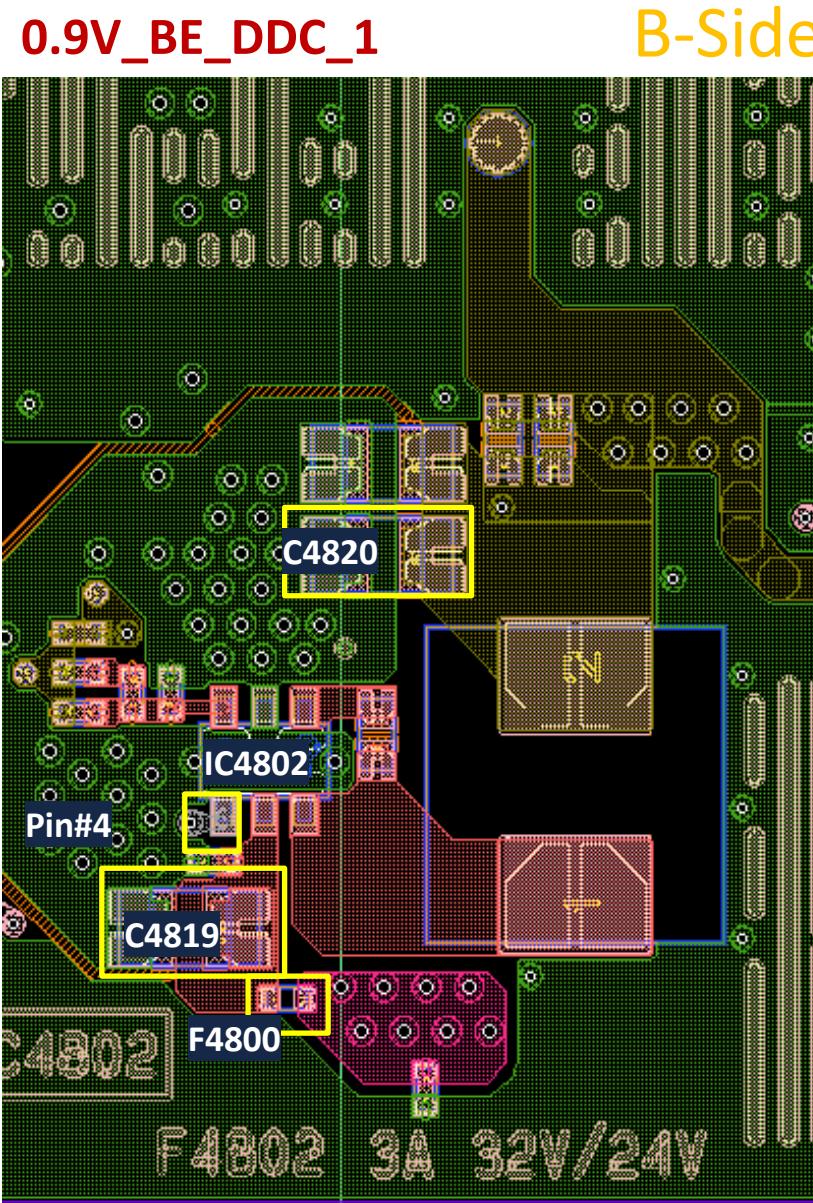

TROUBLESHOOTING


Checking Point

0.8V_BE

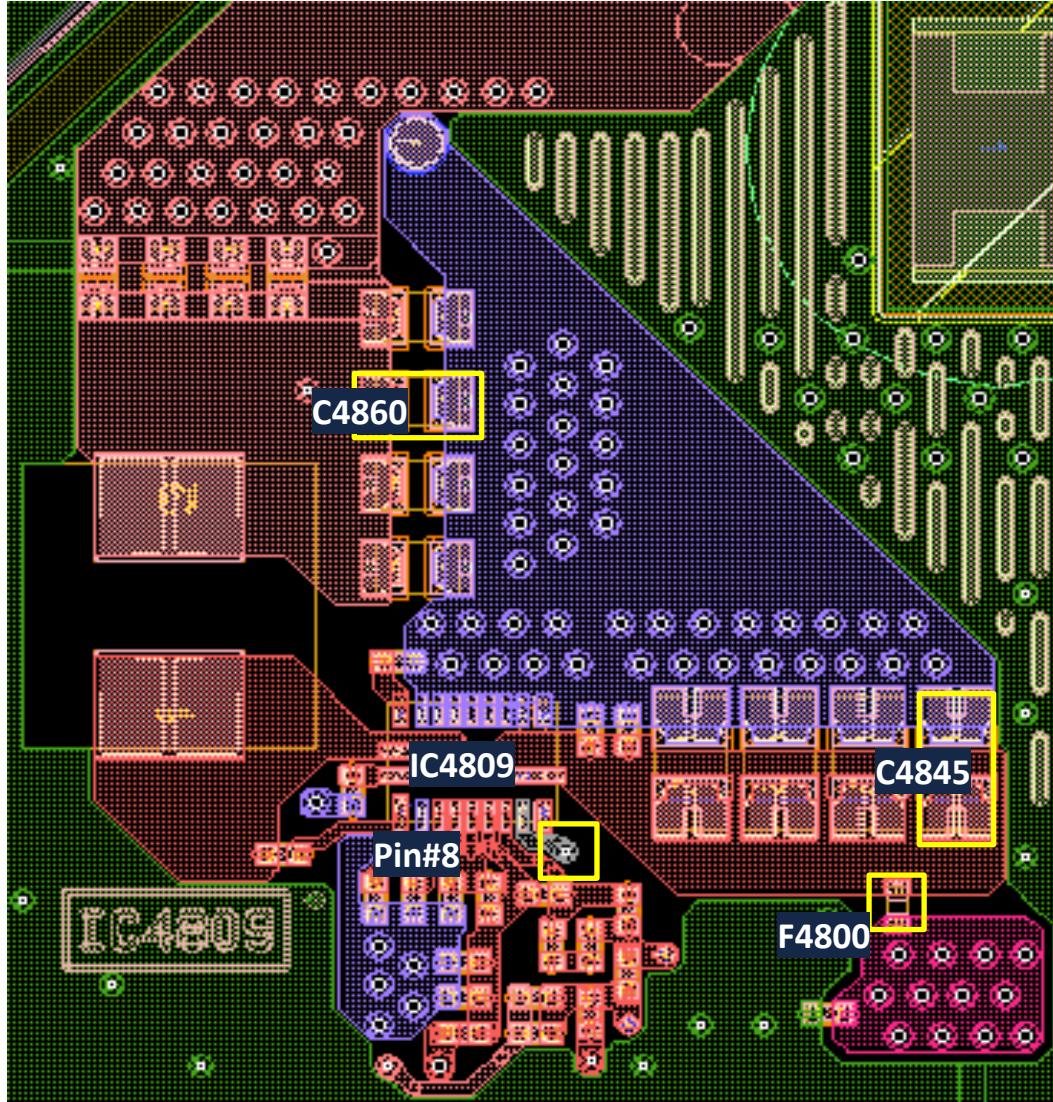

B-Side


0.7V_BE

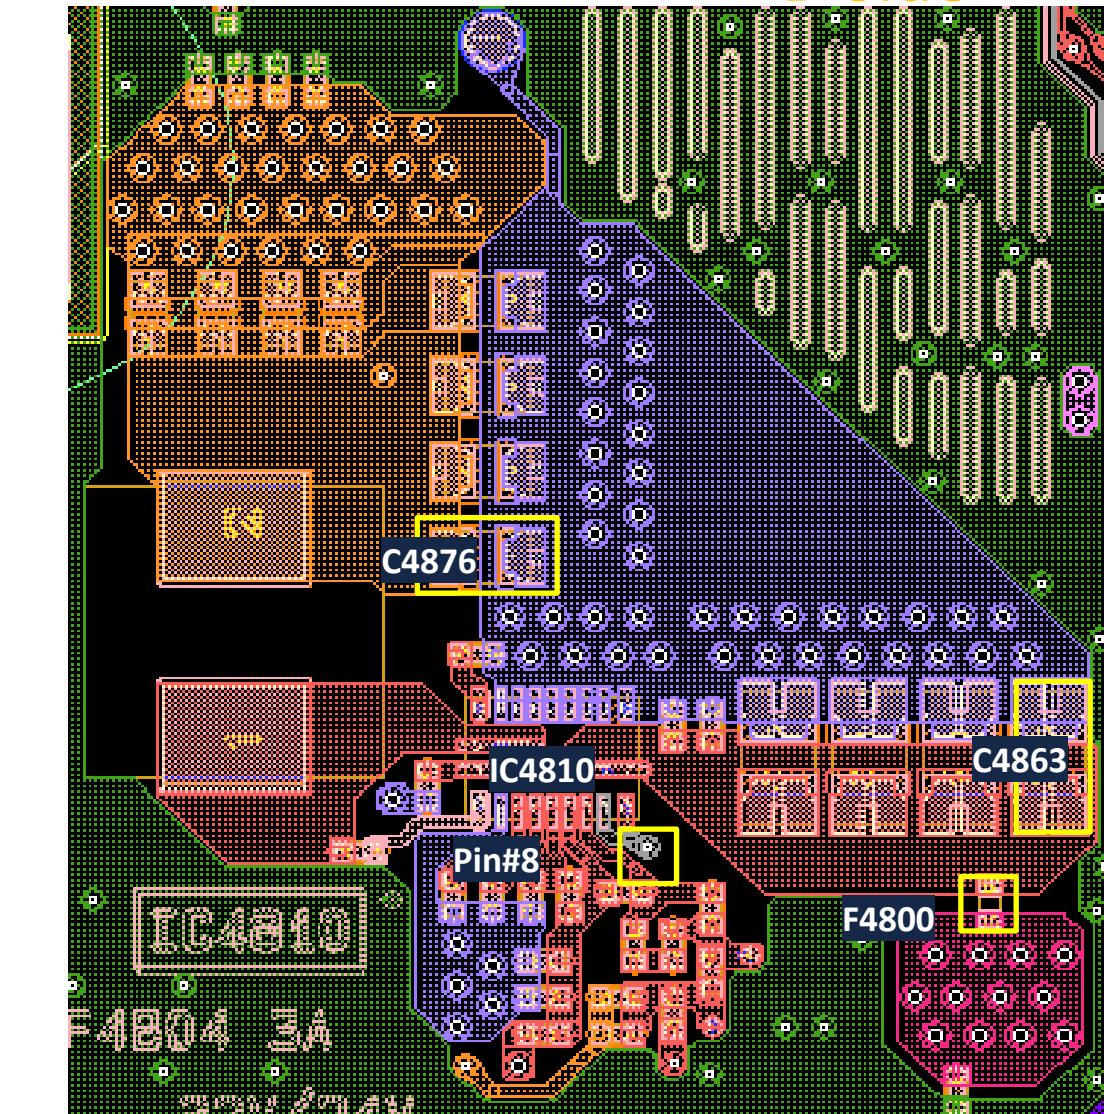

B-Side

TROUBLESHOOTING

1.3 No Power DDCON/LDO (LDO Check)

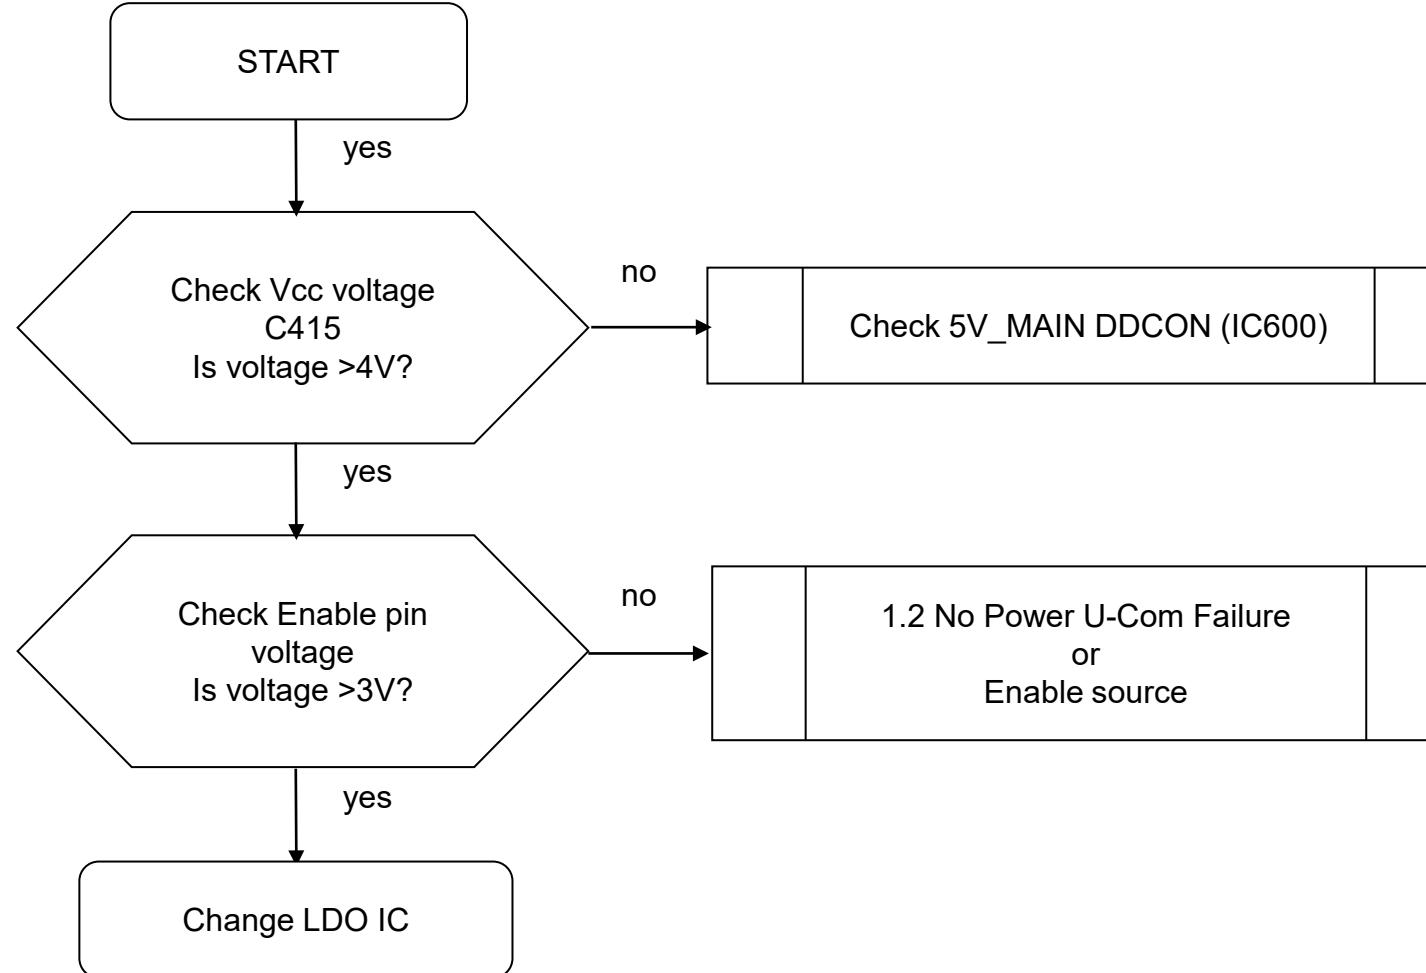


Please Refer page 30 for Ref Number.

Board	Operation	IC Ref	Voltage supply
BM5STY	LDO	IC403	3.3V_MAIN_H

TROUBLESHOOTING

1.3 No Power DDCON/LDO (LDO Check)

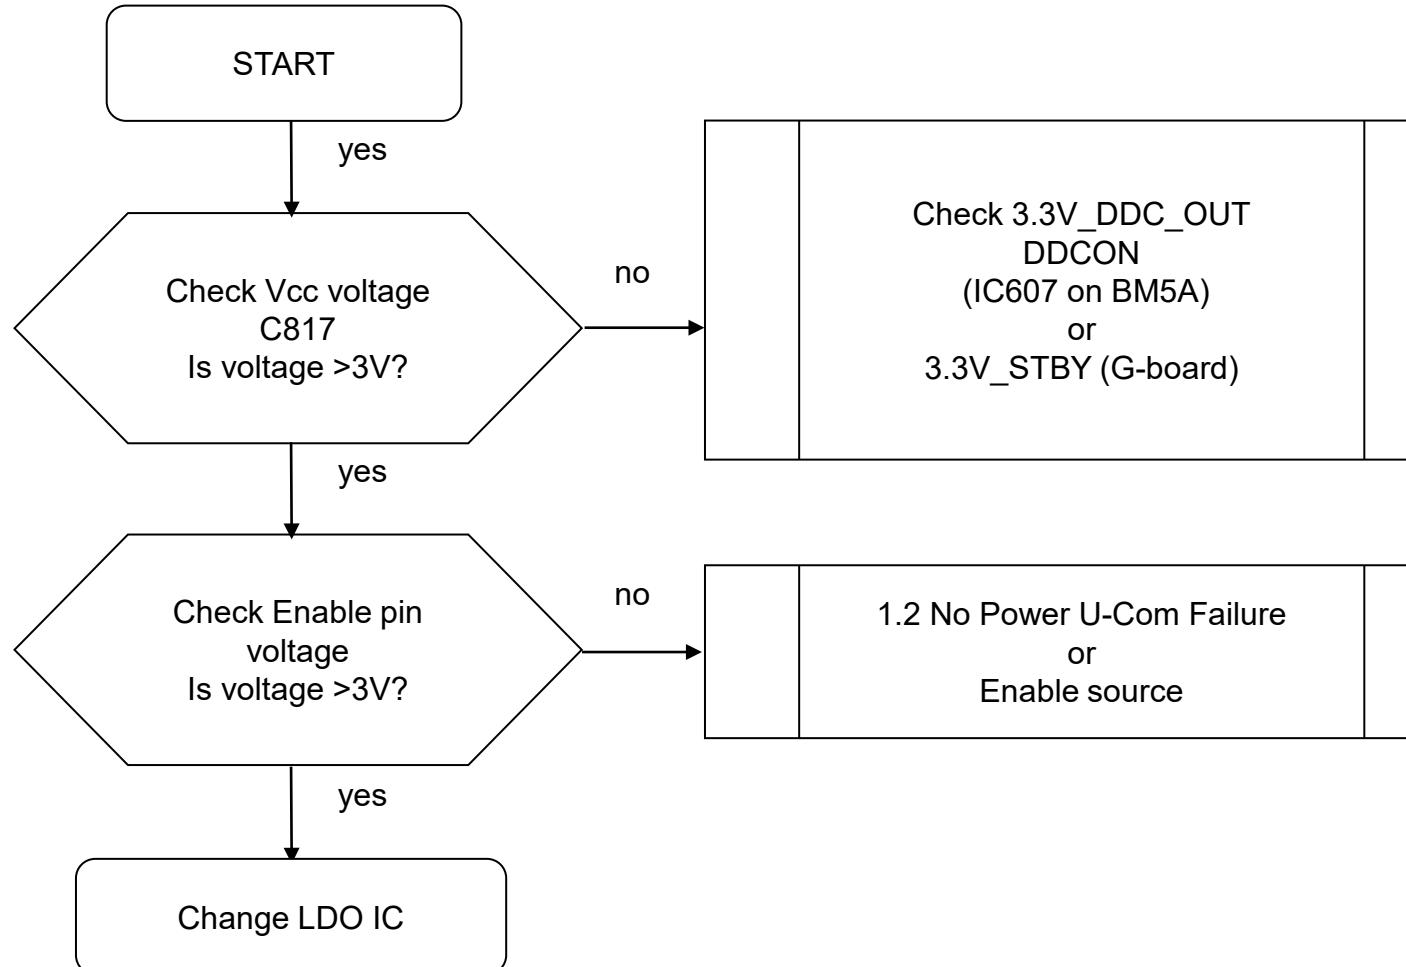


Please Refer page 30 for Ref Number.

Board	Operation	IC Ref	Voltage supply
BM5STY	LDO	IC806	1.8V_M5_ET_STBY

TROUBLESHOOTING

1.3 No Power DDCON/LDO (LDO Check)

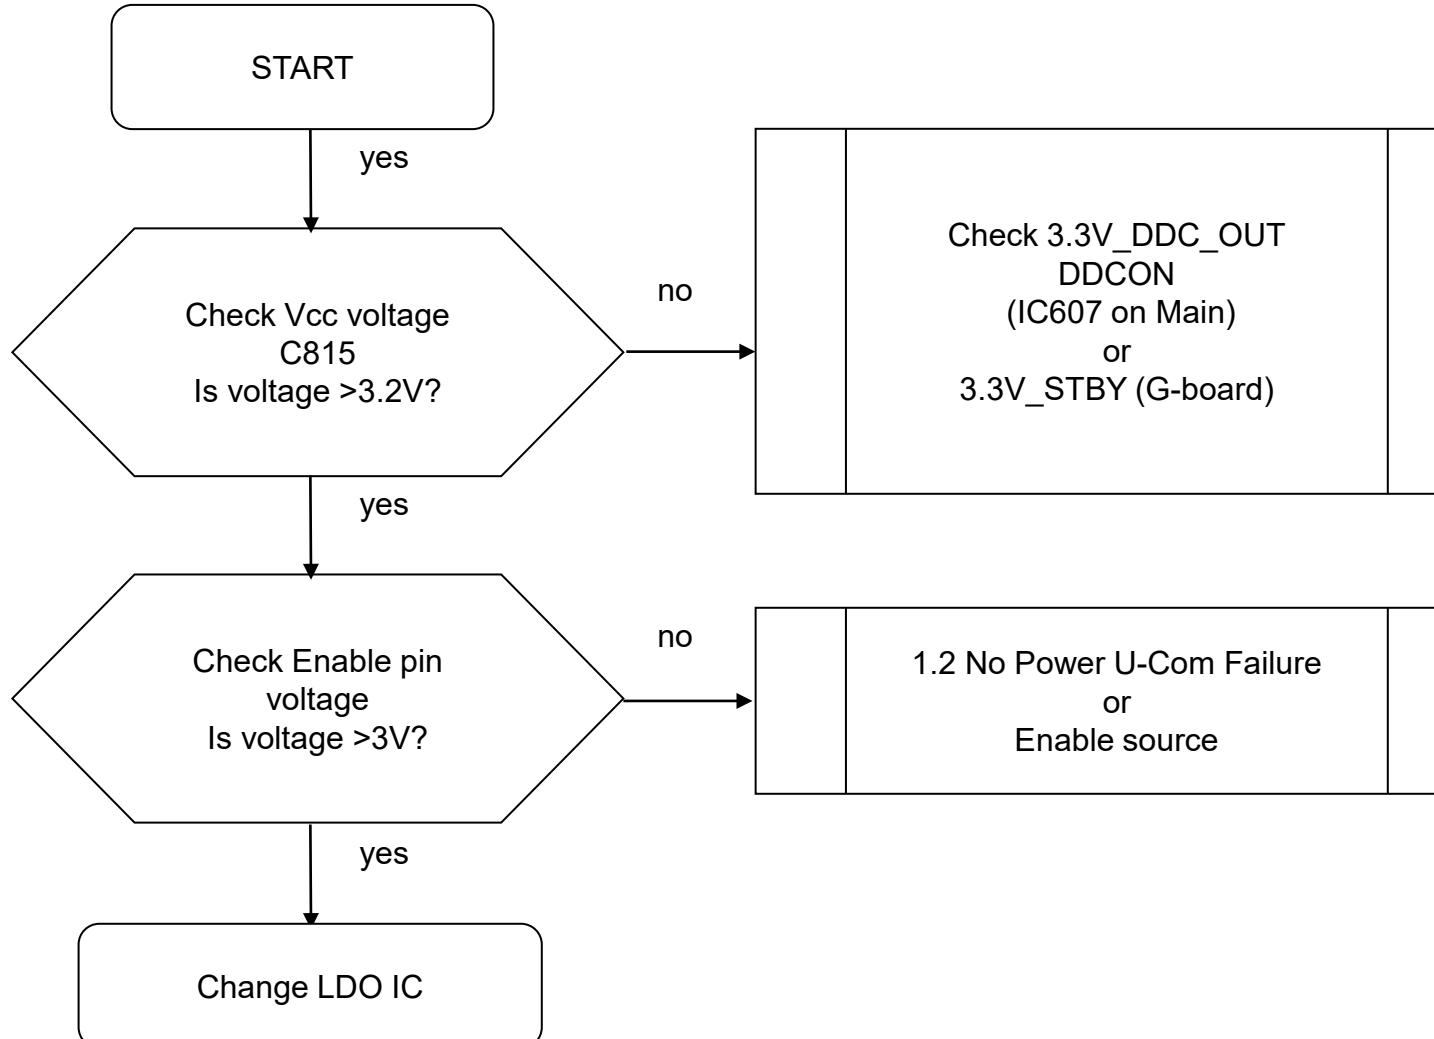


Please Refer page 30 for Ref Number.

Board	Operation	IC Ref	Voltage supply
BM5STY	LDO	IC809	3.3V_M5_STBY

TROUBLESHOOTING

1.3 No Power DDCON/LDO (LDO Check)

Please Refer page 30 for Ref Number.

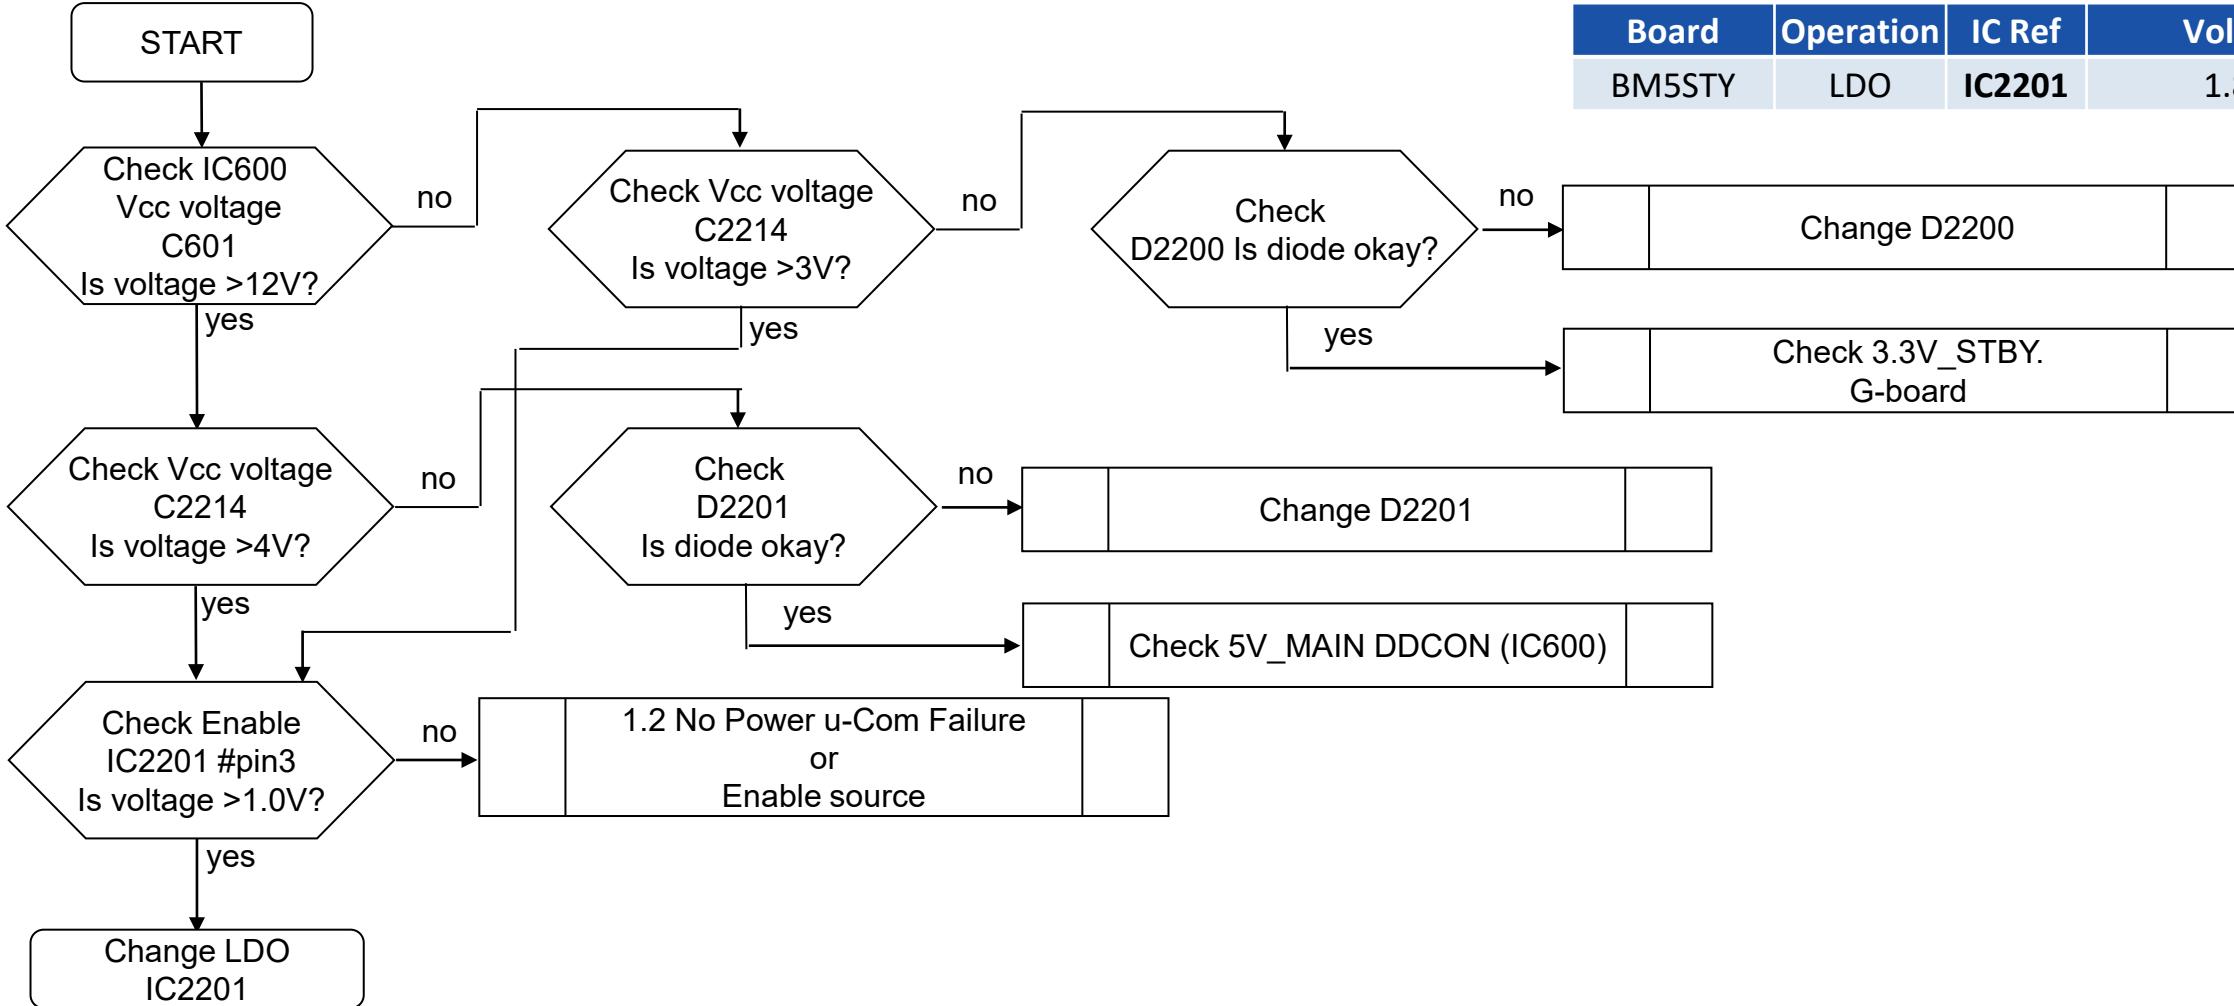


Board	Operation	IC Ref	Voltage supply
BM5STY	LDO	IC2201	1.8V_EMMC

TROUBLESHOOTING


Checking Point

3.3V_MAIN_H

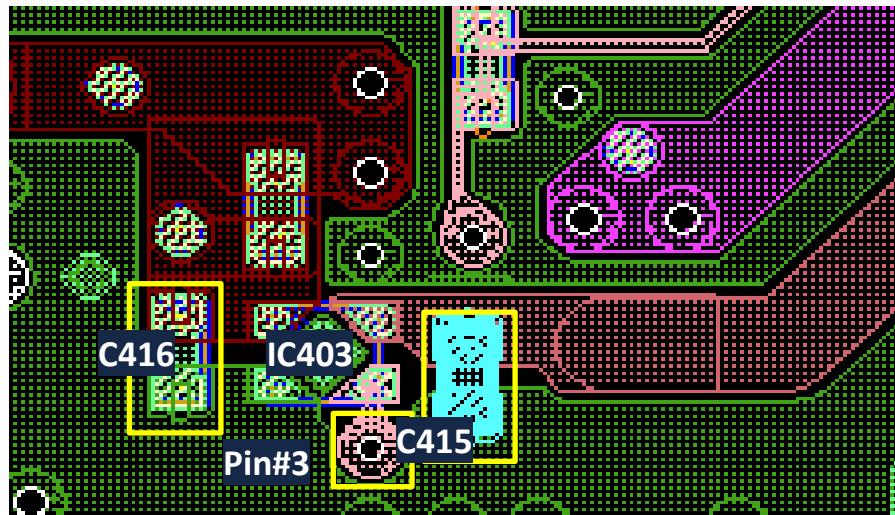

B-Side



1.8V_M5_ET_STBY

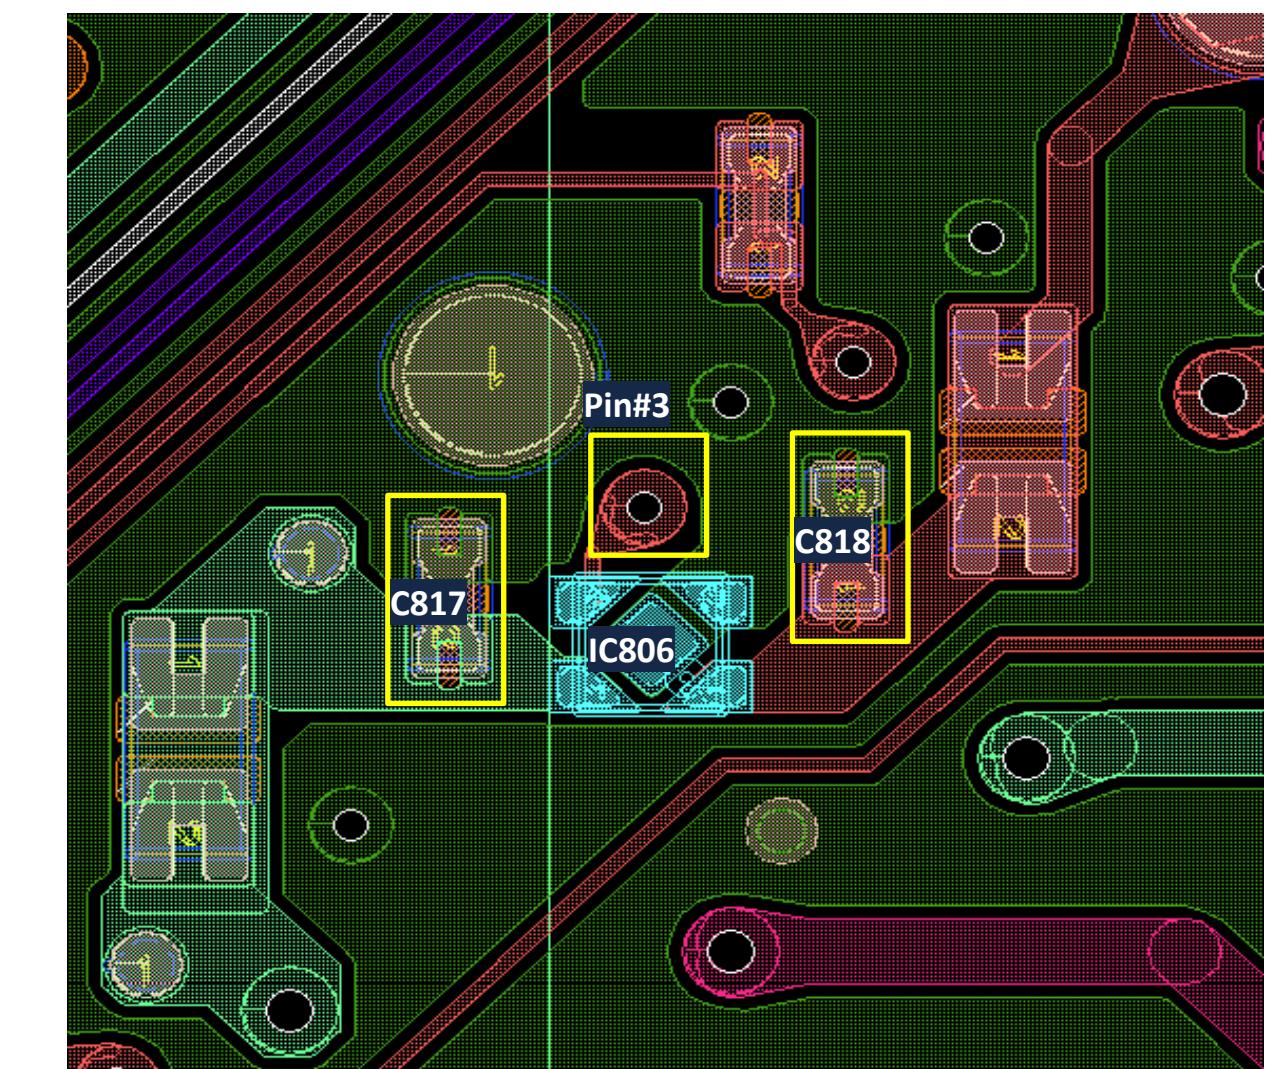

B-Side


TROUBLESHOOTING

Checking Point

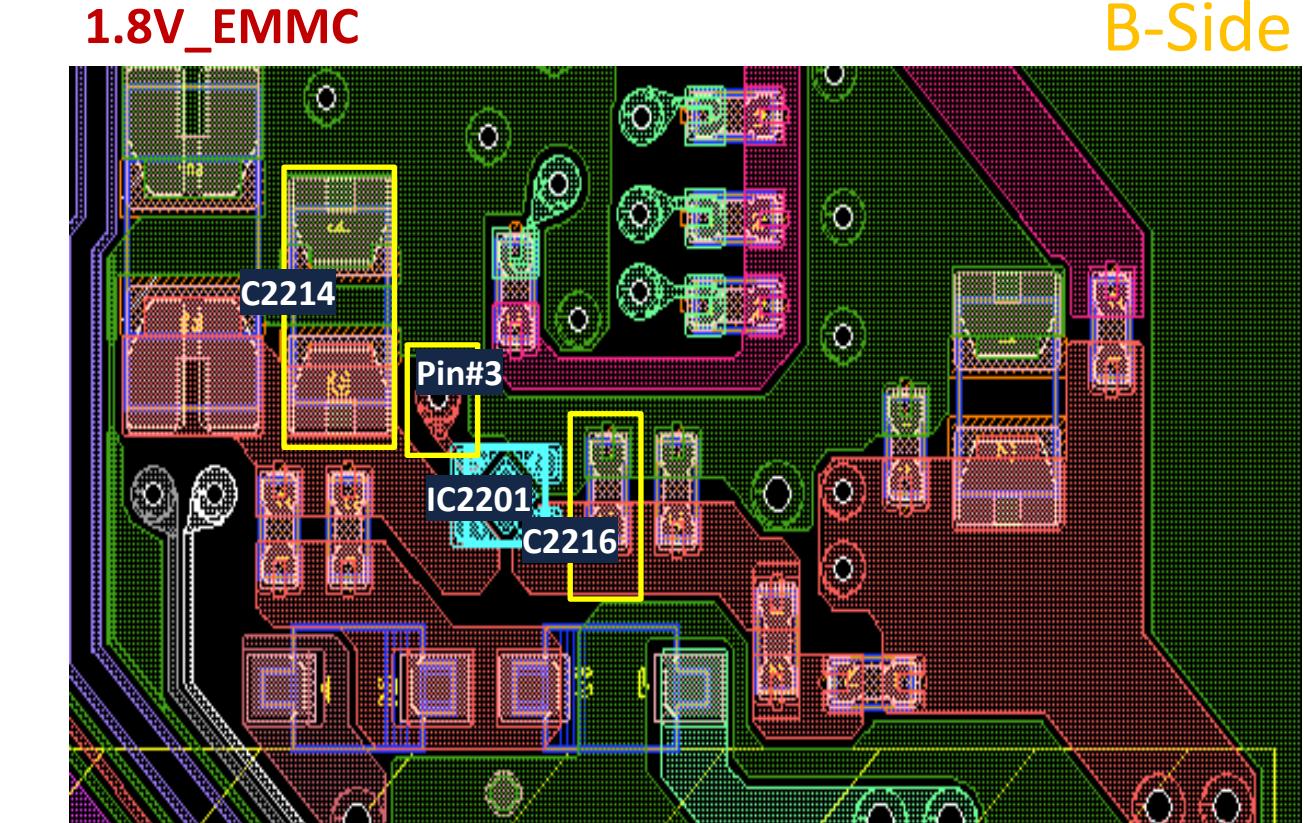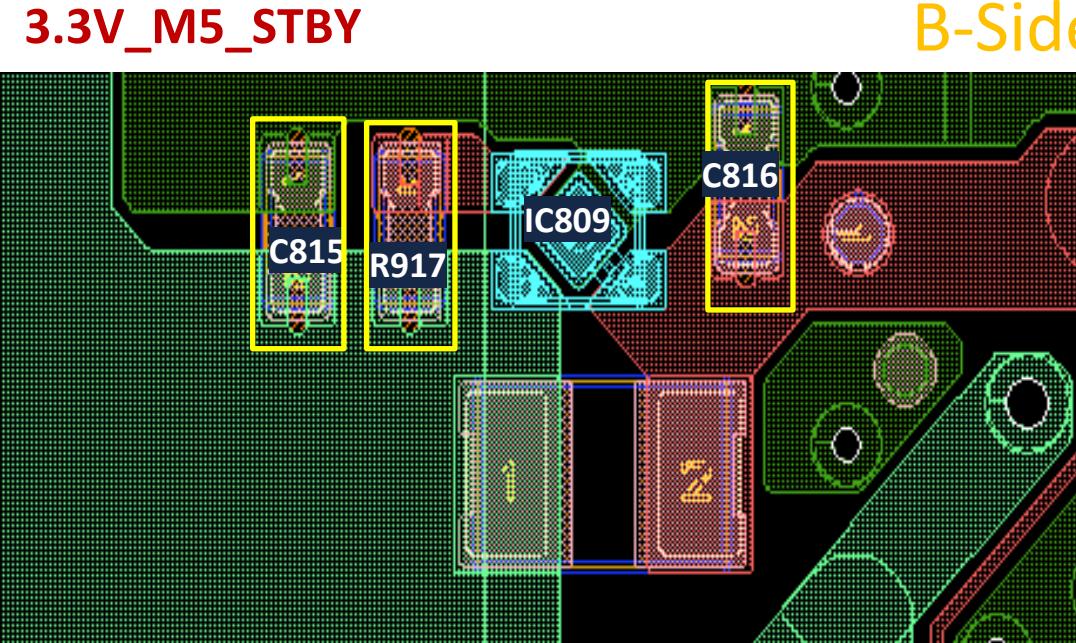


TROUBLESHOOTING

2.0 LED Blinking: 2x (Main power Error)

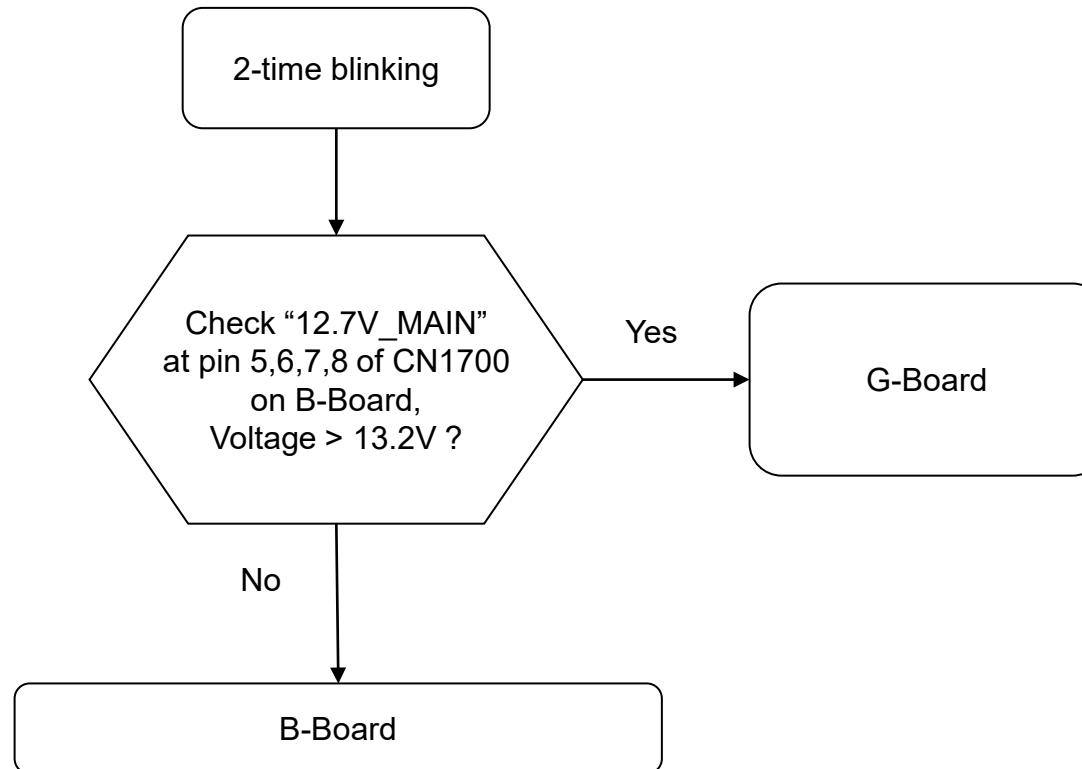



TROUBLESHOOTING

2.0 LED Blinking: 2x (Main power Error) – XR-83A80*

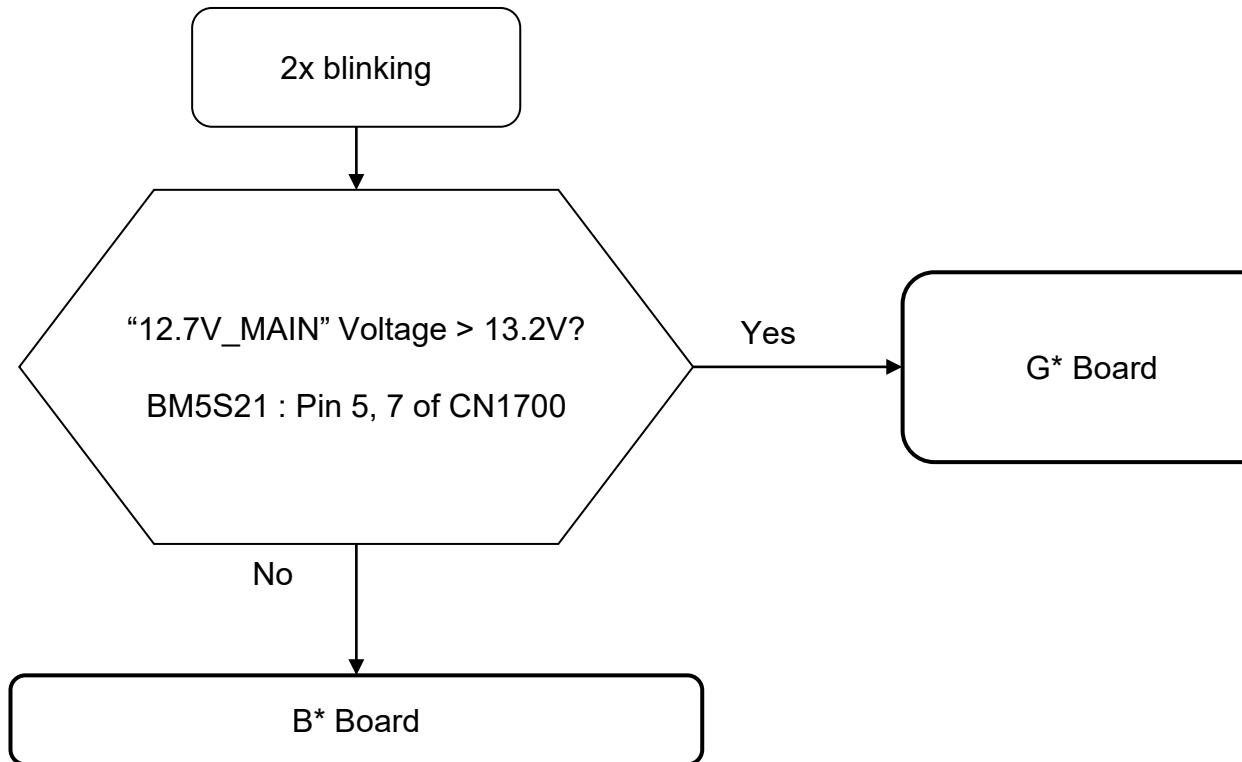


TROUBLESHOOTING

Checking Point

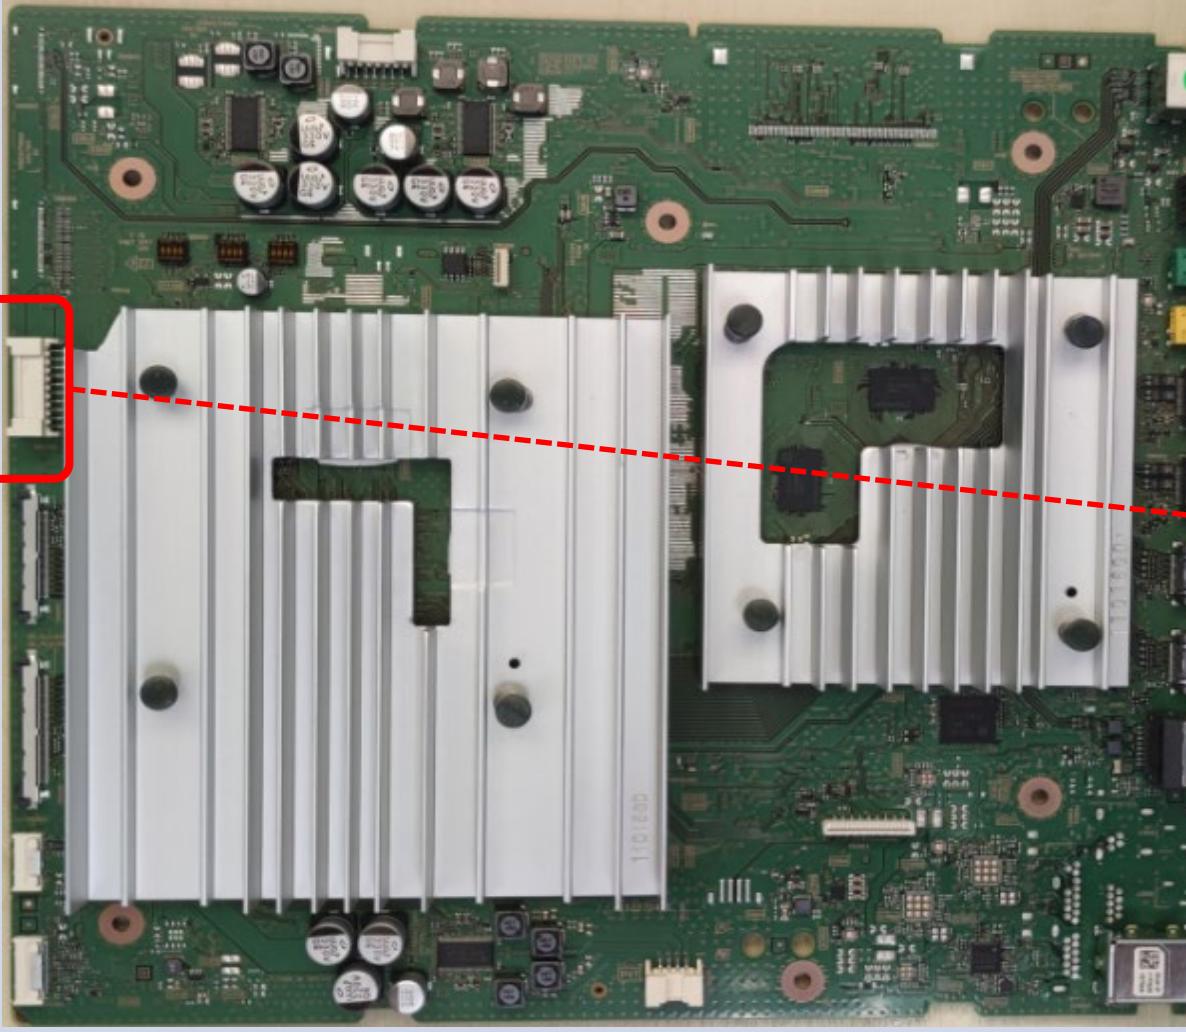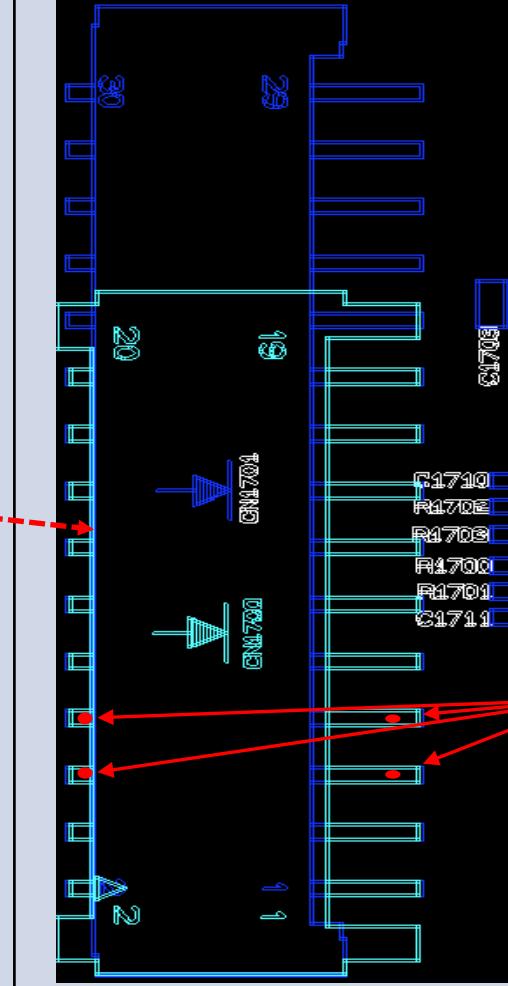Board PWB (A side)	Detail
	 <p>CN1700 Pin 5,6,7,8 12.7V_MAIN</p>

TROUBLESHOOTING

Checking Point – XR-83A80*

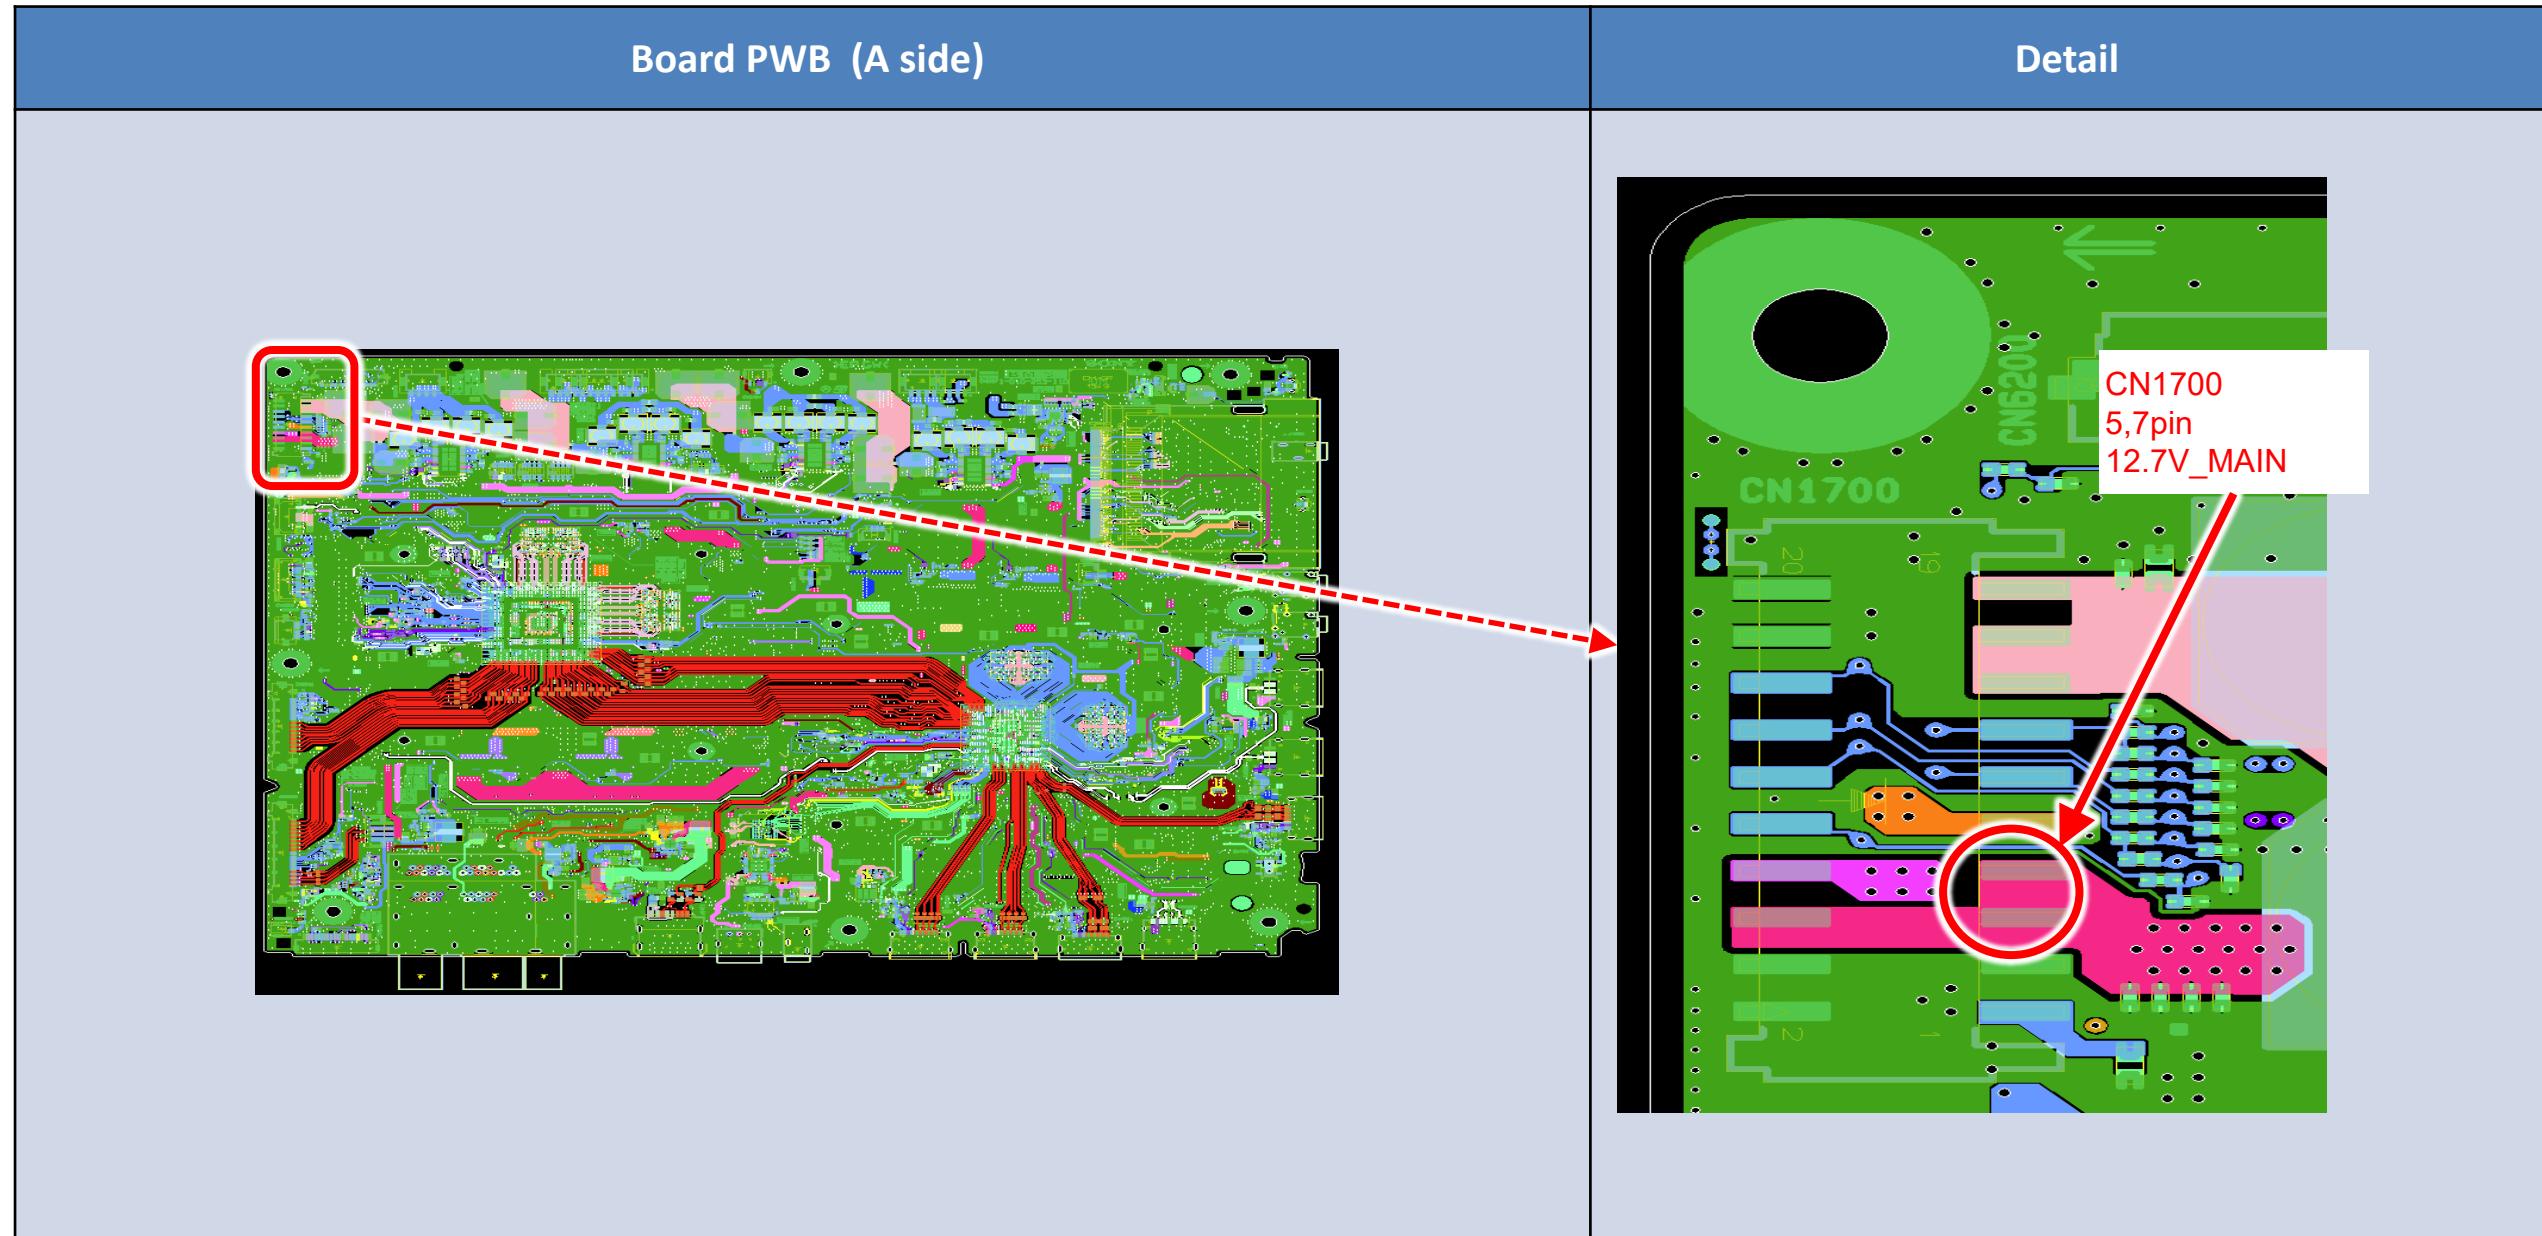


TROUBLESHOOTING

Detail of 3x LED Blinking

Error Item	Number of STBY LED flashing	Description
DC_ALERT	3	Main board 5V power rail monitoring
AUD_ERR	3	Audio amp error detection




TROUBLESHOOTING

2.1 LED Blinking: 3x (DC ALERT)

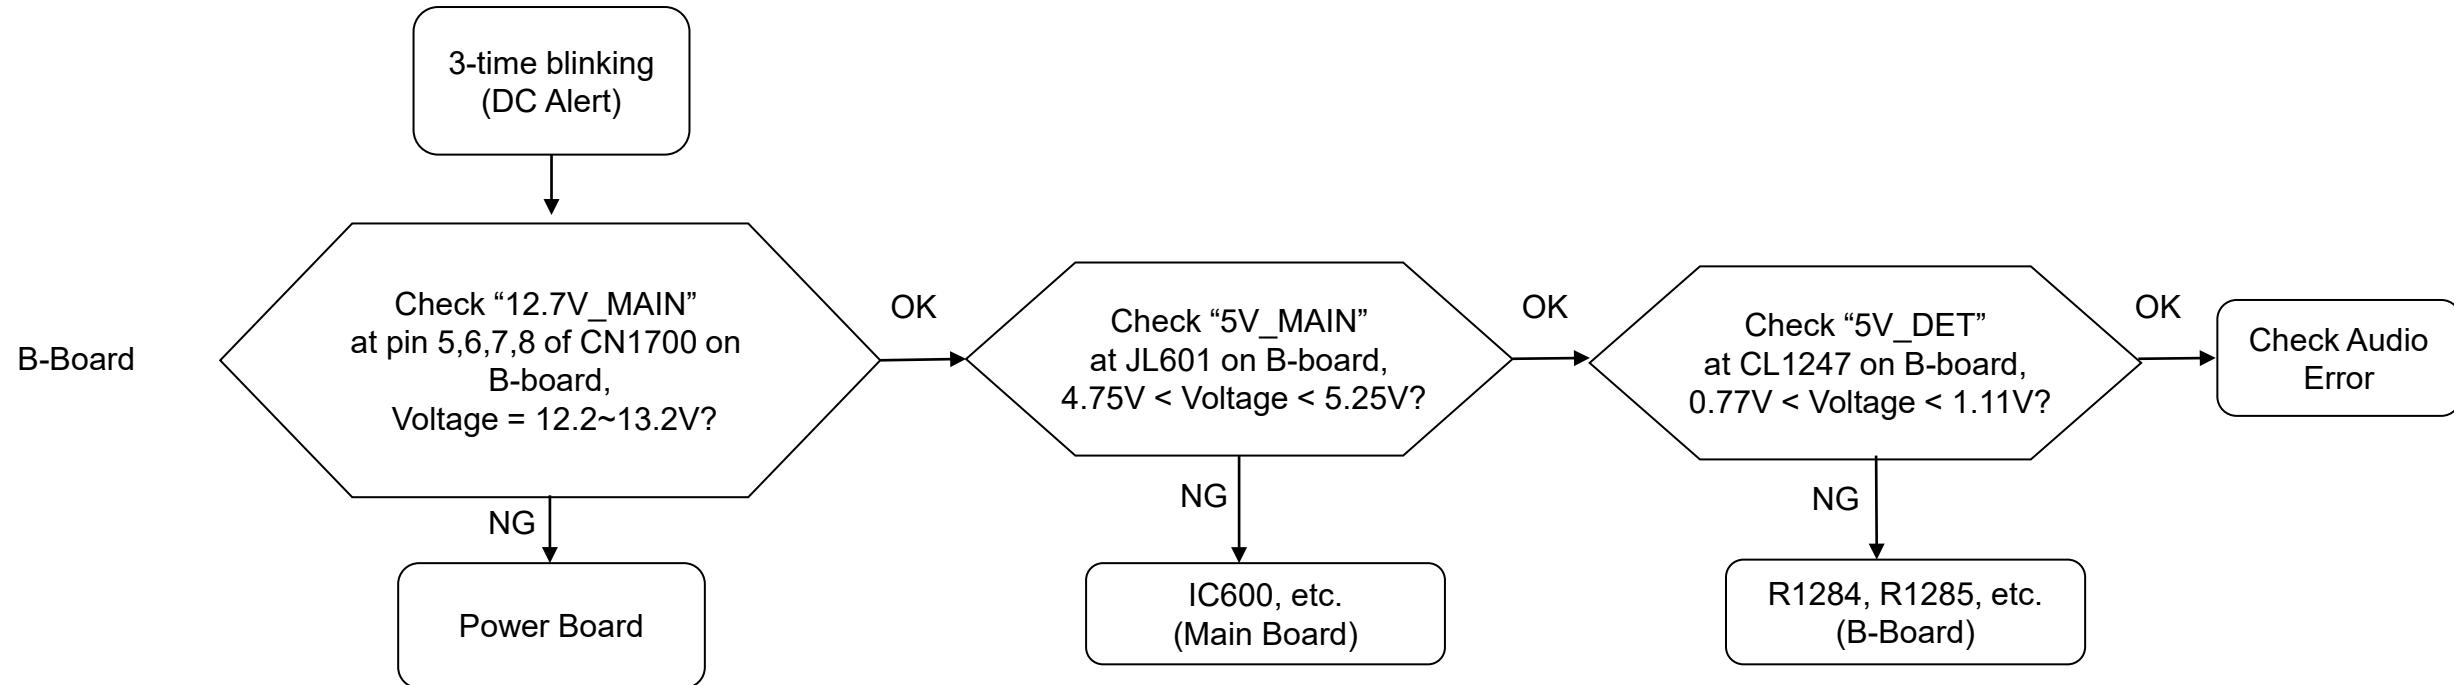



TROUBLESHOOTING

Checking Point

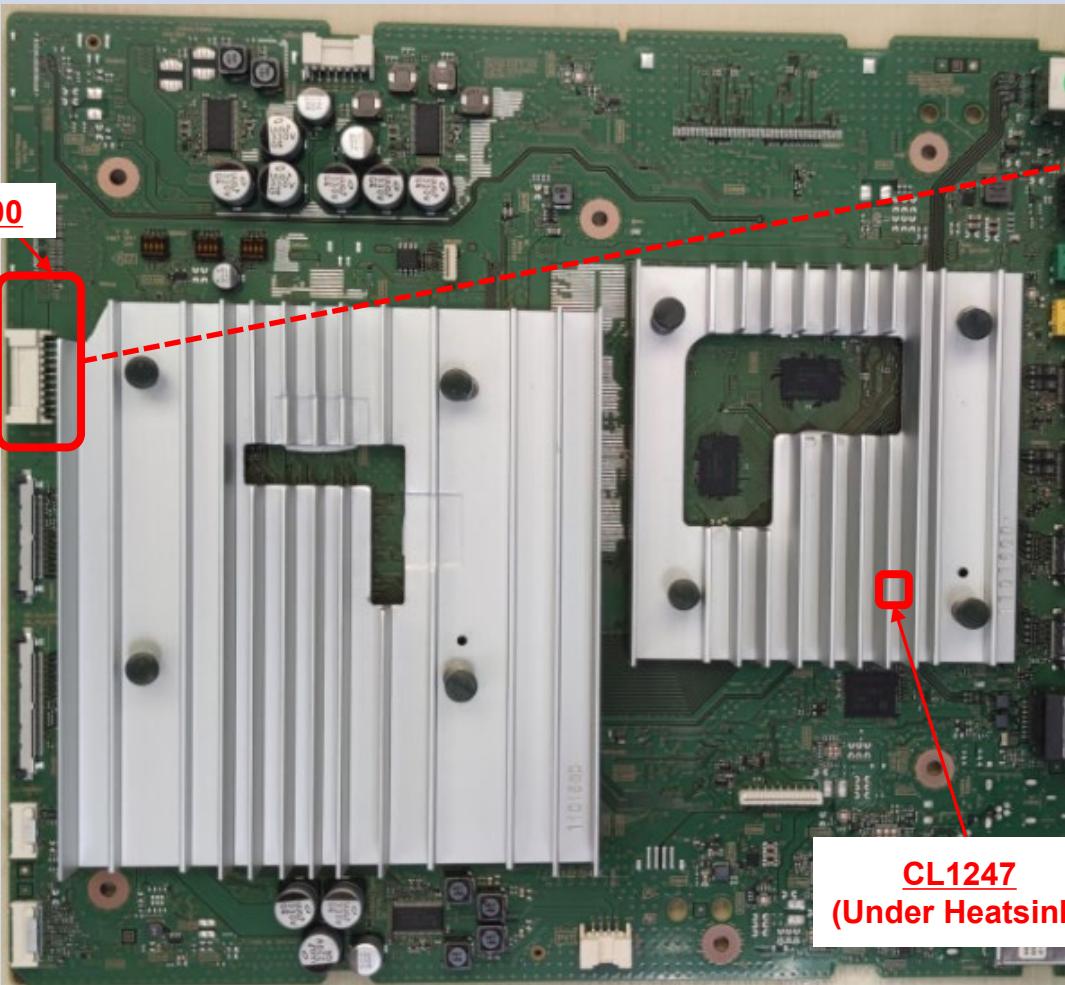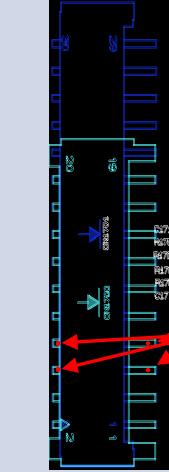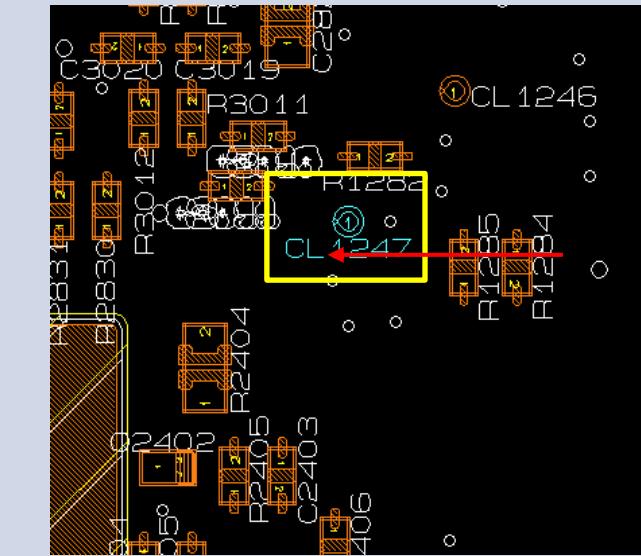Board PWB (A side)	Detail
 <p>CN1700</p> <p>CL1247 (Under Heatsink)</p>	 <p>CN1700 Pin 5,6,7,8 12.7V_MAIN</p>  <p>5V_DET at CL1247</p>

TROUBLESHOOTING

Checking Point

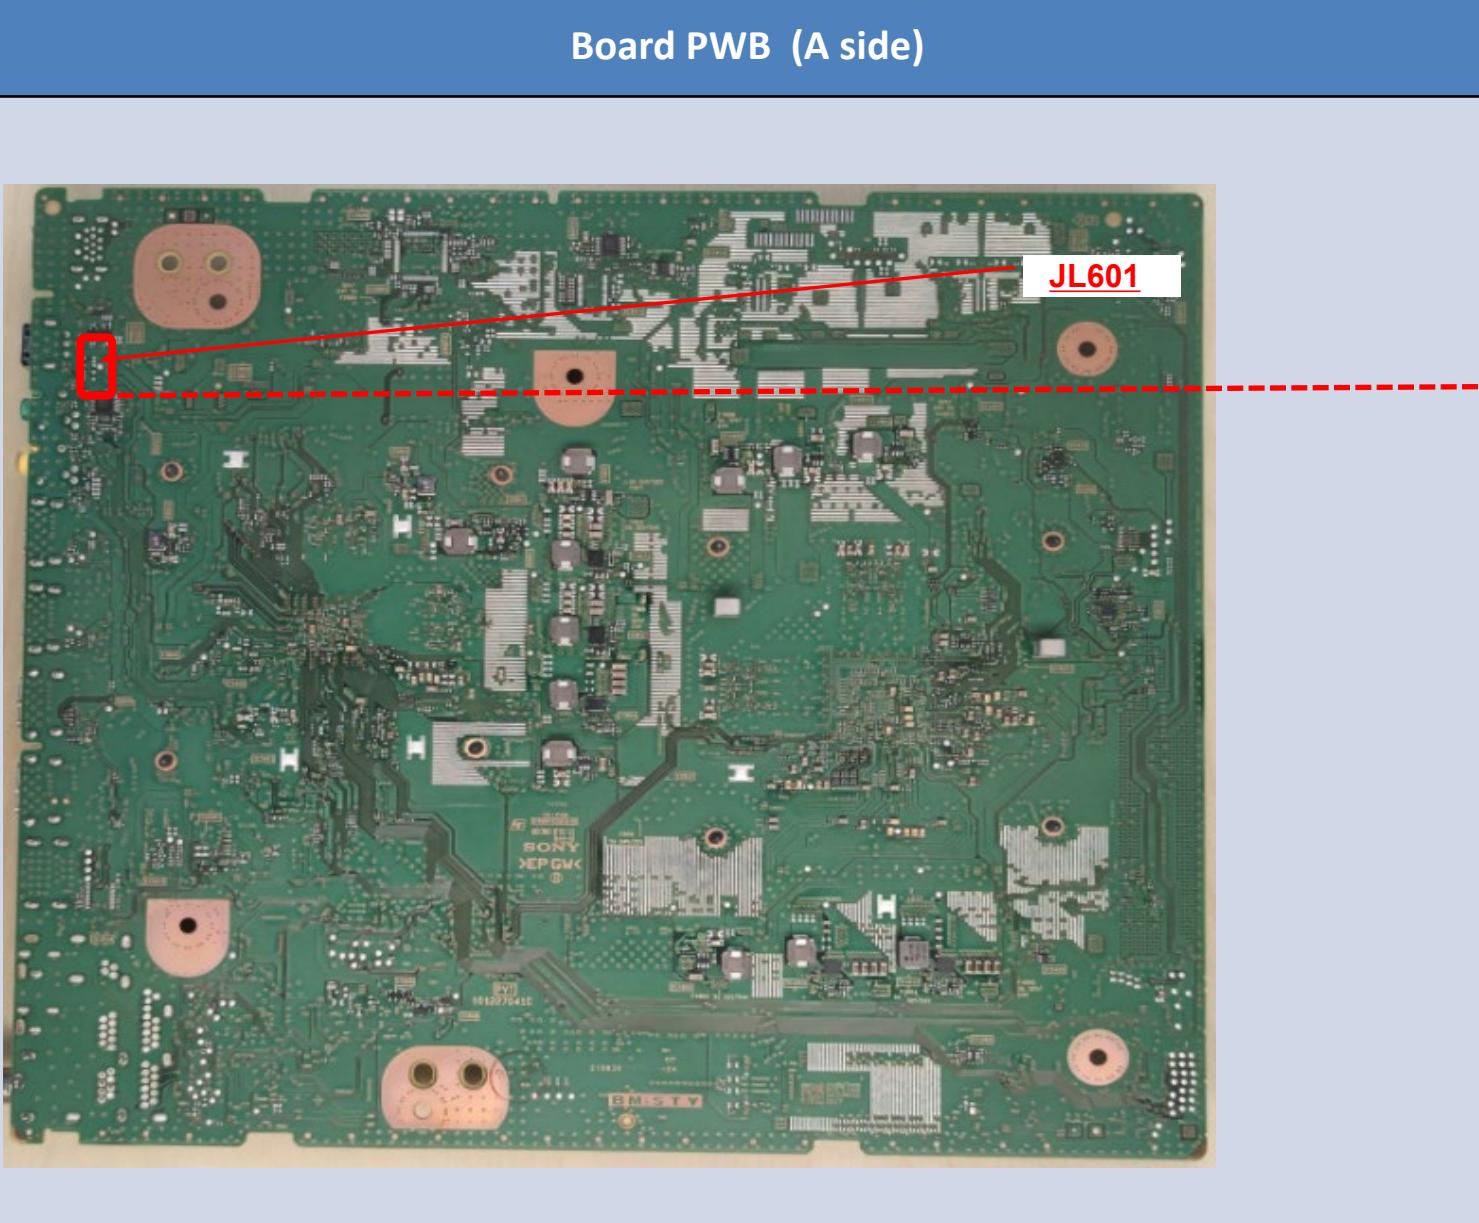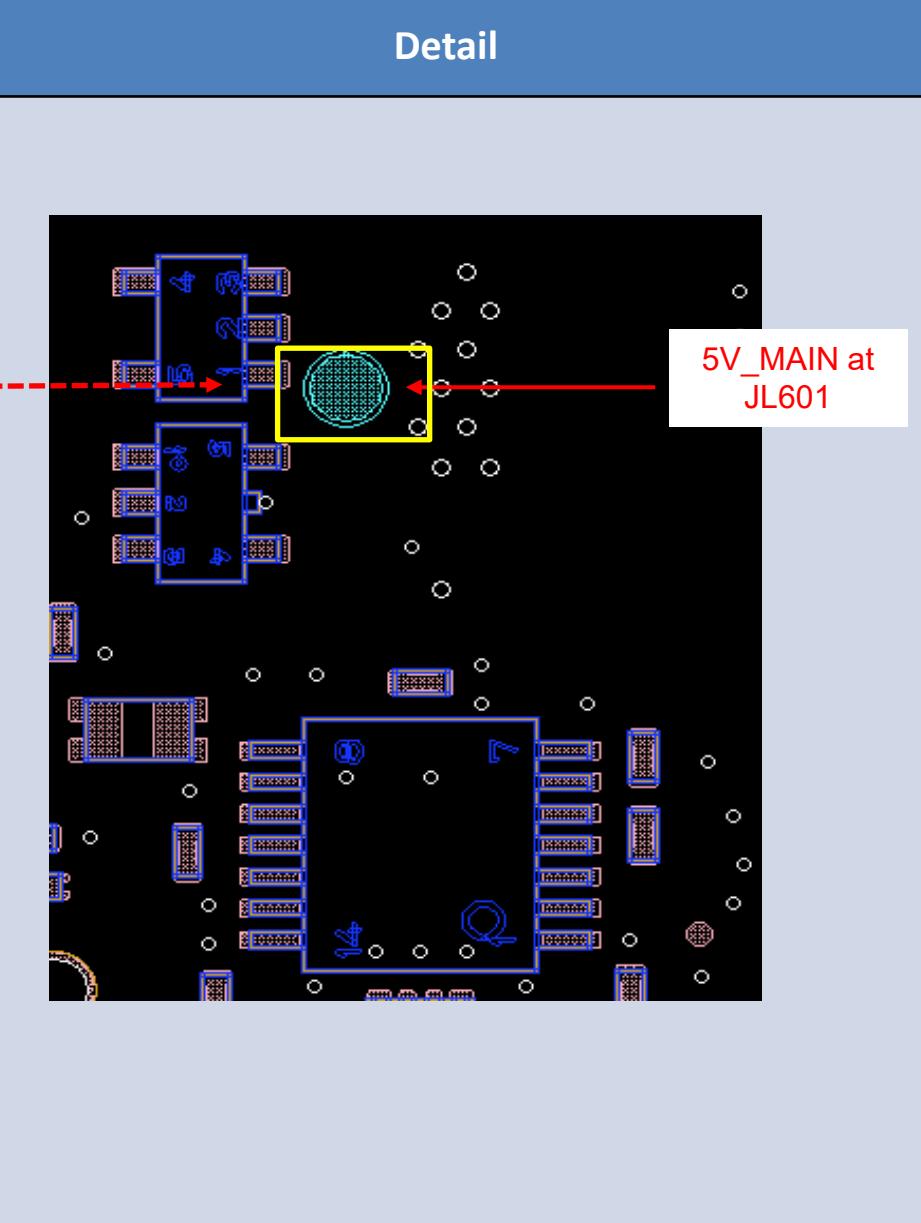Board PWB (A side)	Detail
	


TROUBLESHOOTING

Detail of 3x LED Blinking – XR-83A80*

Error Item	Number of STBY LED flashing	Description
<u>DC_ALERT</u>	3	Main 5V power failure
<u>AUD_ERR</u>	3	Audio amp. protection


TROUBLESHOOTING

2.1 LED Blinking: 3x (DC ALERT) – XR-83A80*

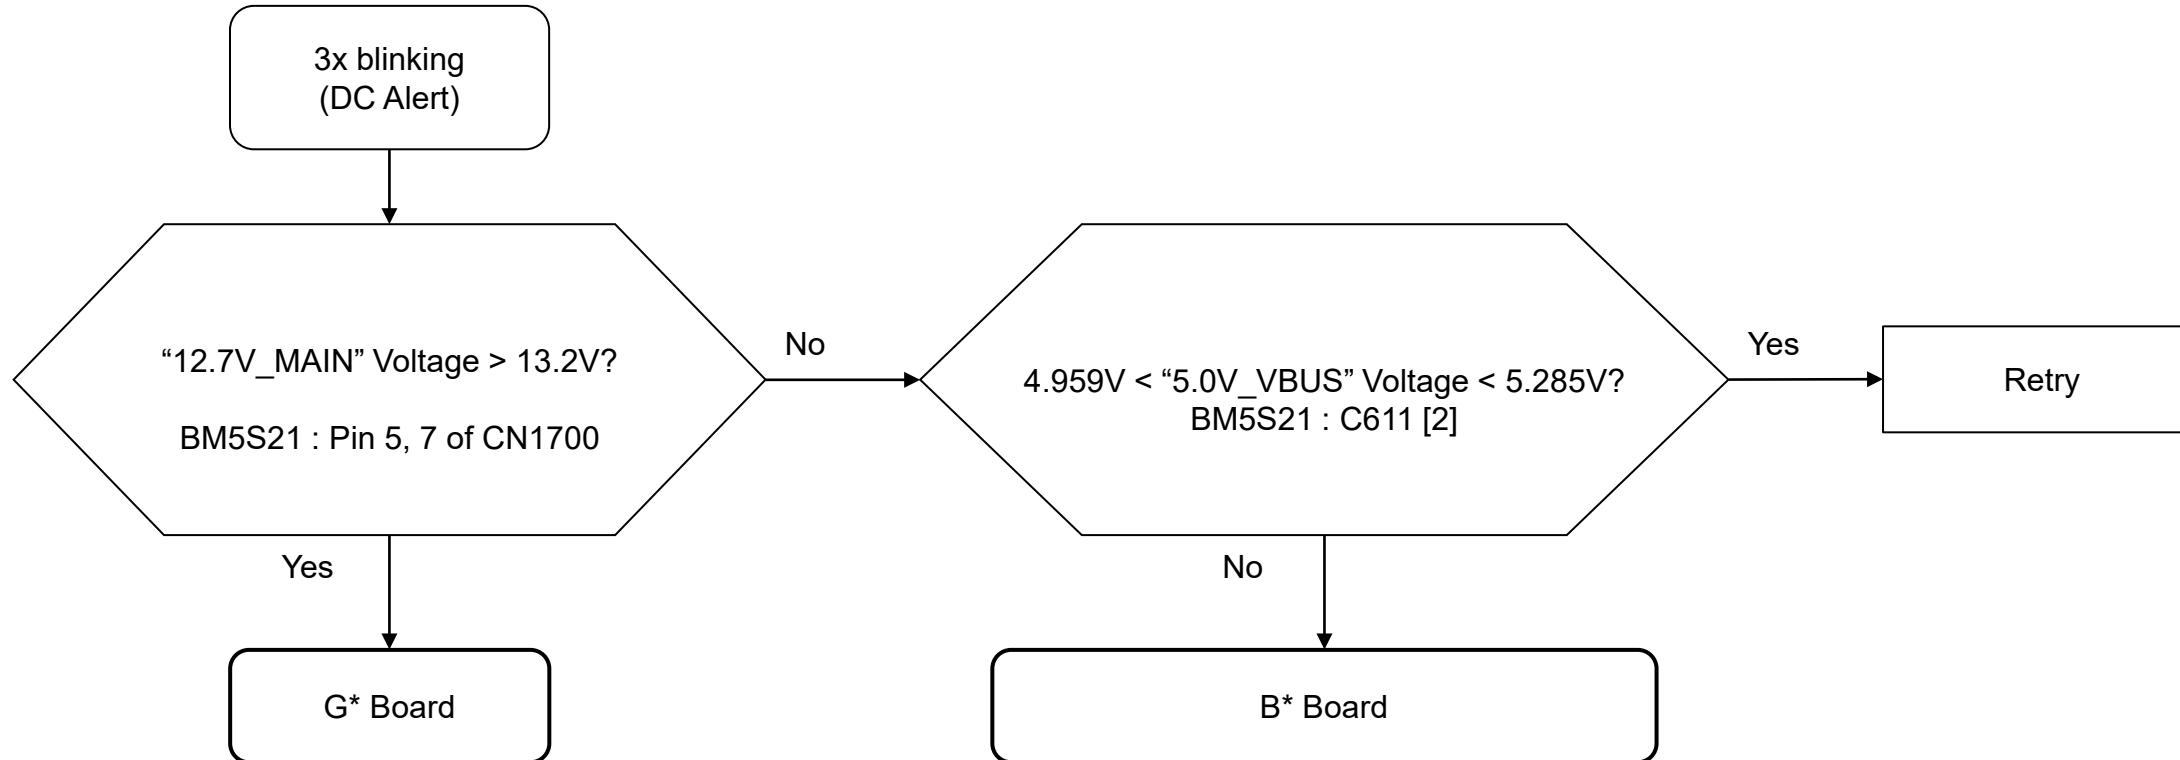


TROUBLESHOOTING

Checking Point – XR-83A80*

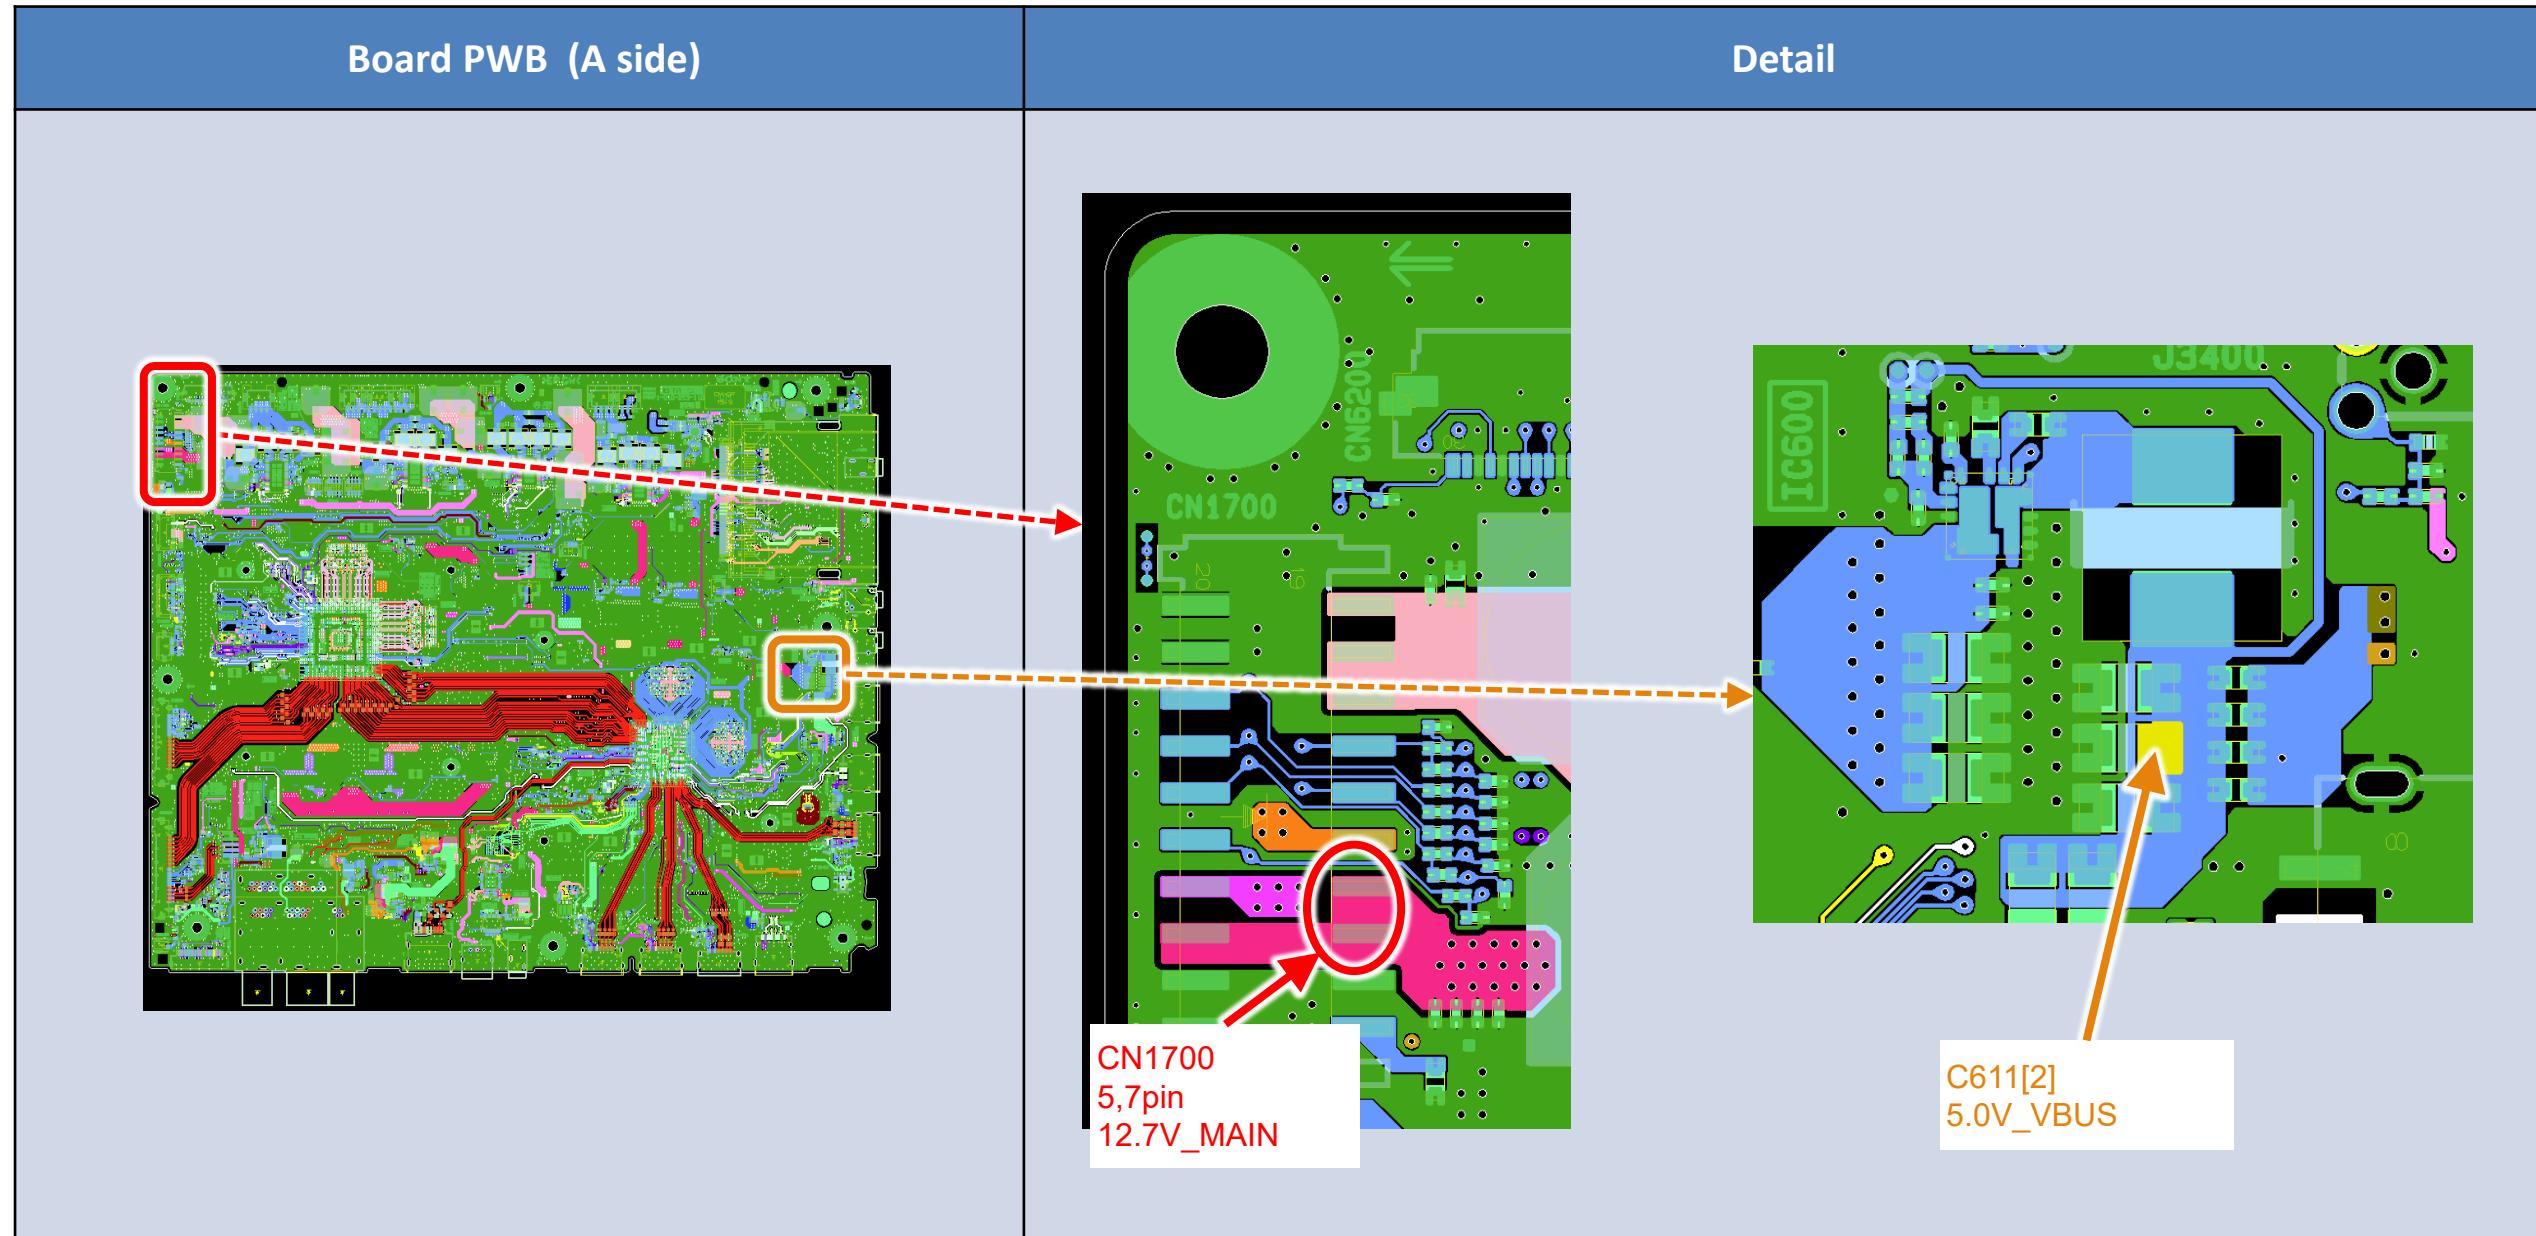


TROUBLESHOOTING

2.2 LED Blinking: 3x (AUD_ERR) – XR-*80K / *80CK

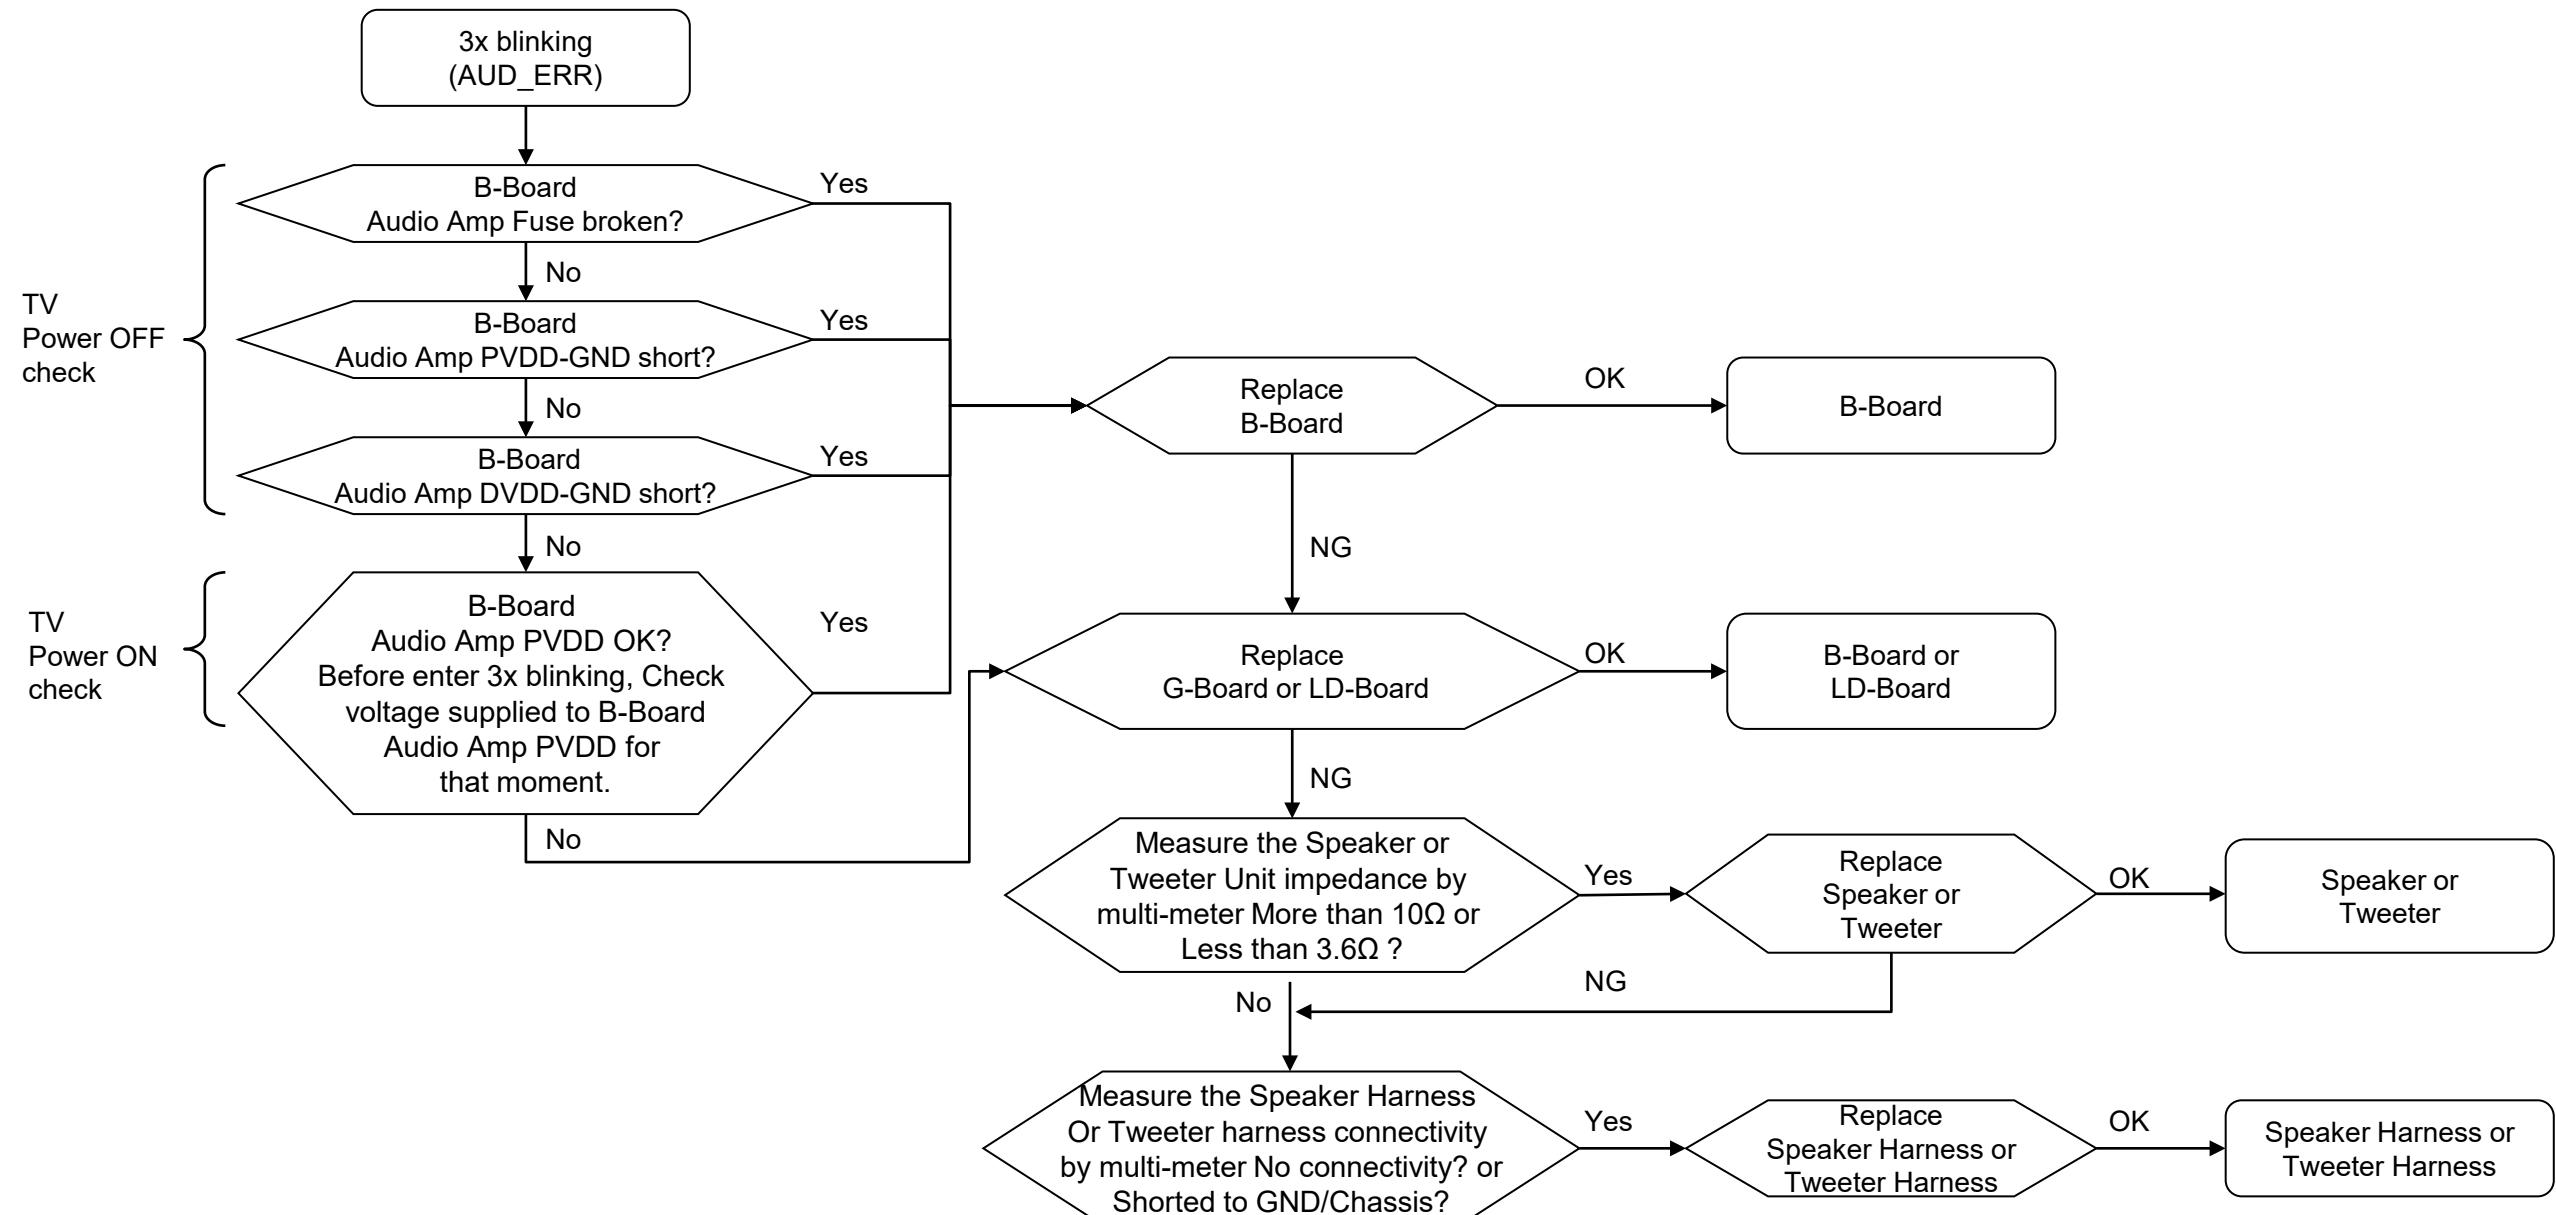


TROUBLESHOOTING

2.2 LED Blinking: 3x (AUD_ERR) – XR-*A80L / *A80CL

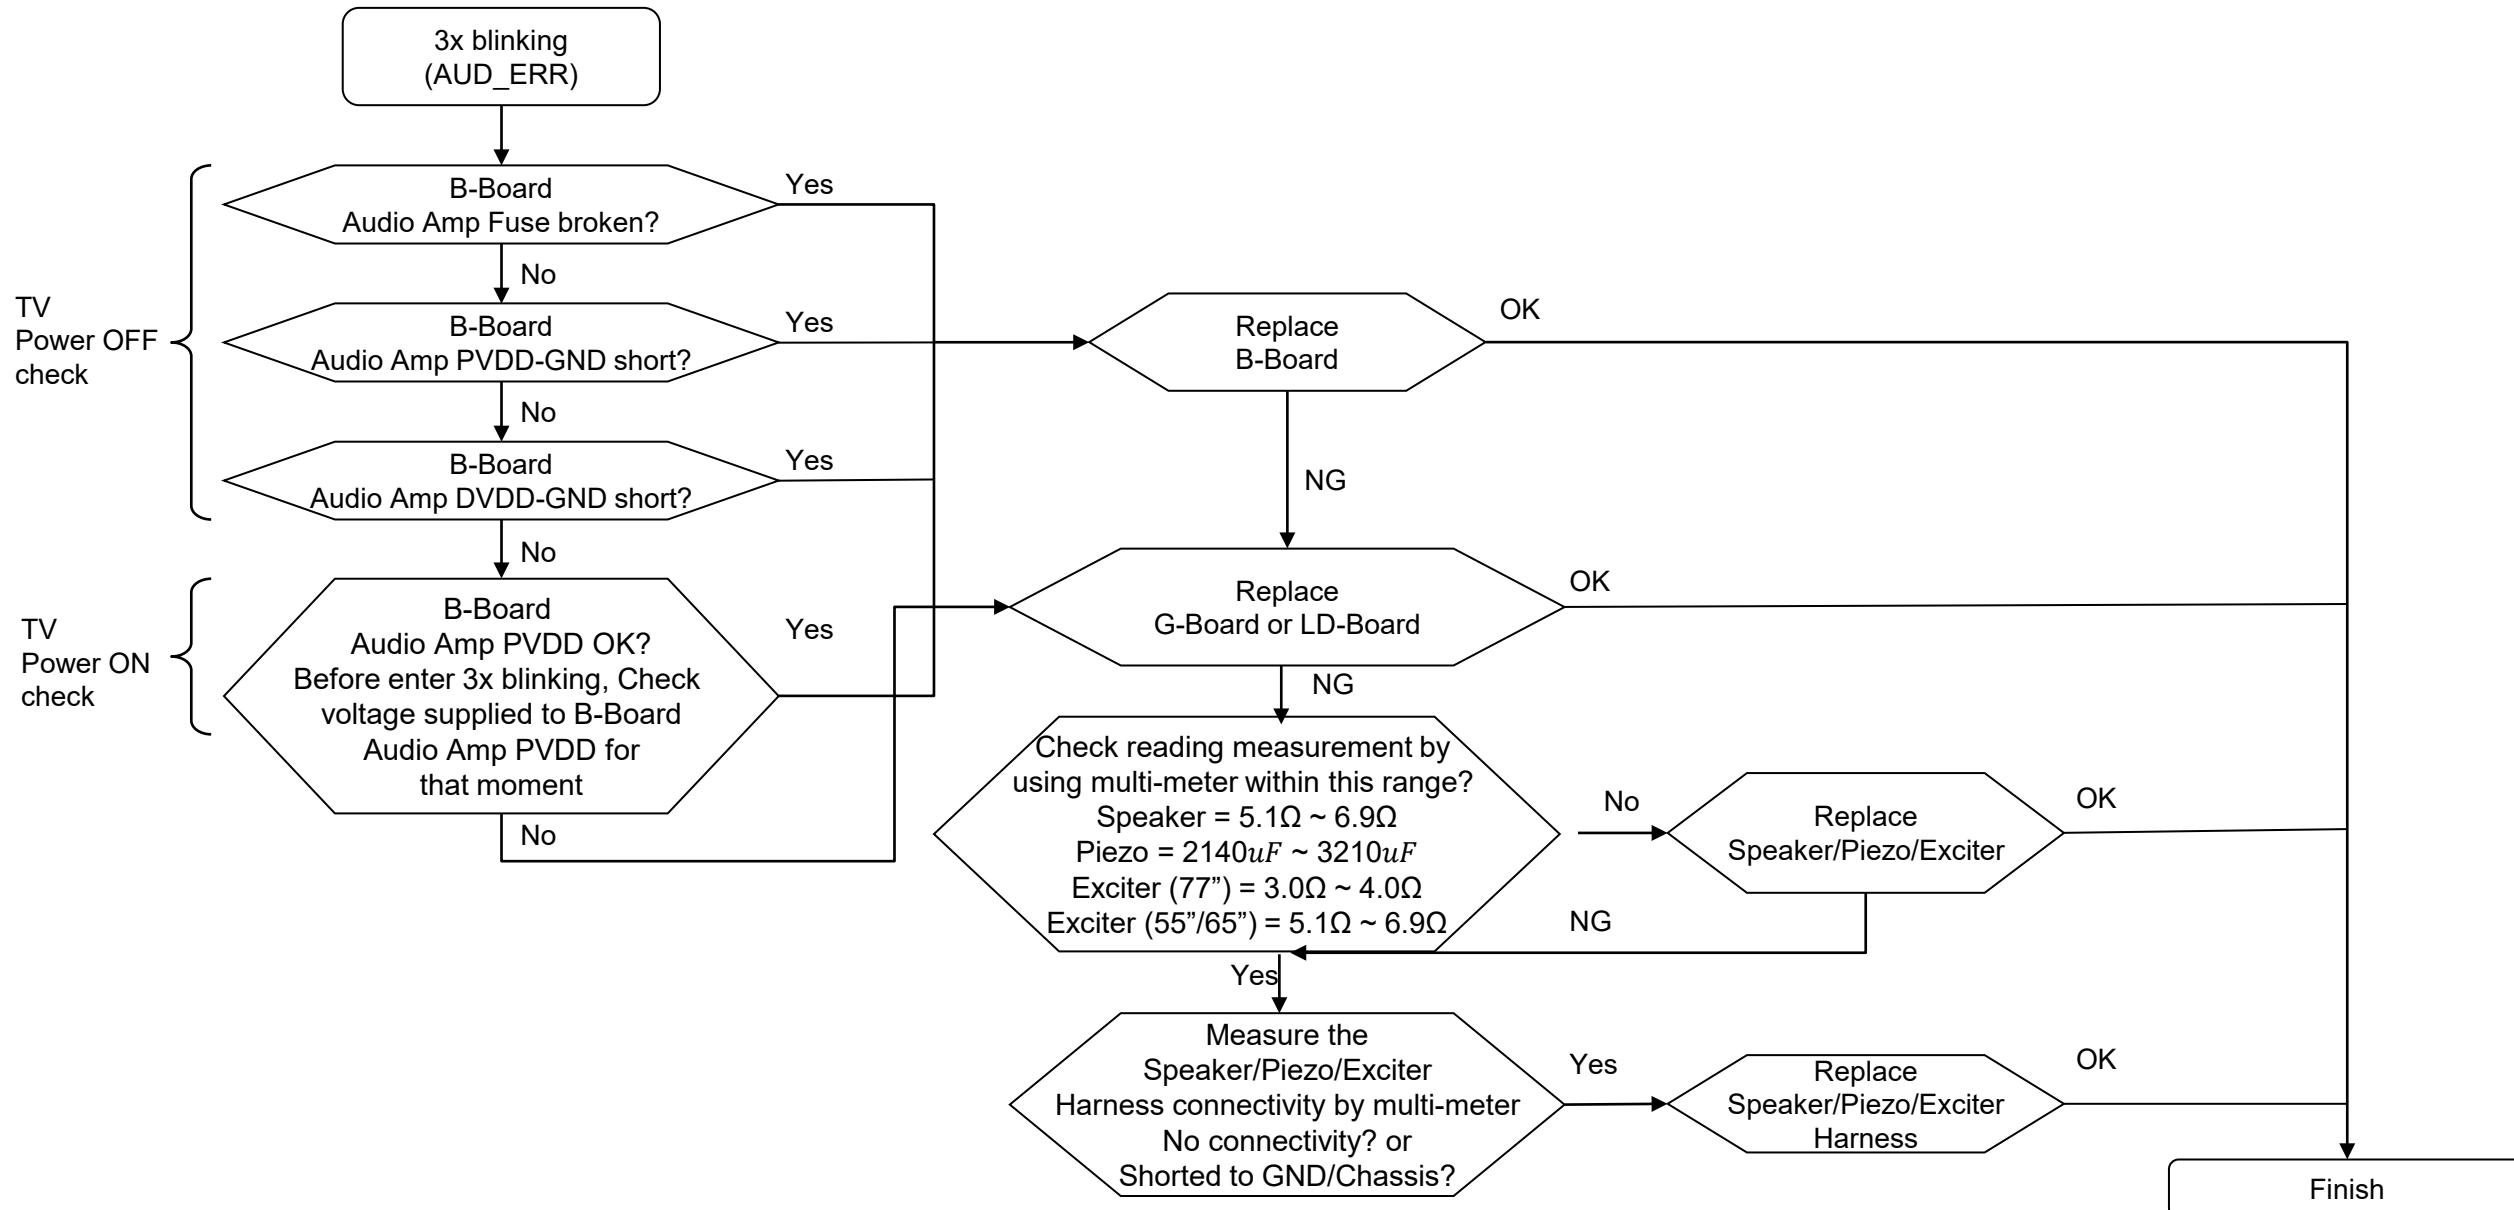

TROUBLESHOOTING



2.2 LED Blinking: 3x (AUD_ERR) – XR-A75L

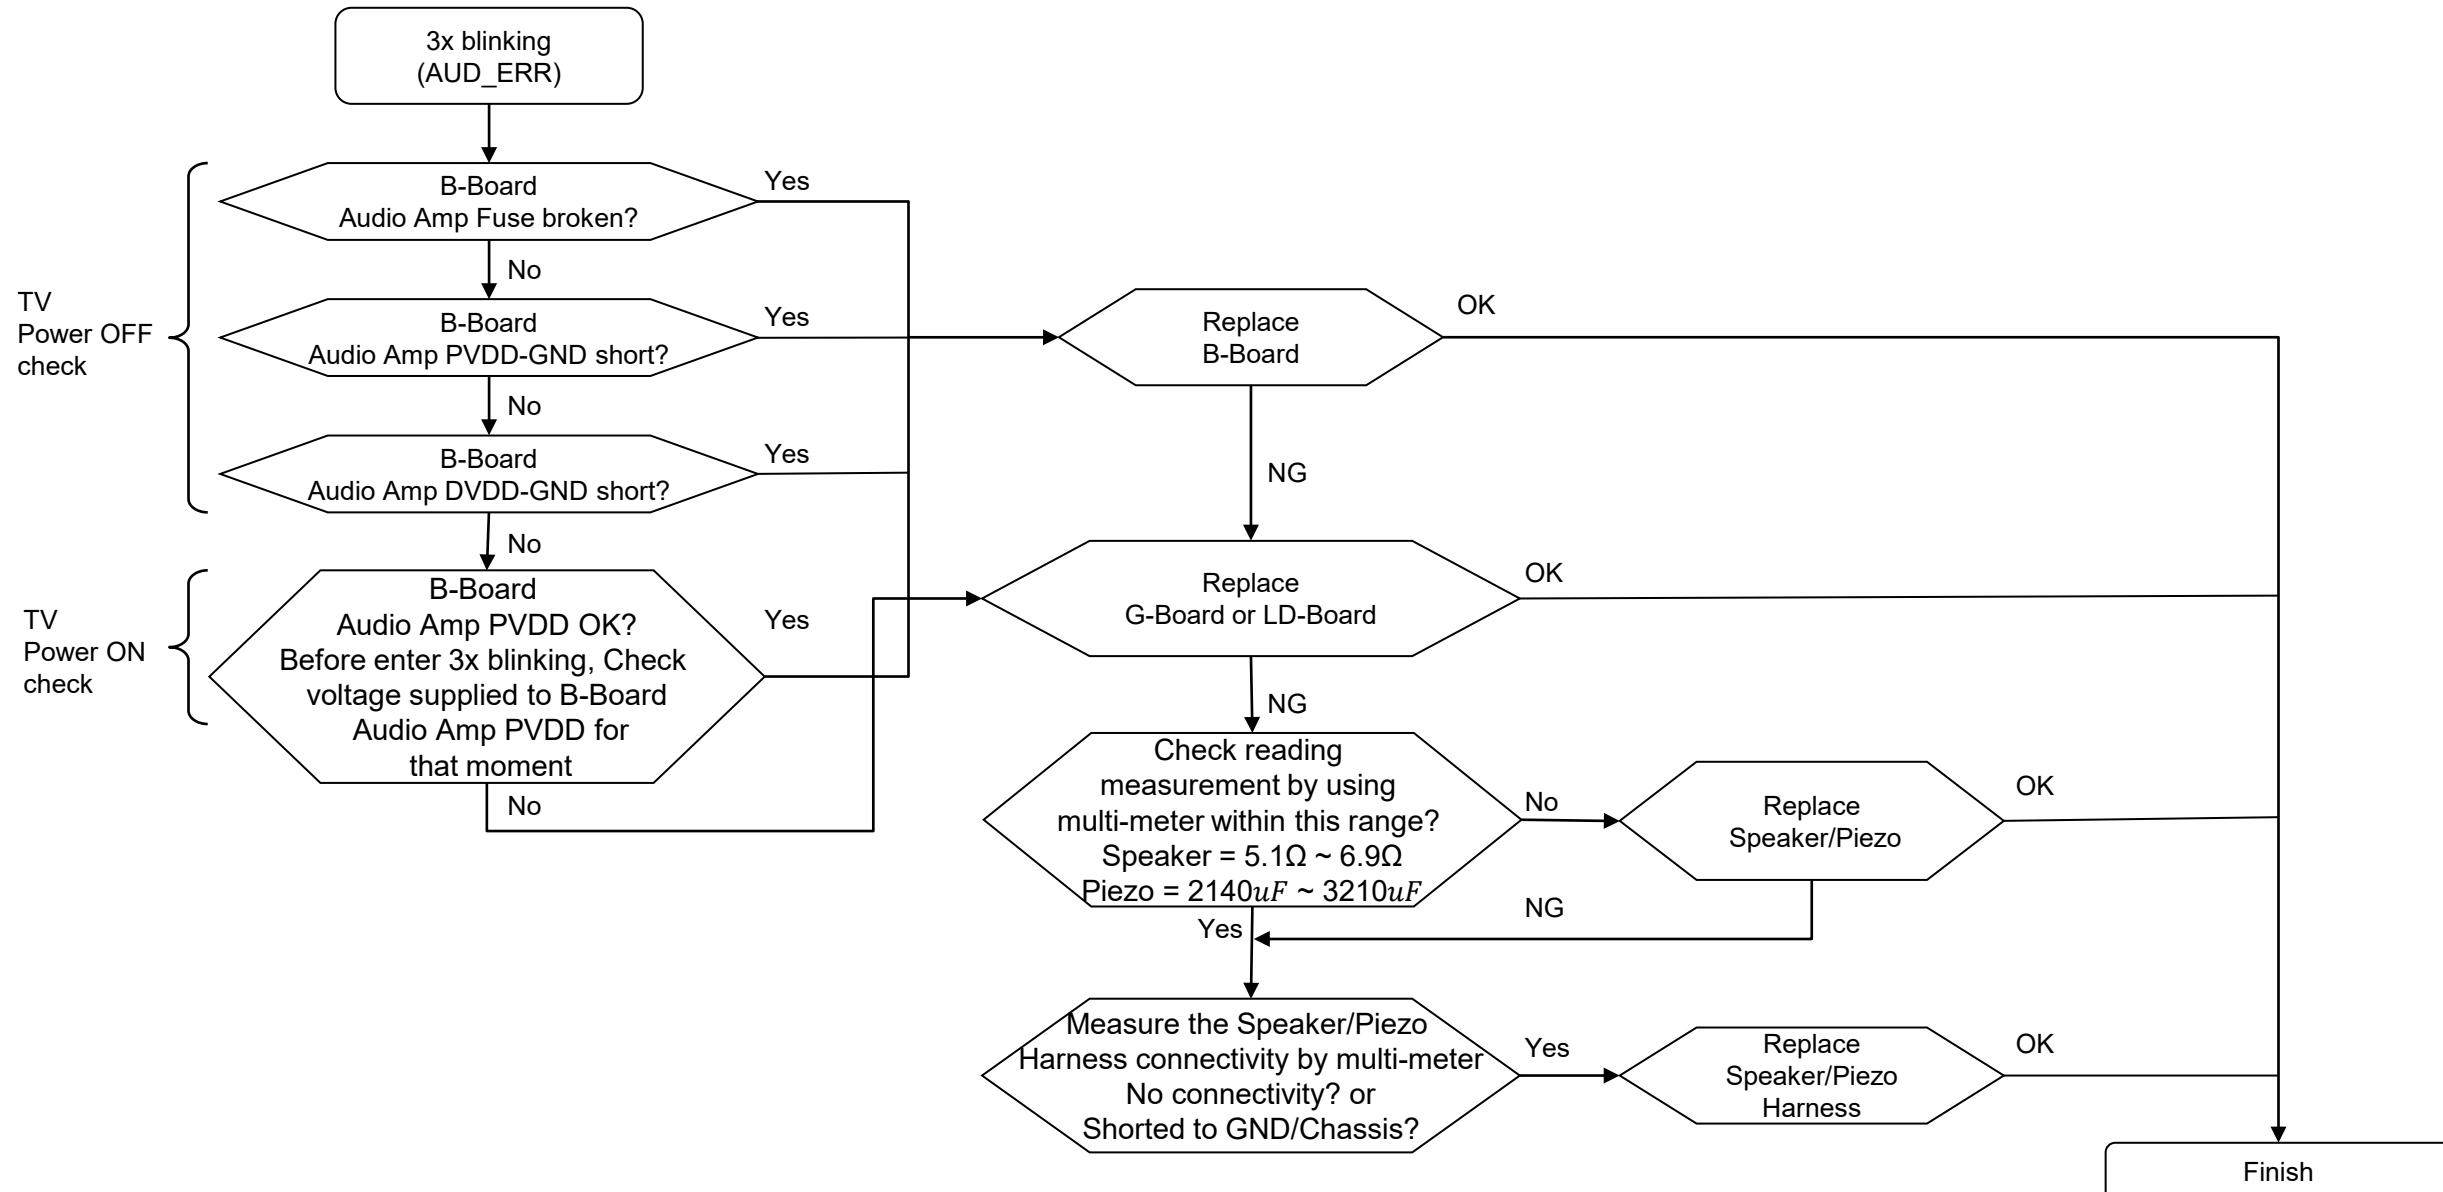

TROUBLESHOOTING

2.2 LED Blinking: 3x (AUD_ ERR) – XR-*80K / *80CK


Caution: Before start do checking point, please ensure TV in "Power Off" Condition for Continuity check

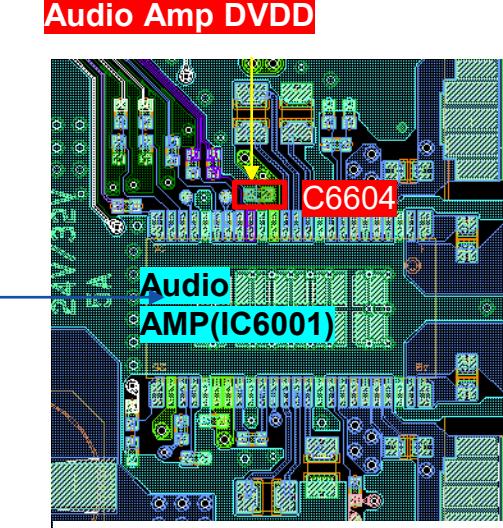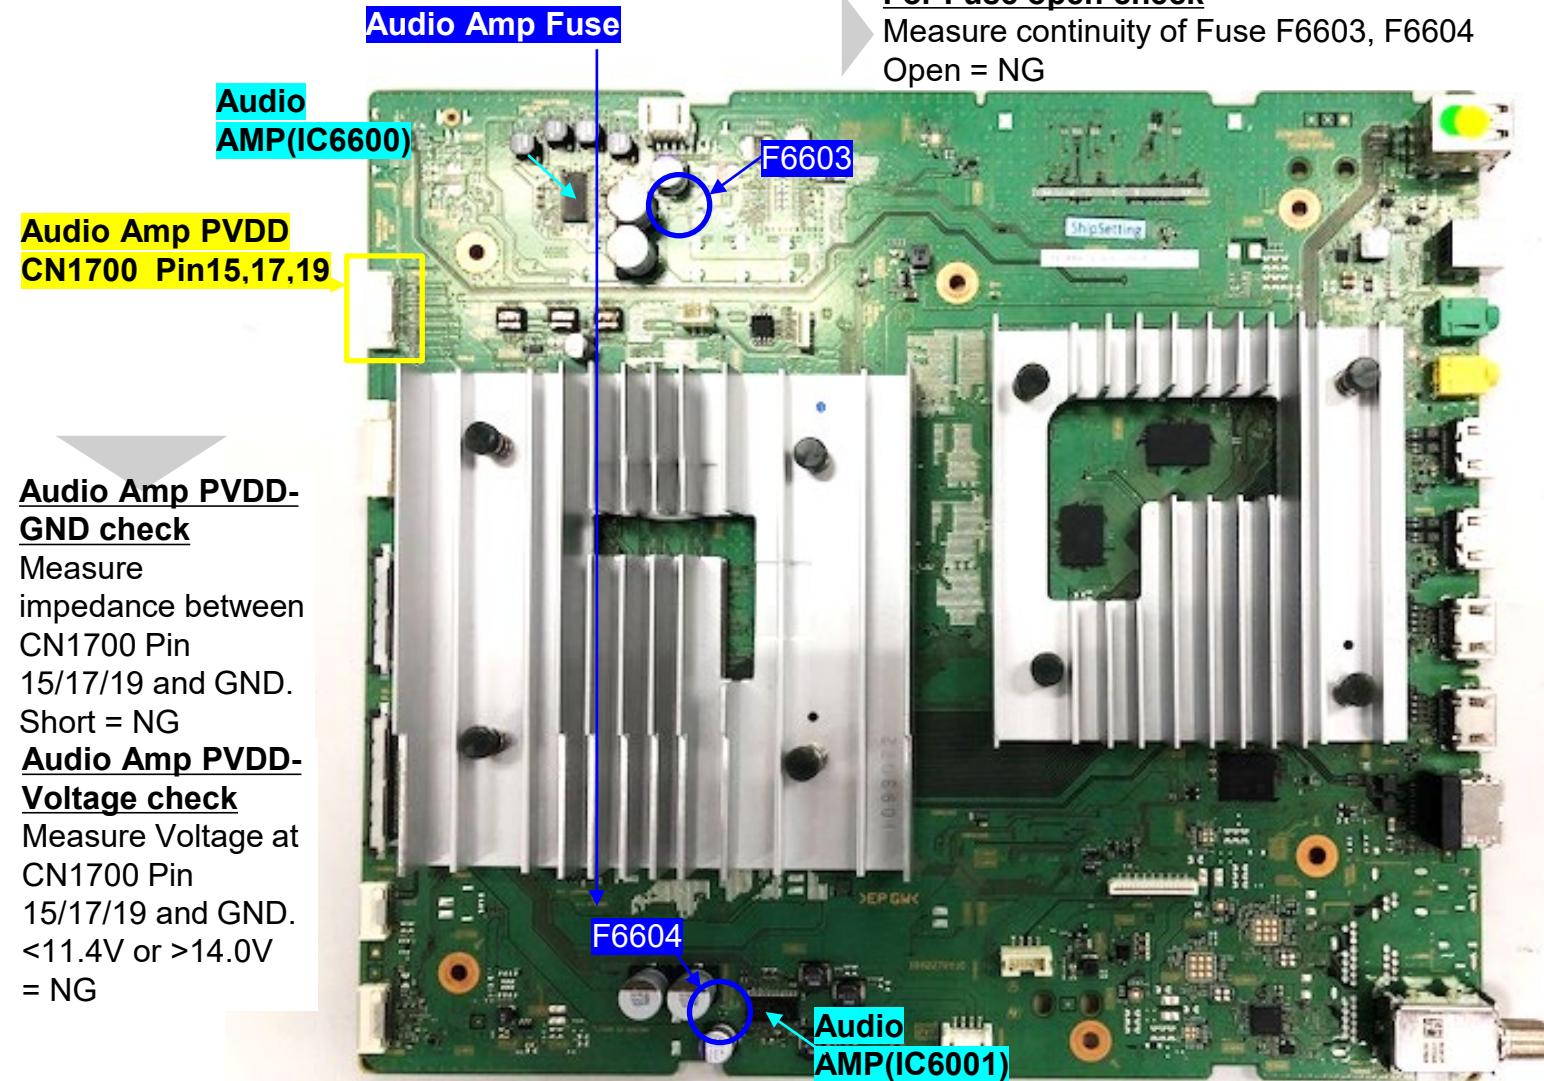

TROUBLESHOOTING

2.2 LED Blinking: 3x (AUD_ ERR) – XR-*A80L / *A80CL


Caution: Before start do checking point, please ensure TV in "Power Off" Condition for Continuity check

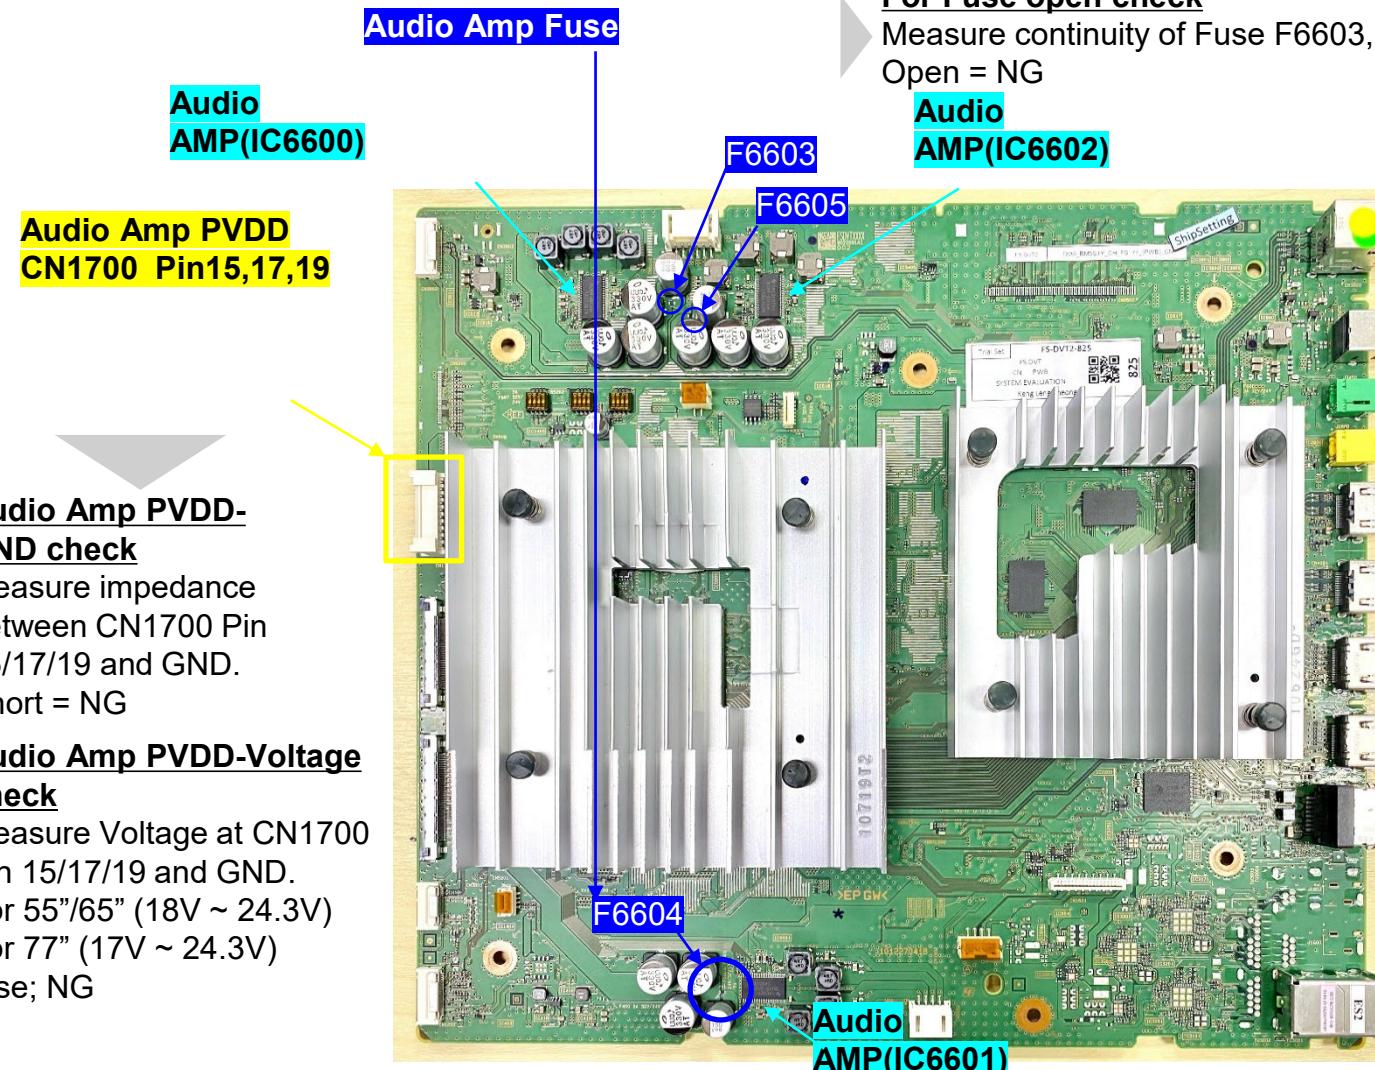

For Fuse open check

Measure continuity of Fuse F6603, F6604, F6605
Open = NG

Audio Amp DVDD

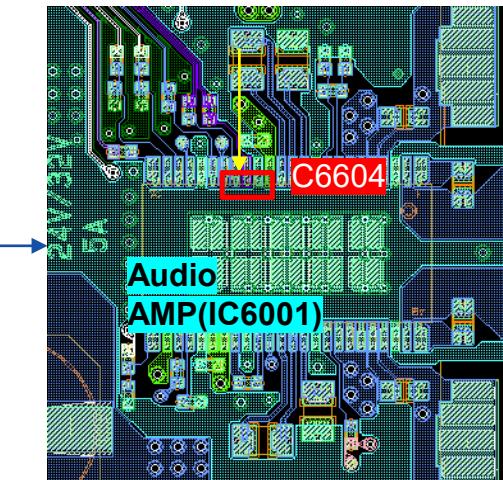


Audio Amp DVDD-GND check

Measure impedance between DVDD and GND at capacitor C6604
Short = NG

TROUBLESHOOTING

2.2 LED Blinking: 3x (AUD_ ERR) – XR-*A75L

Caution: Before start do checking point, please ensure TV in "Power Off" Condition for Continuity check

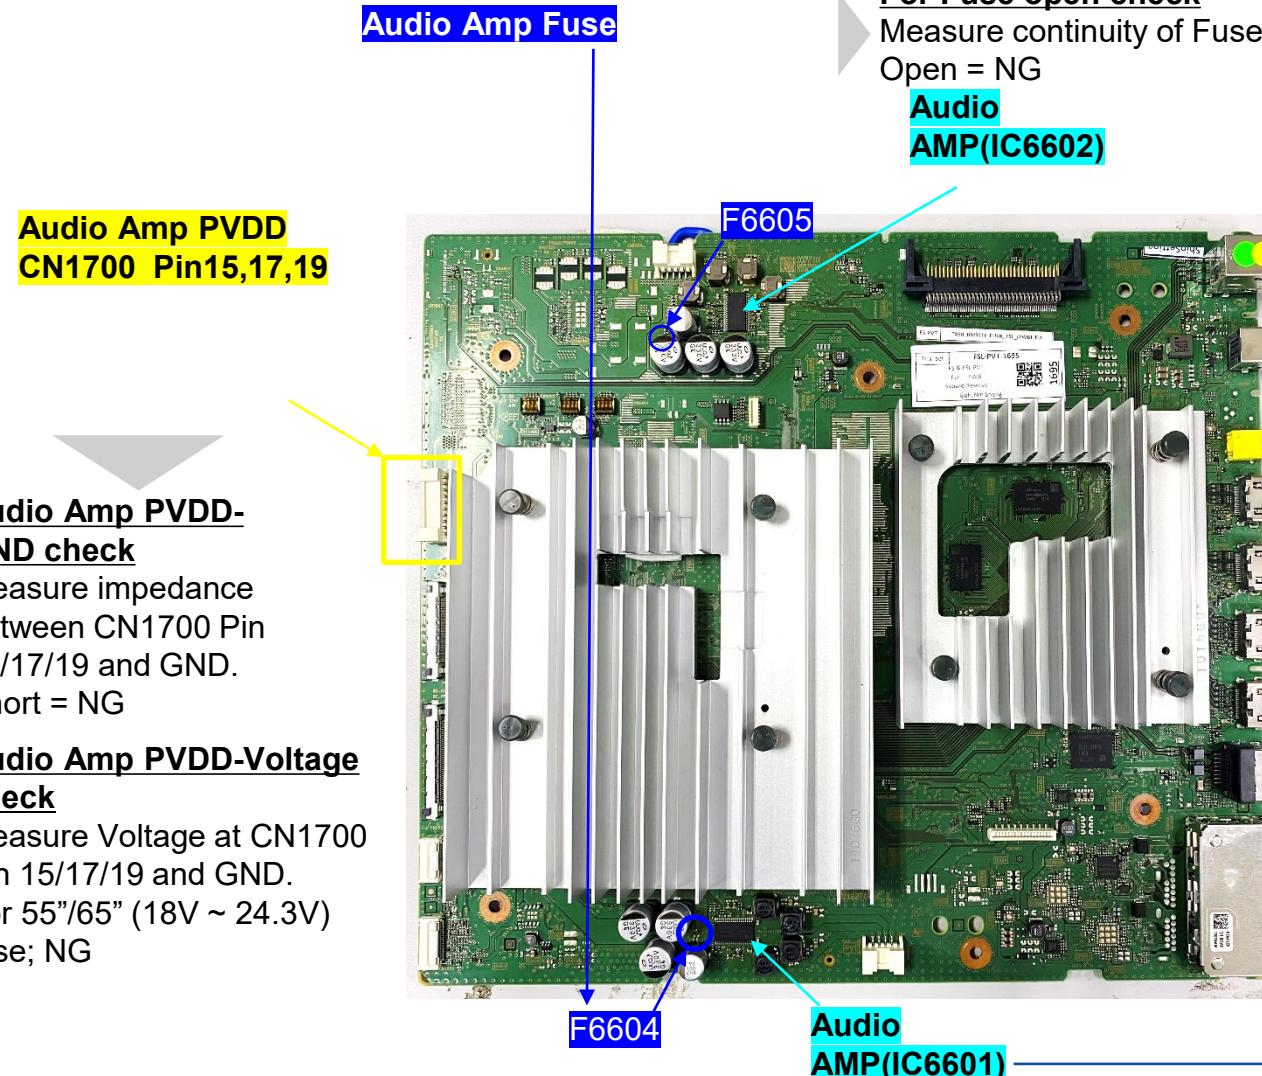


For Fuse open check

Measure continuity of Fuse F6604, F6605
Open = NG

Audio AMP(IC6602)

Audio Amp DVDD

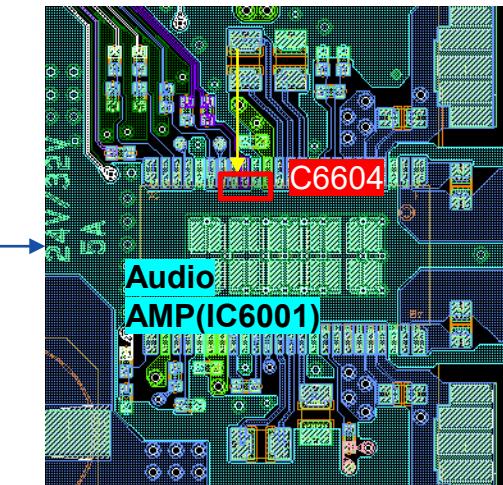


Audio Amp DVDD-GND check

Measure impedance between DVDD and GND at capacitor C6604
Short = NG


TROUBLESHOOTING

2.2 LED Blinking: 3x (AUD_ERR) – XR-83A80*

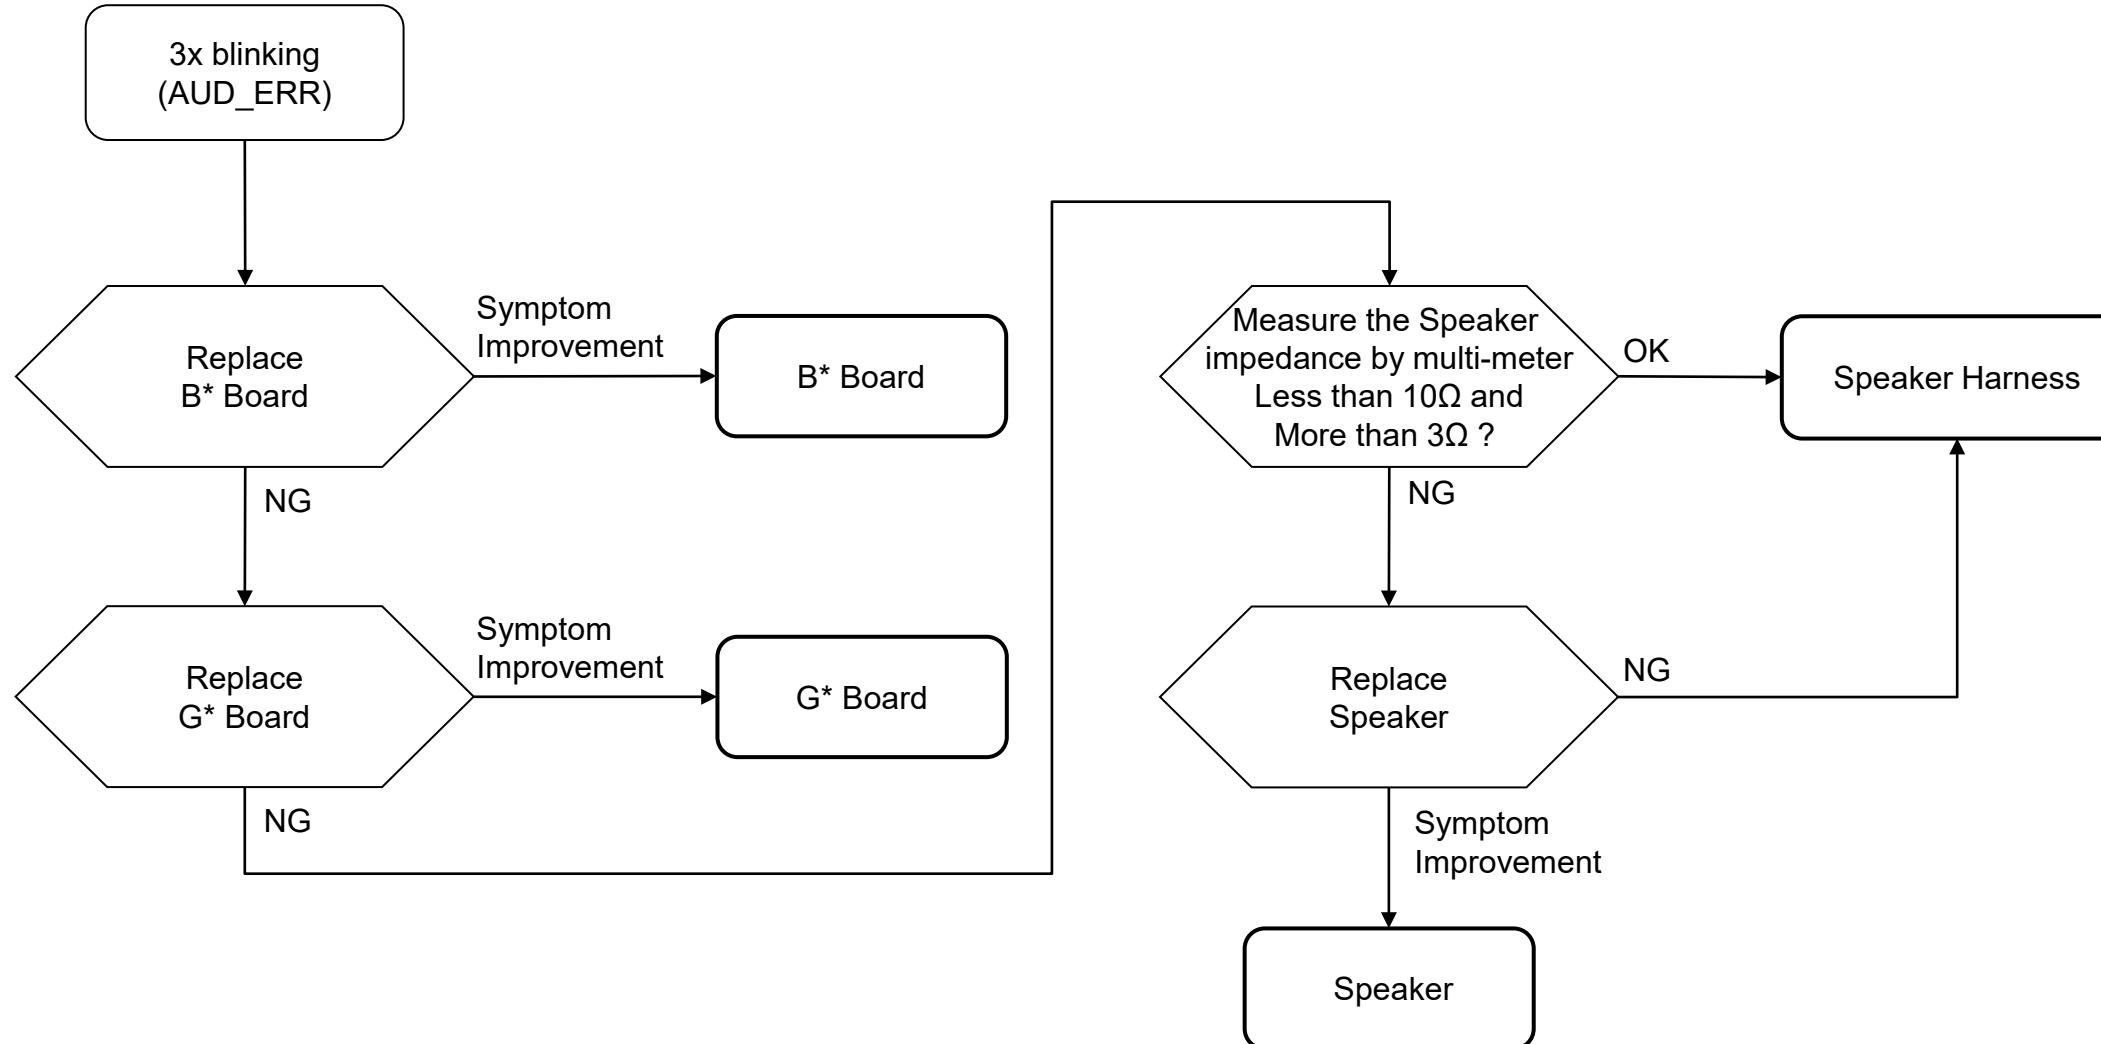


TROUBLESHOOTING

2.3 LED Blinking: 4x (LD_ERR) – XR-83A80*

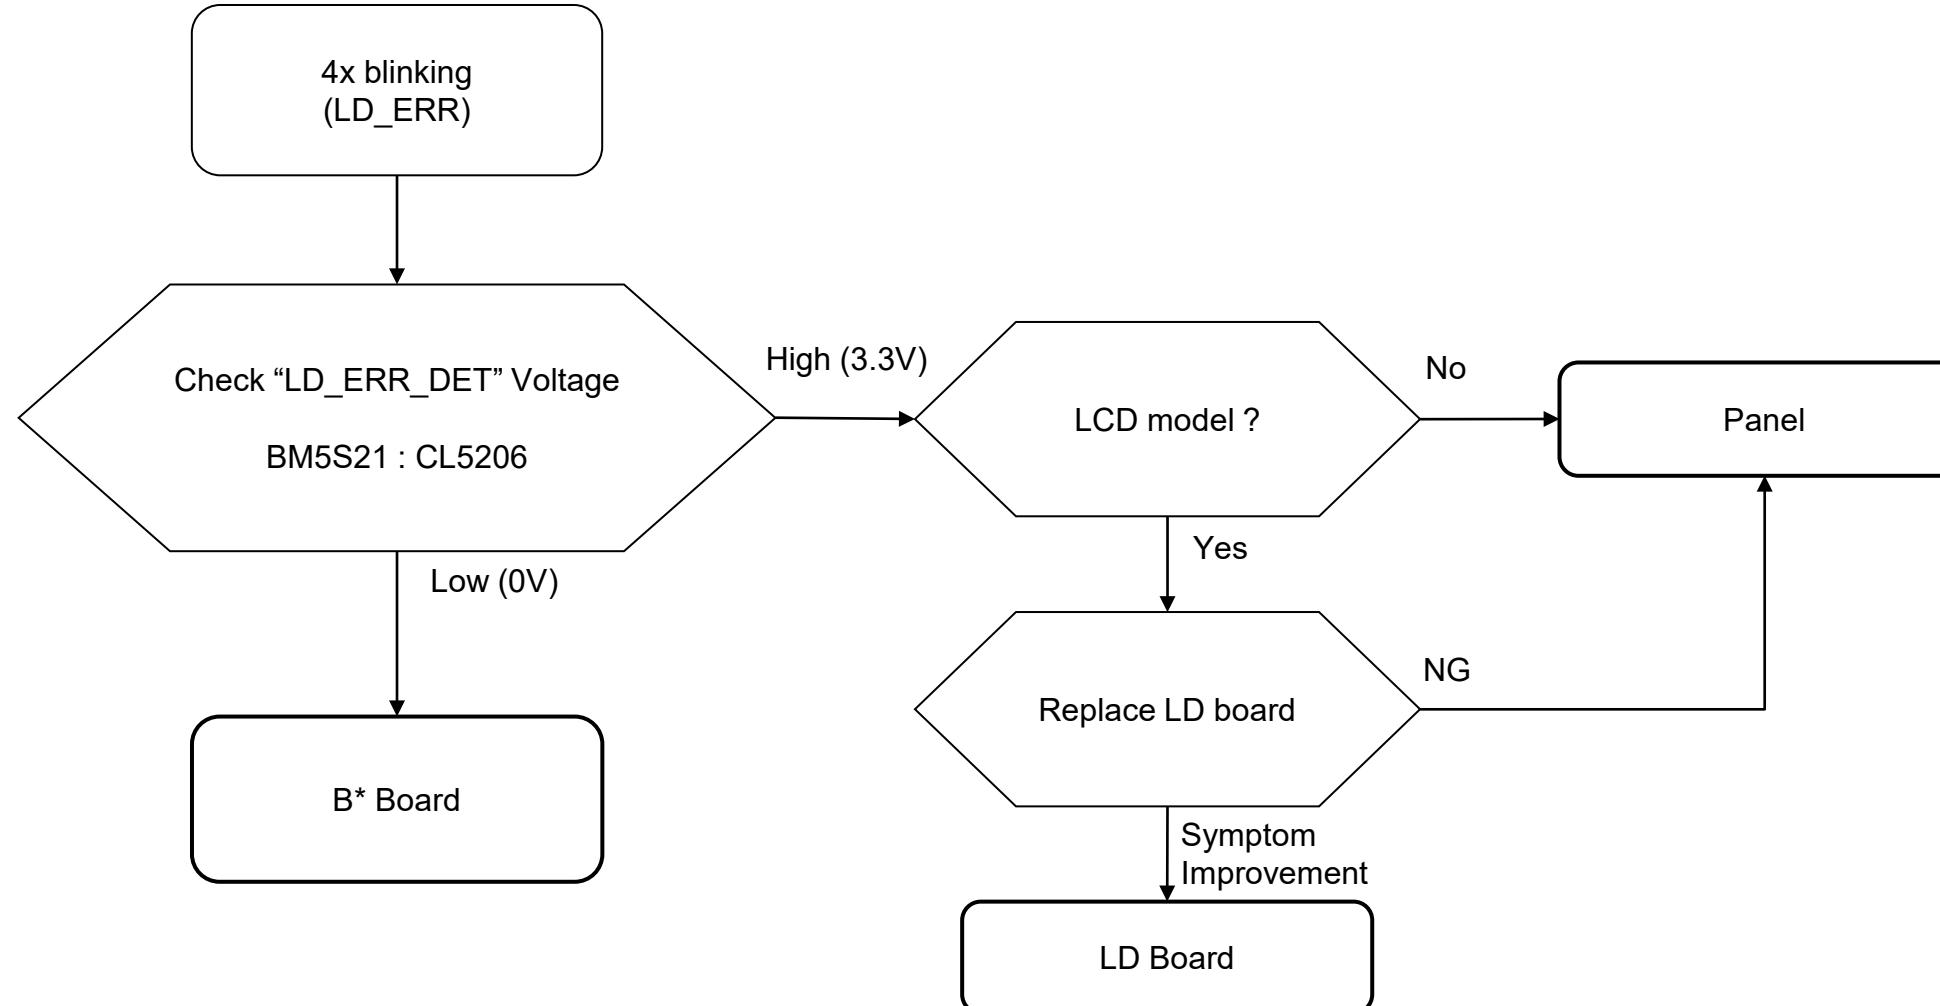


TROUBLESHOOTING

Checking Point – XR-83A80*

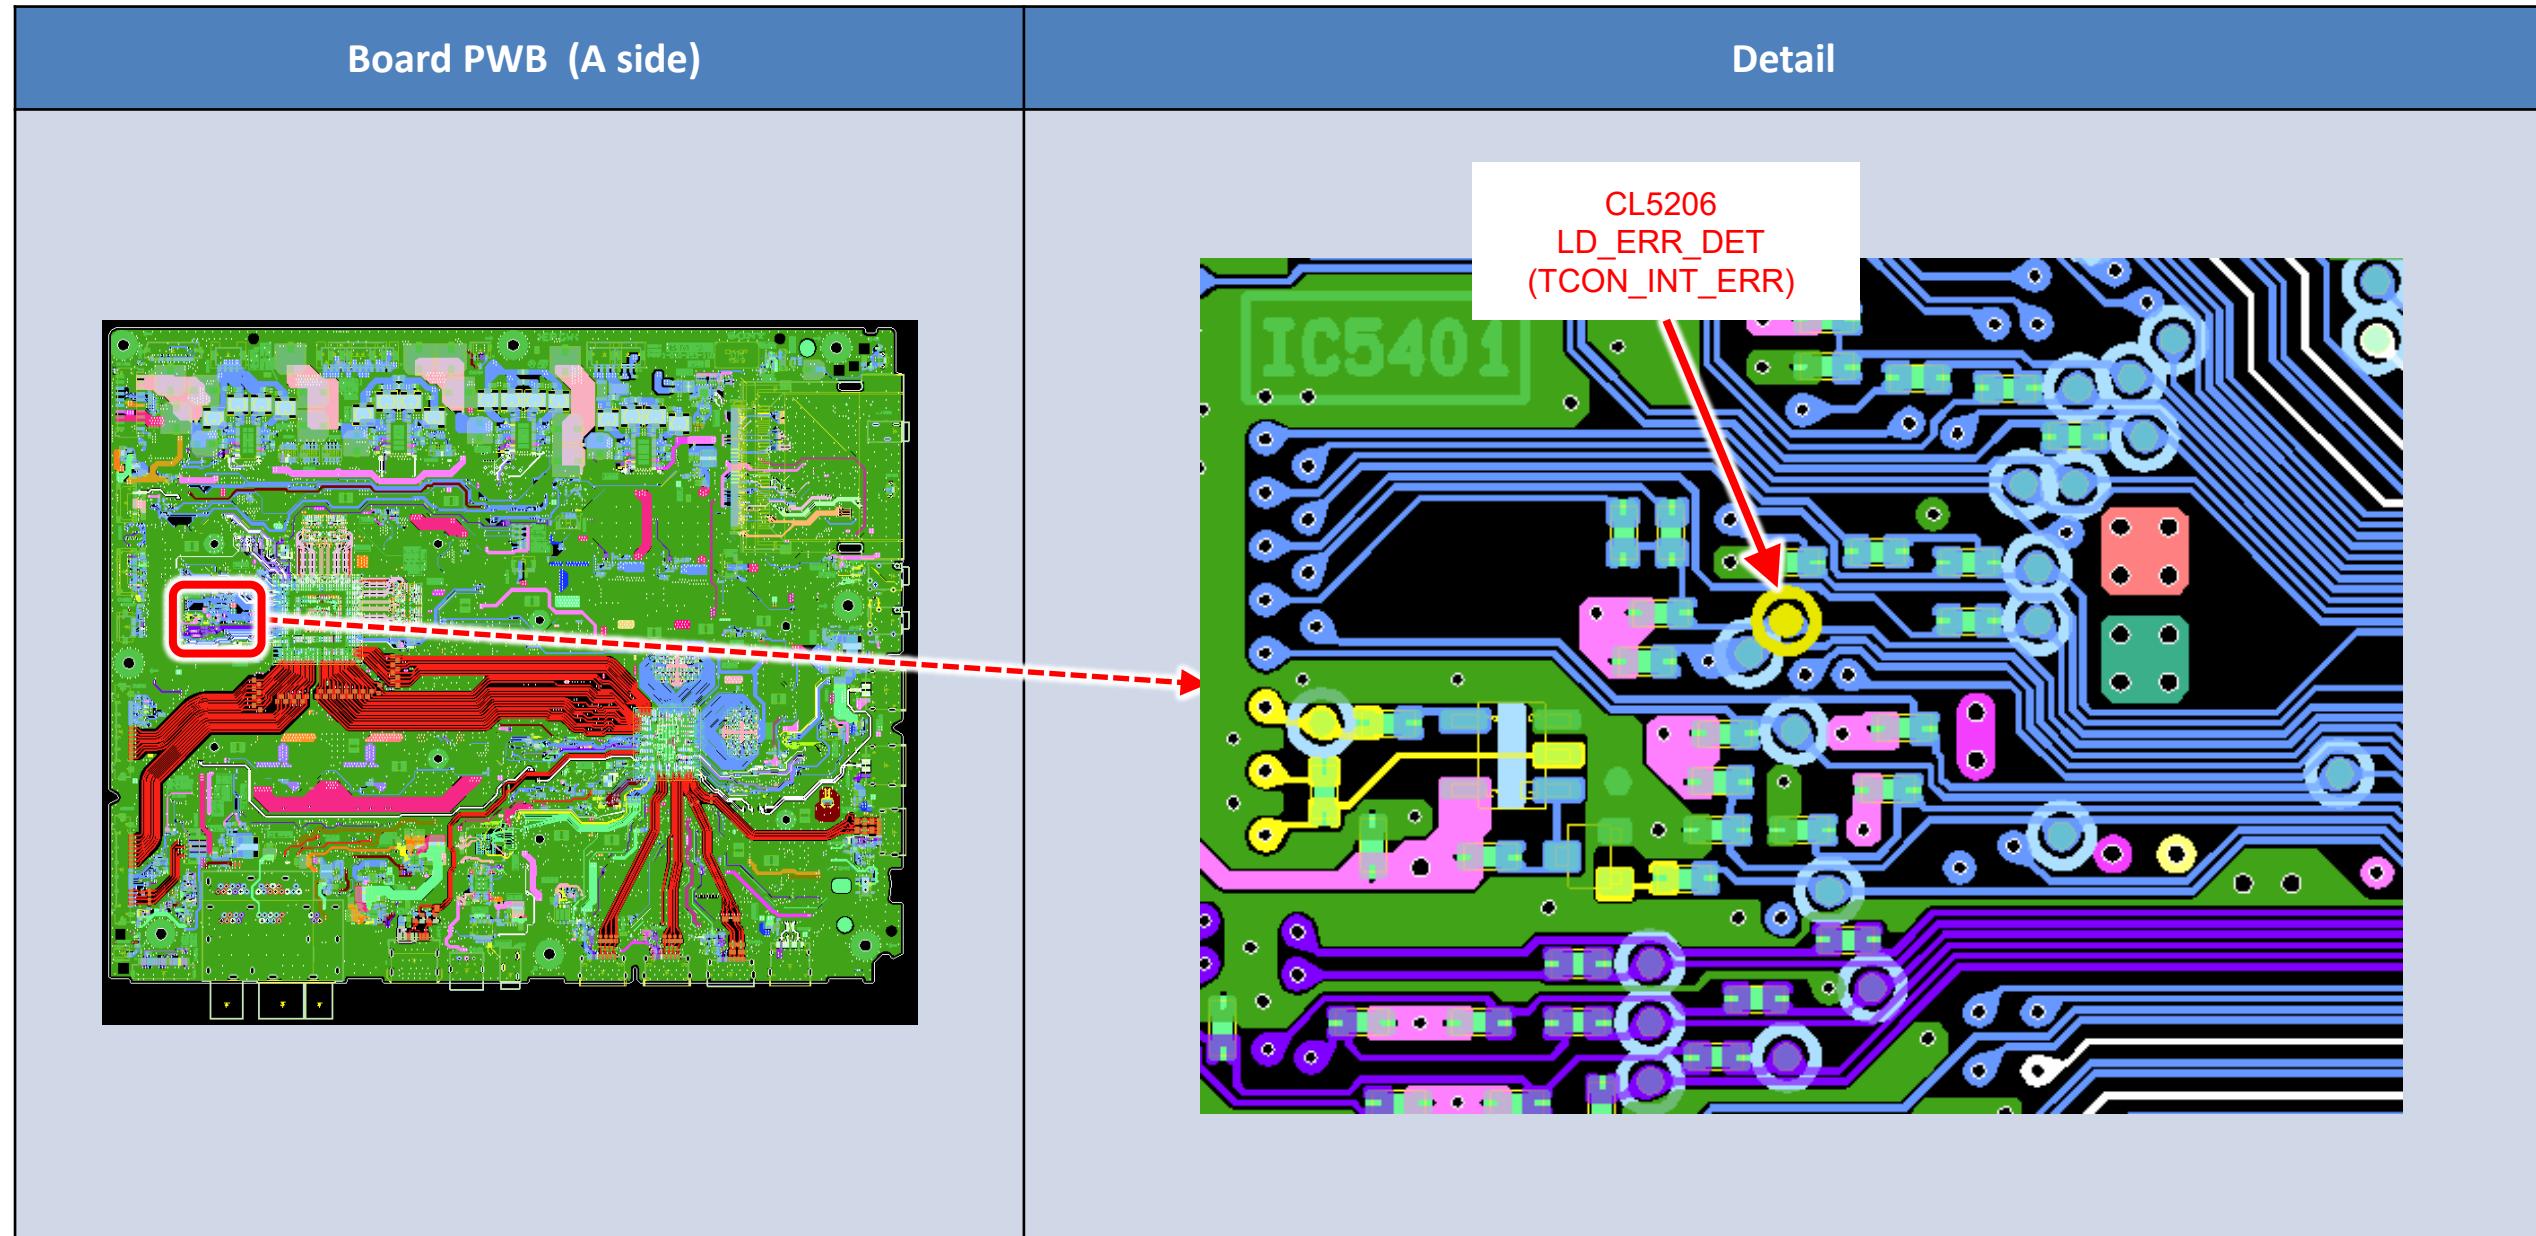


TROUBLESHOOTING

2.4 LED Blinking: 4x (BCM_ERR) – XR-83A80*

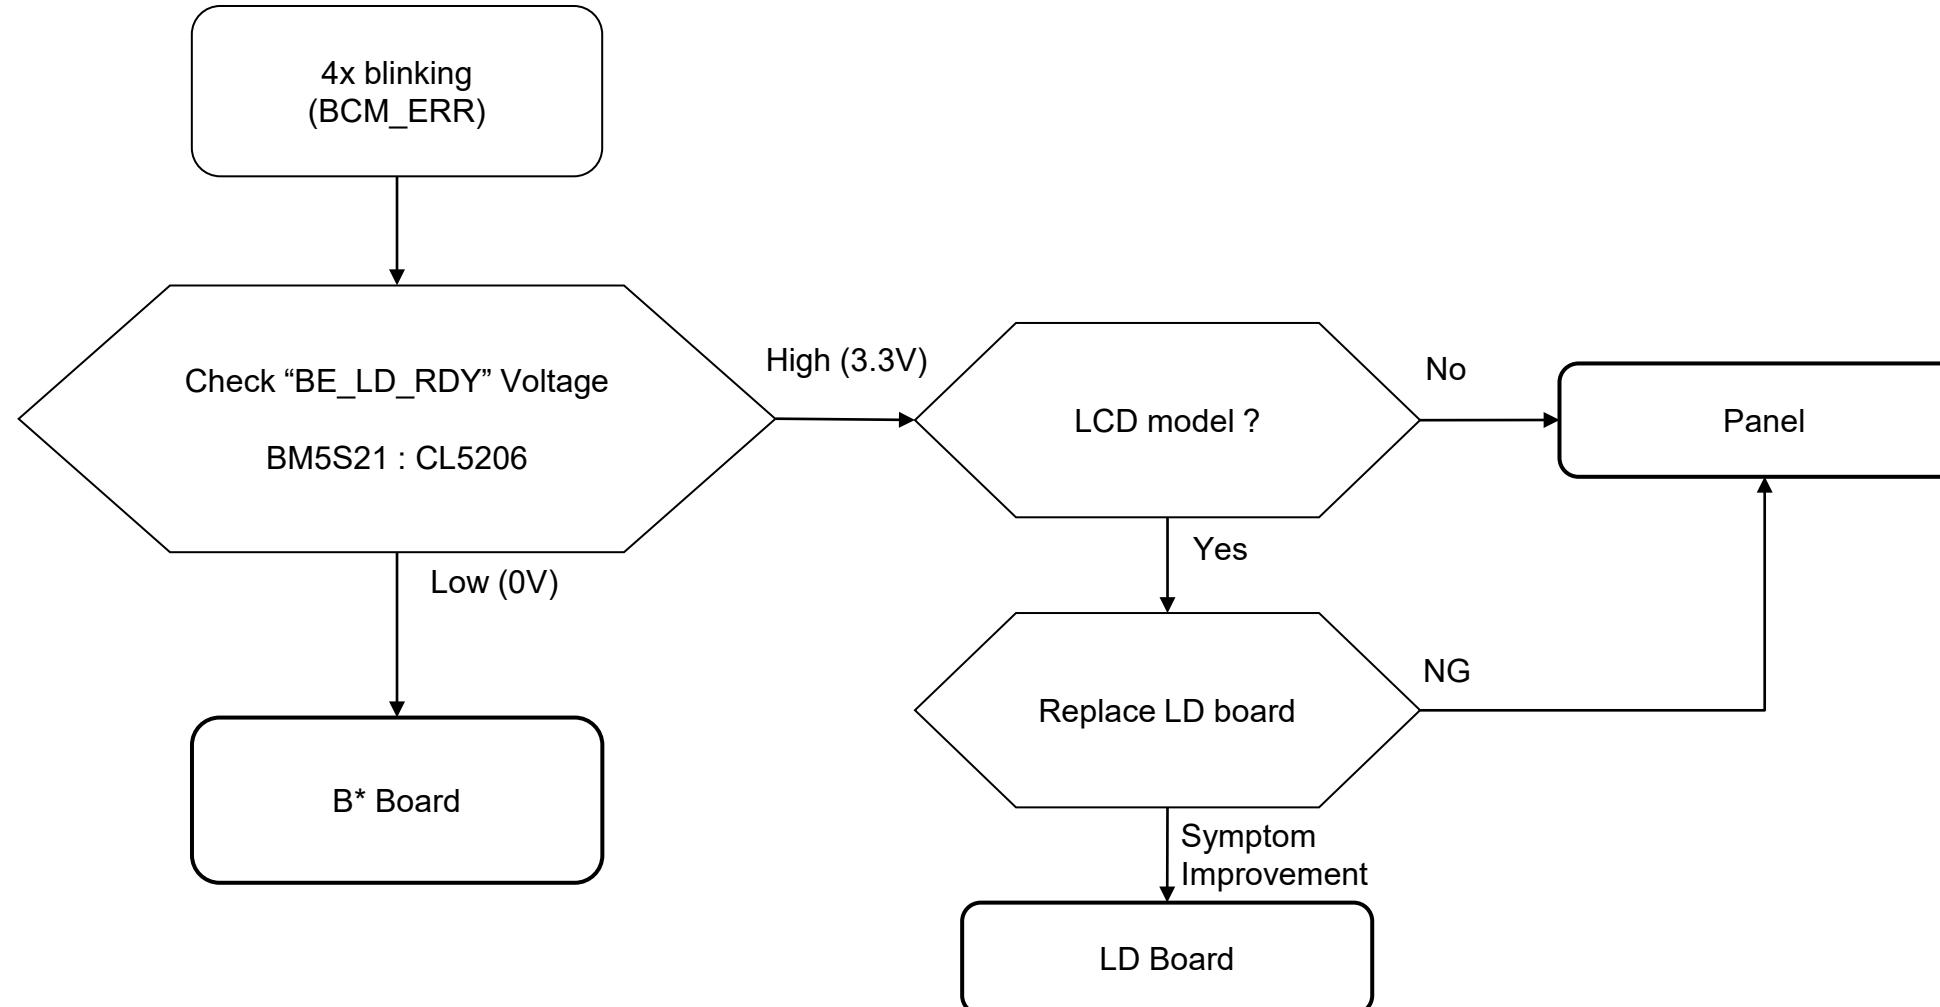



TROUBLESHOOTING

Checking Point – XR-83A80*

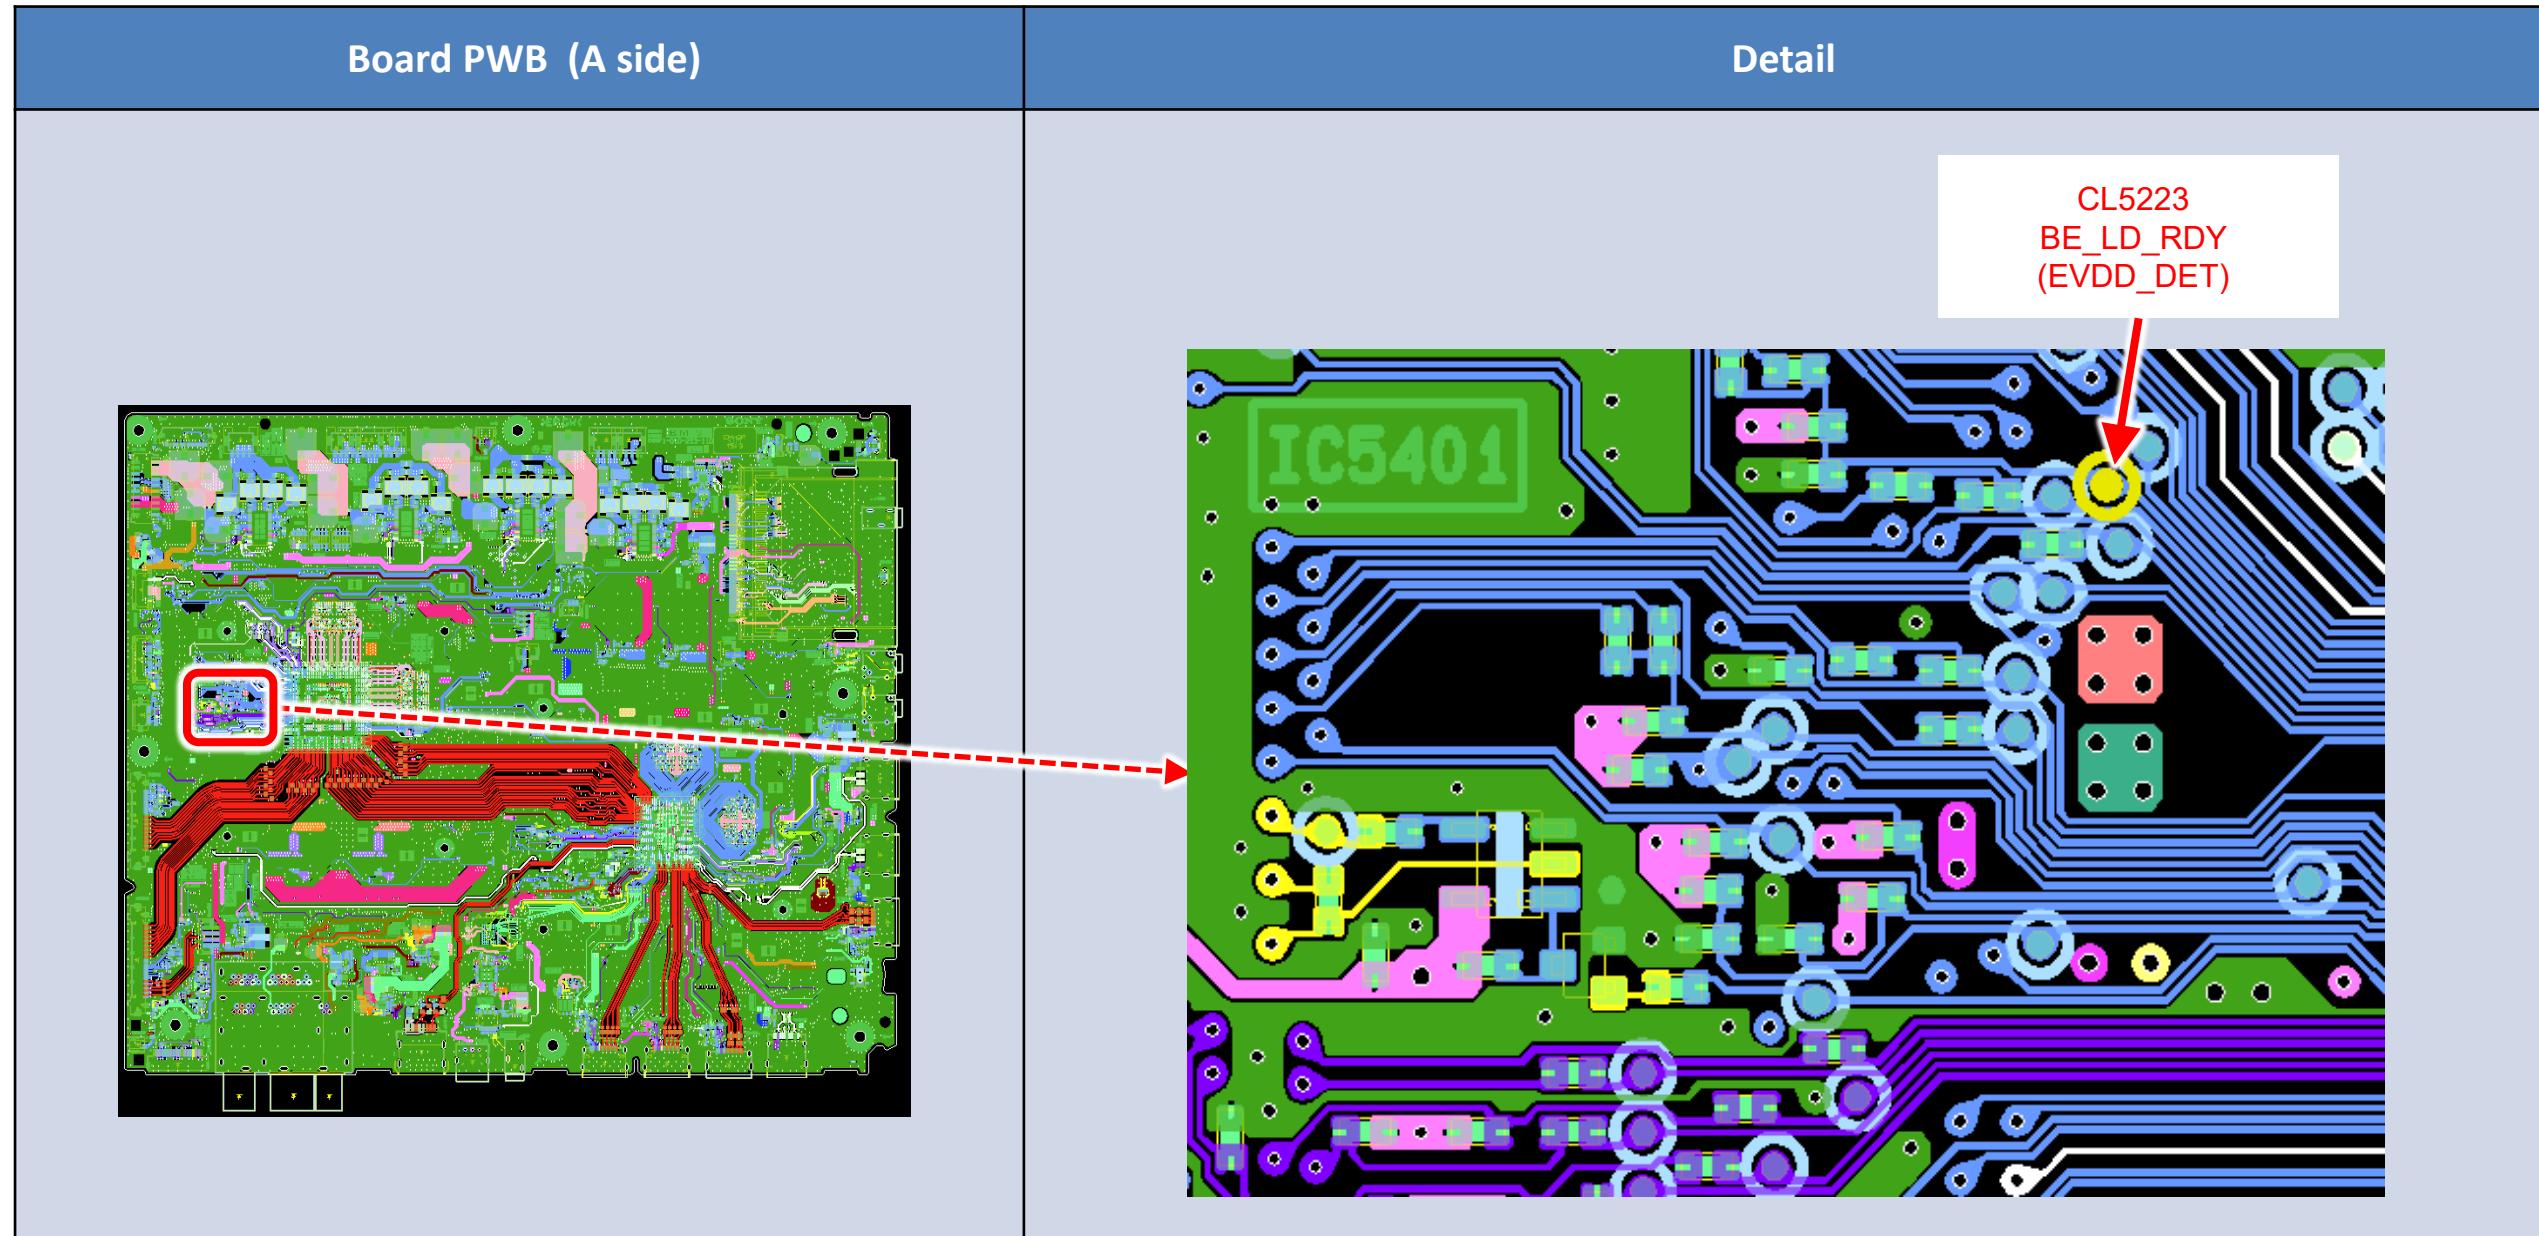



TROUBLESHOOTING

2.5 LED Blinking : 5x Blinking (Panel ID Read Error)

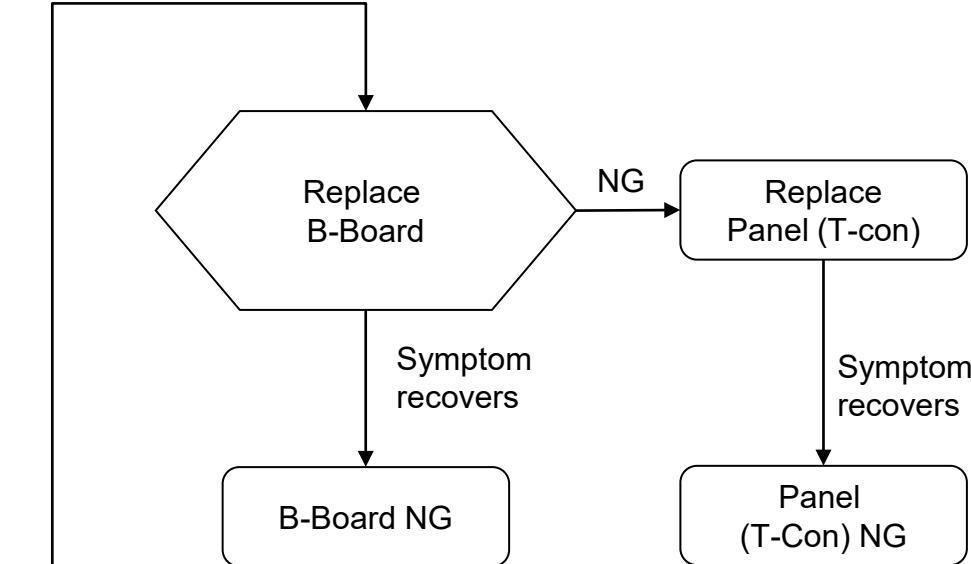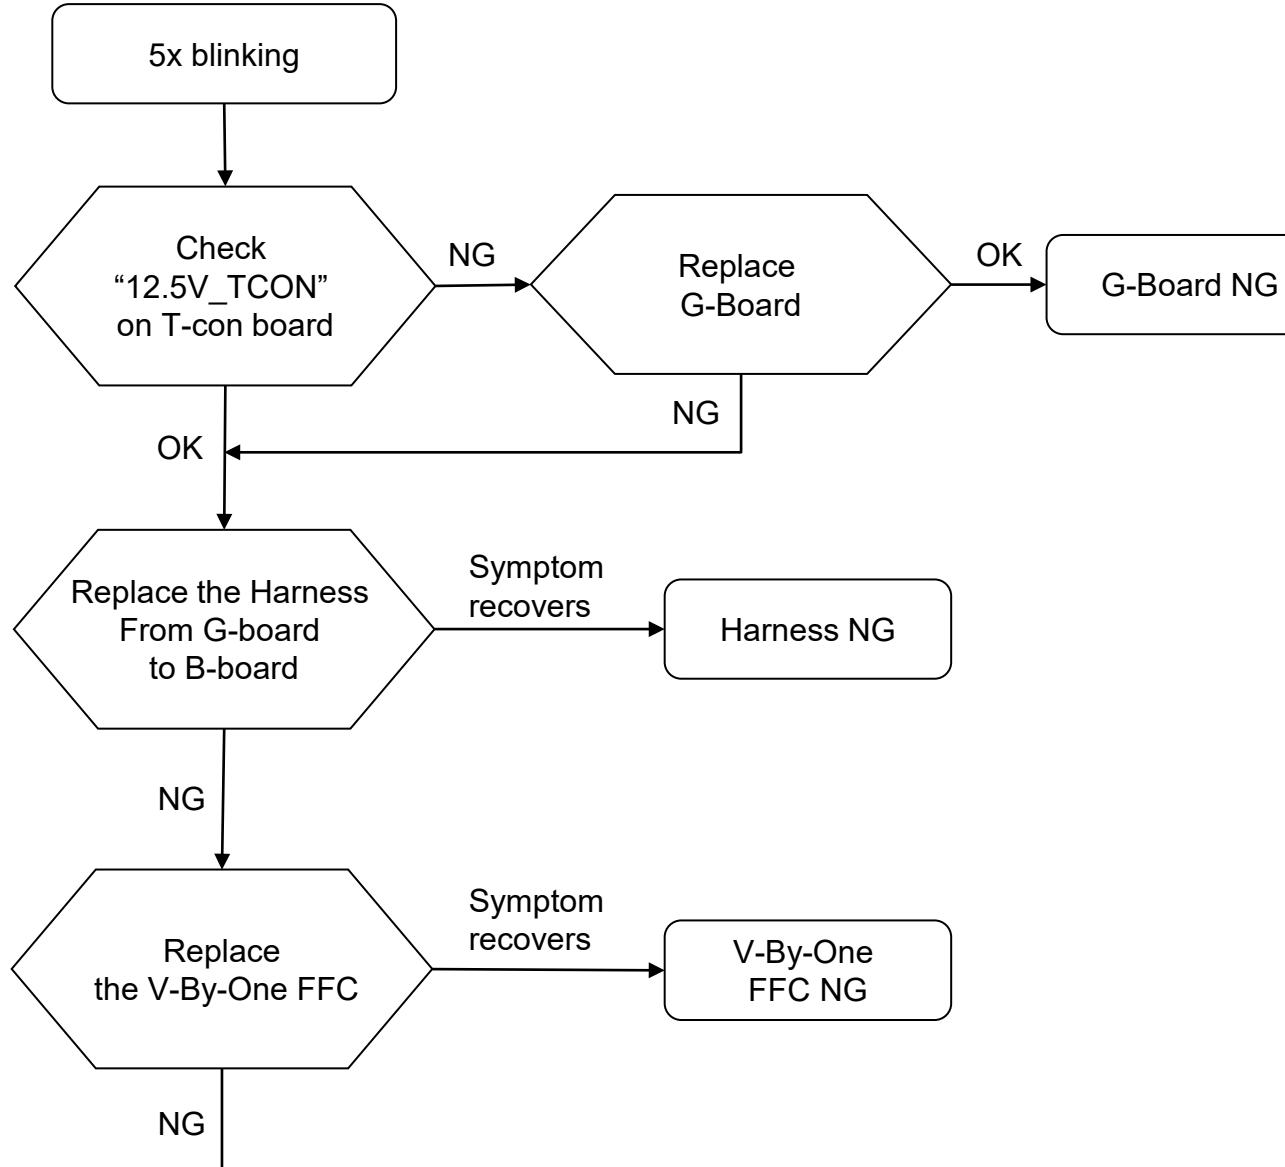


TROUBLESHOOTING

2.5 LED Blinking : Check point for 12.5V T-con at T-con Board

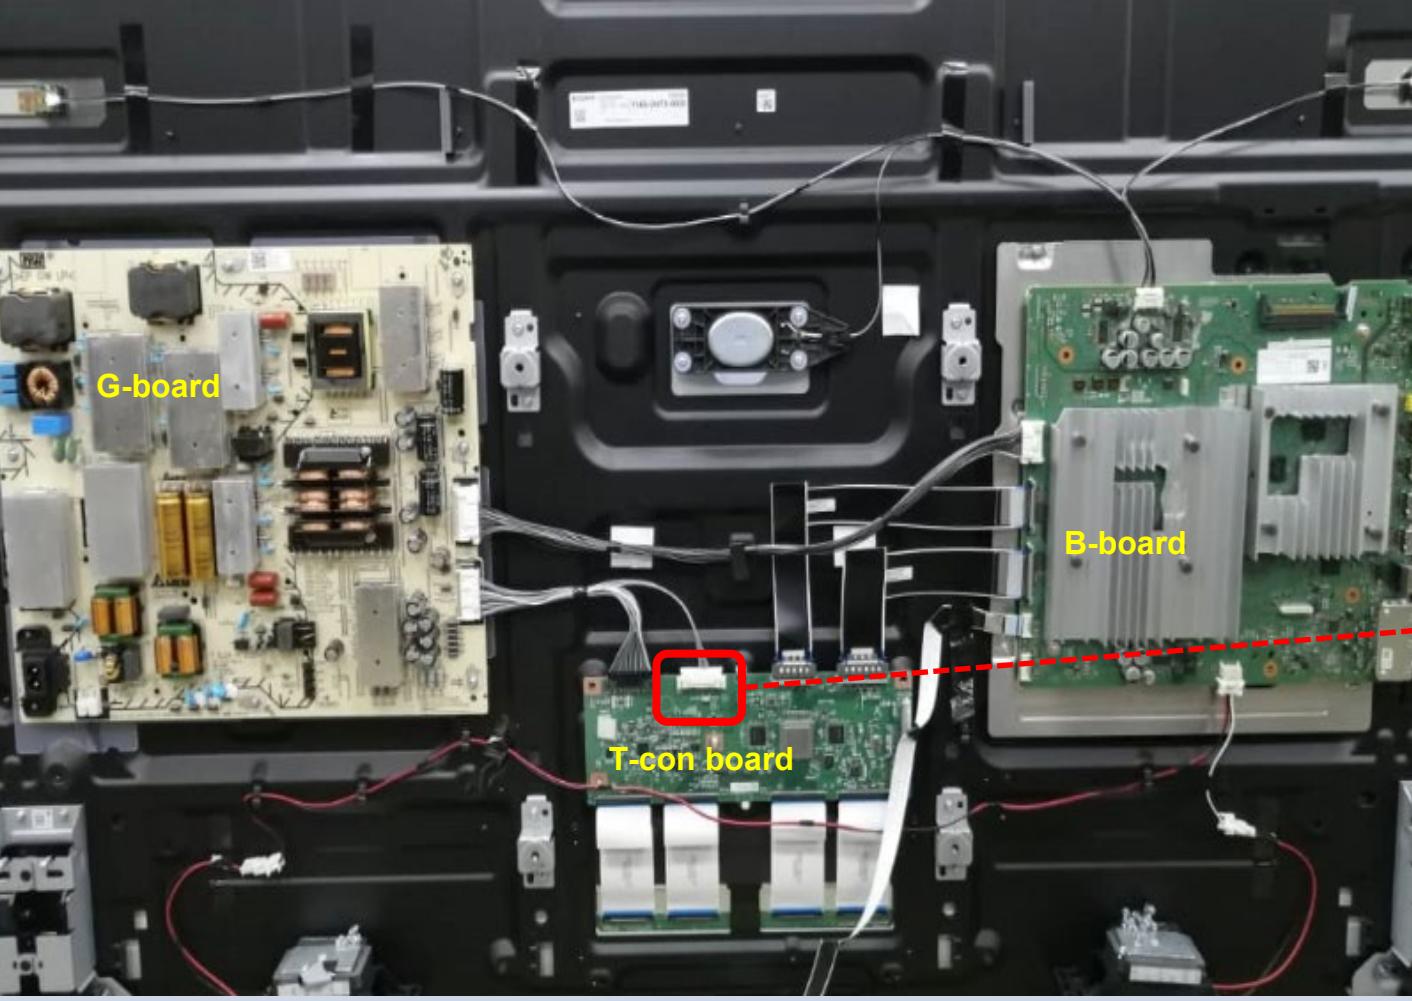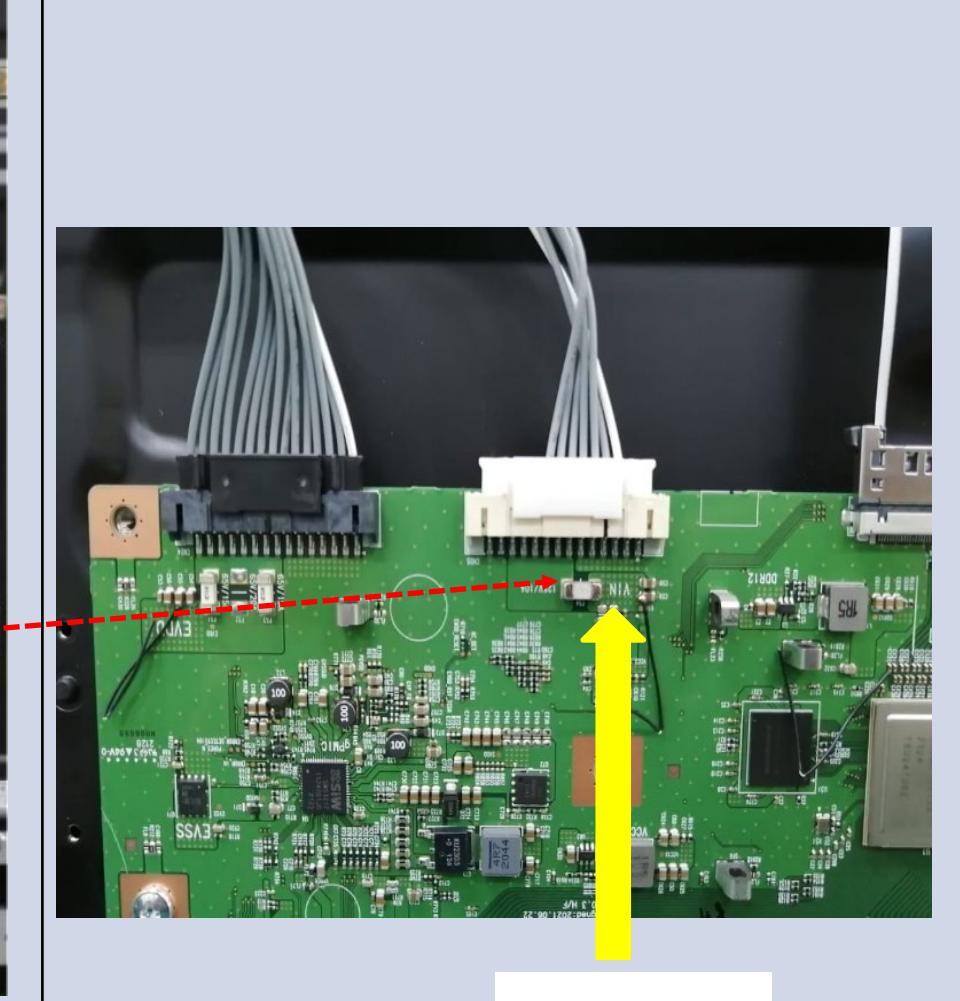Back Chassis	Detail
	 <p>12V TCON</p>



TROUBLESHOOTING

2.6 LED Blinking: 6x (Backlight Error)

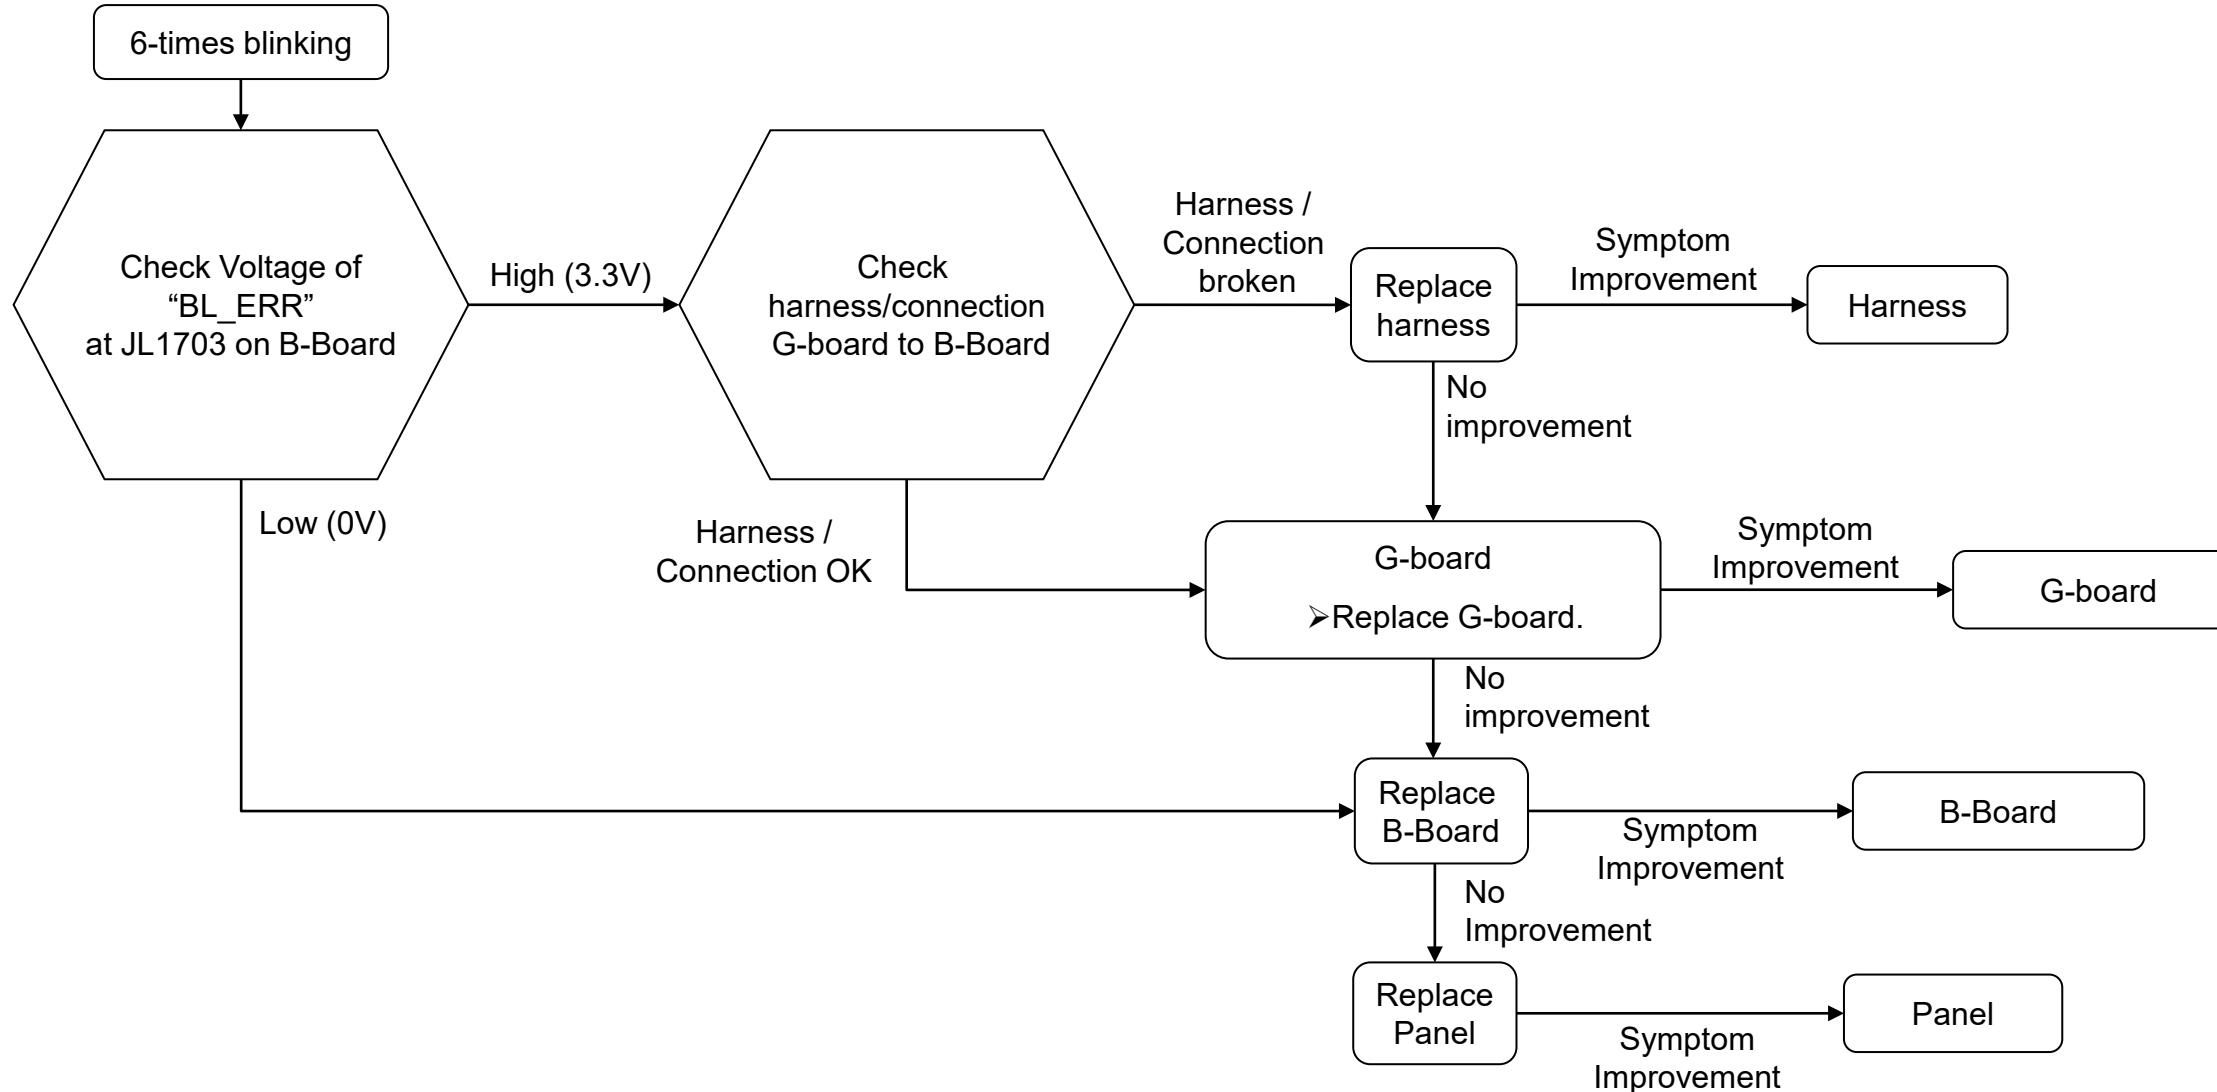


TROUBLESHOOTING

Checking Point

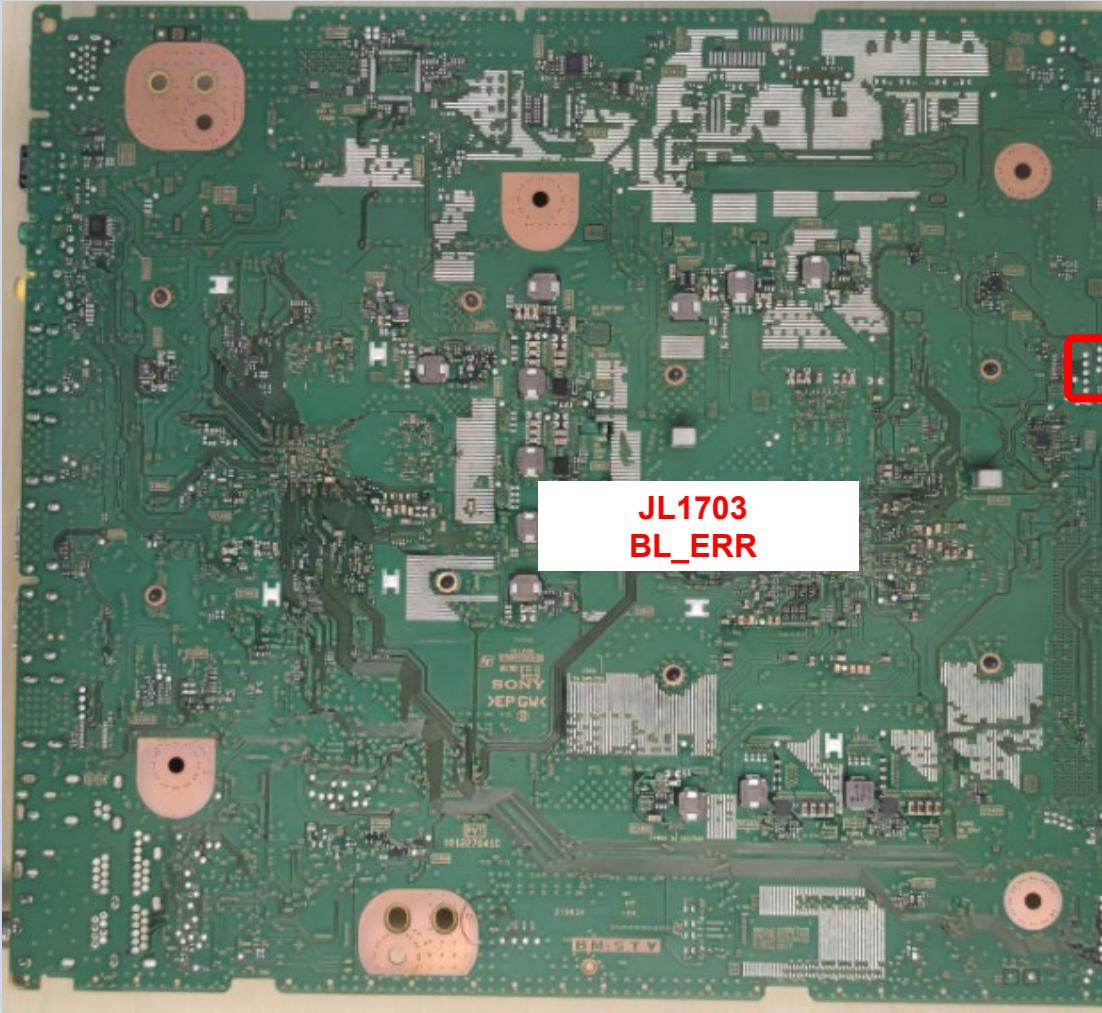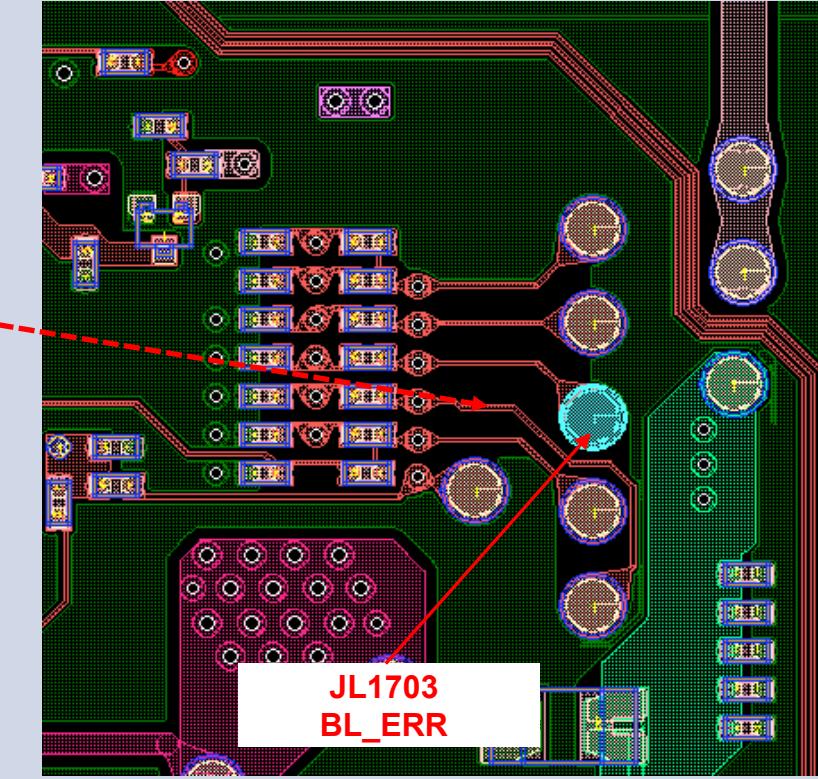Name	Board PWB (B side)	Detail
BM5S21/ BM5STY		



TROUBLESHOOTING

2.6 LED Blinking: 6x (Backlight Error) – XR-83A80*

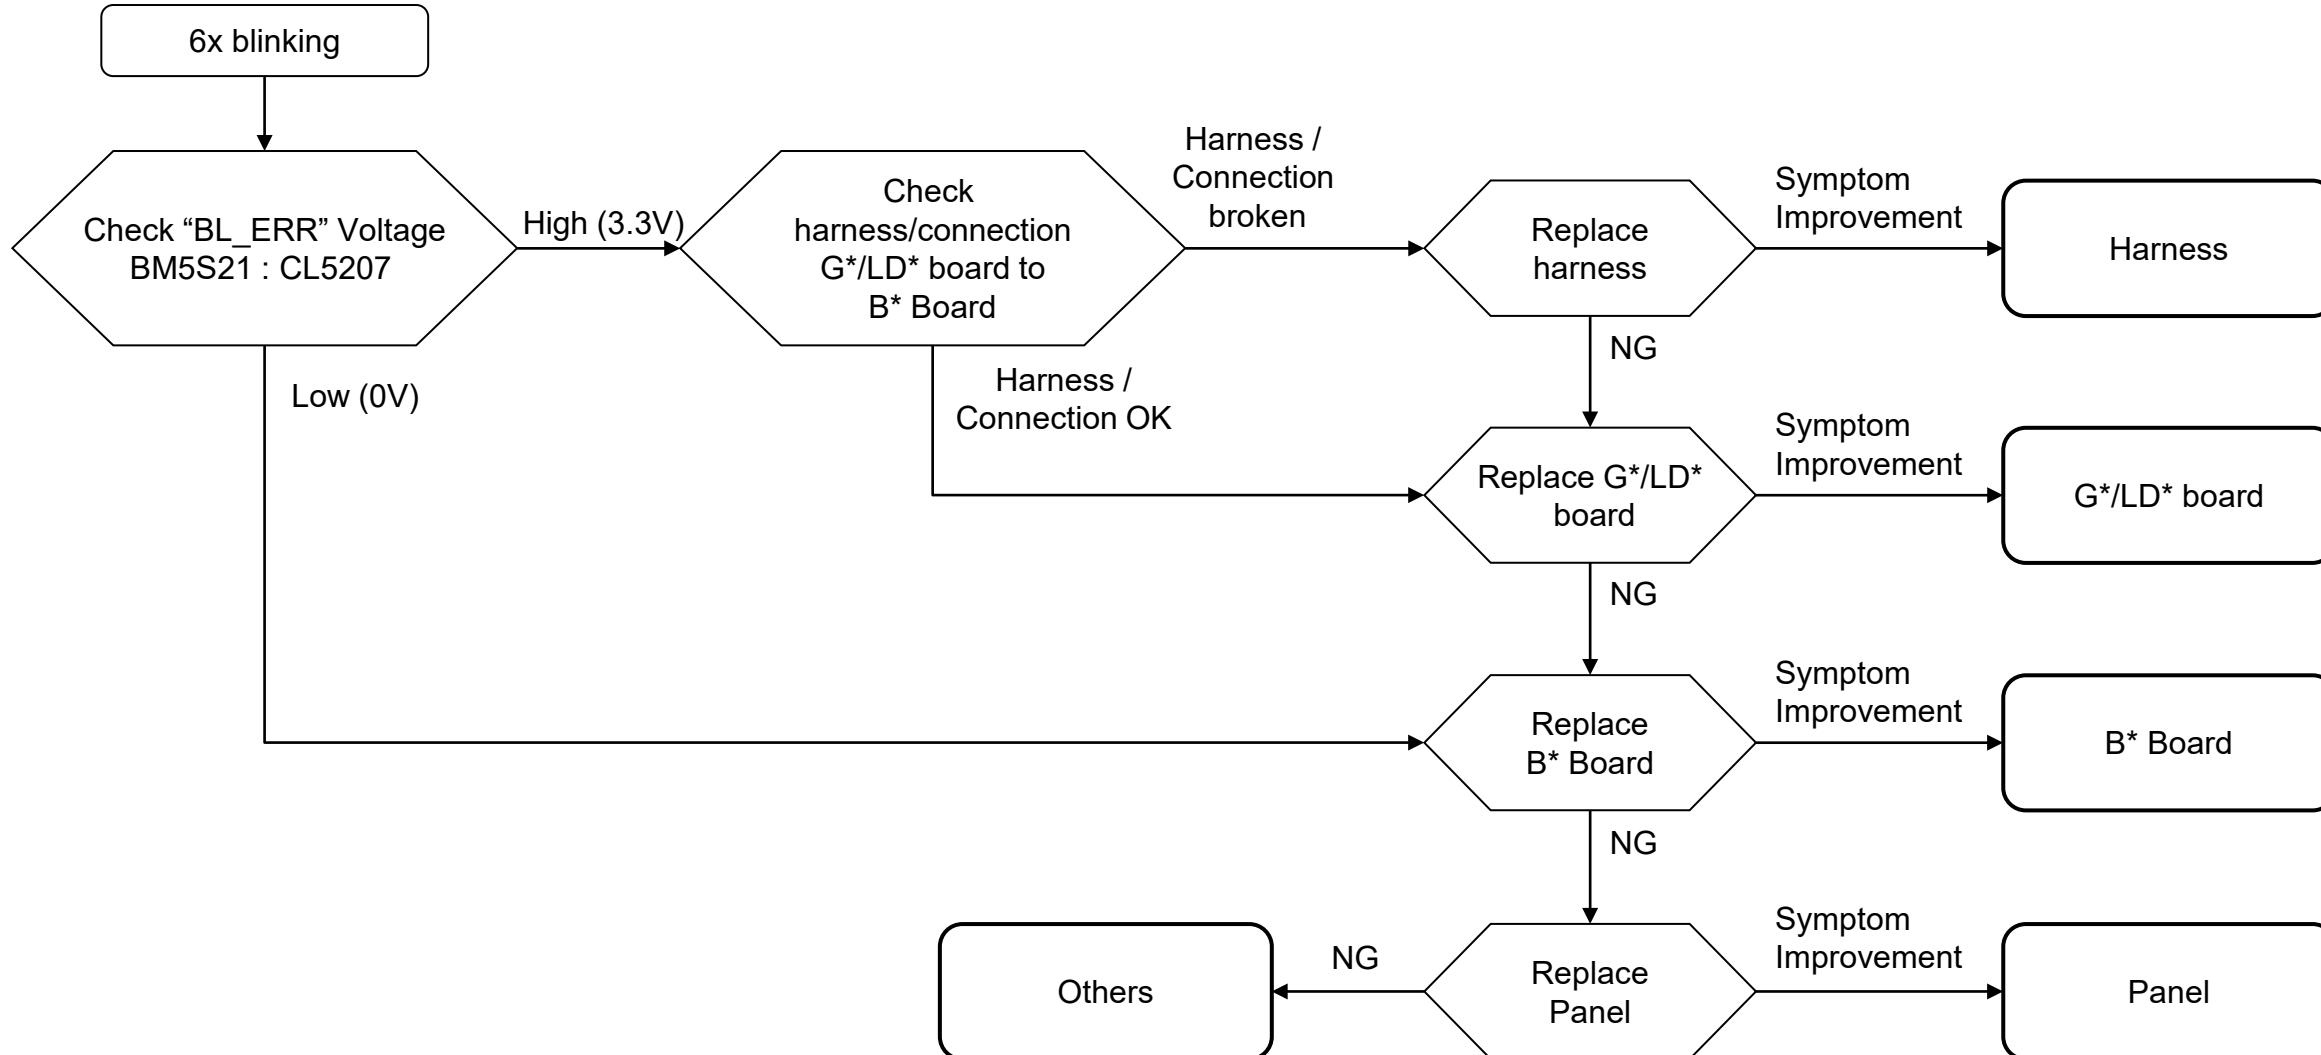


TROUBLESHOOTING

Checking Point – XR-83A80*

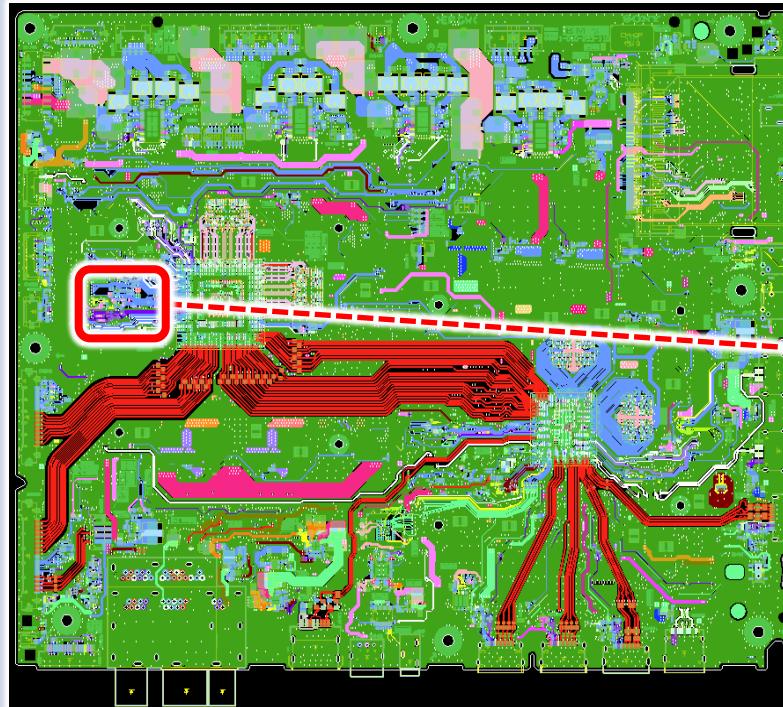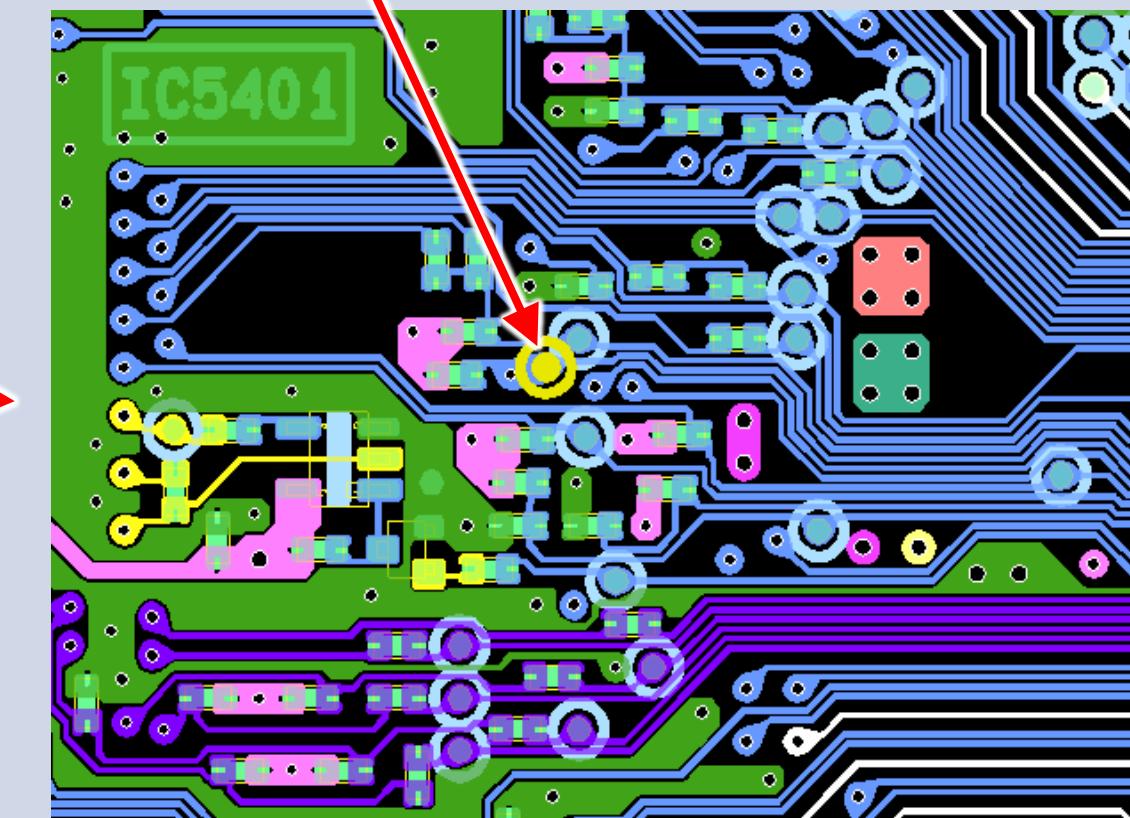Name	Board PWB (B side)	Detail
BM5S21		 <p>CL5207 BL_ERR</p>


TROUBLESHOOTING

2.7 LED Blinking: 7x (Temperature Error)

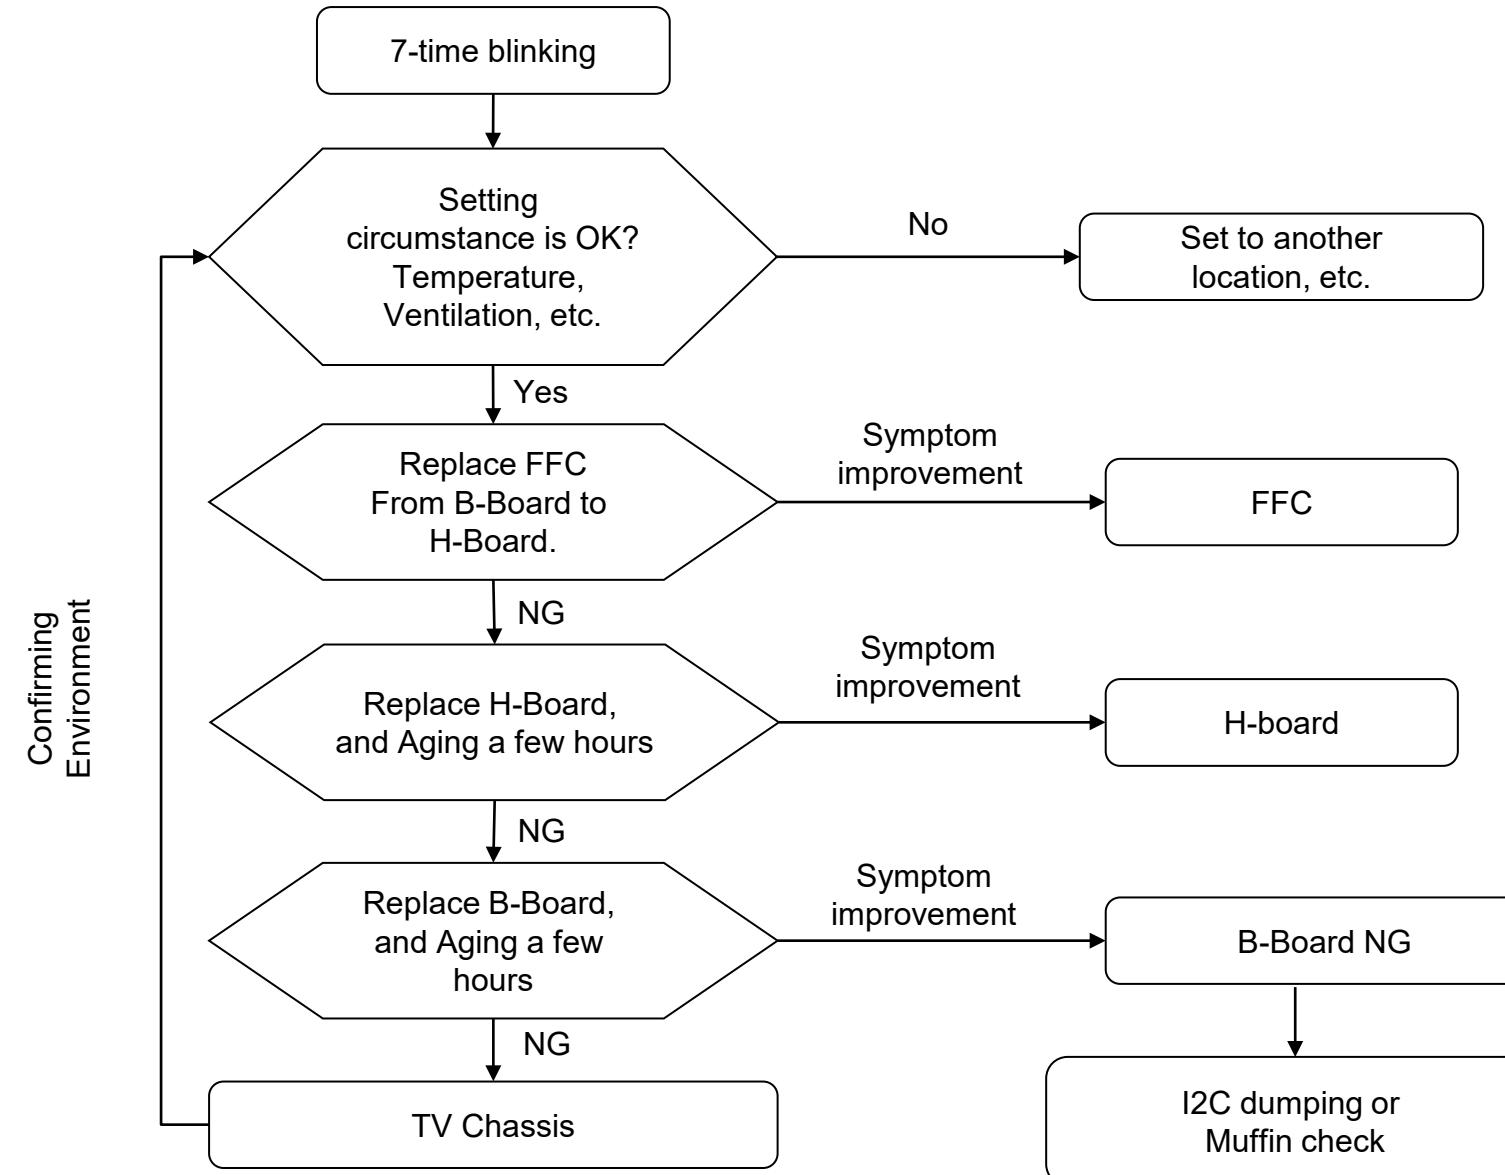



TROUBLESHOOTING

2.7 LED Blinking: 7x (Temperature Error) – XR-83A80*

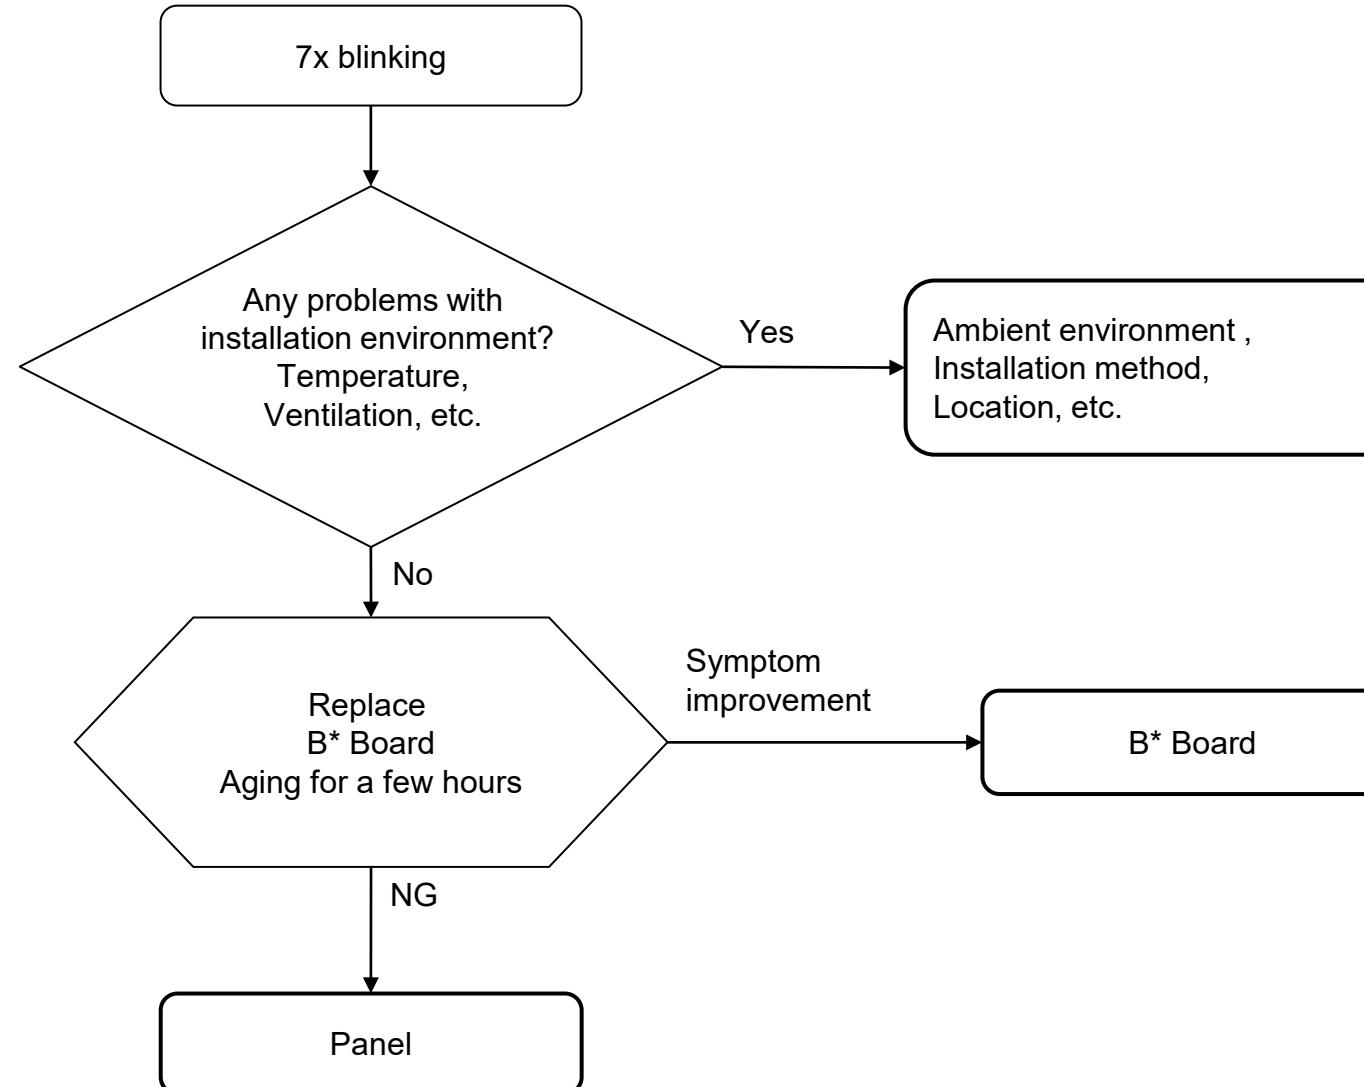


TROUBLESHOOTING

Checking Point

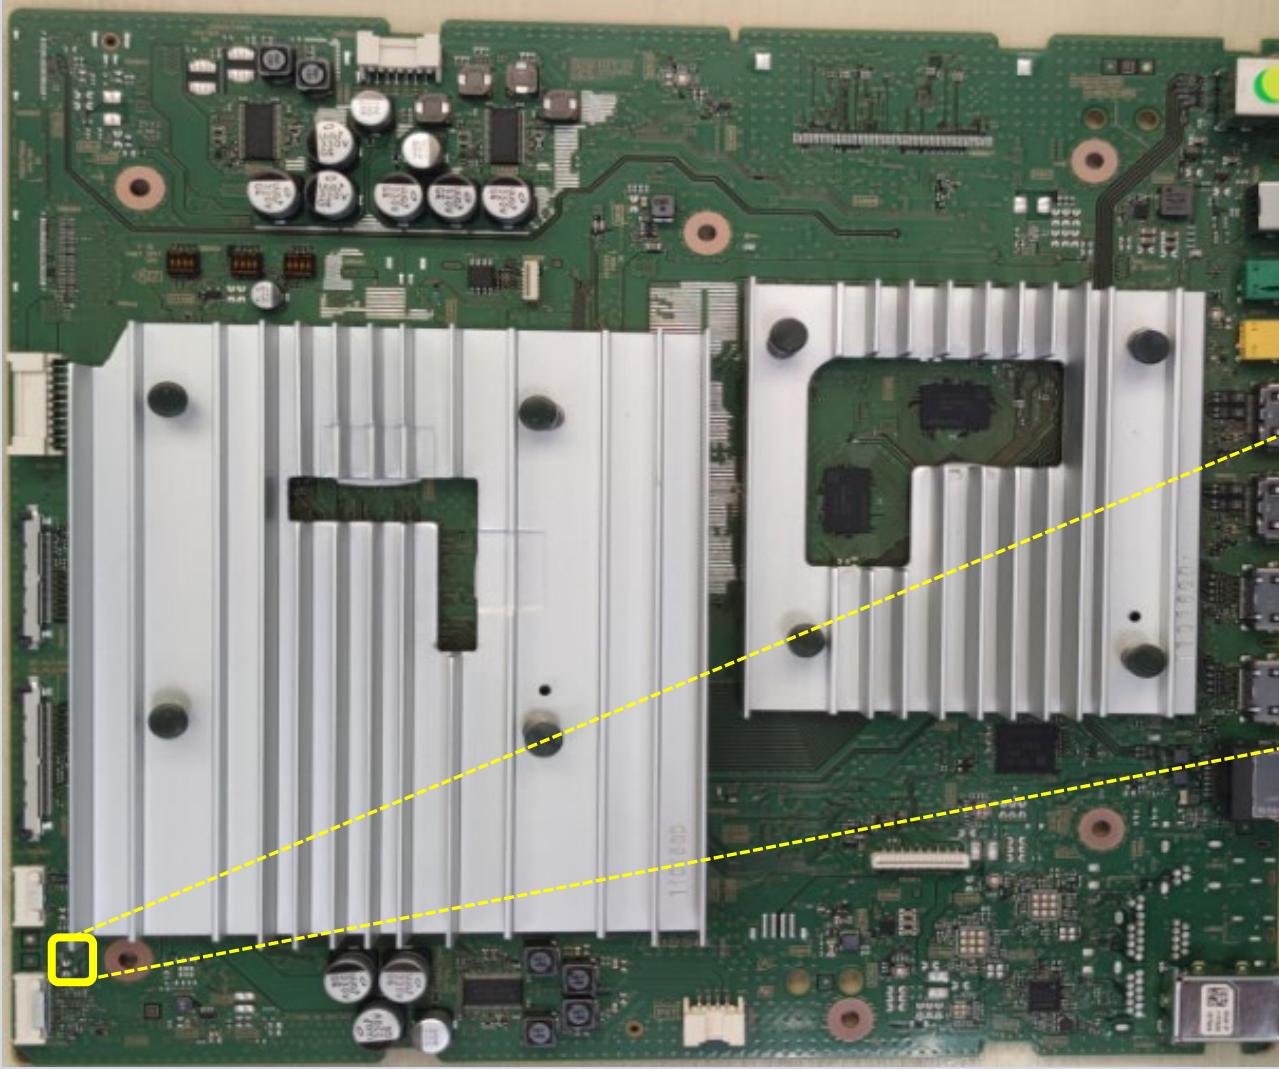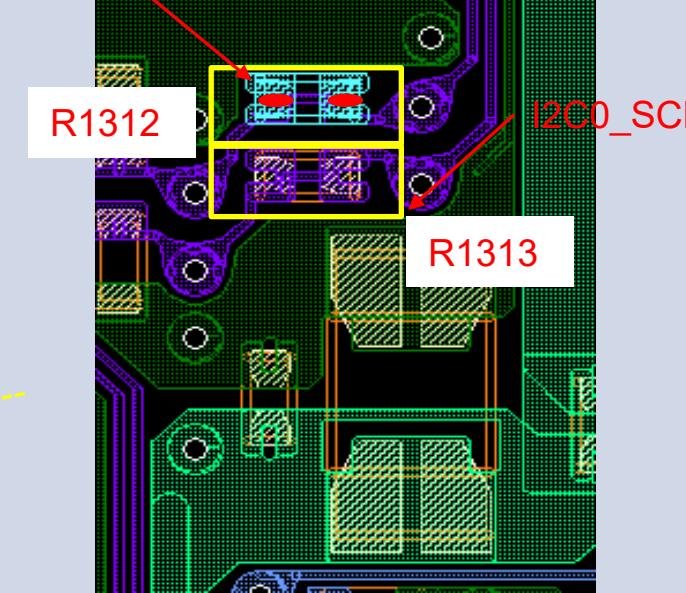BM5STY board (A side)	Detail
	 <p>I2C0_SDA</p> <p>R1312</p> <p>I2C0_SCL</p> <p>R1313</p>


TROUBLESHOOTING

2.8 LED Blinking : 8x Blinking

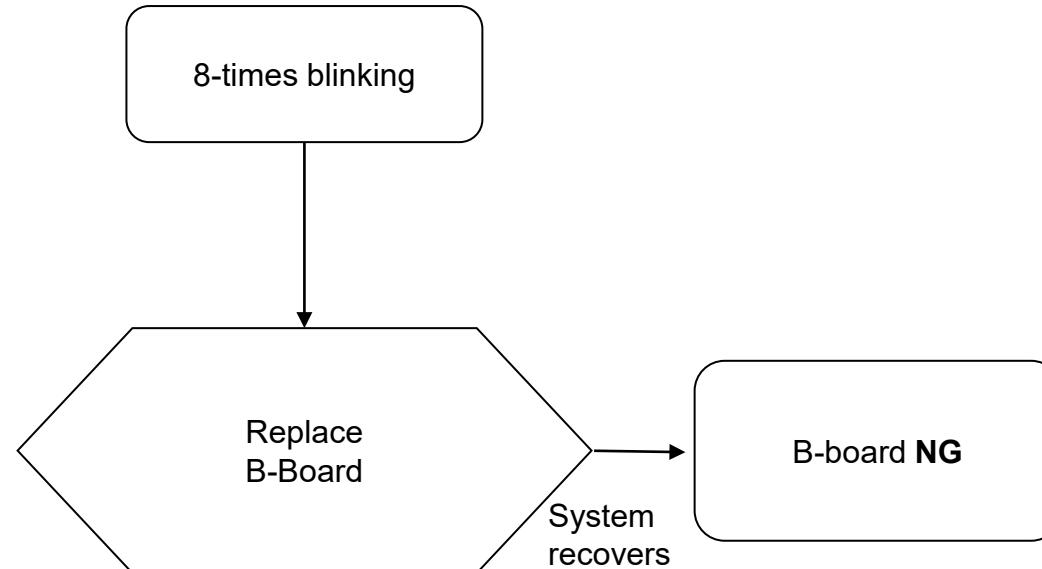


TROUBLESHOOTING

3.1 No Sound for Speaker – XR-*80K / *80CK

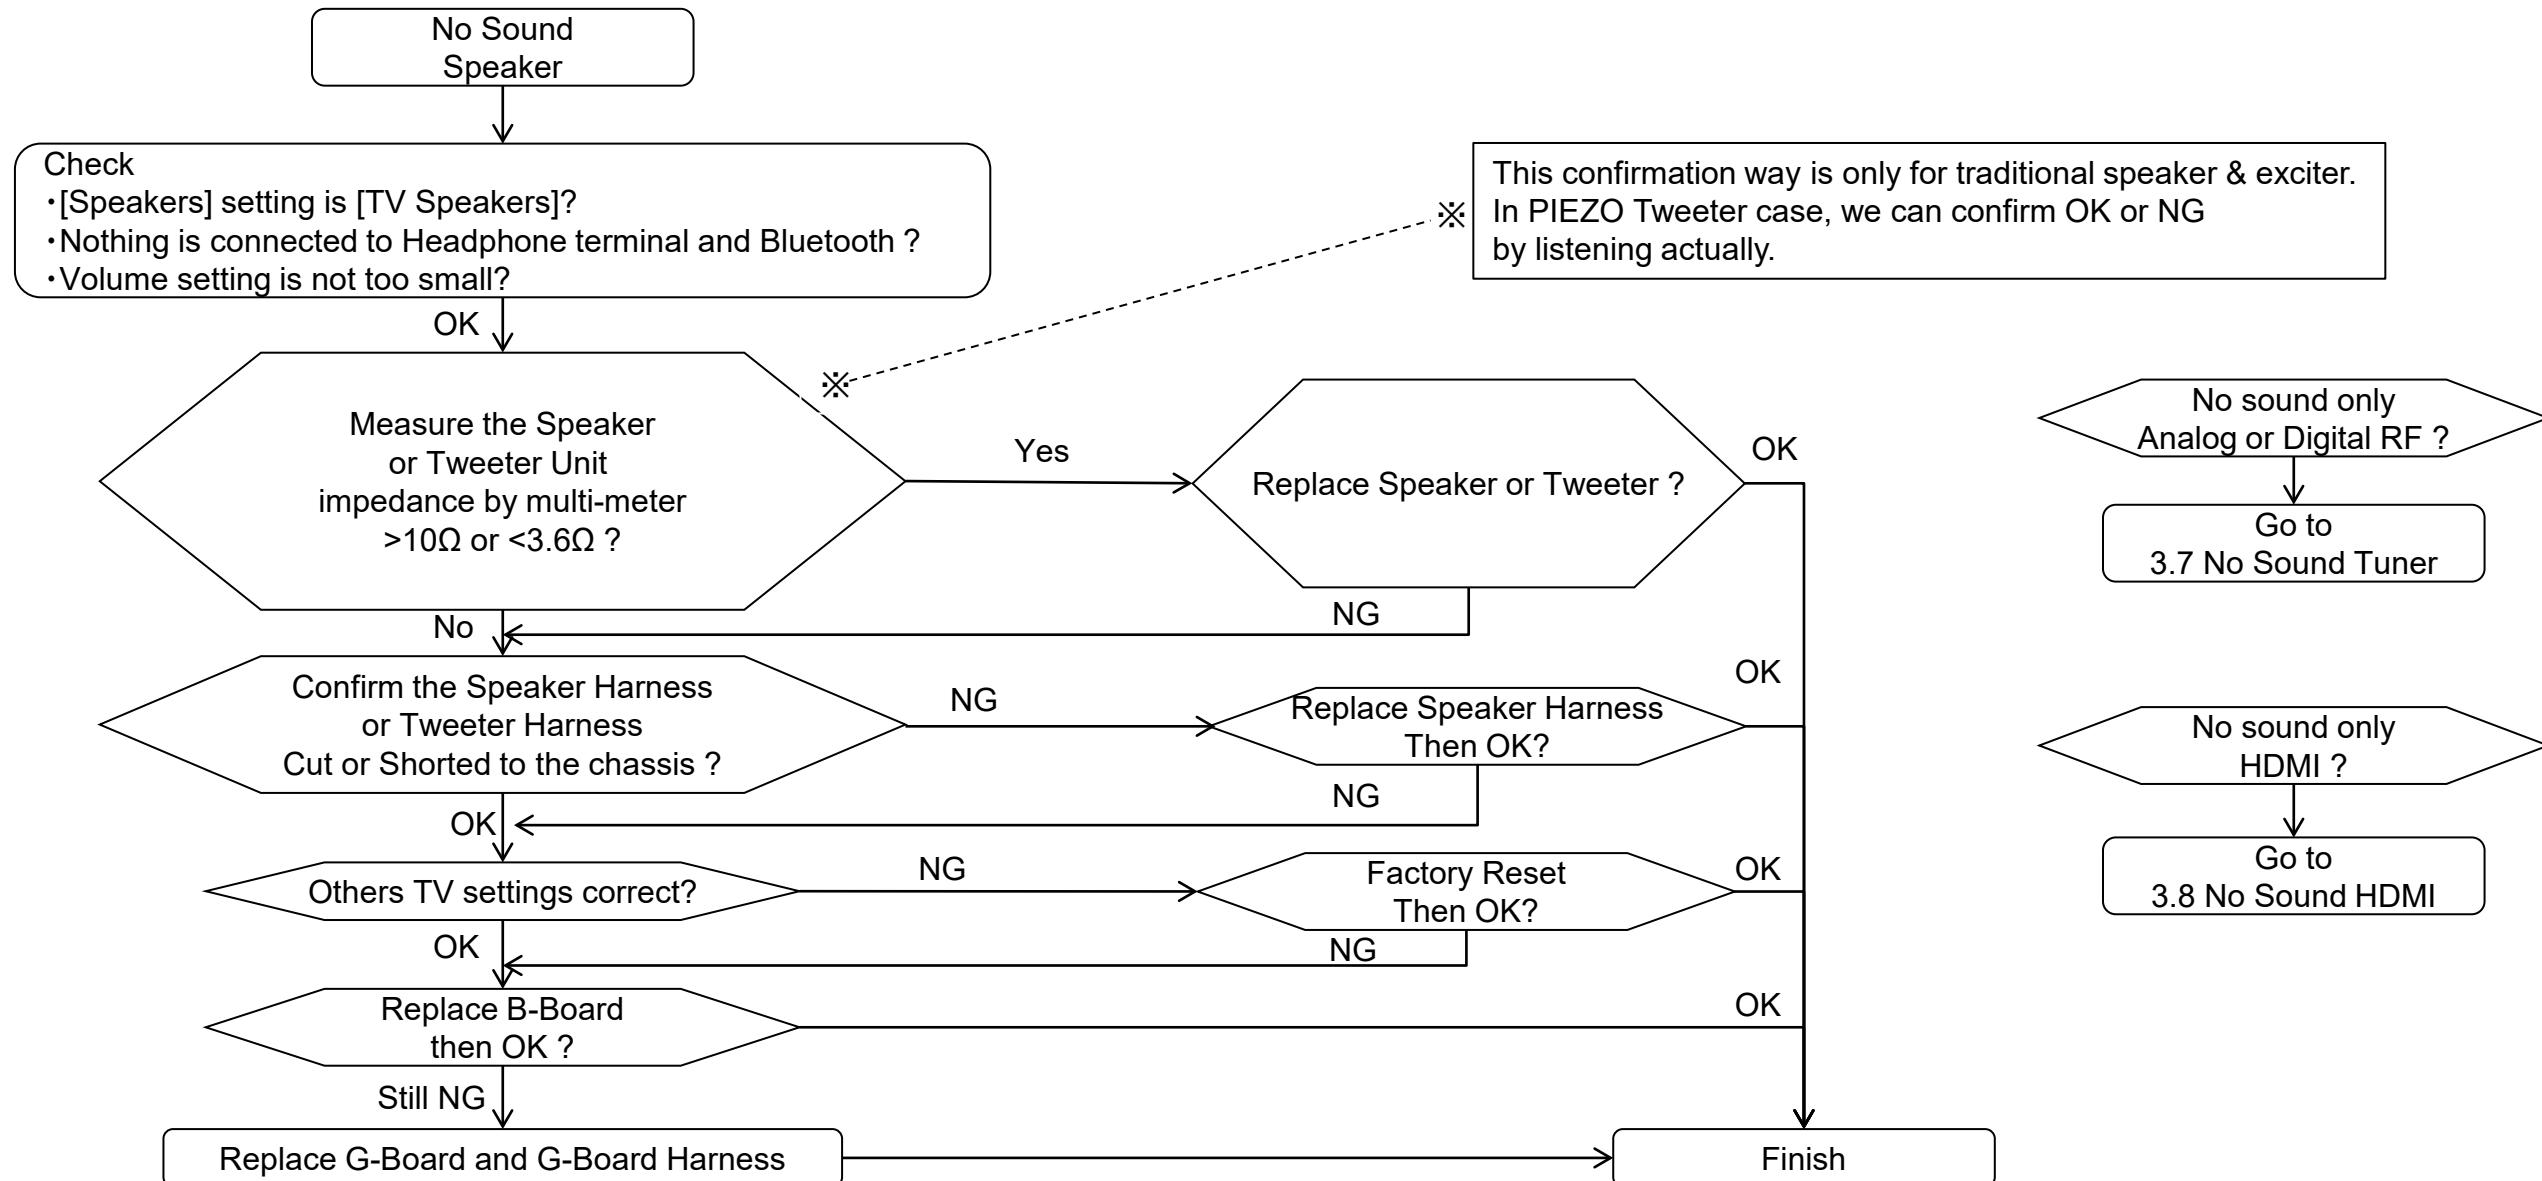


TROUBLESHOOTING

3.1 No Sound for Speaker – XR-*A80L / *A80CL

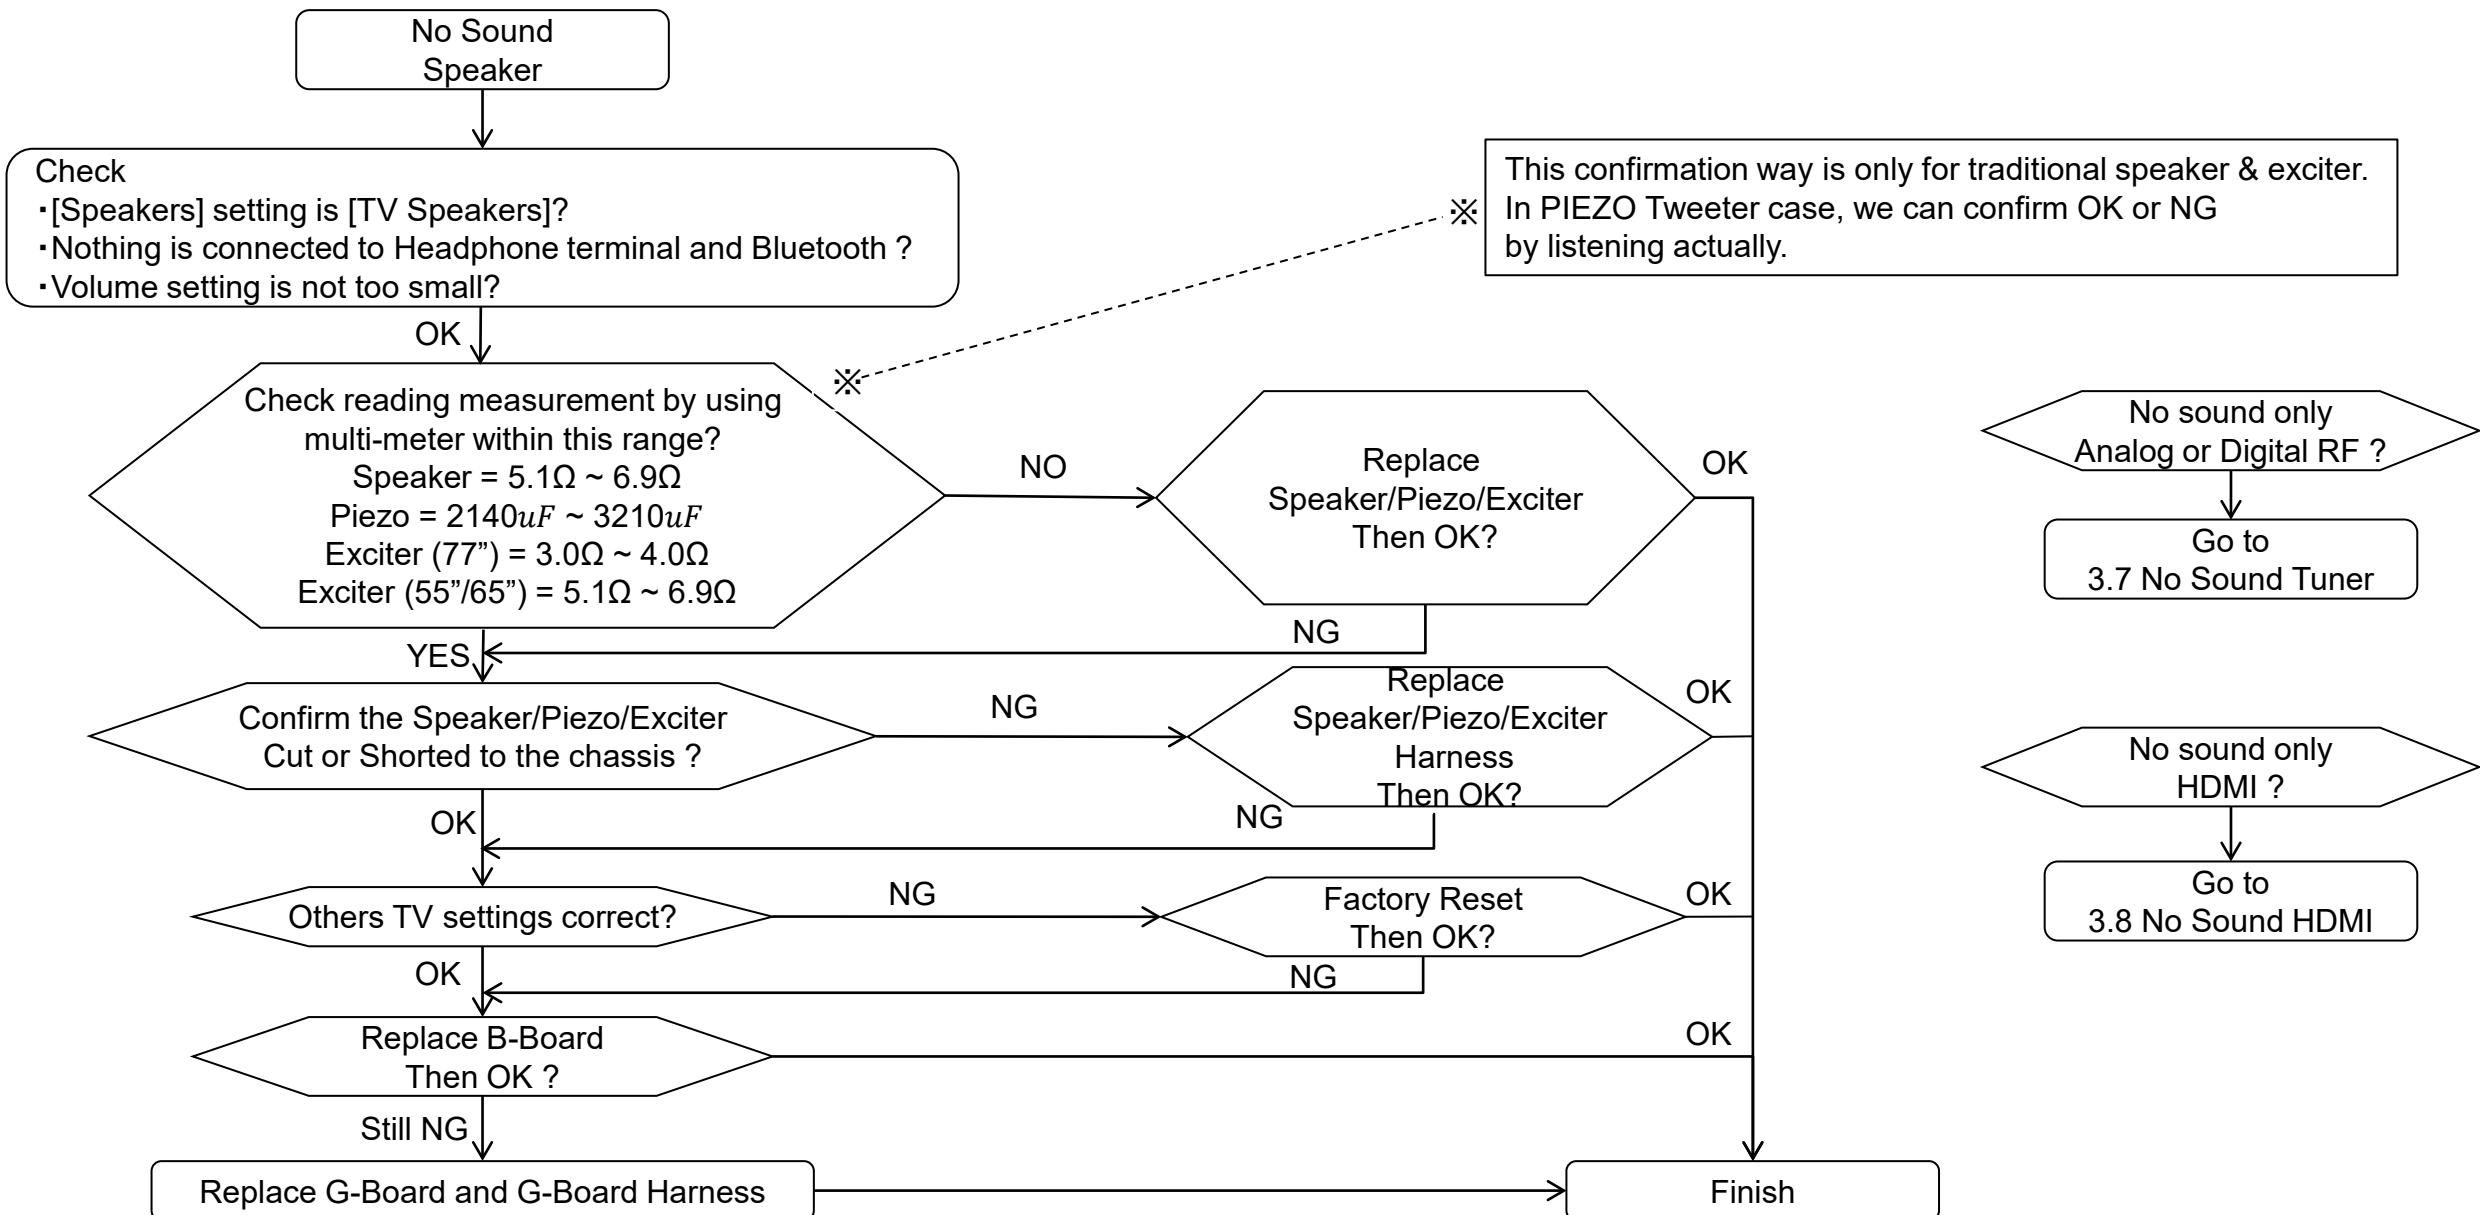


TROUBLESHOOTING

3.1 No Sound for Speaker – XR-83A80*

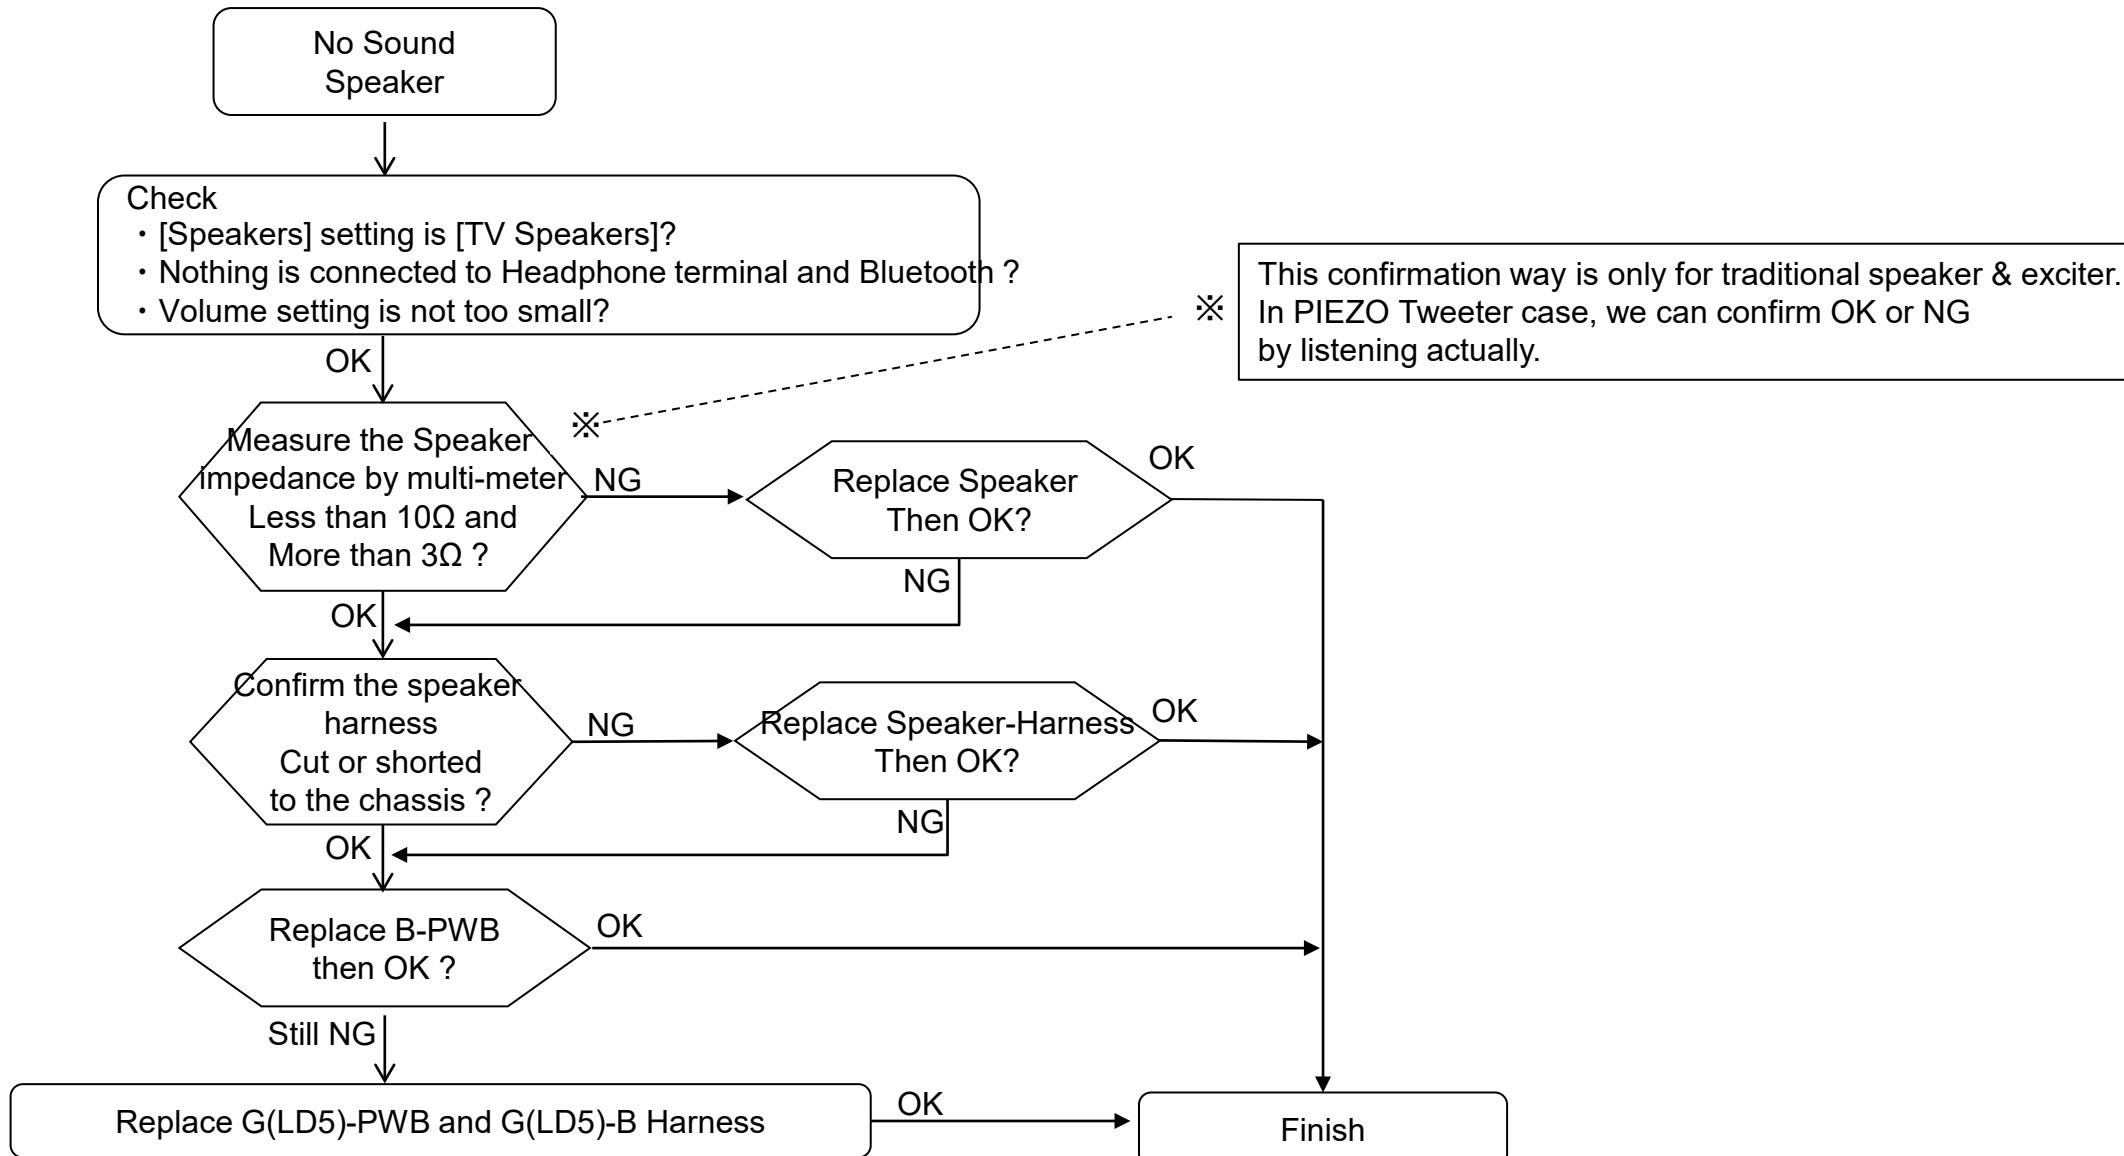


TROUBLESHOOTING

3.1 No Sound for Speaker – XR-*A75L

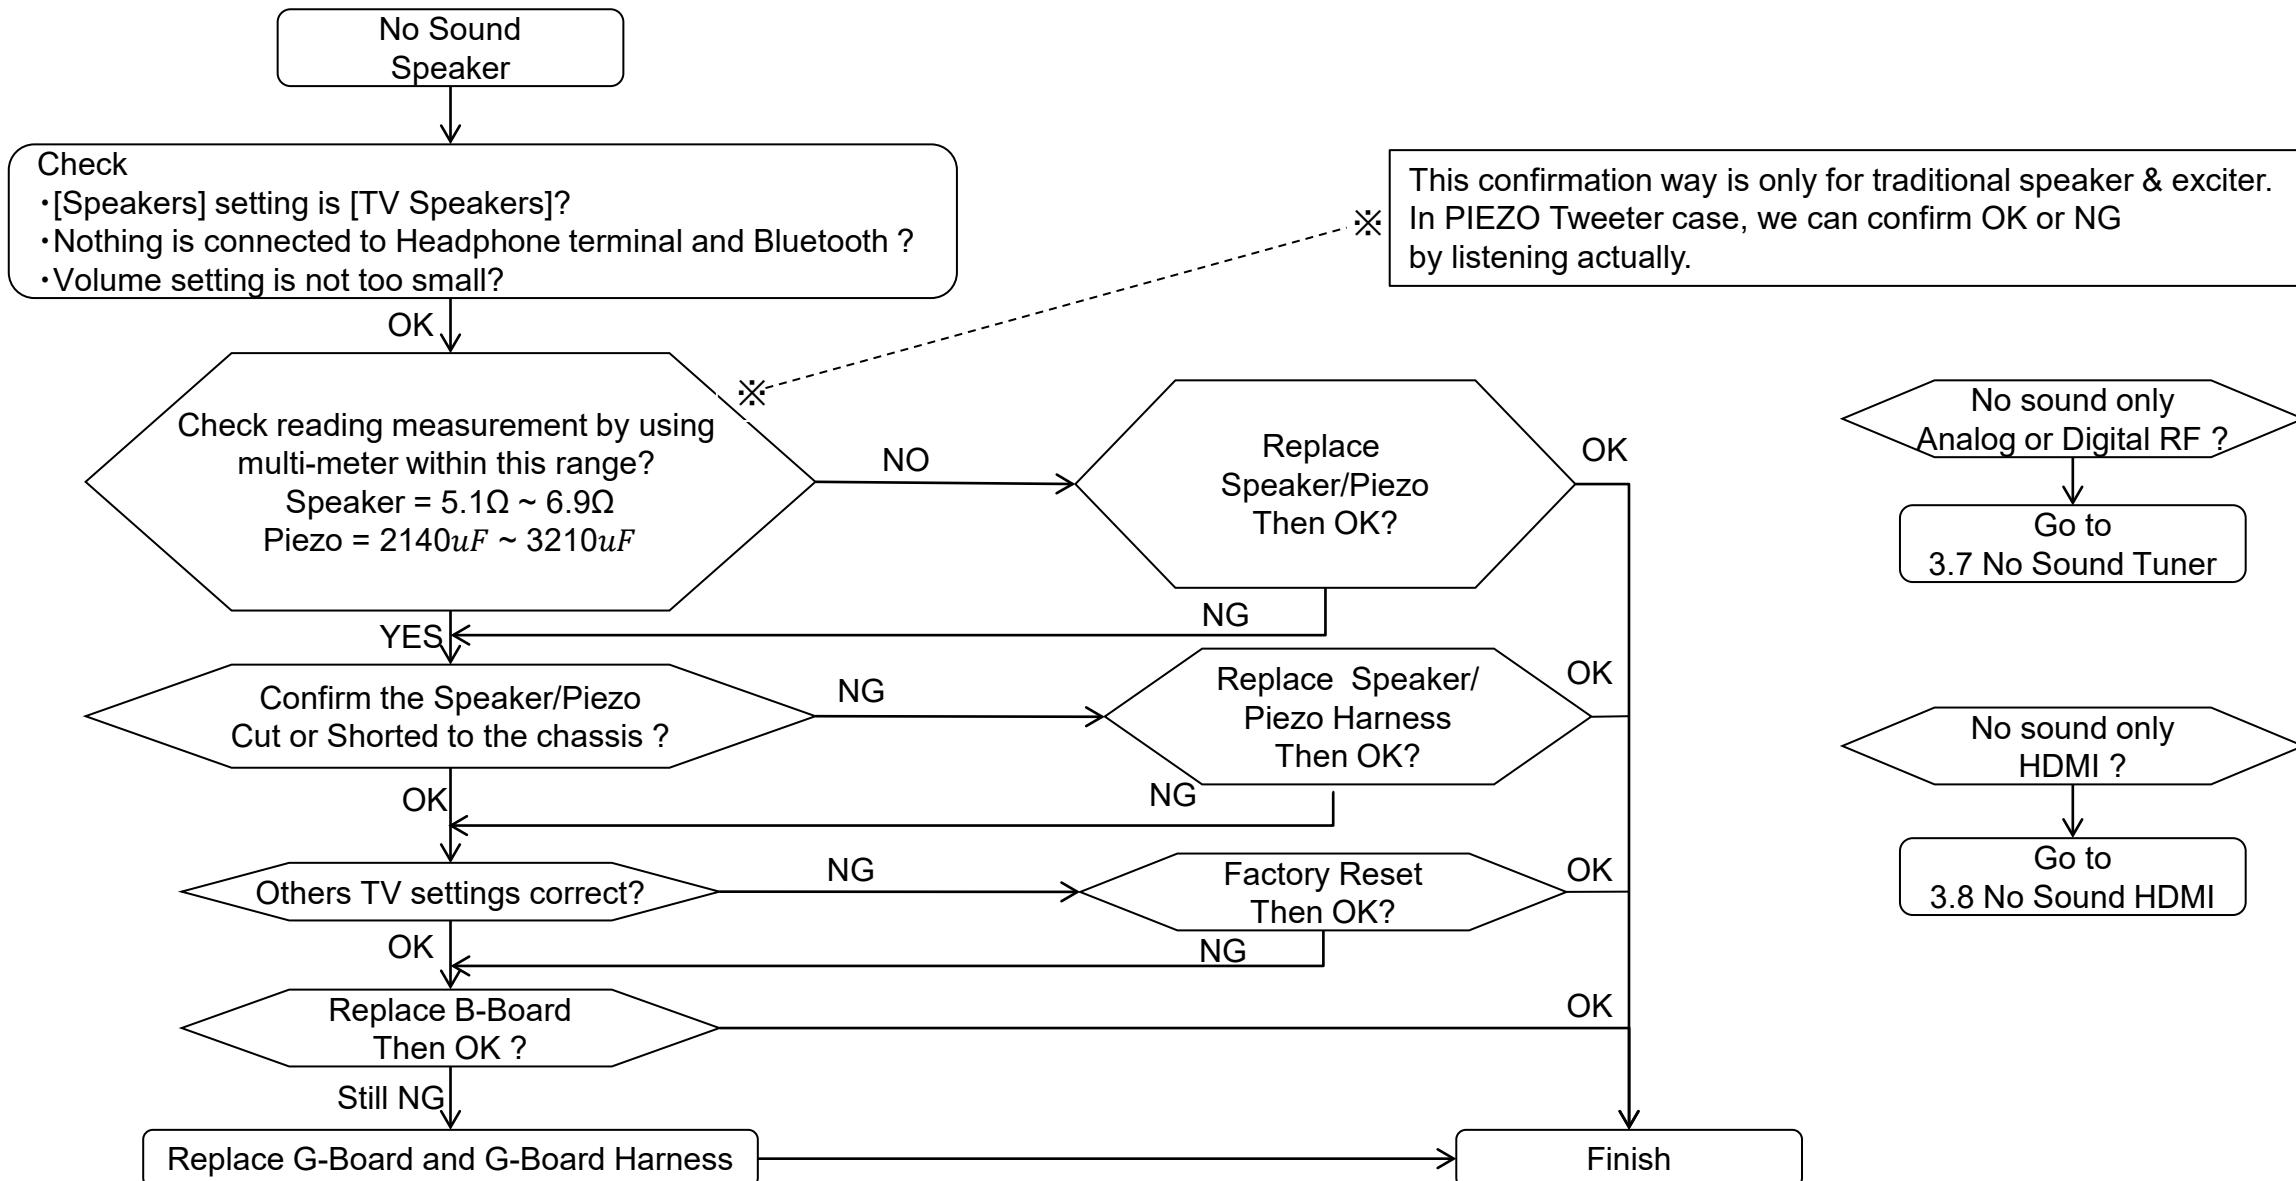


TROUBLESHOOTING

3.2 No Sound for Headphone out/ Audio out/Optical out

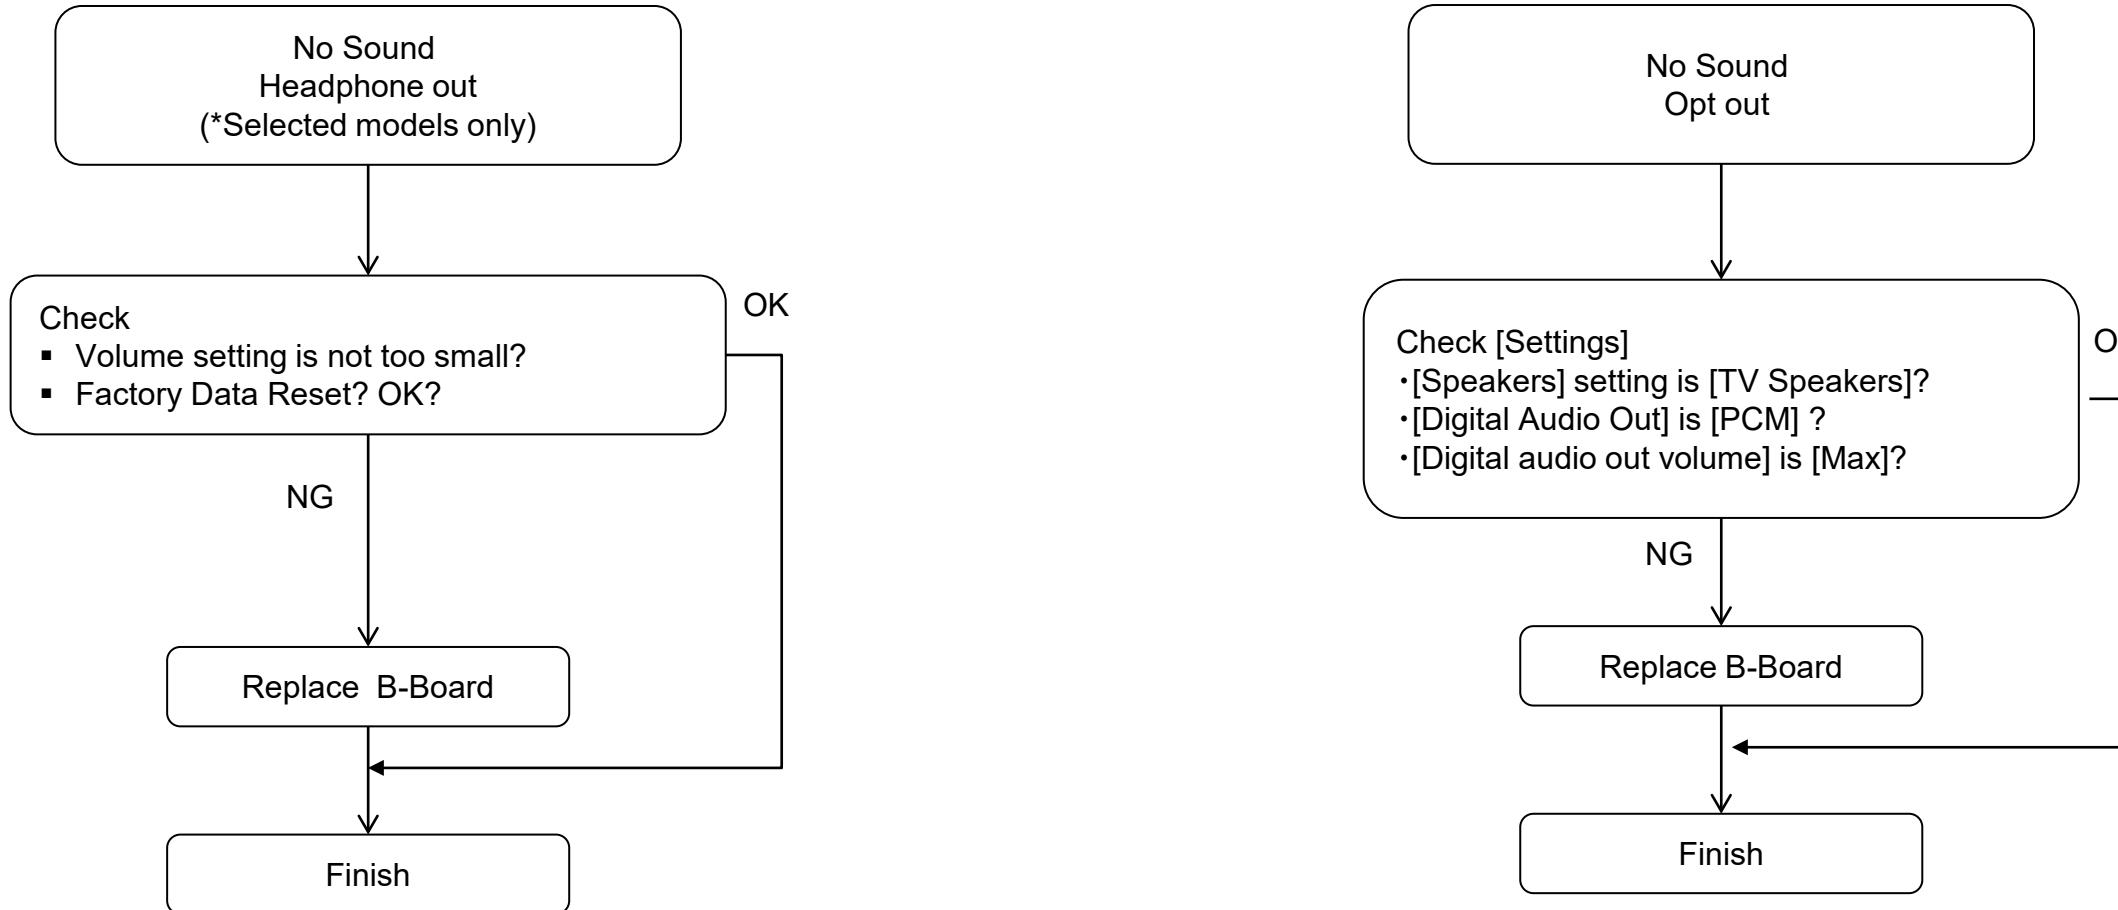


TROUBLESHOOTING

3.3 No Sound for TV Centre Speaker Mode

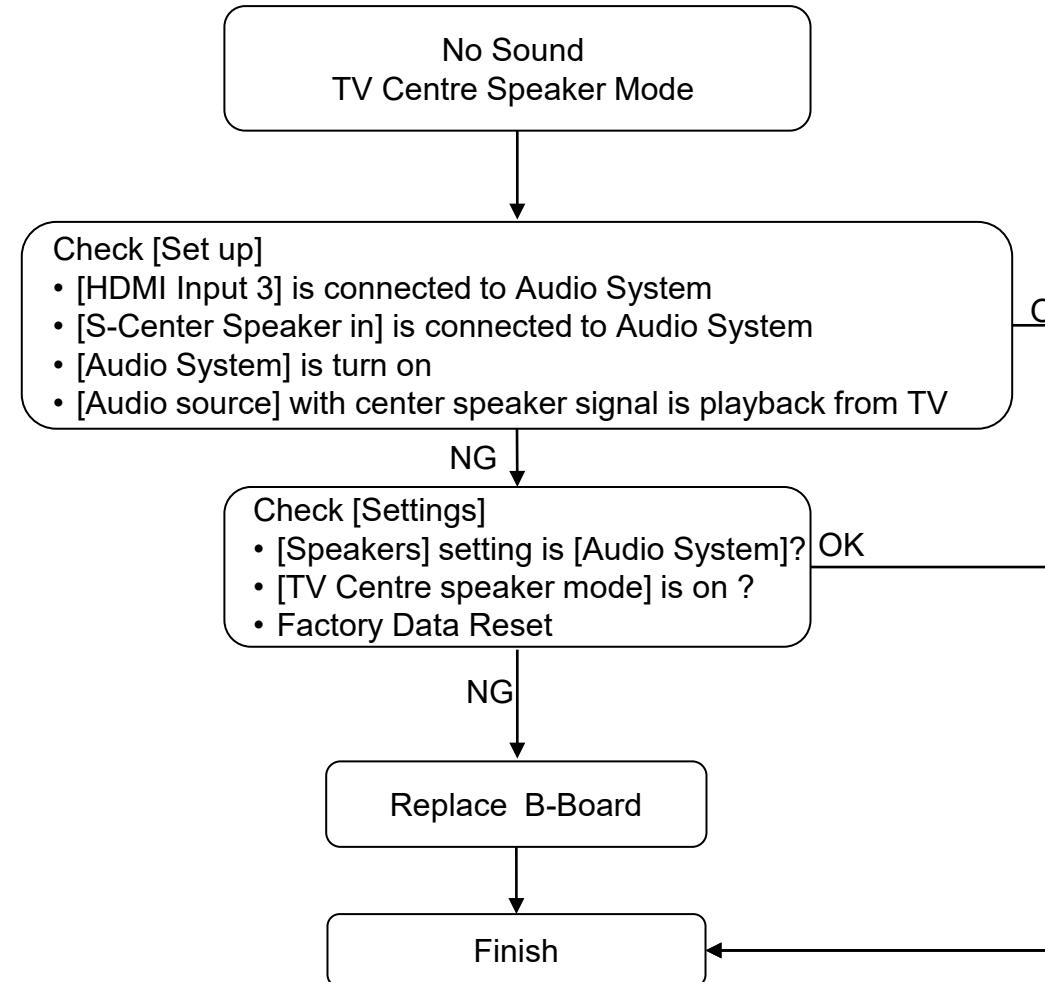



TROUBLESHOOTING

3.7 No Sound at Tuner

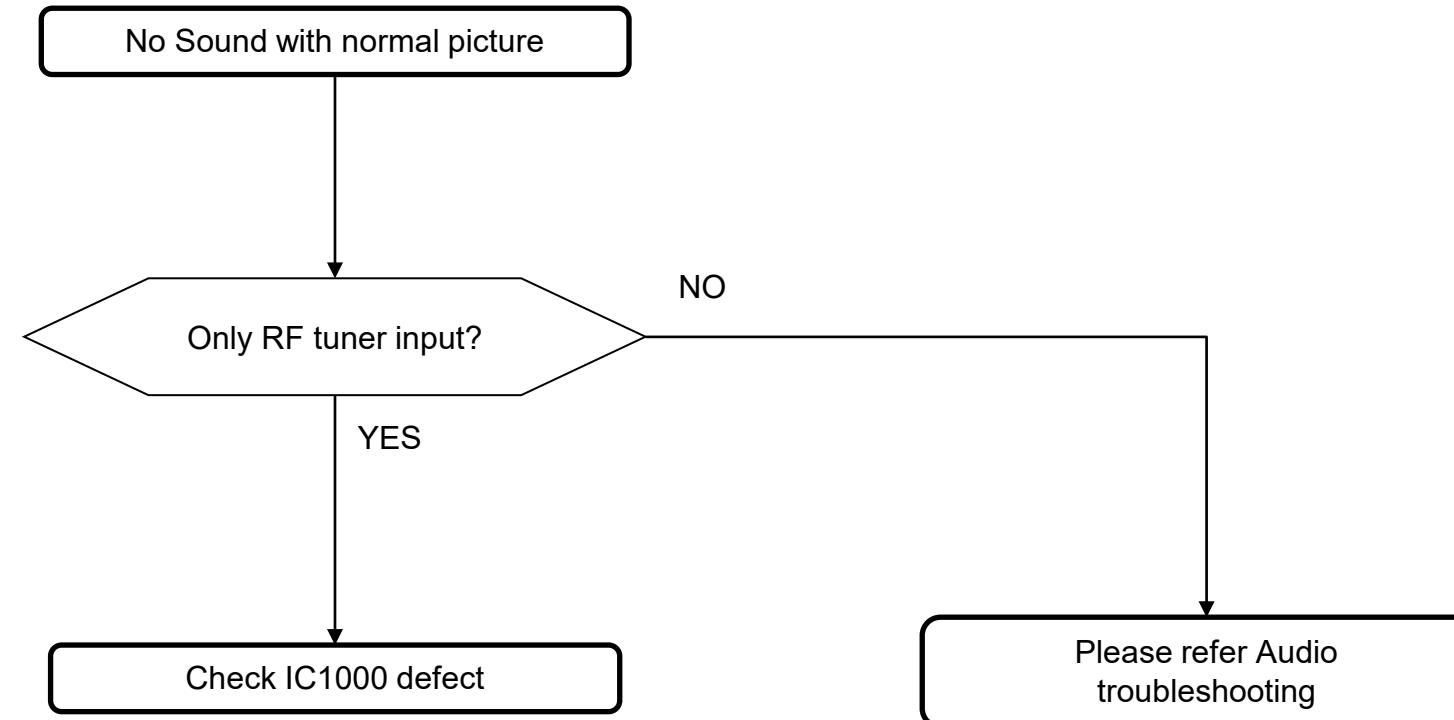


TROUBLESHOOTING

3.8 No Sound HDMI 1/2/3/4

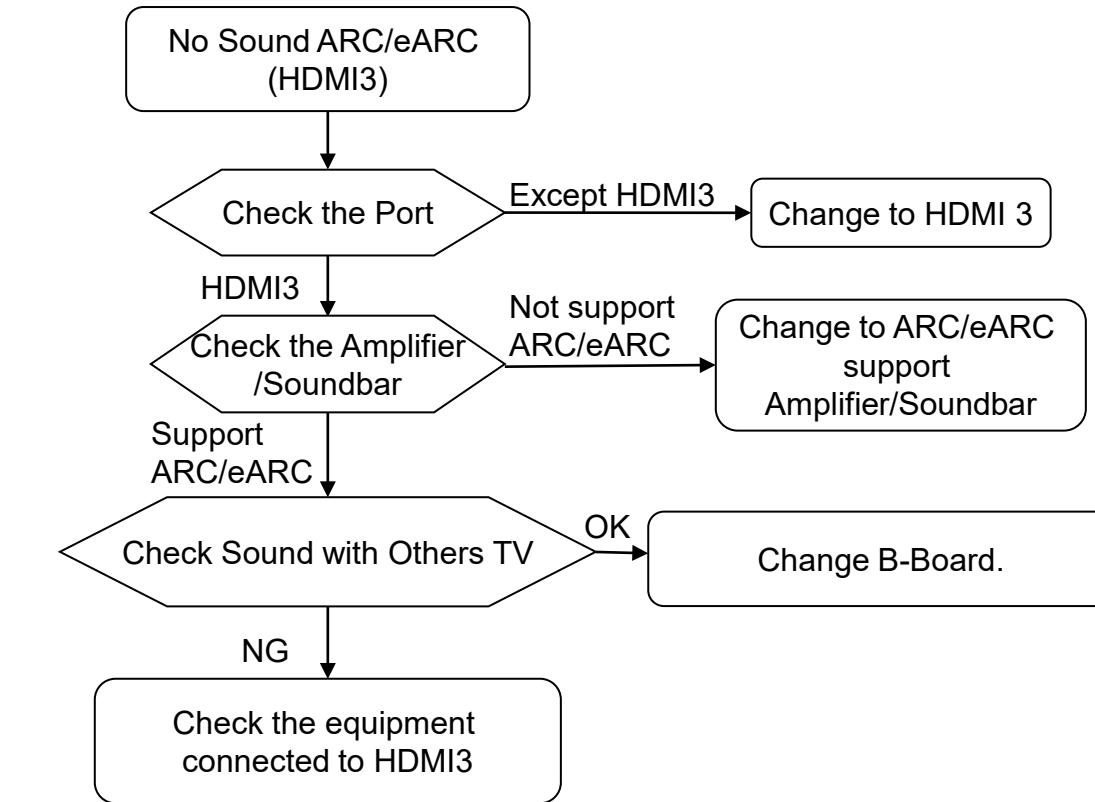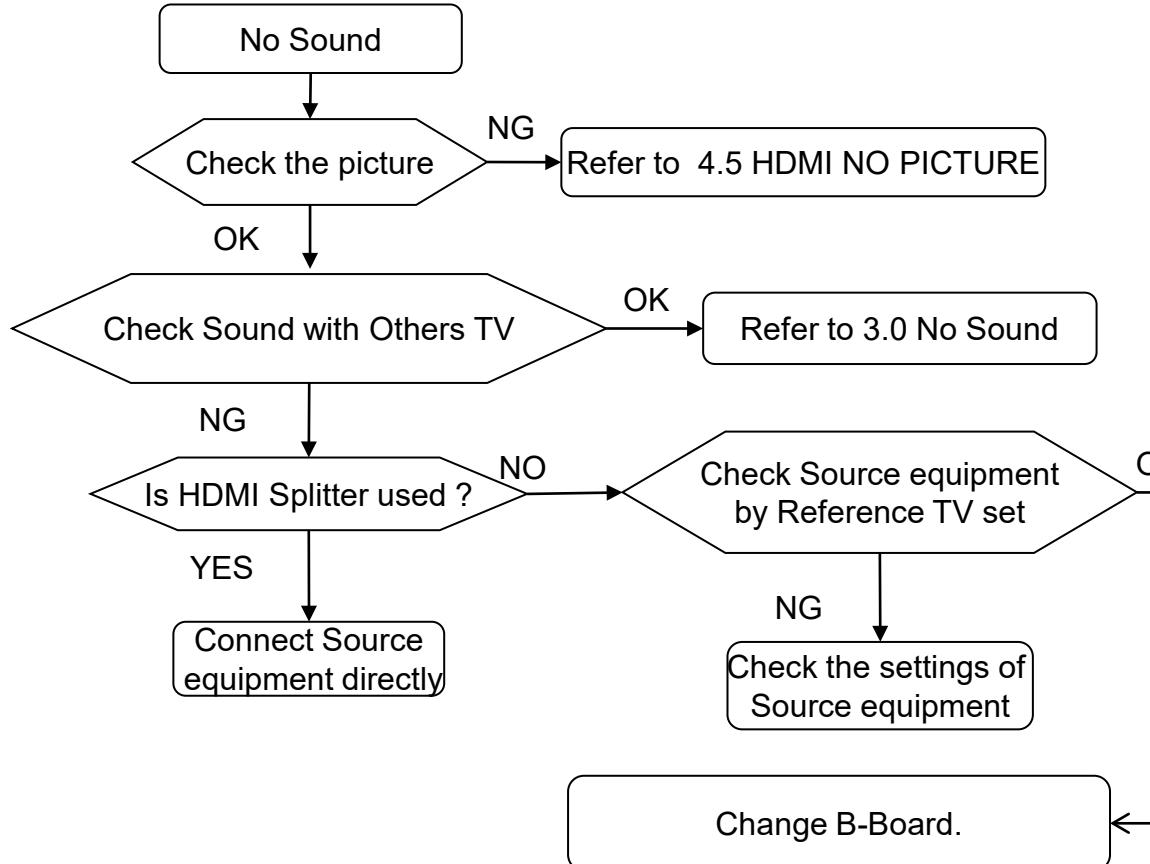


TROUBLESHOOTING

4.0 No Picture

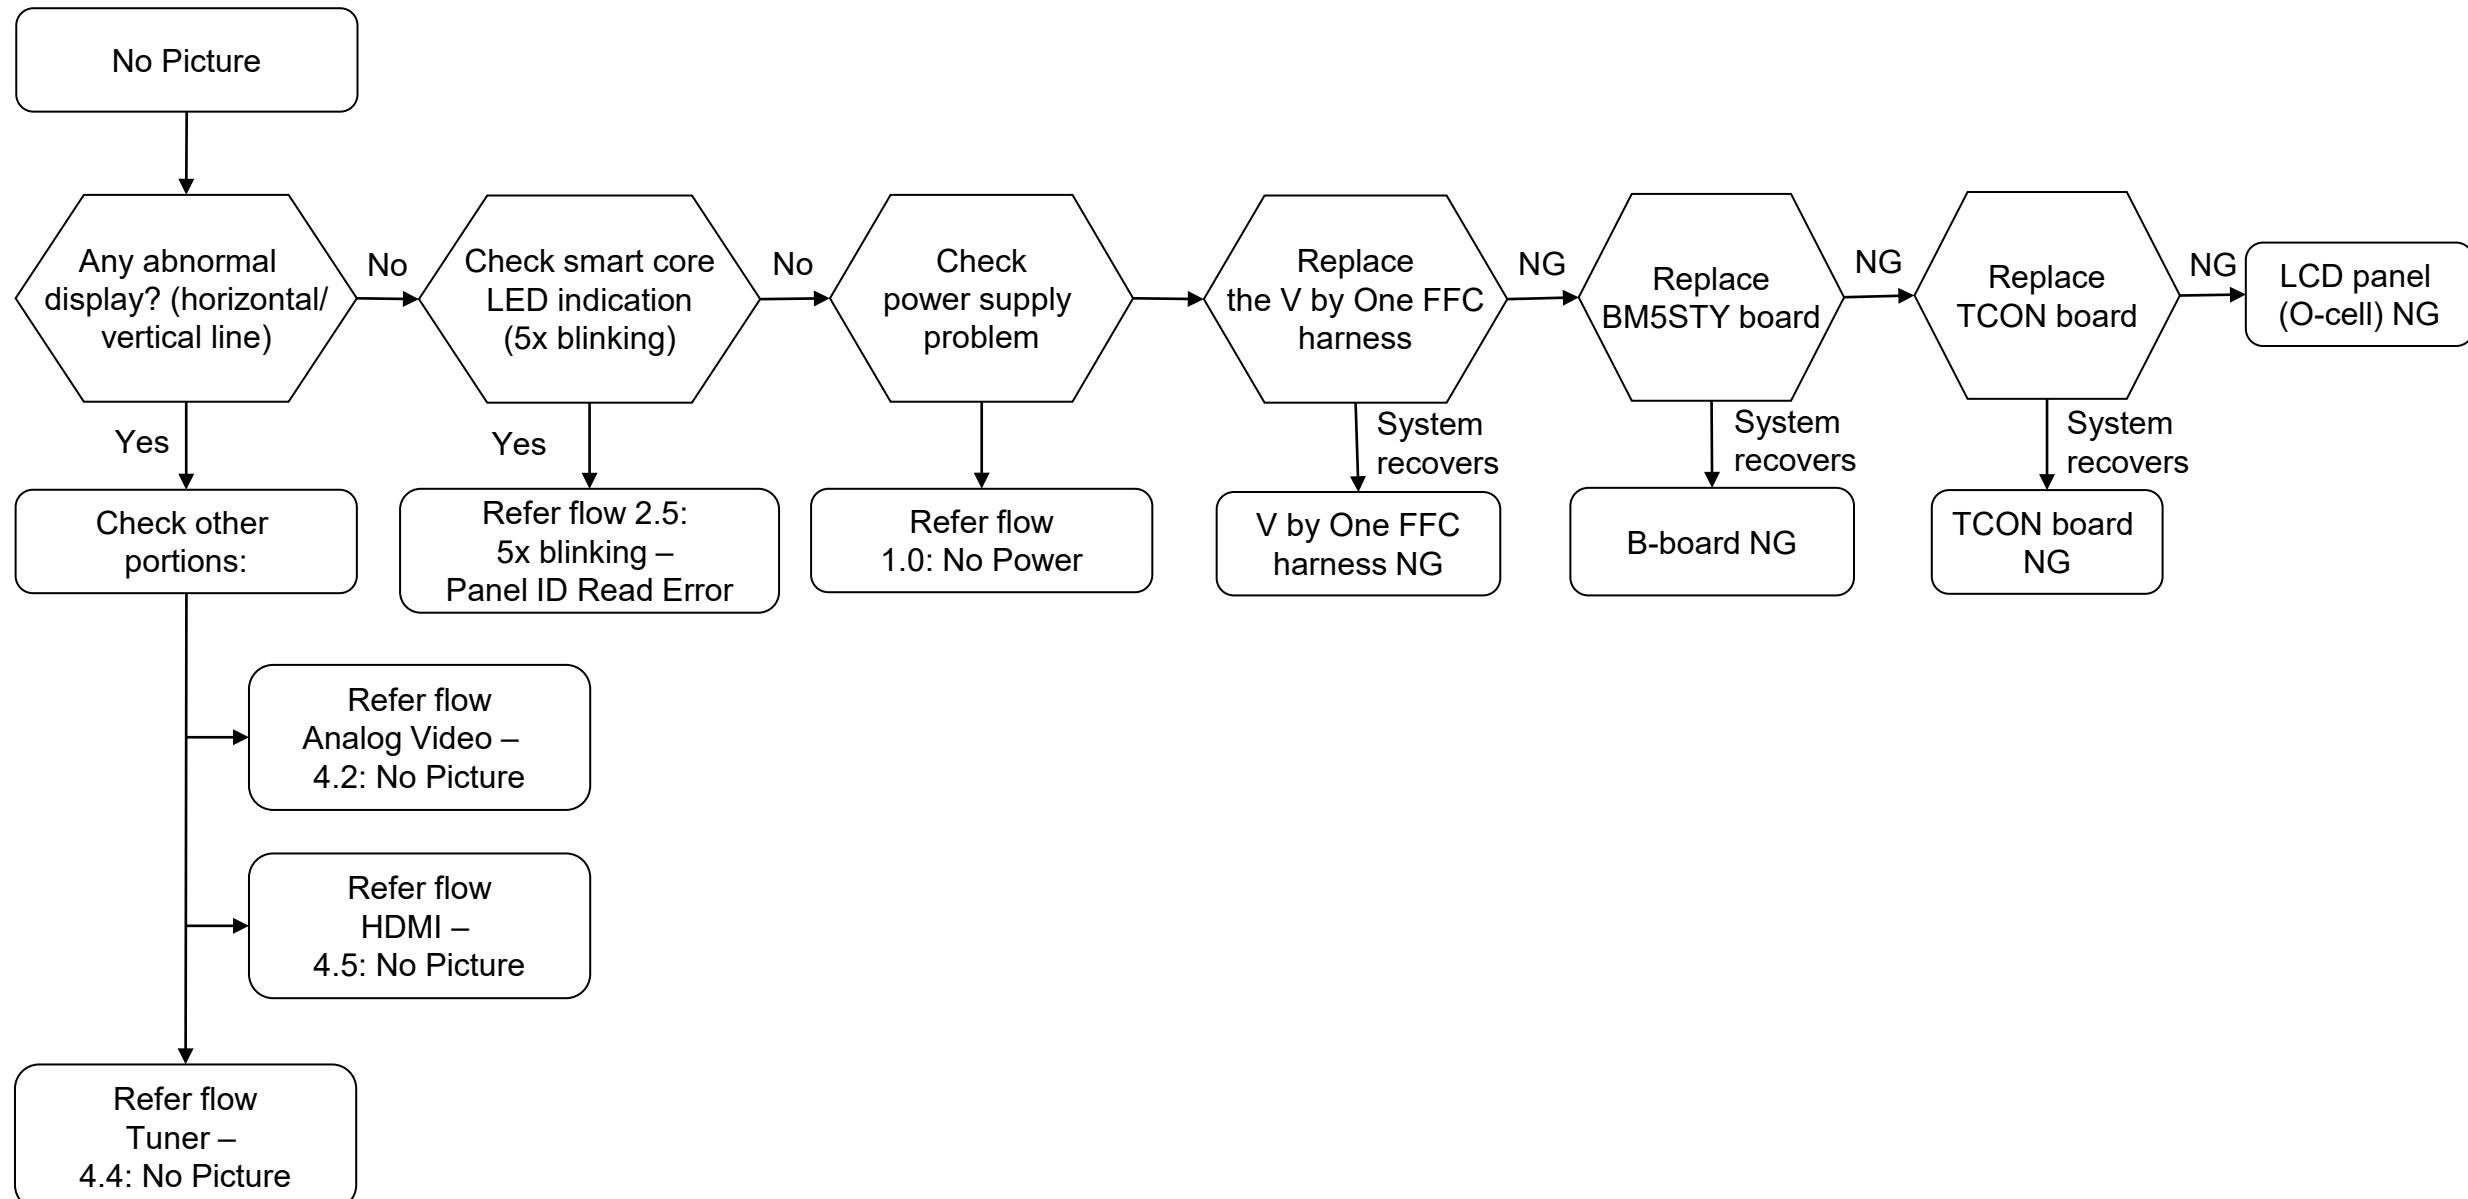


TROUBLESHOOTING

4.0 No Picture – XR-83A80*

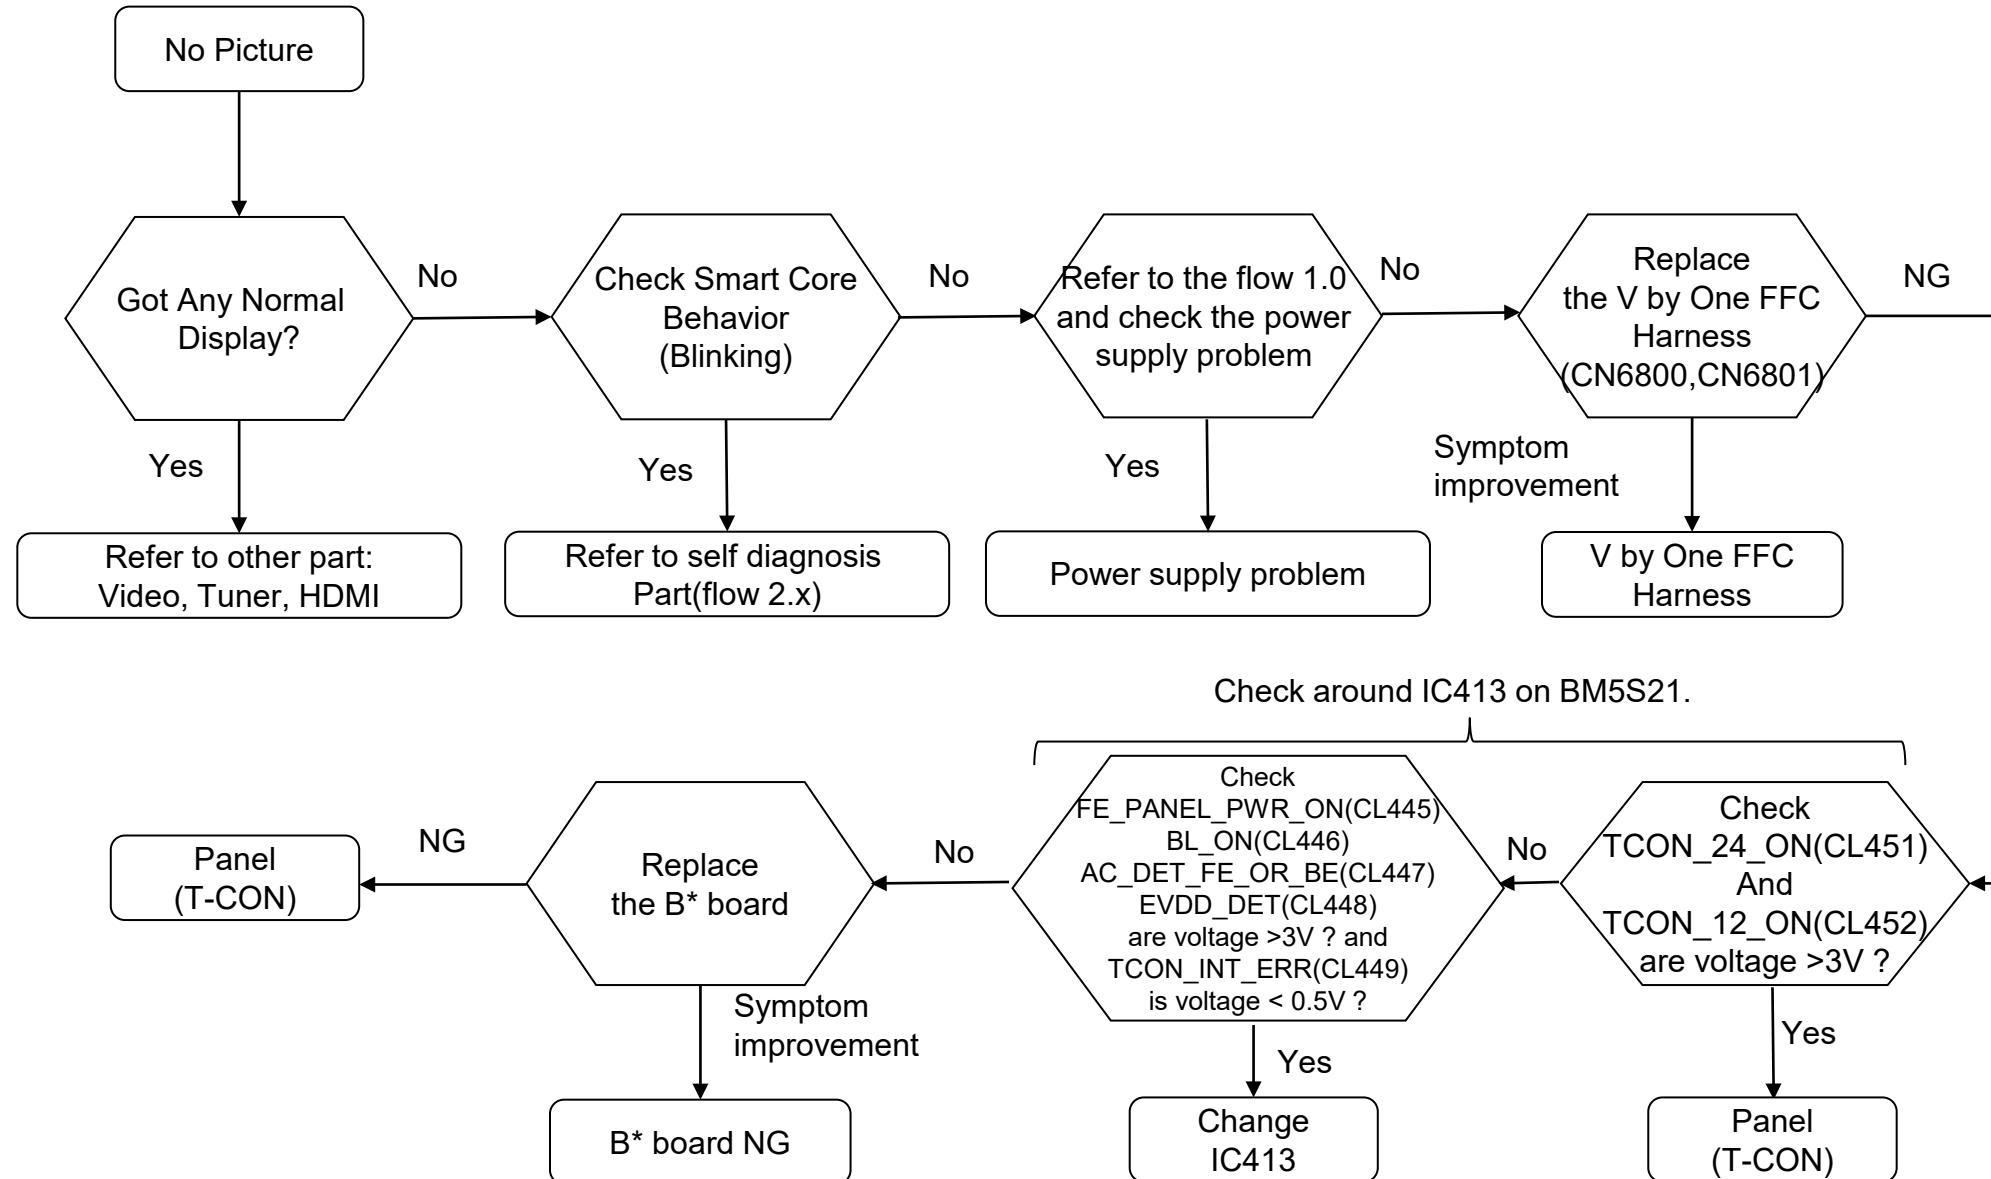


TROUBLESHOOTING

4.1 Analog Video Signal Path

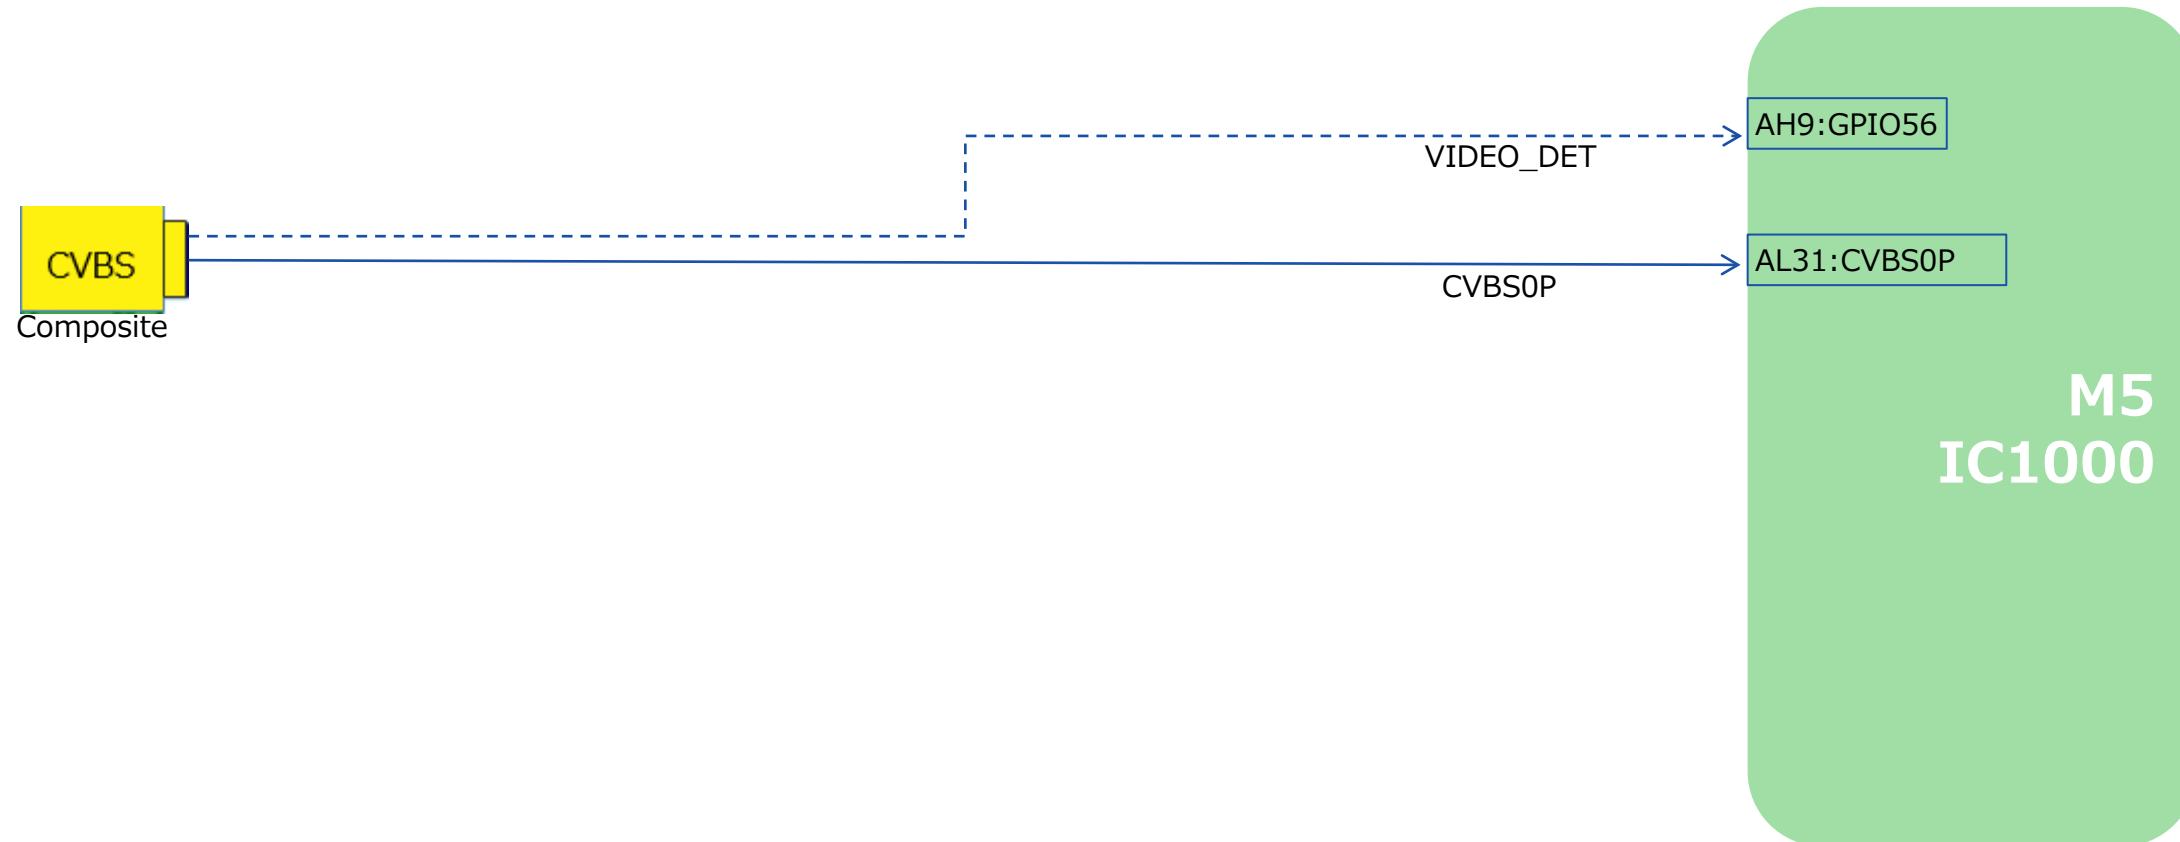


TROUBLESHOOTING

4.2 No Picture – Investigation flow

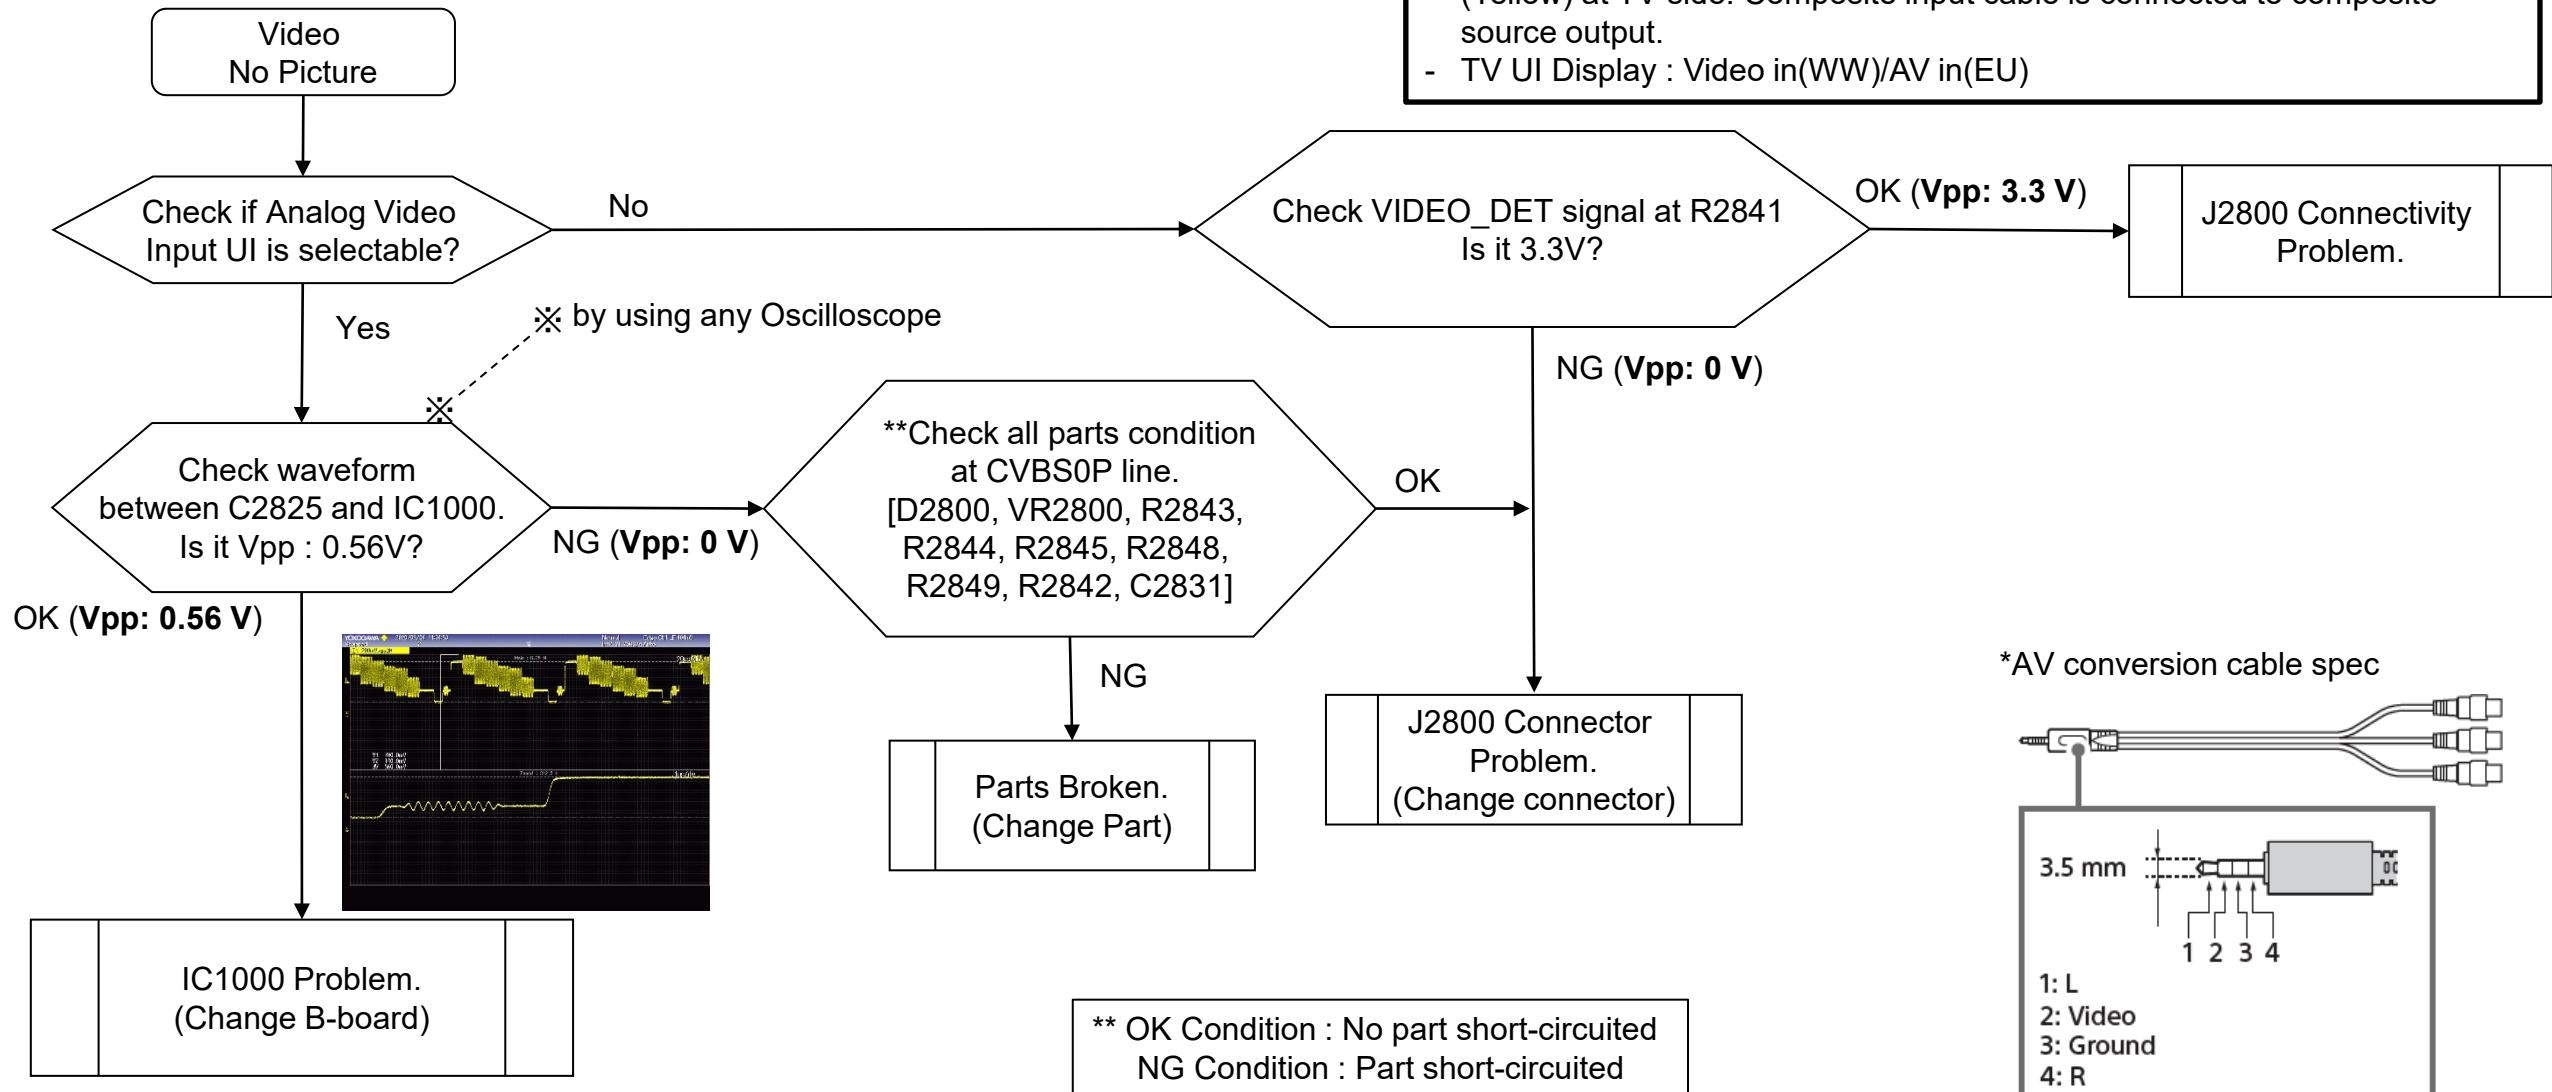

TROUBLESHOOTING

4.2 No Picture – Investigation flow – XR-83A80*


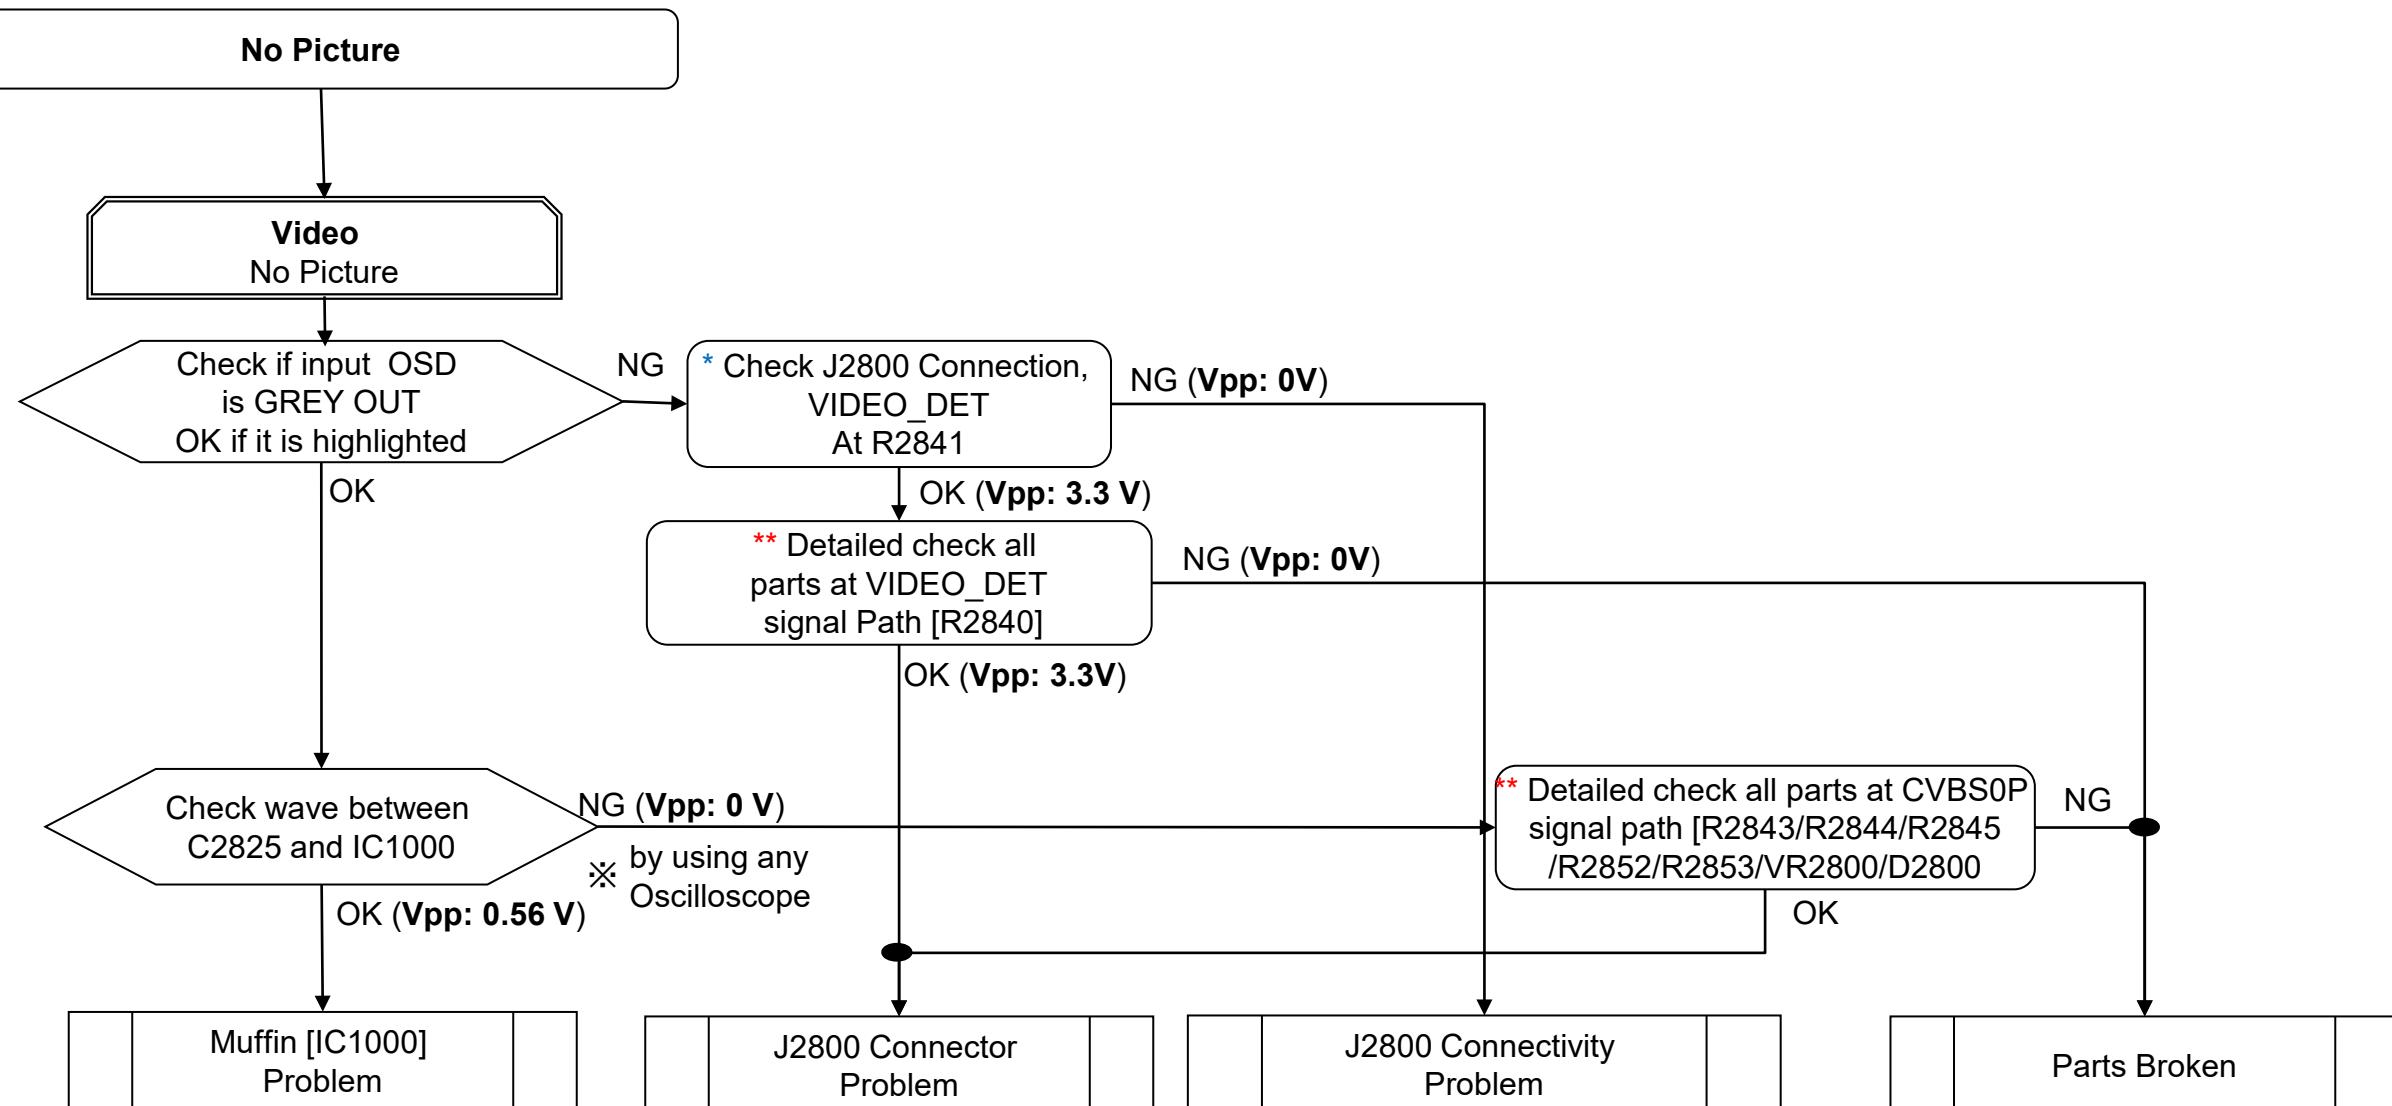


* → OK Condition : No solder splash can be seen
→ NG Condition : Solder splash can be seen

** → OK Condition : No part short-circuited
→ NG Condition : Part short-circuited



TROUBLESHOOTING

4.2 No Picture - Actions

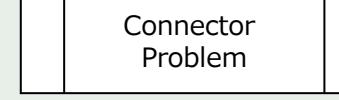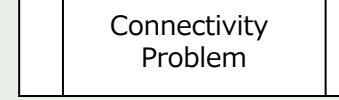Condition	Actions to be taken
 Muffin [IC1000] Problem	Change B-board
 Connector Problem	
 Connectivity Problem	Change Connector
 Parts Broken	Change Part according to ** remarks





TROUBLESHOOTING

4.2 No Picture – Parts Location

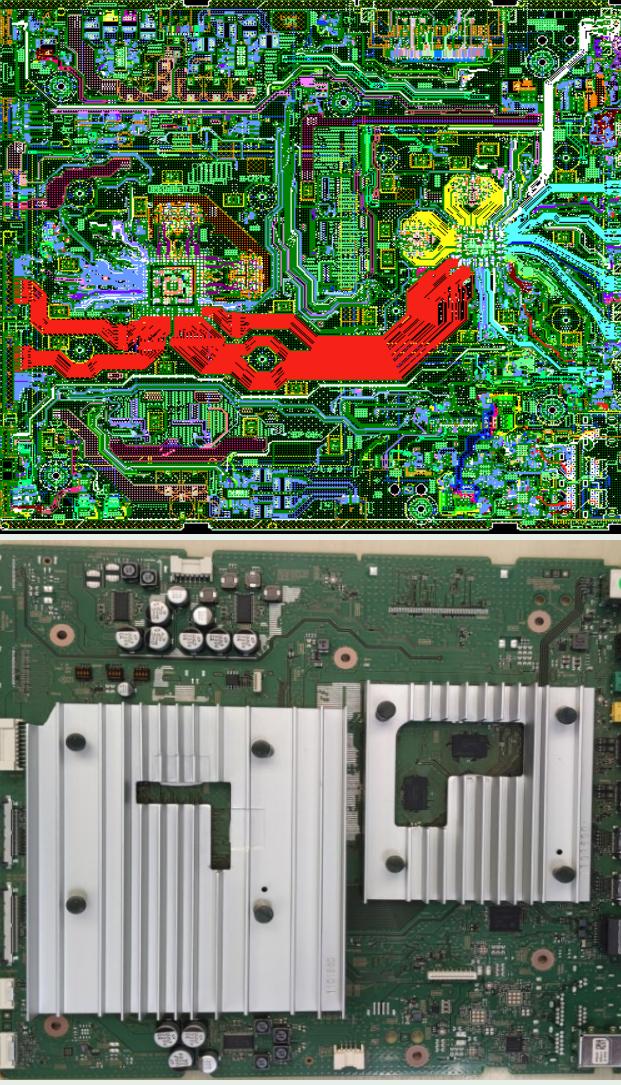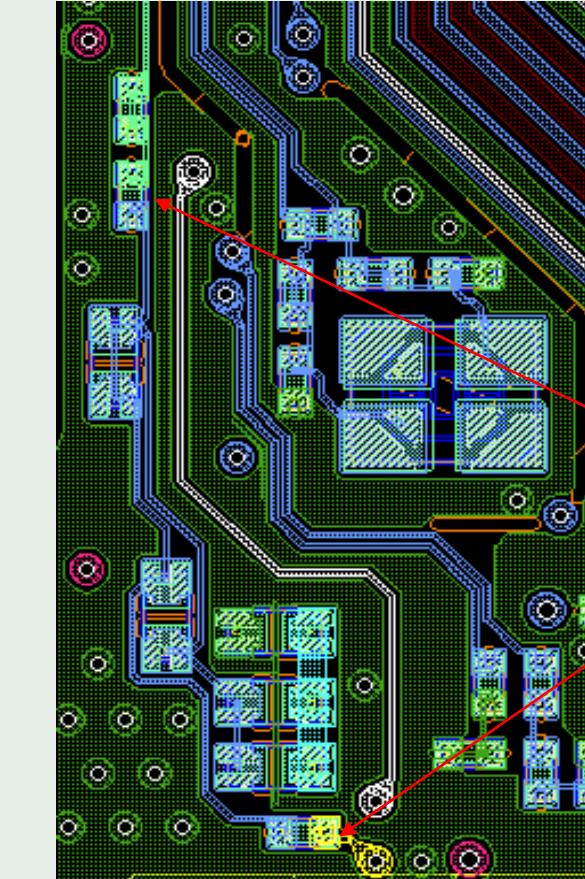Board Name	Board PWB (A-side)	Details
BM5STY R2842, C2825		 <div data-bbox="2290 838 2451 897" style="border: 1px solid black; padding: 2px;">C2825</div> <div data-bbox="2290 966 2451 1024" style="border: 1px solid black; padding: 2px;">R2842</div>

TROUBLESHOOTING

4.2 No Picture – Parts Location

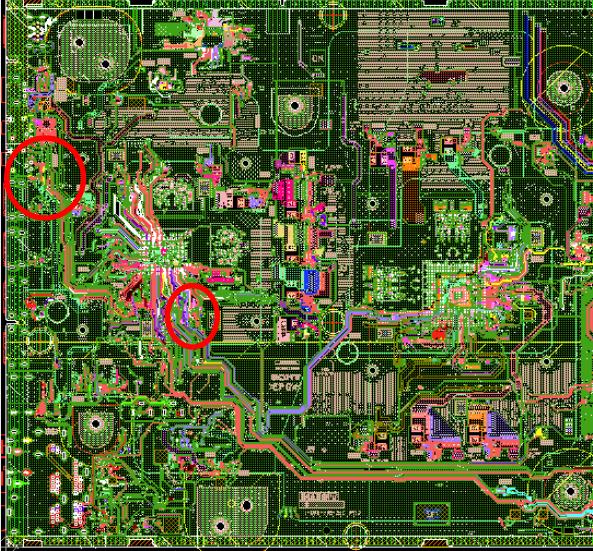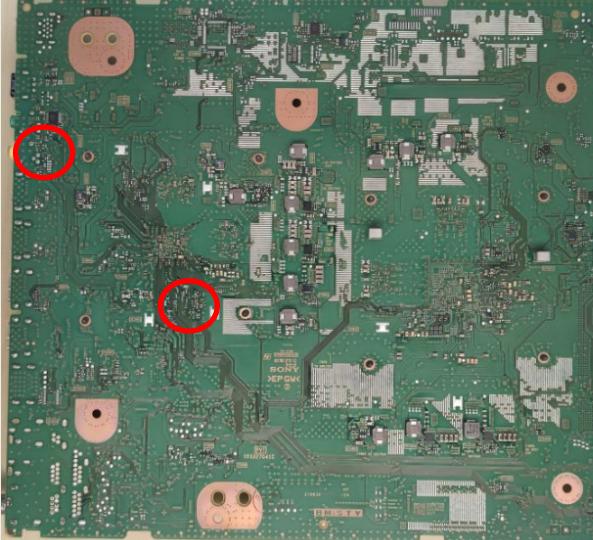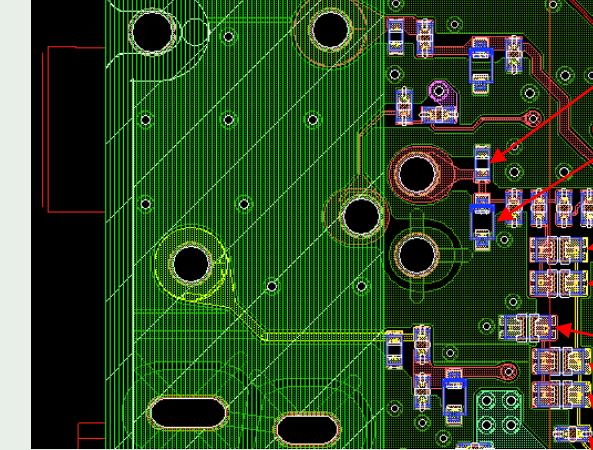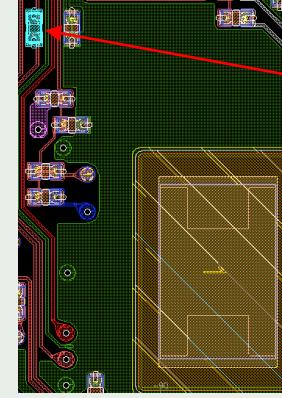Board Name	Board PWB (B-side)	Details
BM5STY D2800, VR2800, R2843, R2844, R2845, R2848, R2849, C2831, R2841	 	  <p>VR2800</p> <p>D2800</p> <p>R2843</p> <p>R2848</p> <p>R2845</p> <p>R2844</p> <p>R2849</p> <p>C2831</p> <p>R2841</p>

TROUBLESHOOTING

4.3 Input Skip Function

Under default condition:


If user insert analog video cables into video jacks, the Video/Component will be highlighted and can be selected.

The detection mechanism is based on below tables.

Input	Signal	Non-Detect (Typical)	Detect (Typical)
VIDEO IN /AV IN	VIDEO_DET IC1000 AH9-GPIO56	0V	3.3V


TROUBLESHOOTING

4.4 No Picture at Tuner

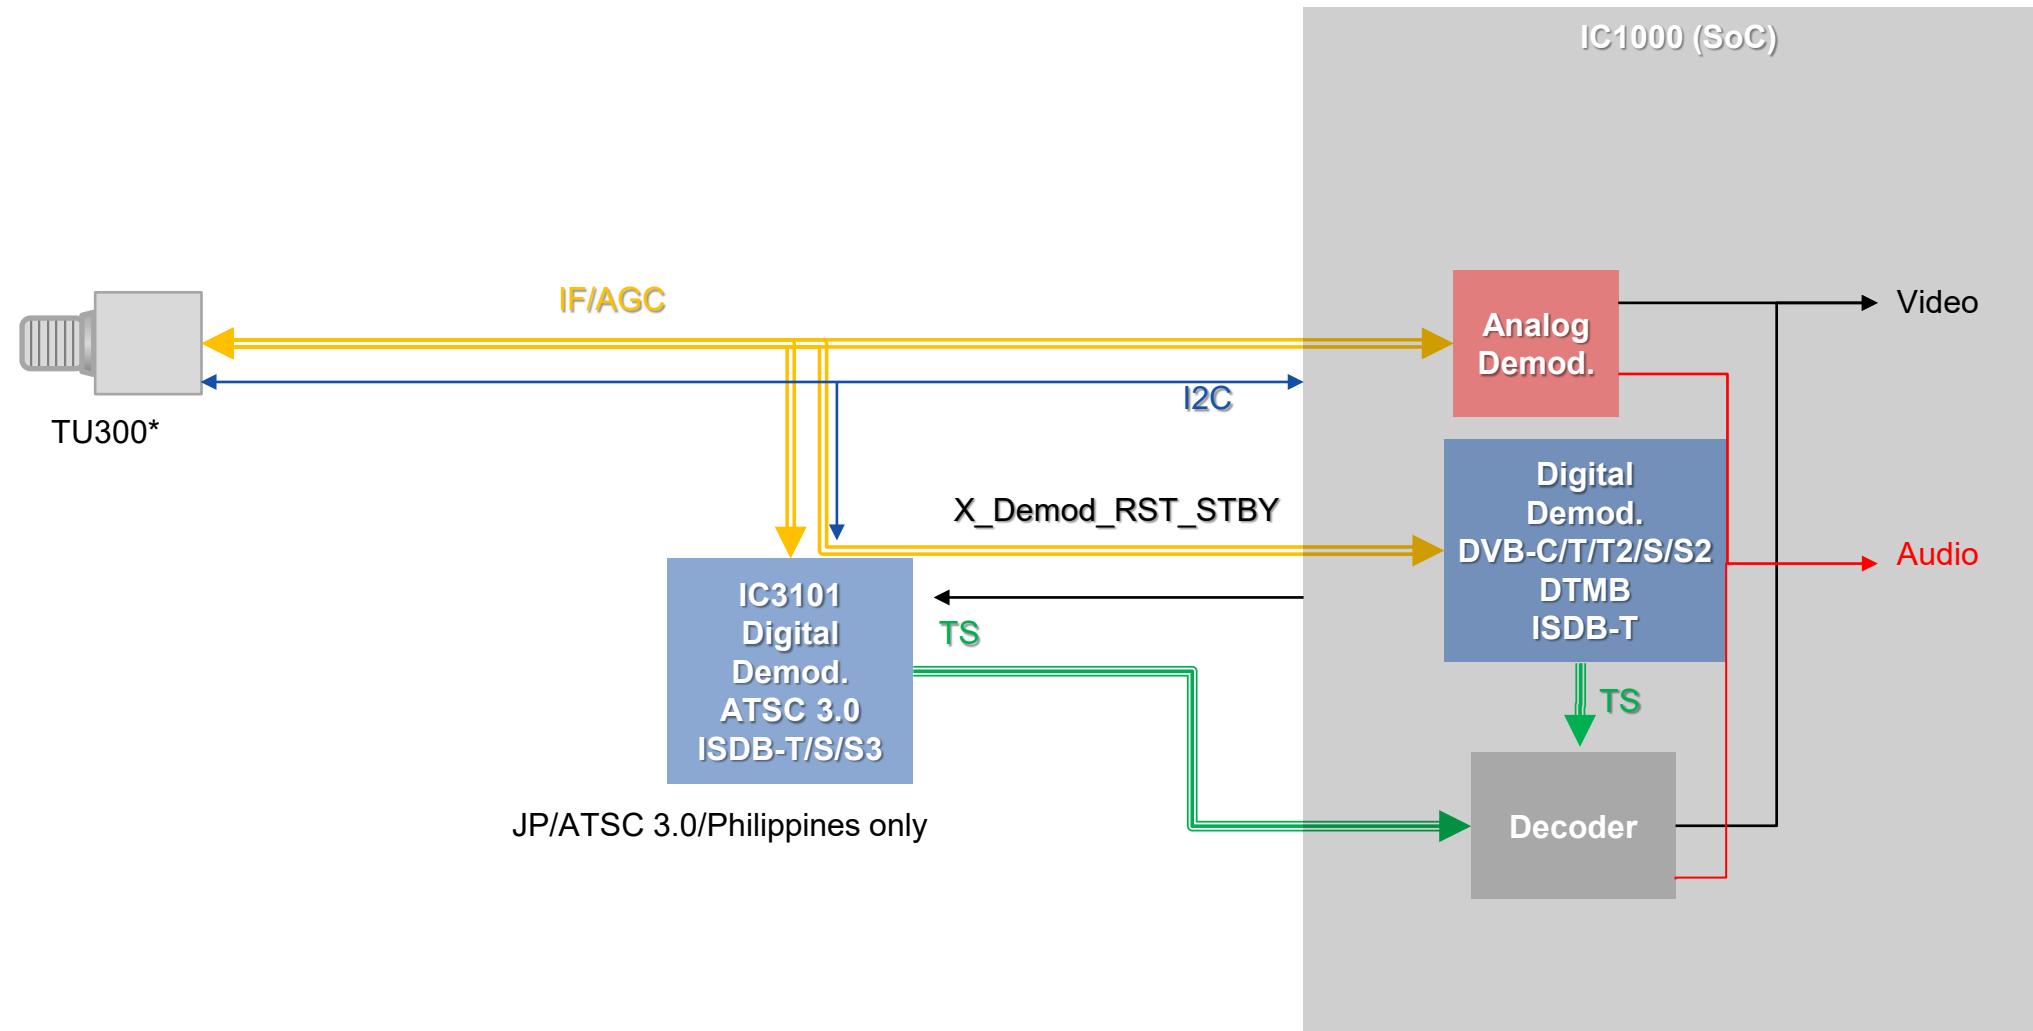


TROUBLESHOOTING

4.4 No Picture at Tuner

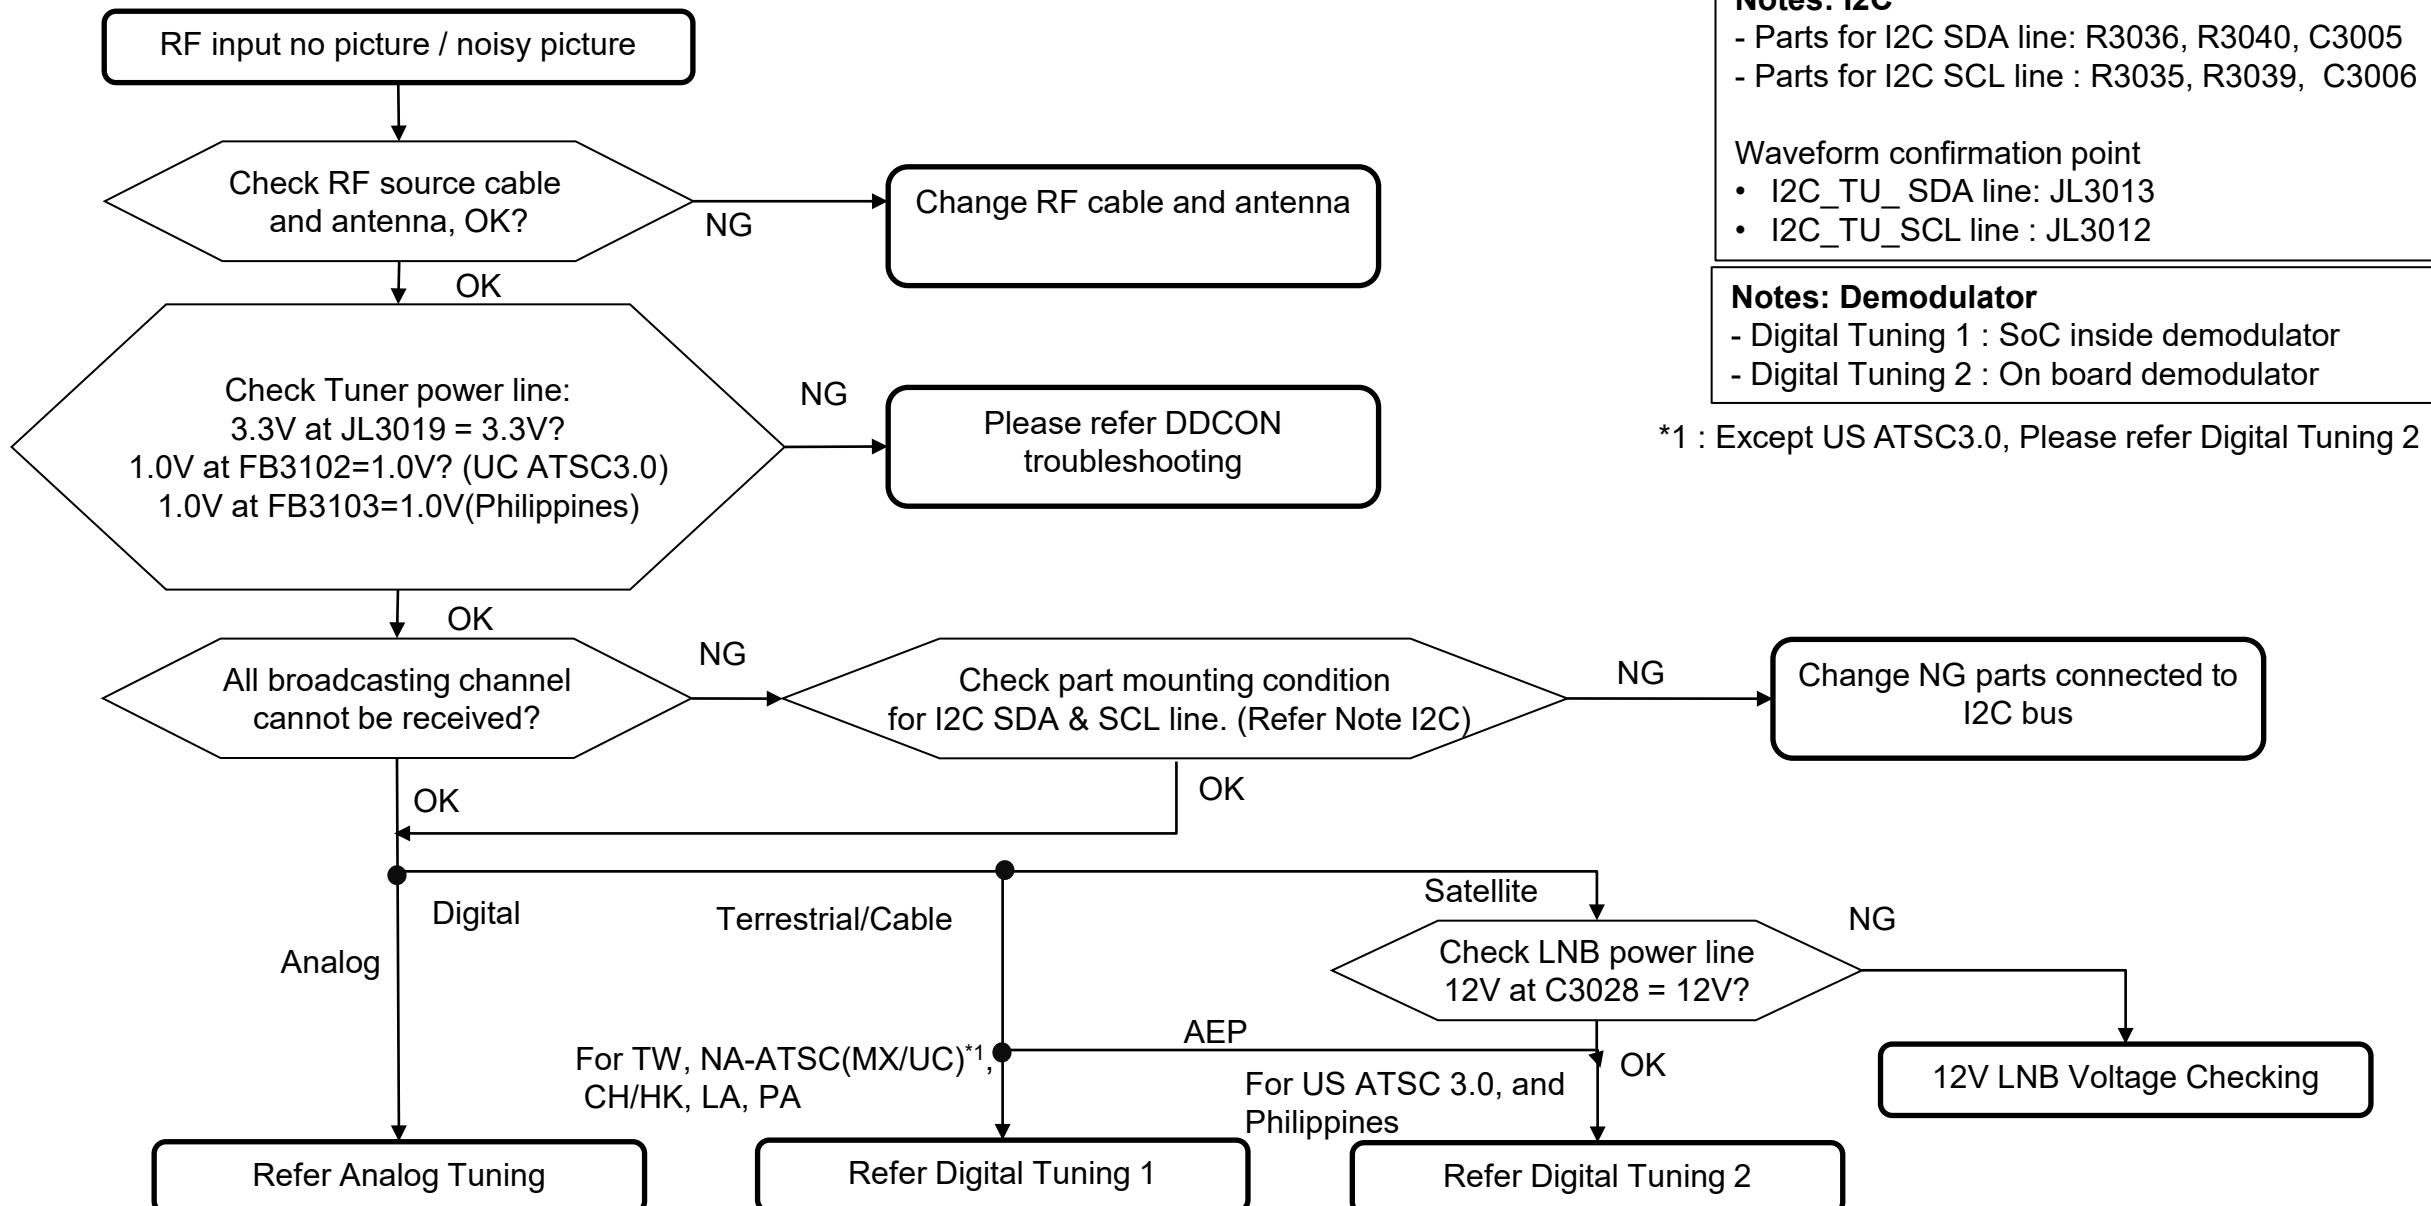


TROUBLESHOOTING

4.4 No Picture at Tuner

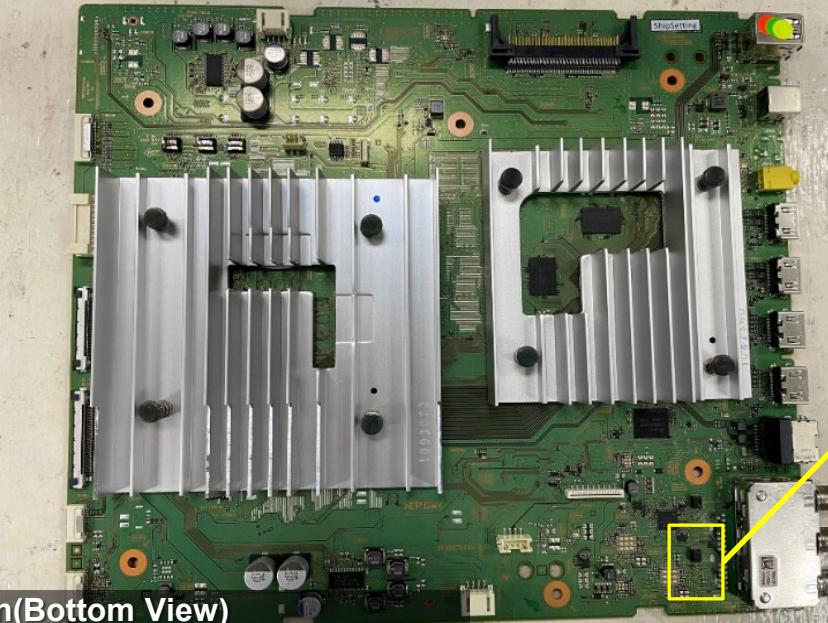


BM5STY Tuner portion(Bottom View)



BM5STY Tuner portion(Top View)

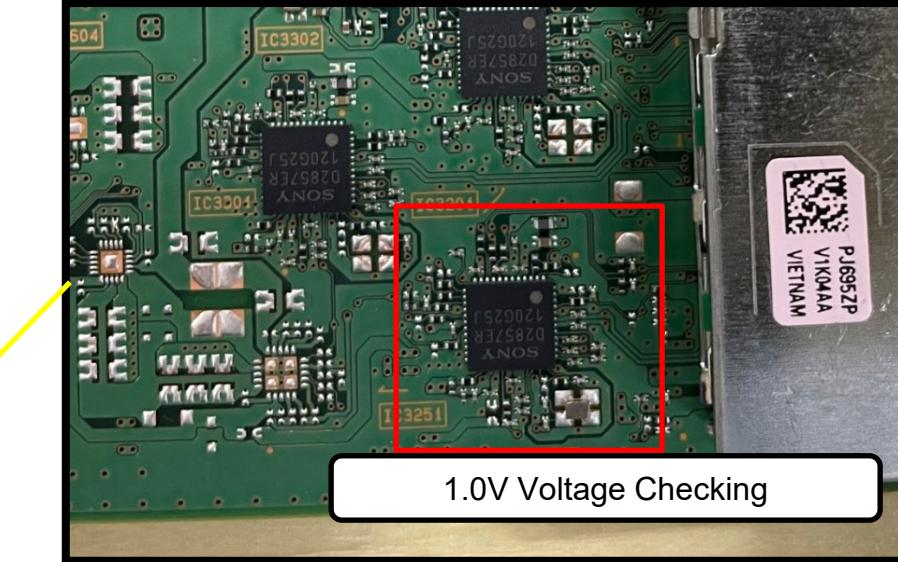

BM5STY Tuner portion(Bottom View)

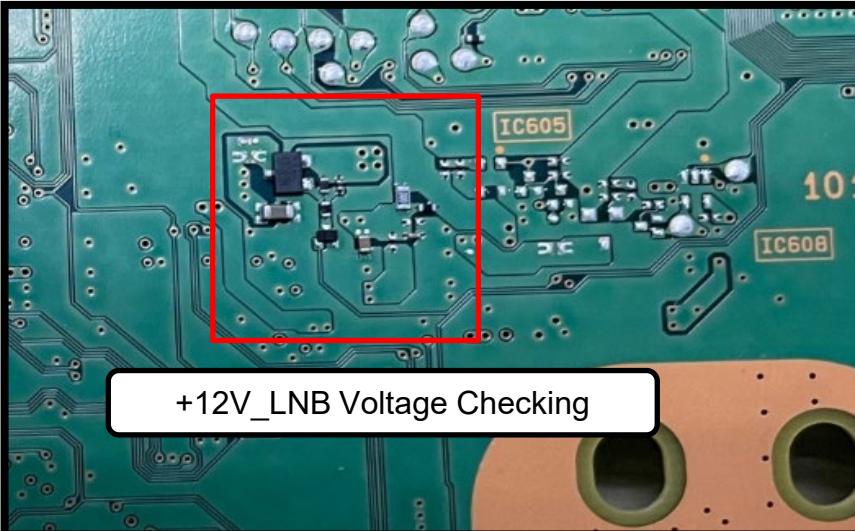

+12V_LNB Voltage Checking

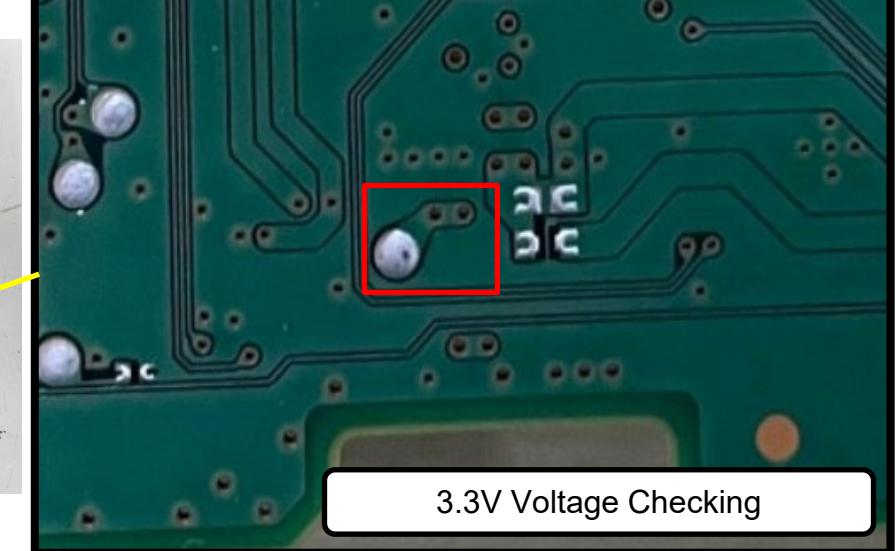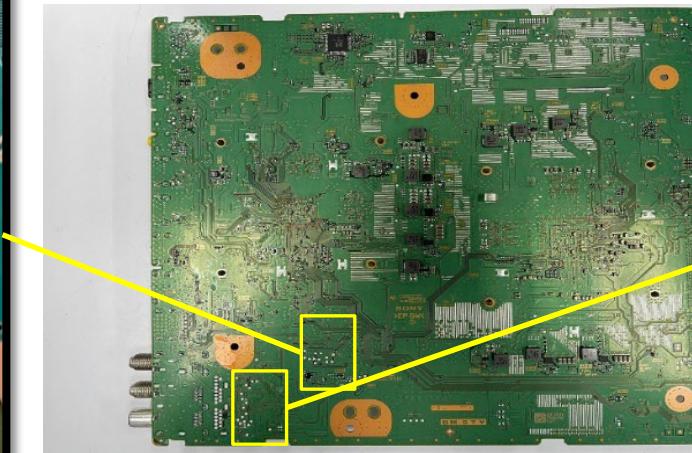


3.3V Voltage Checking


TROUBLESHOOTING

4.4 No Picture at Tuner - Tuner Power Lines: 3.3V, 12.0V, 1.0V


BM5STY Tuner portion(Bottom View)

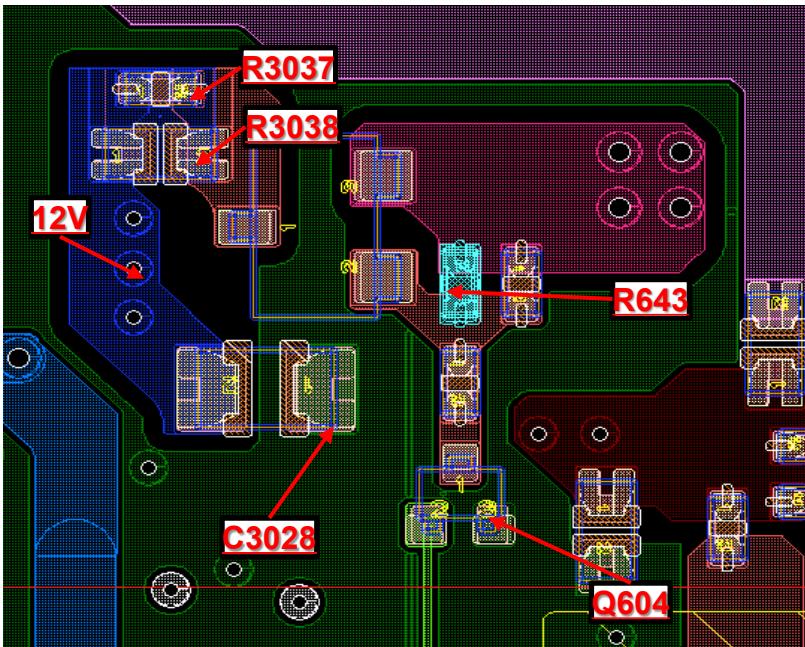

+12V_LNB Voltage Checking

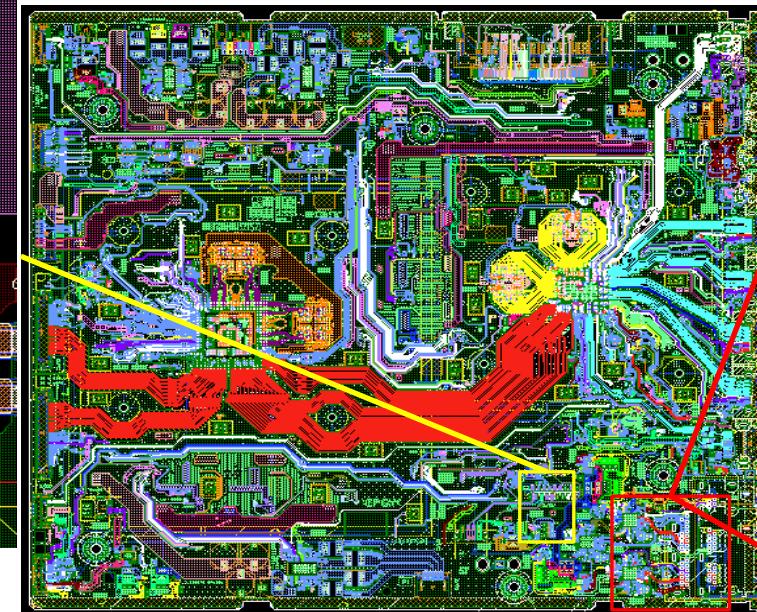


BM5STY Tuner portion(Top View)

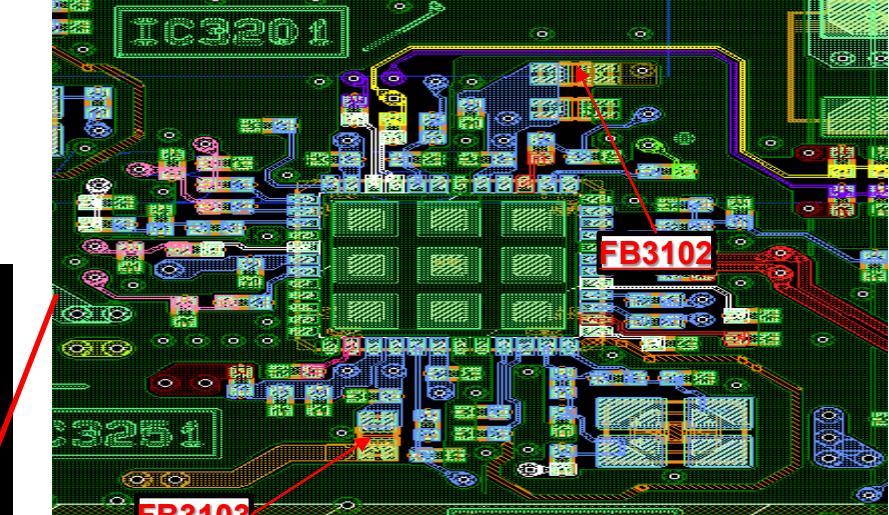

1.0V Voltage Checking


BM5STY Tuner portion(Bottom View)

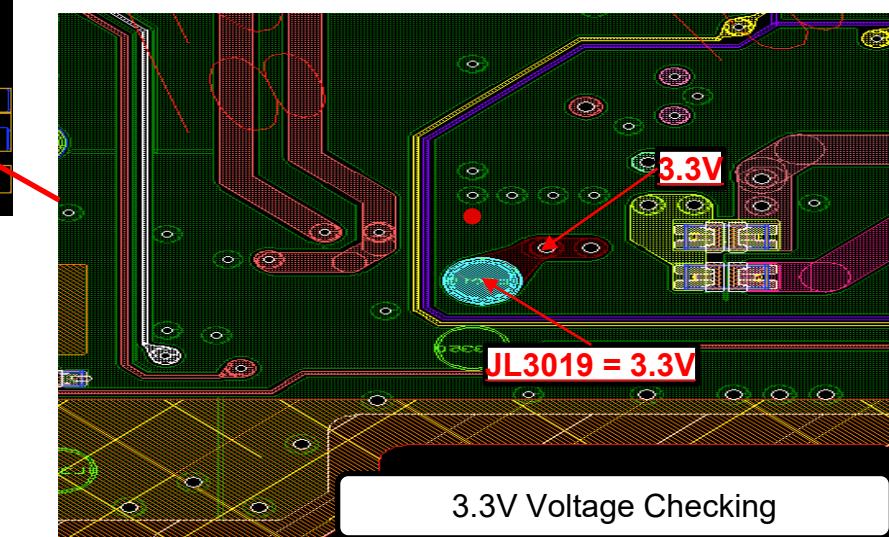



3.3V Voltage Checking

TROUBLESHOOTING


4.4 No Picture at Tuner

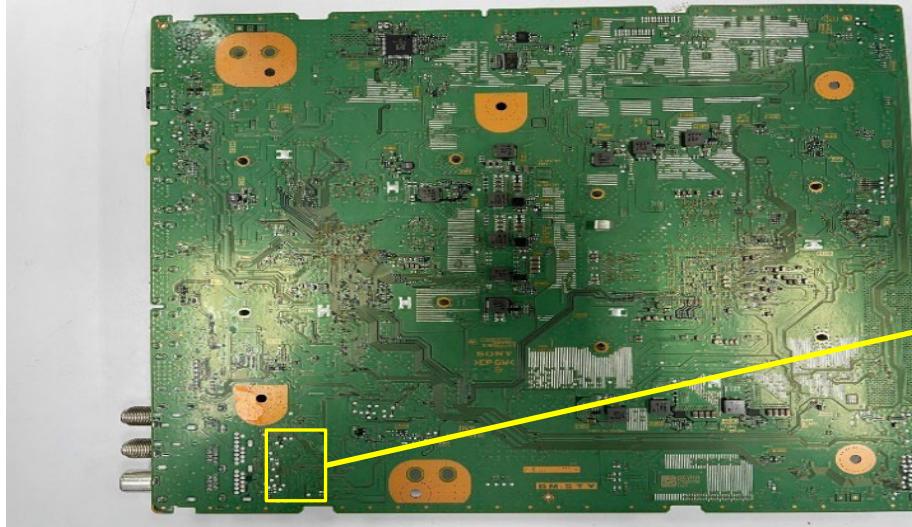

BM5STY Tuner portion(Bottom View)

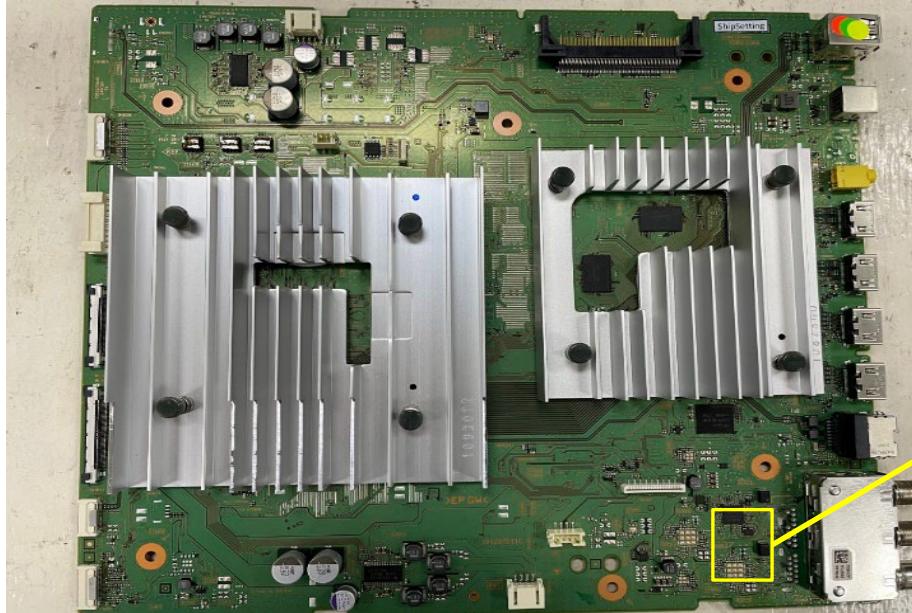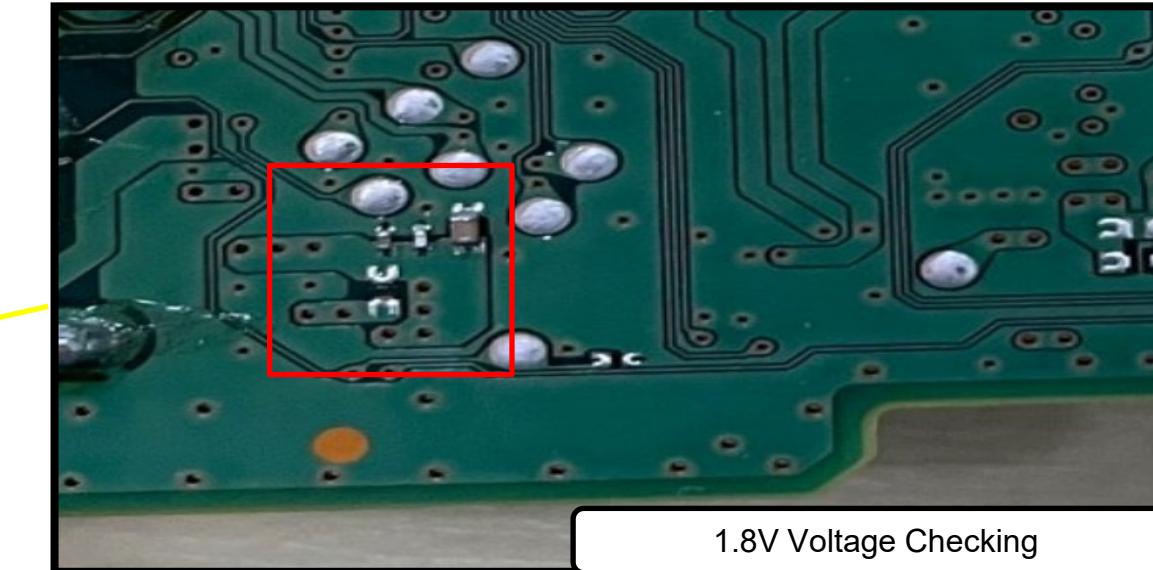

BM5STY Tuner portion(Top View)



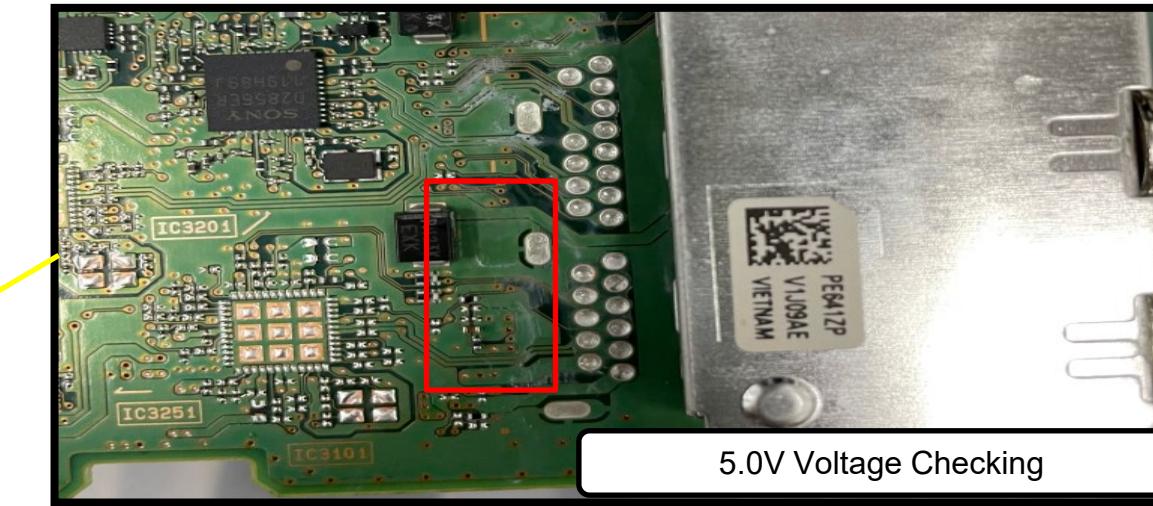


TROUBLESHOOTING

4.4 No Picture - Tuner


Tuner Power Lines: 1.8V, 5.0V

BM5STY (Top View)

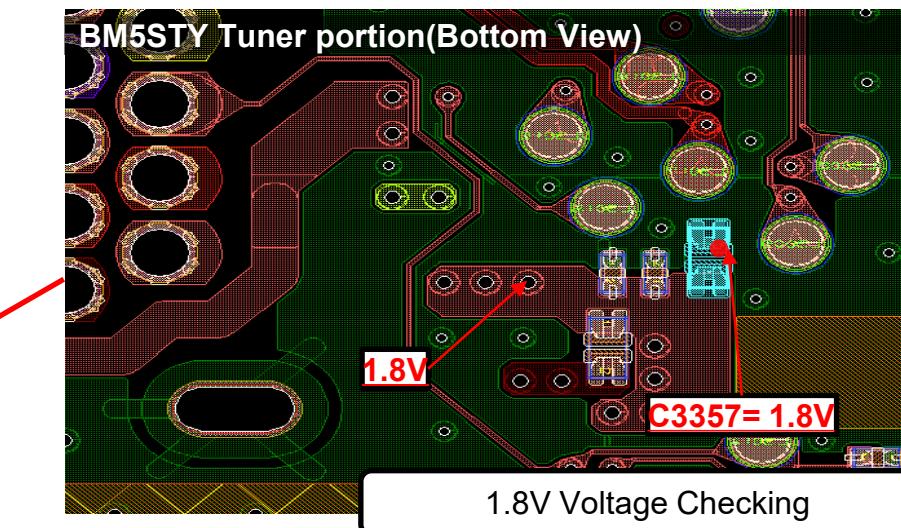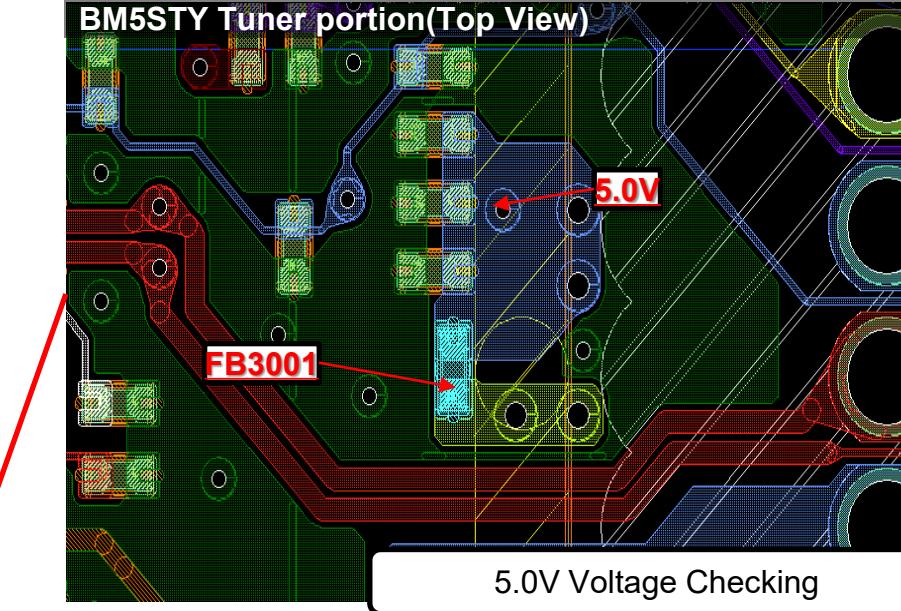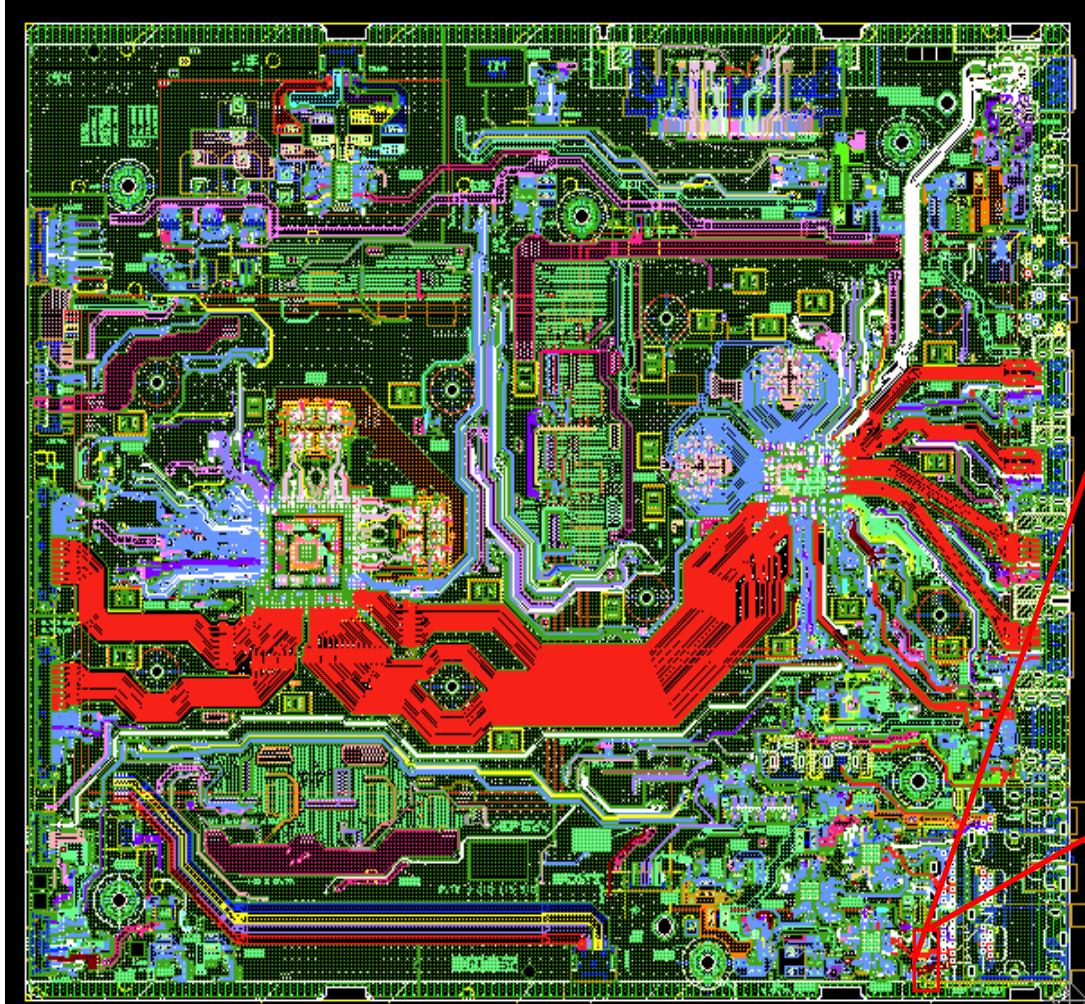


TROUBLESHOOTING

4.4 No Picture - Tuner – XR-83A80*

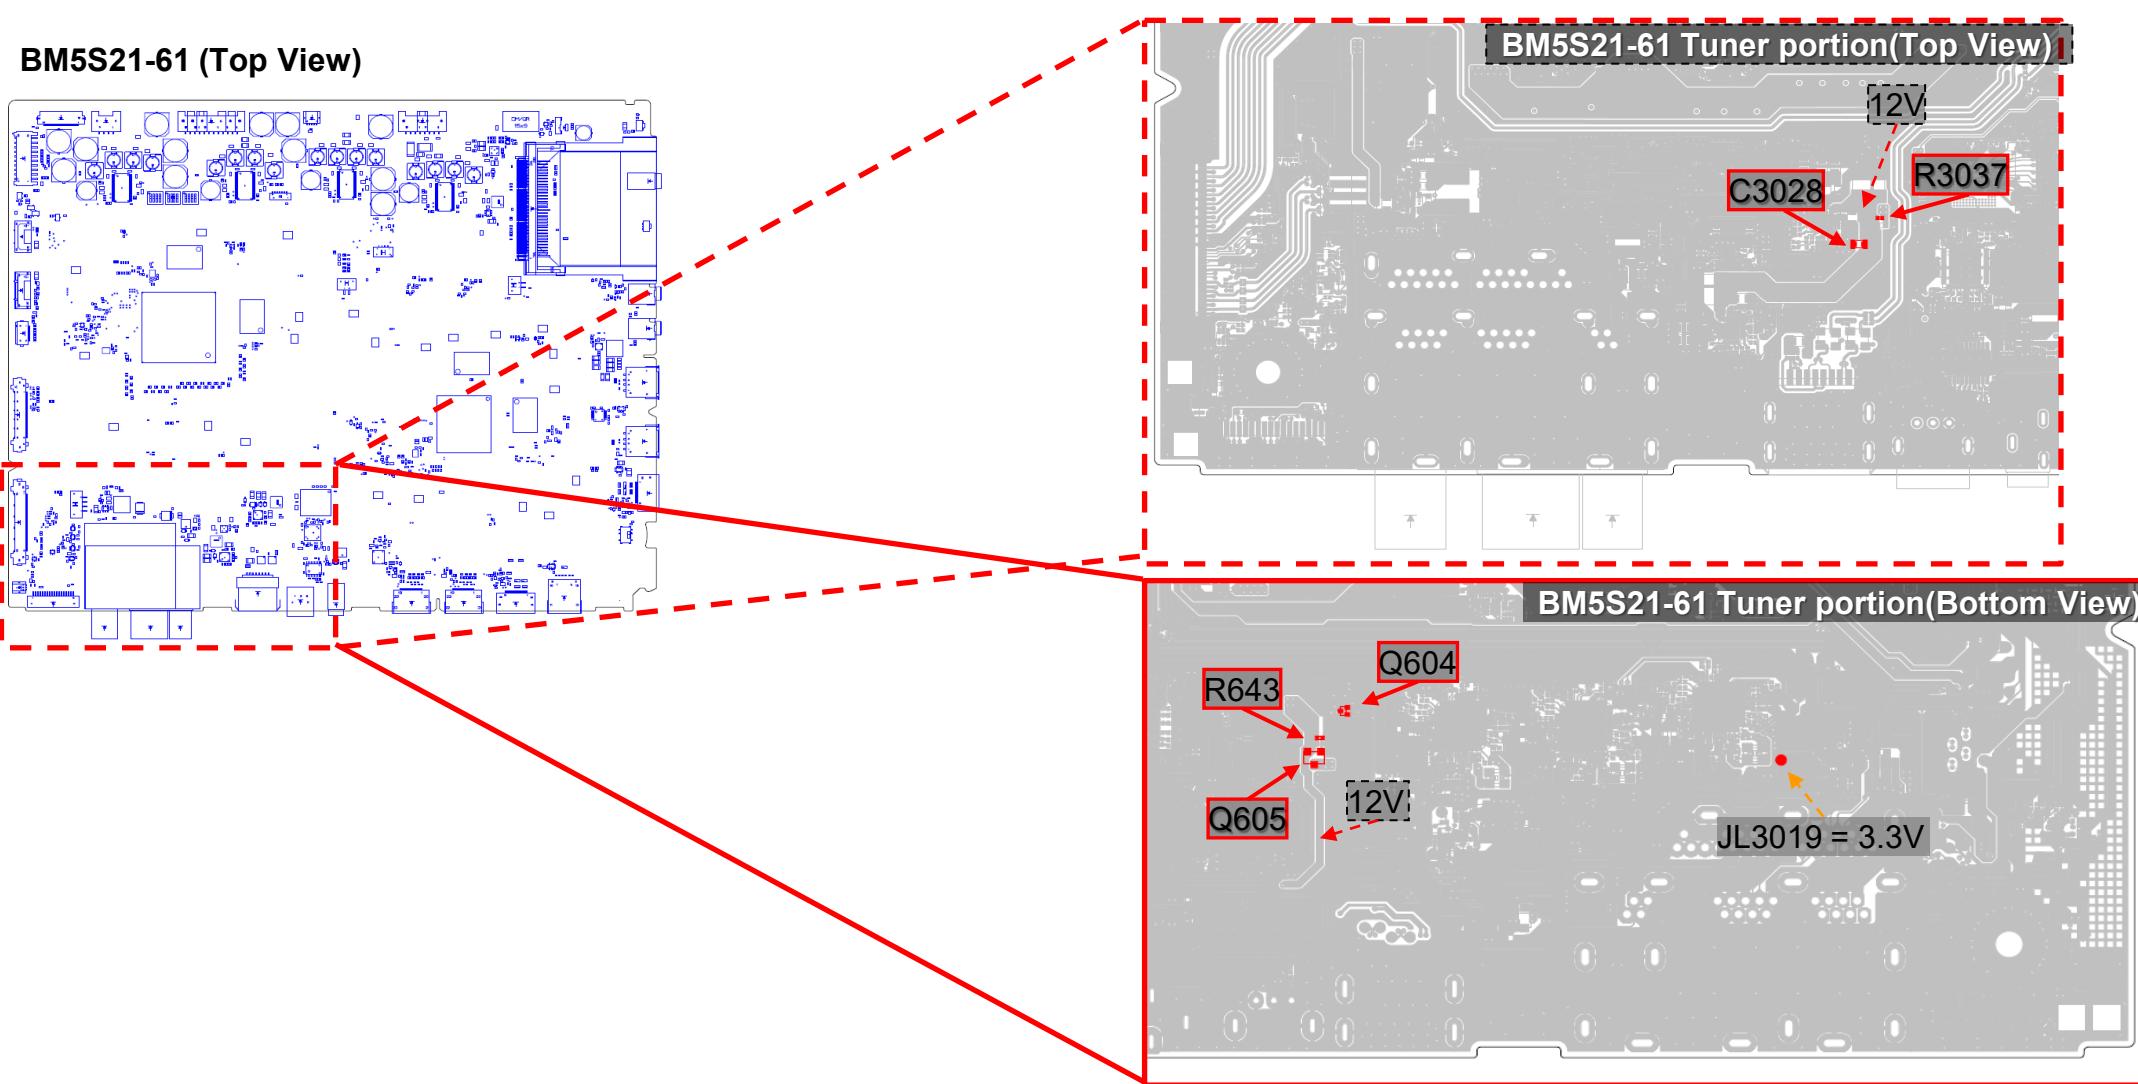


TROUBLESHOOTING

4.4 No Picture at Tuner - FOR ANALOG TUNING

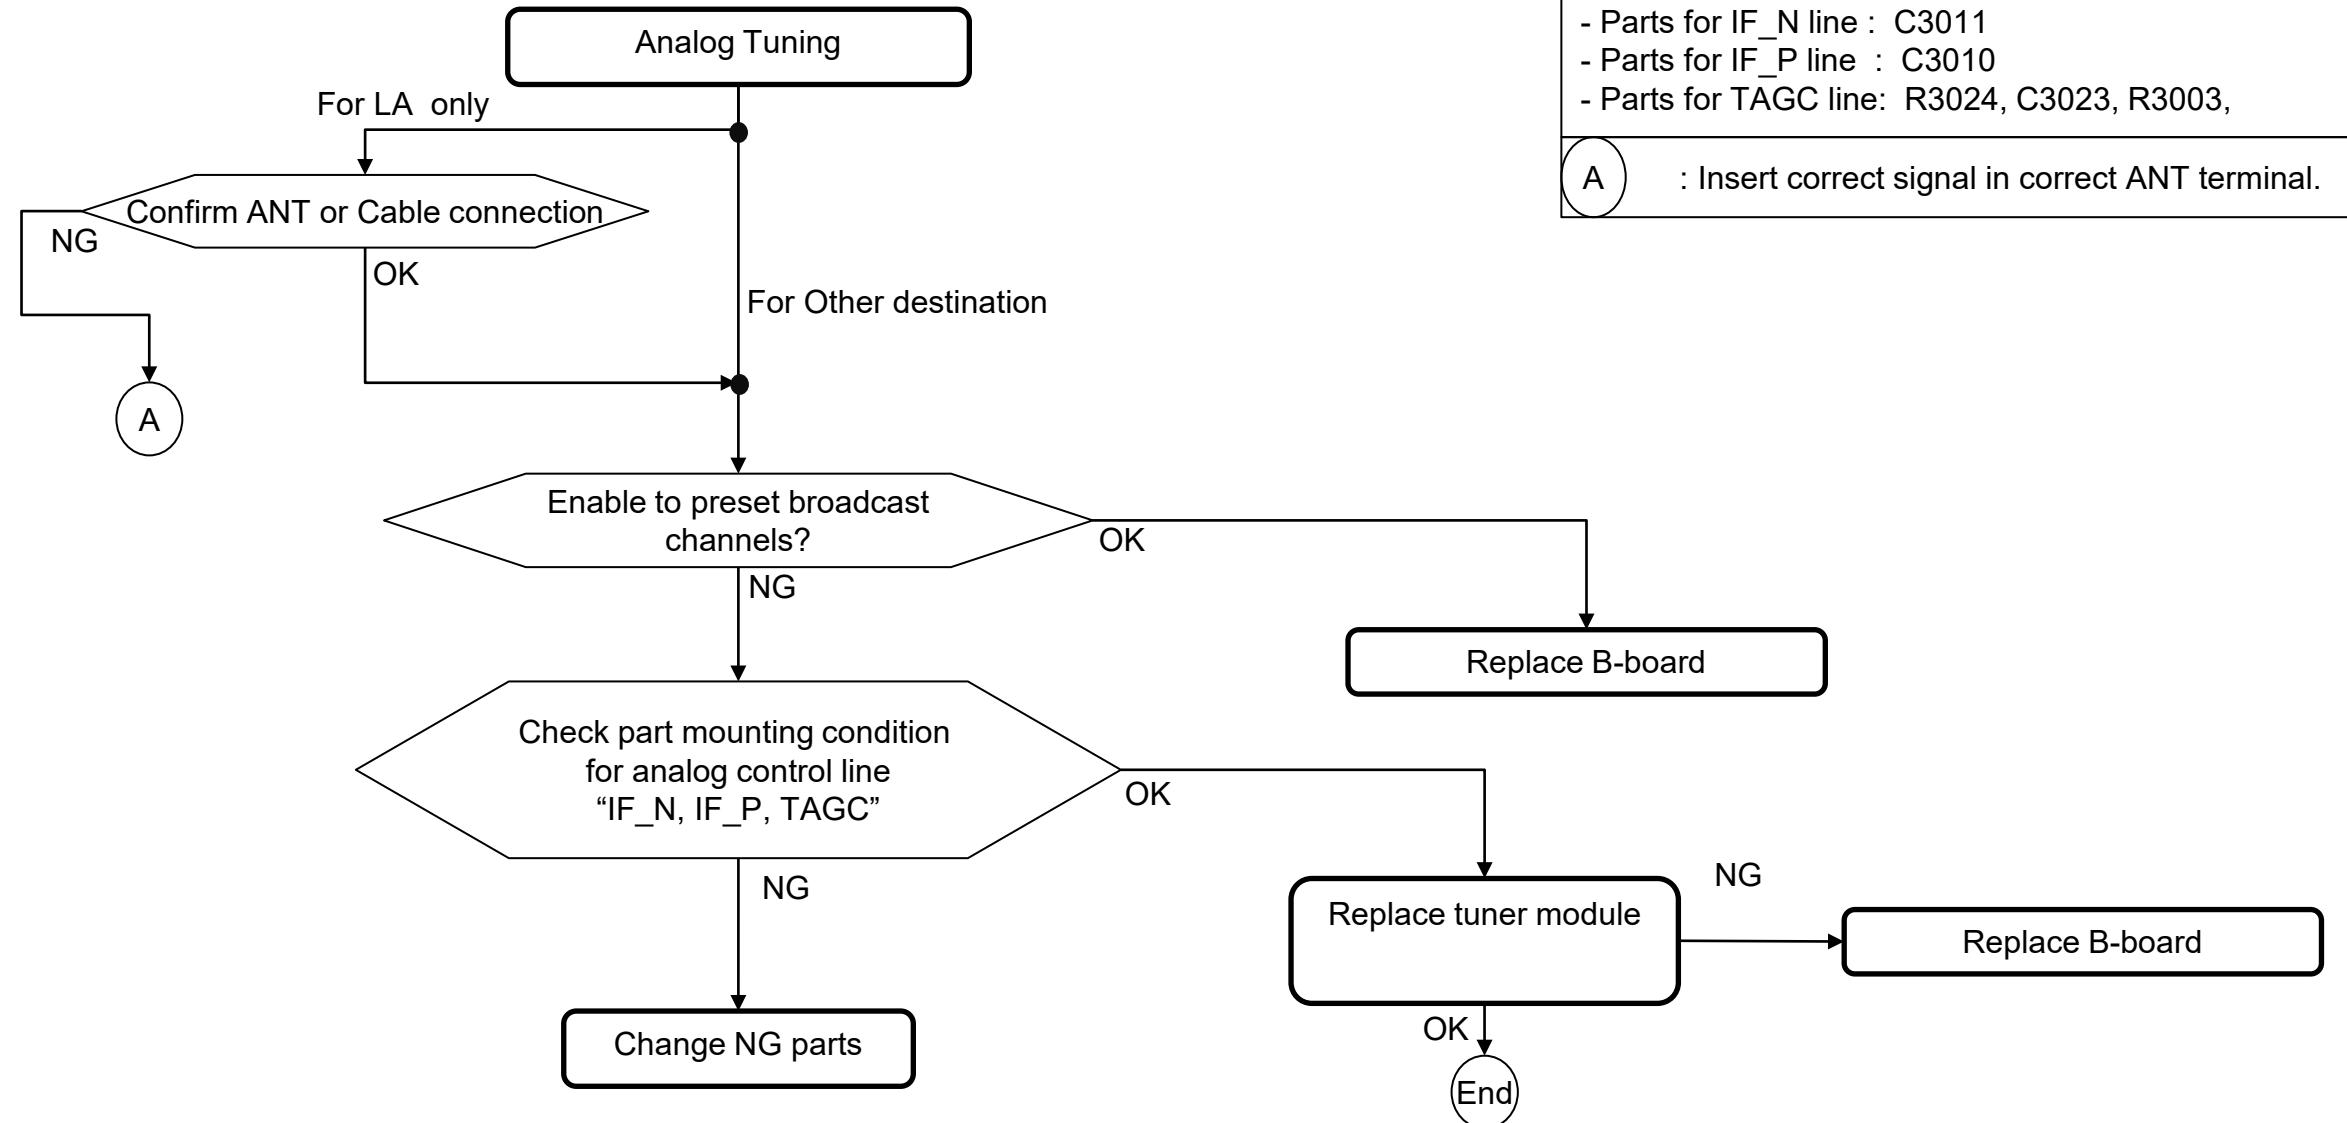

TROUBLESHOOTING

4.4 No Picture at Tuner - FOR DIGITAL TUNING 1 For TW, NA-ATSC(MX/UC)^{*1}, CH/HK, LA, PA

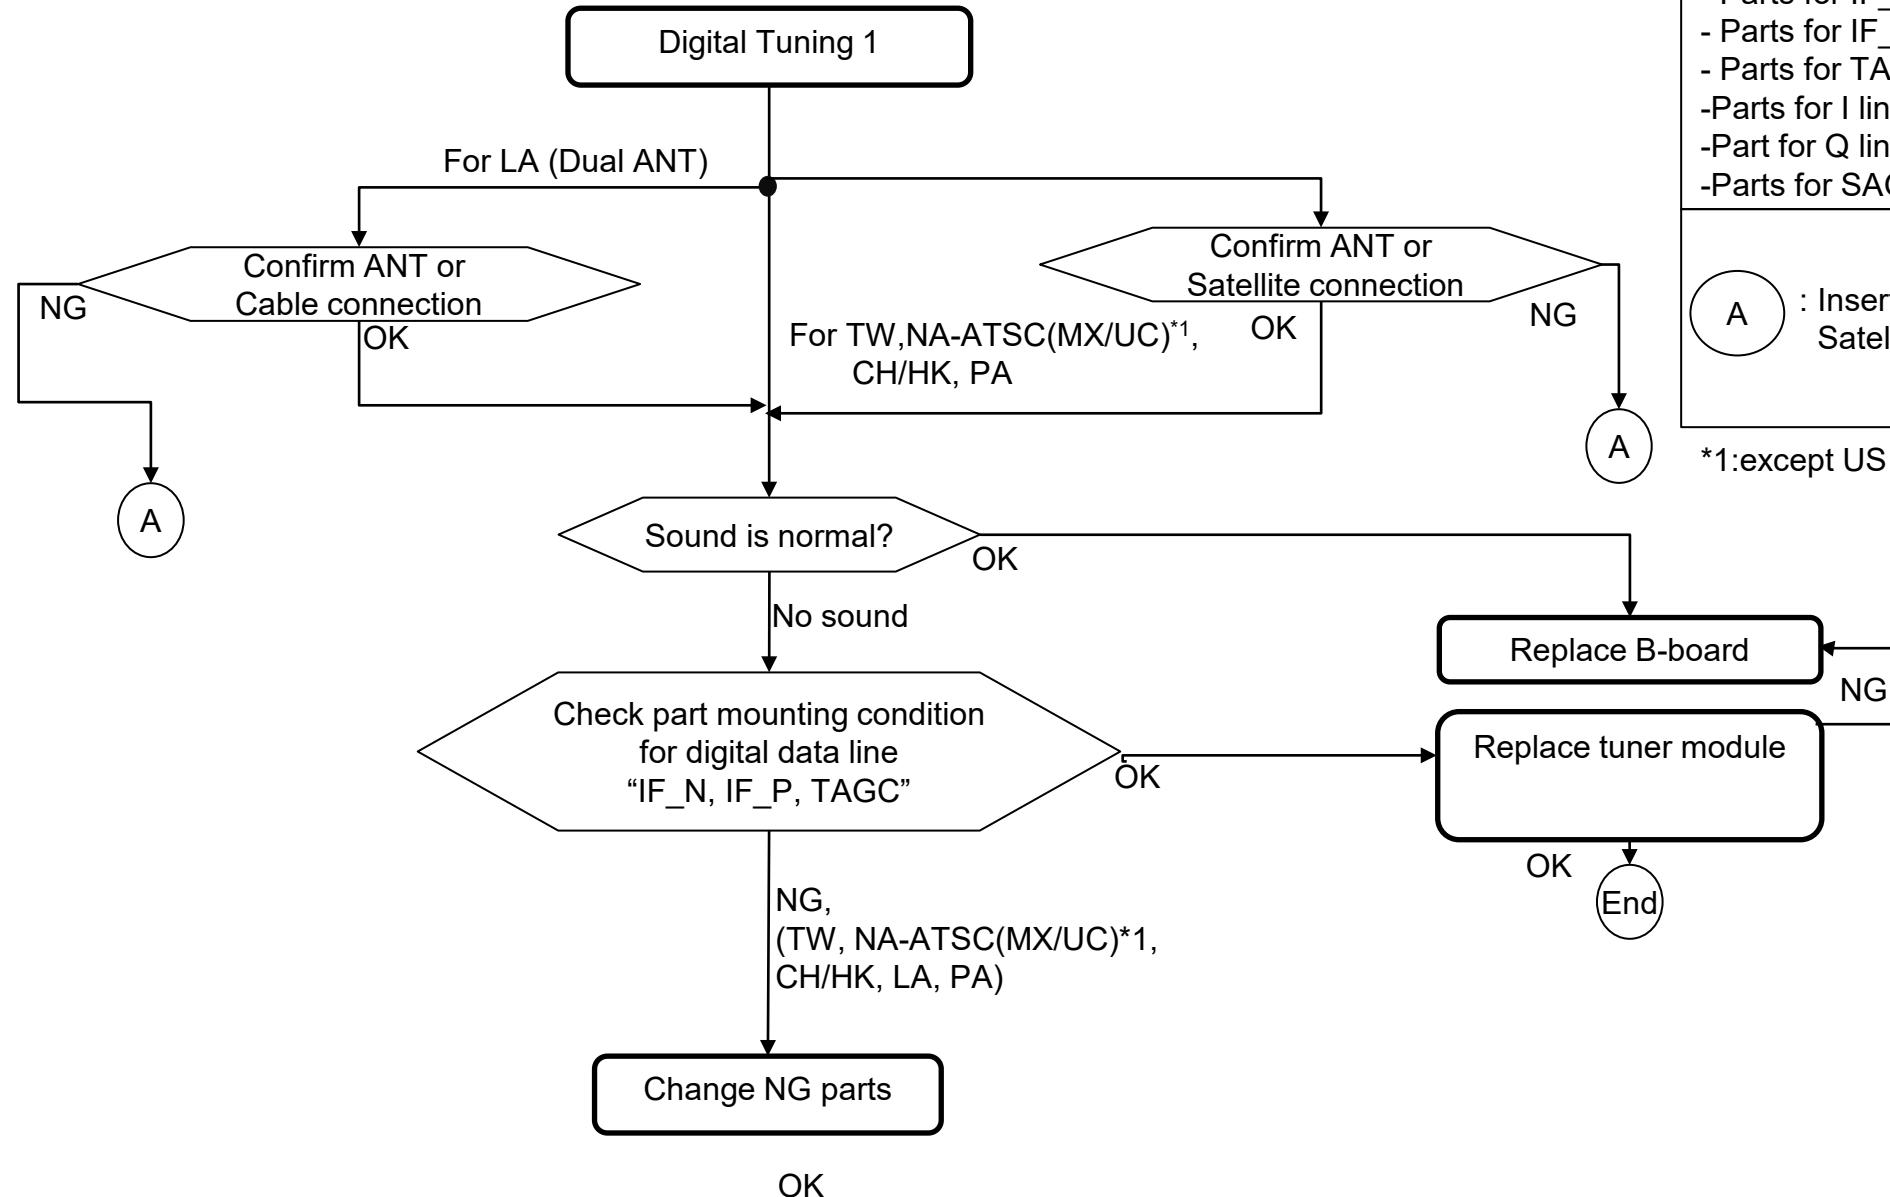

Notes:


- Parts for IF_N line : C3011
- Parts for IF_P line : C3010
- Parts for TAGC line: R3024, C3023, R3003,
- Parts for I line:C3009
- Part for Q line:C3012
- Parts for SAGC line:C3024, C3025

A : Insert correct signal in correct ANT/CABLE/
Satellite terminal.

^{*1}:except US ATSC3.0, Please refer Digital Tuning 2

TROUBLESHOOTING

4.4 No Picture at Tuner - FOR DIGITAL TUNING 2 For US ATSC3.0 and Philippines

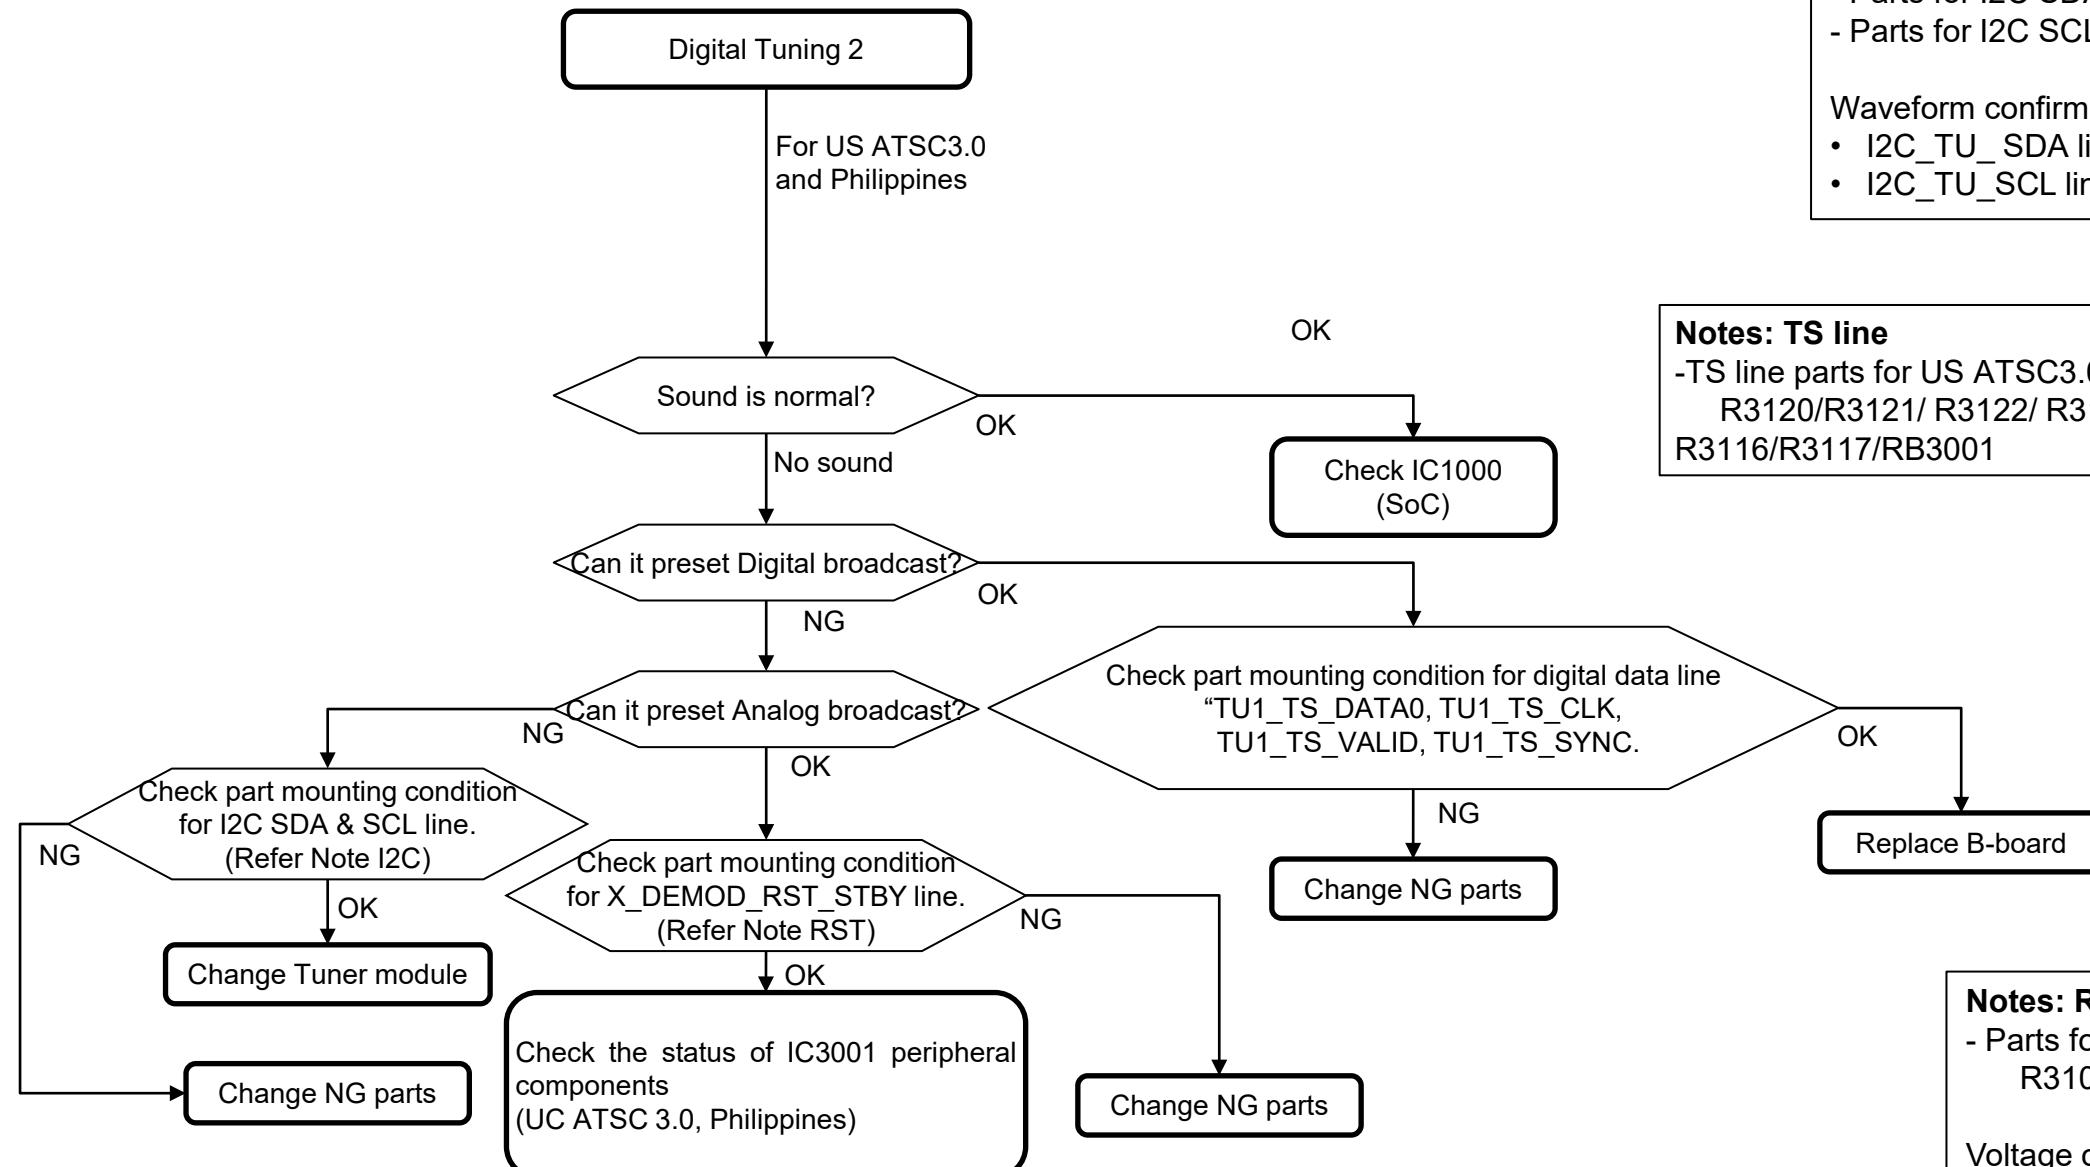

Notes: I2C

- Parts for I2C SDA line: R3036, C3005
- Parts for I2C SCL line : R3035, C3006

Waveform confirmation point

- I2C_TU_SDA line: JL3013
- I2C_TU_SCL line : JL3012


Notes: TS line

- TS line parts for US ATSC3.0/Philippines
R3120/R3121/ R3122/ R3123/ R3114/ C3126/
R3116/R3117/RB3001


TROUBLESHOOTING

4.4 No Picture at Tuner


BM5STY Tuner portion(Bottom View)

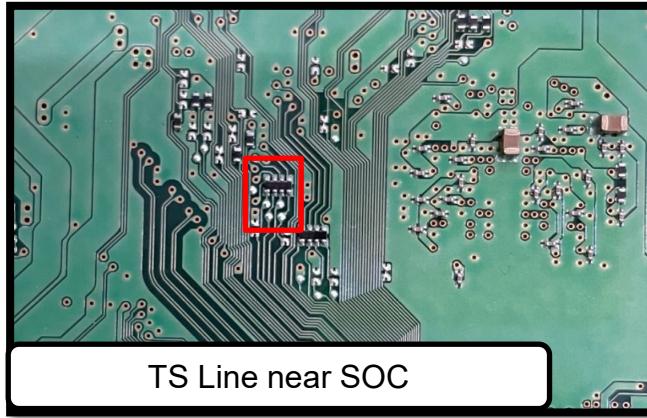


TS Line near SOC

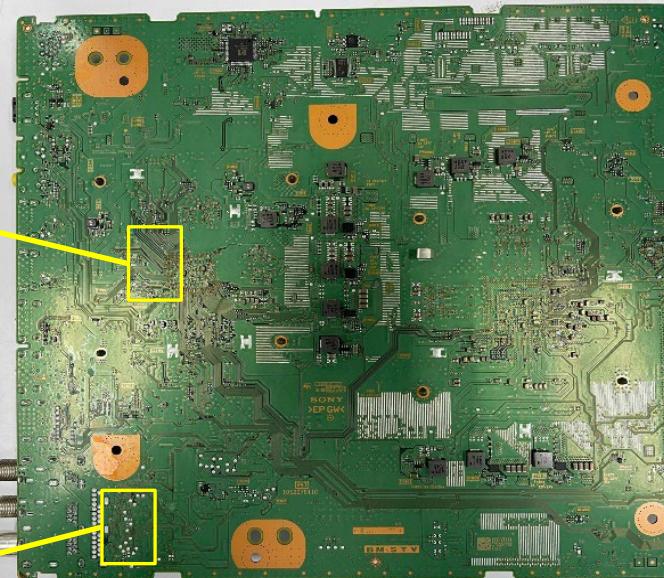



BM5STY Tuner portion(Top View)

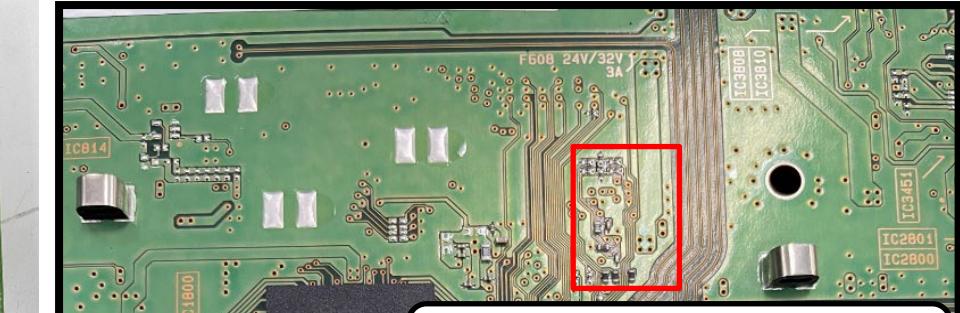

TAGC line (Need to open heatsink)

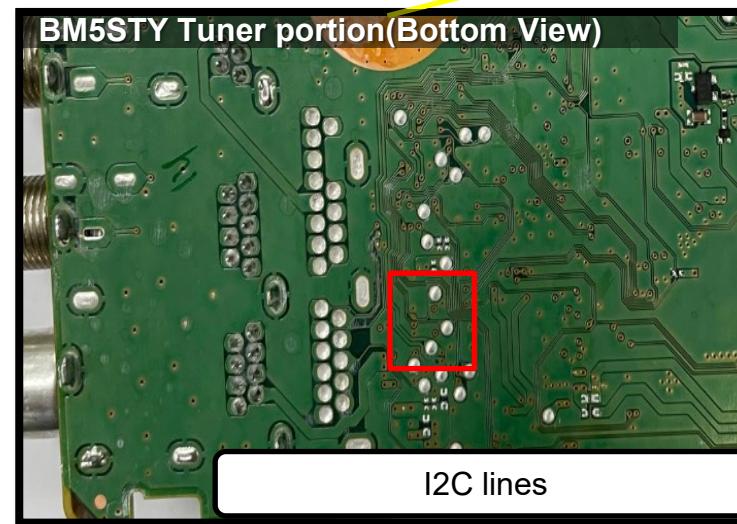

I2C lines

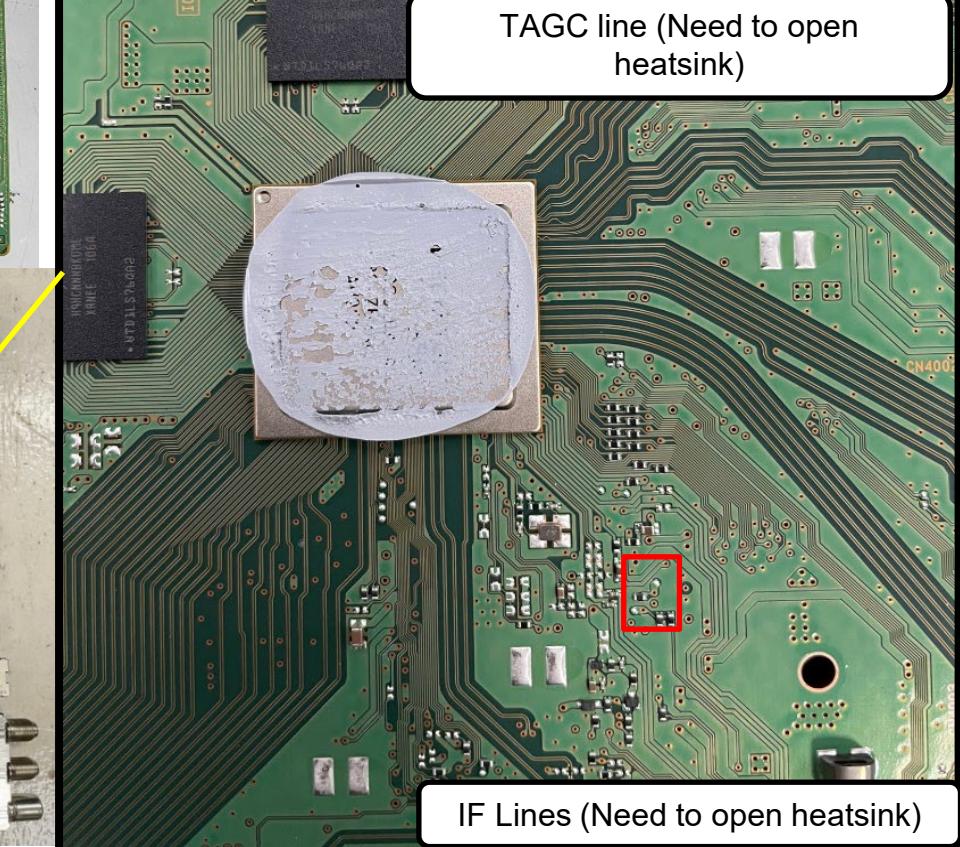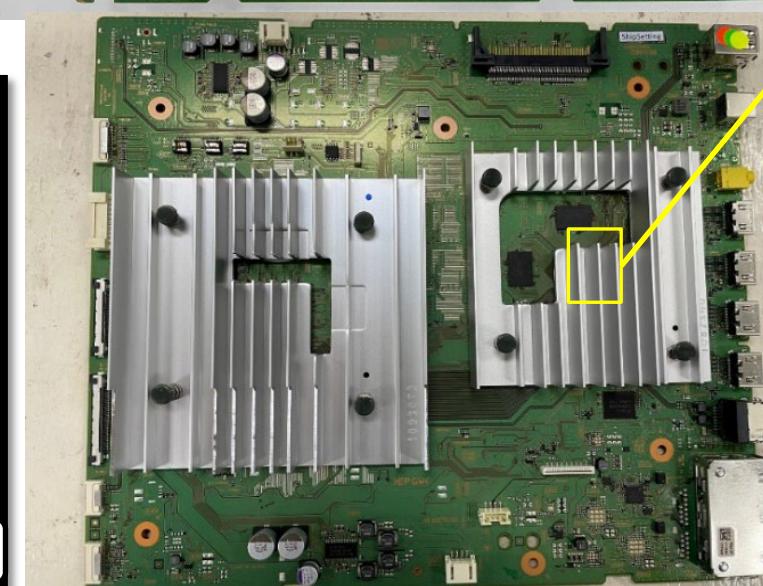


IF Lines (Need to open heatsink)


TROUBLESHOOTING

4.4 No Picture at Tuner- IF_N, IF_P, TAGC, TS Lines(Near SOC)


BM5STY Tuner portion(Bottom View)

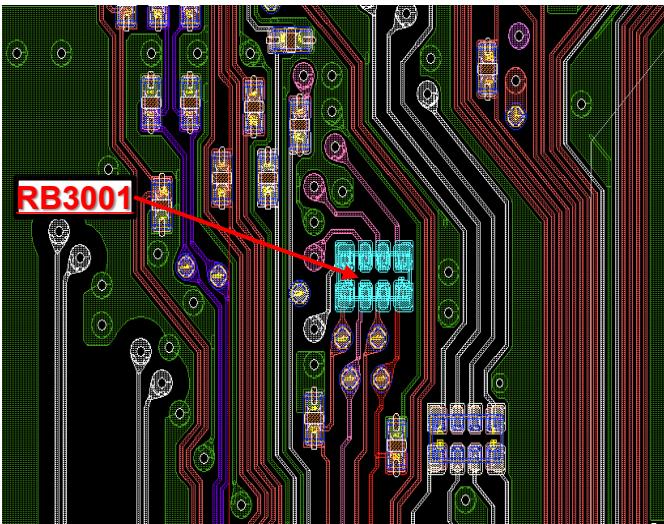


BM5STY Tuner portion(Bottom View)

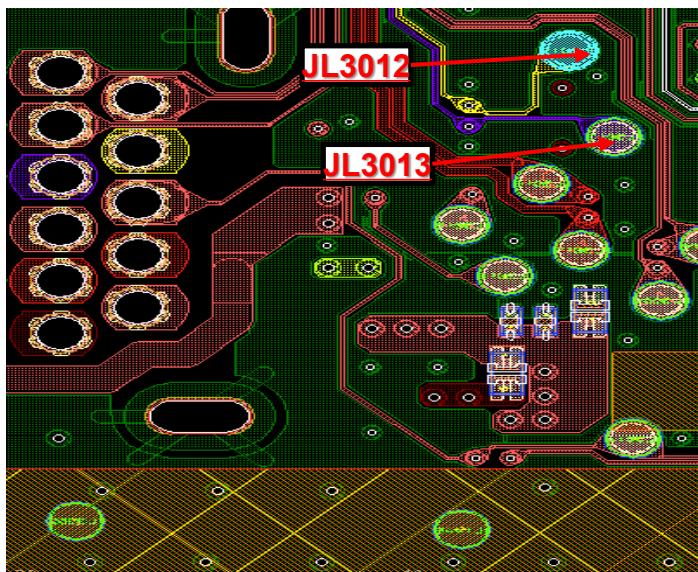


BM5STY(Top View)

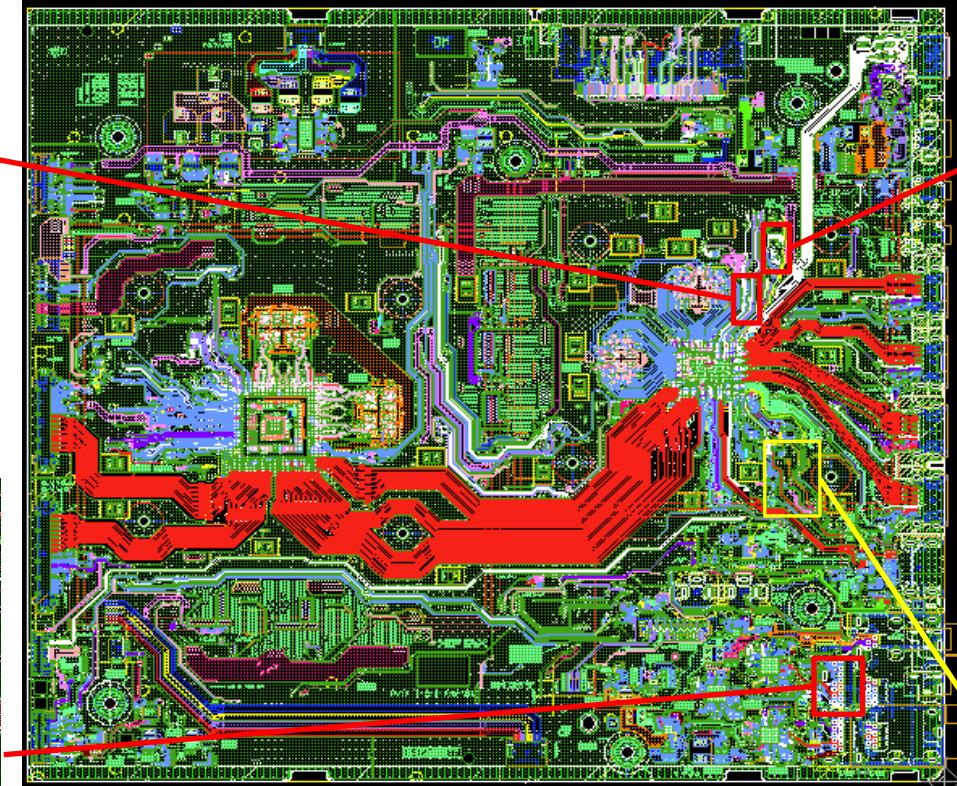

BM5STY Tuner portion(Top View)

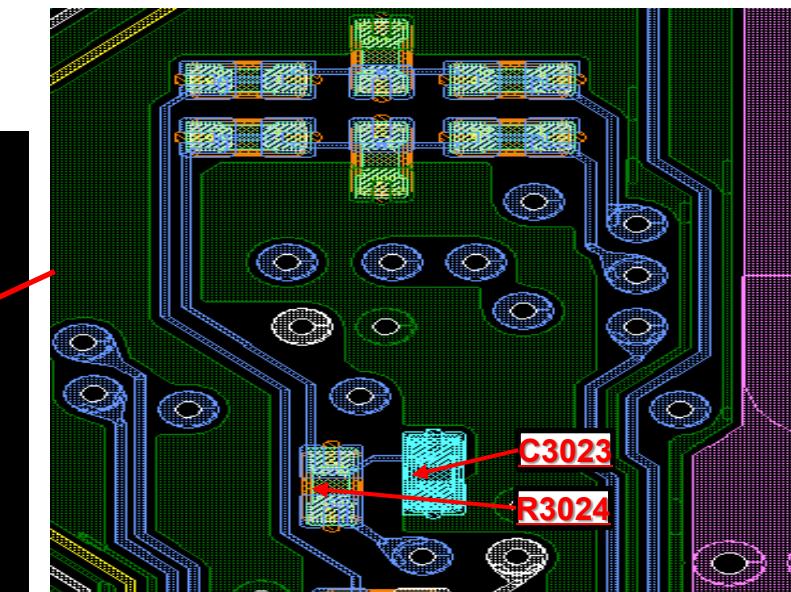


BM5STY Tuner portion(Top View)

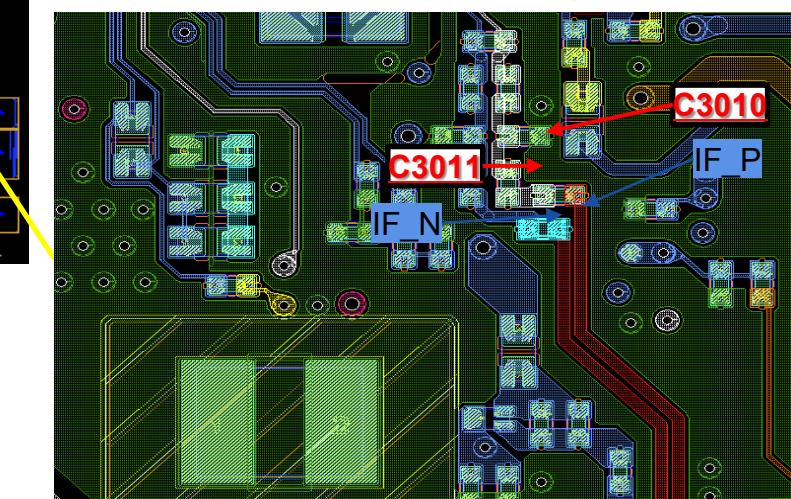

TROUBLESHOOTING





4.4 No Picture at Tuner

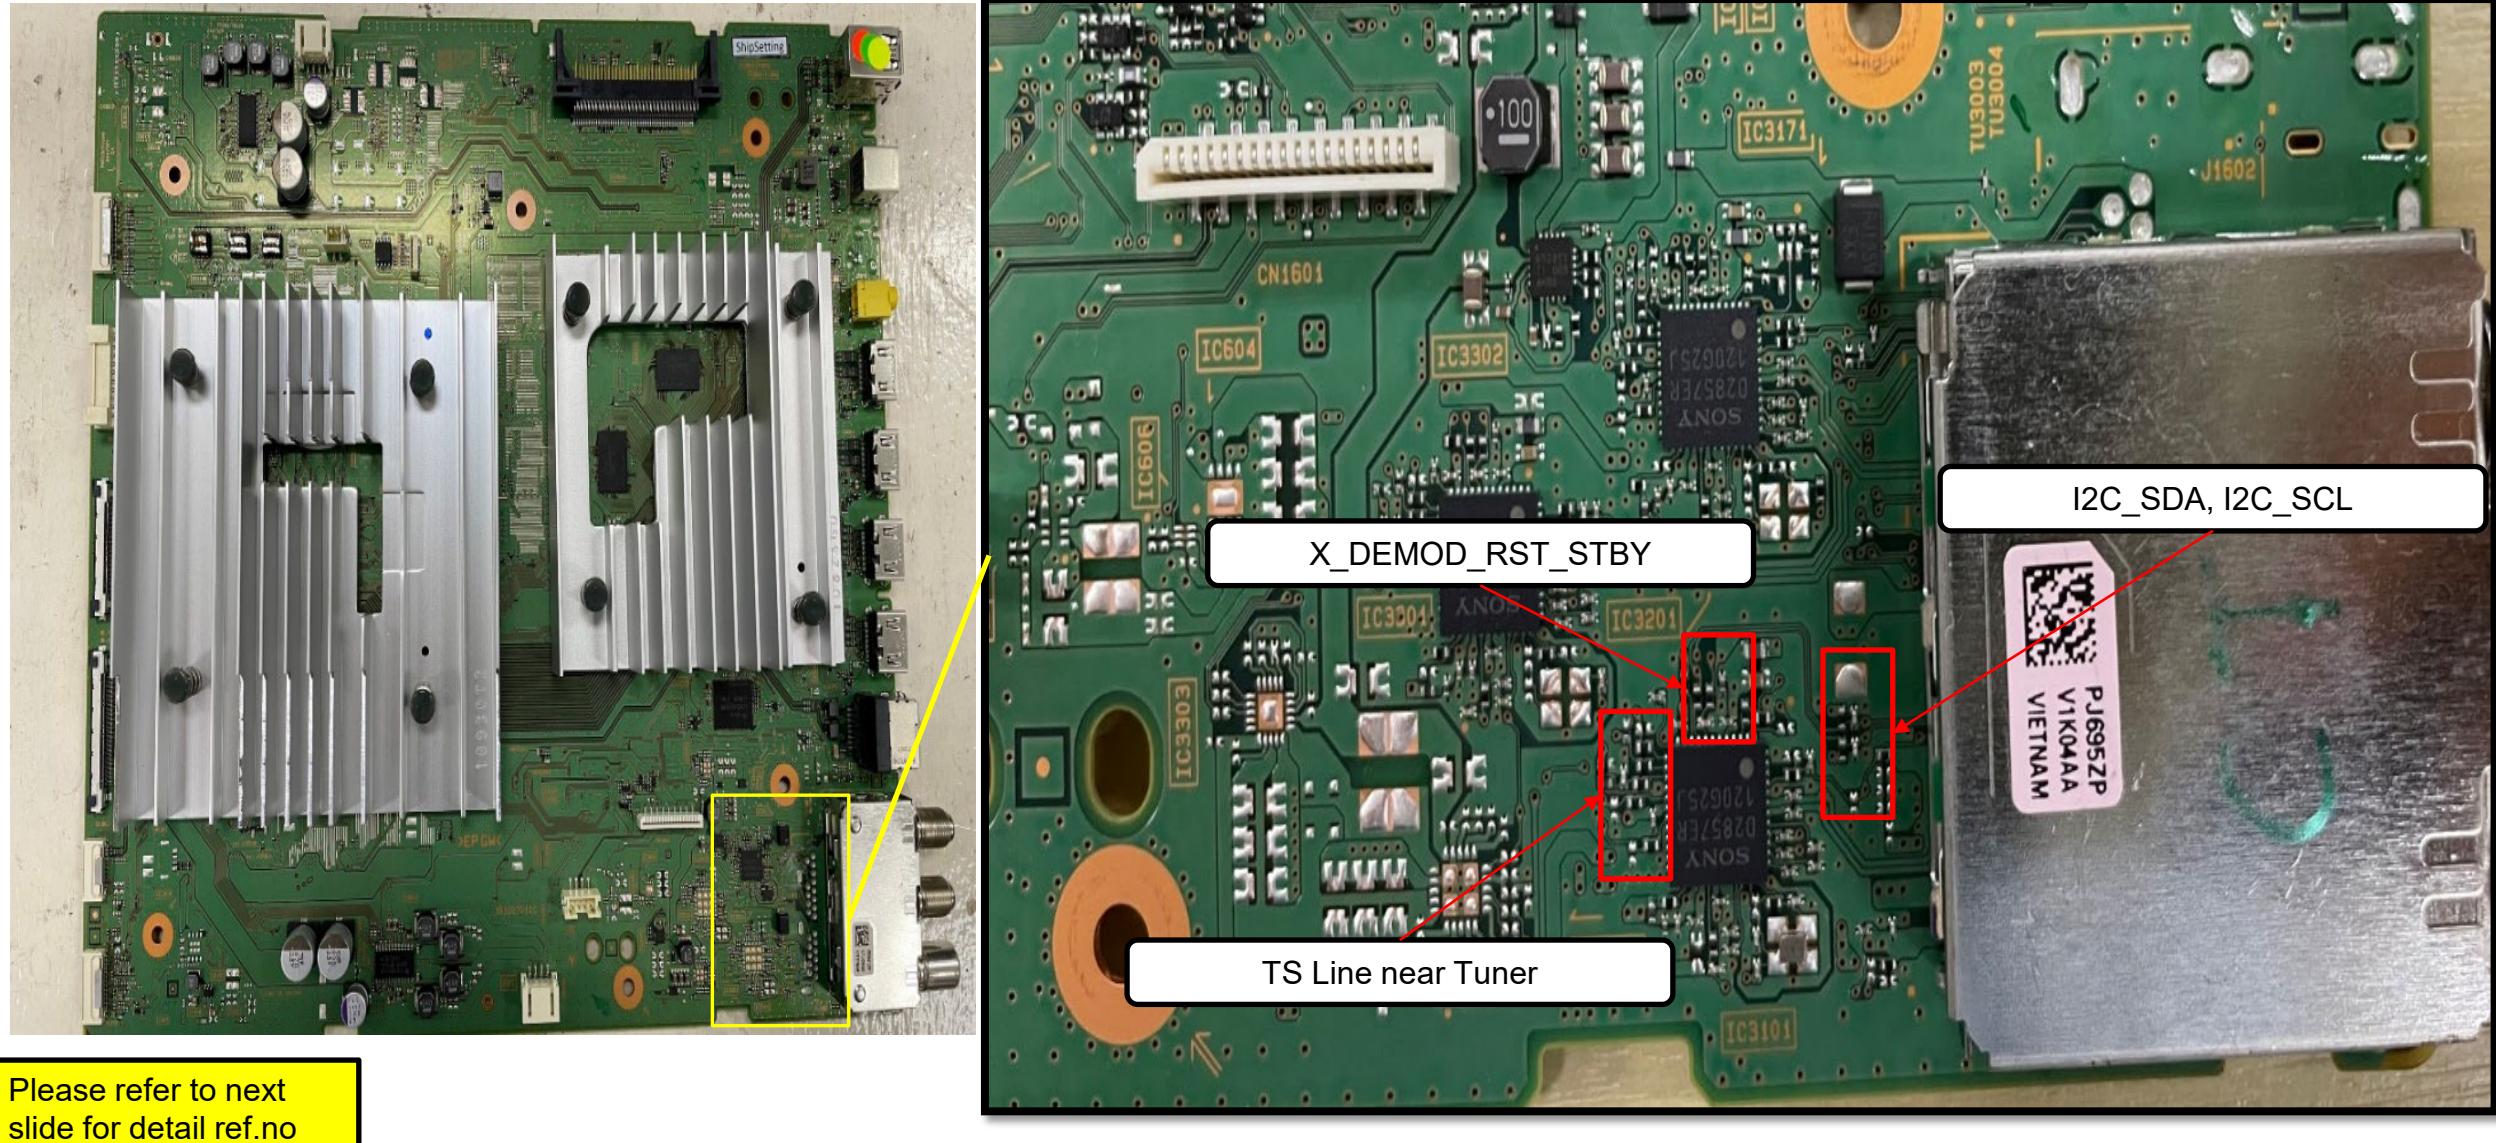

Please refer to next slide for detail ref.no and part location.


TROUBLESHOOTING

4.4 No Picture at Tuner - I2C_SDA, I2C_SCL, TS Lines(Near tuner), X_DEMOD_RST_STBY

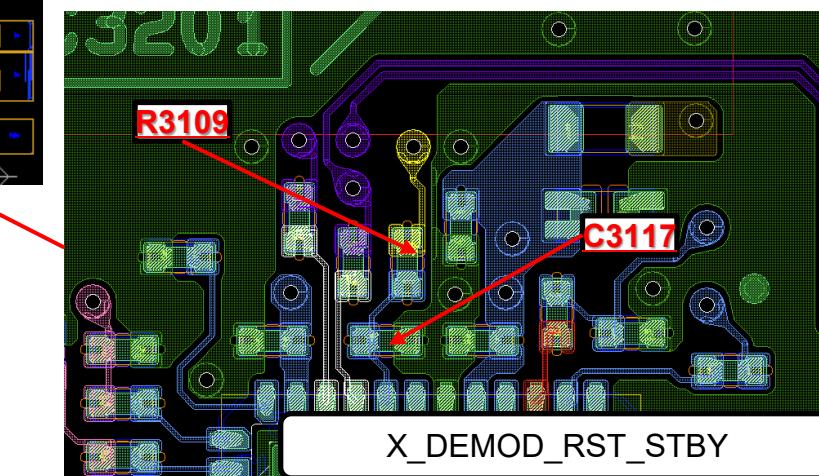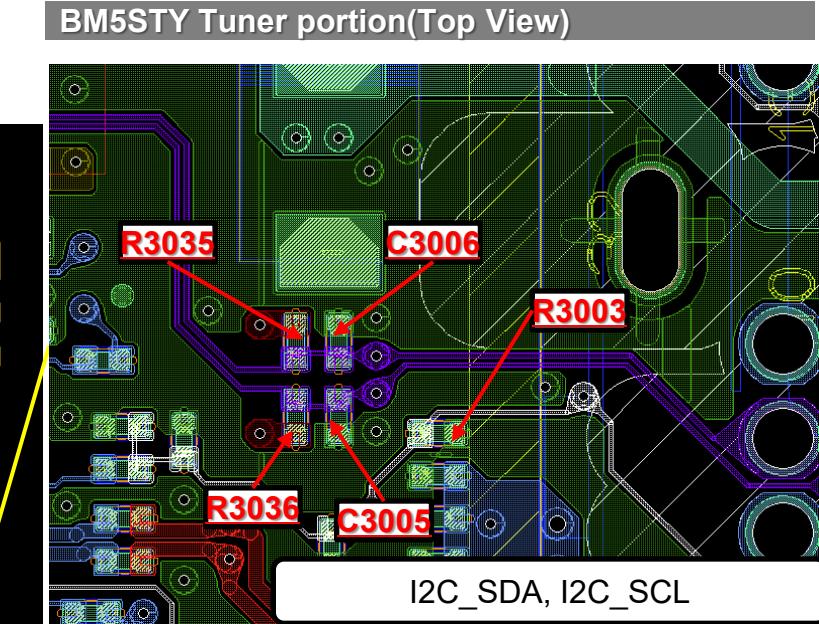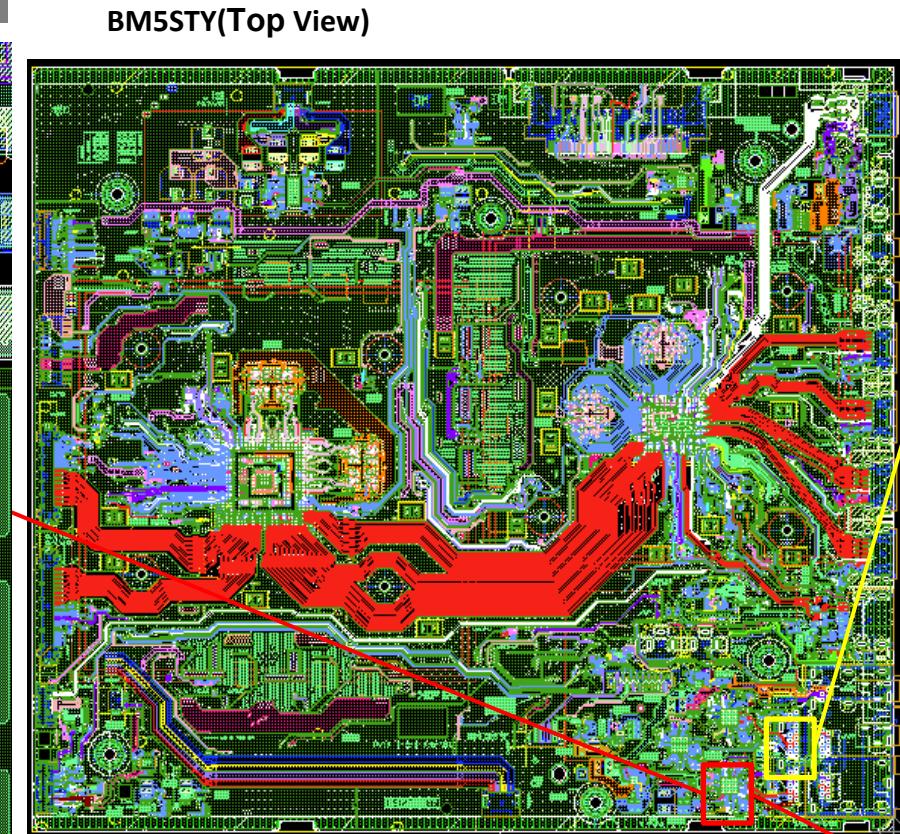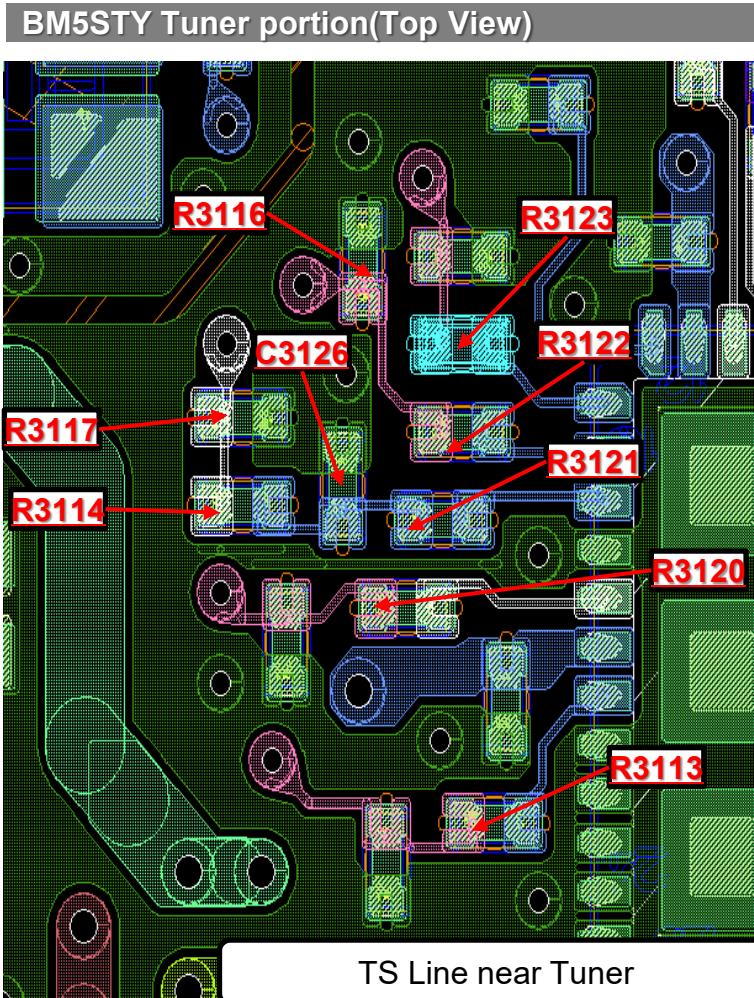


TROUBLESHOOTING


4.4 No Picture at Tuner

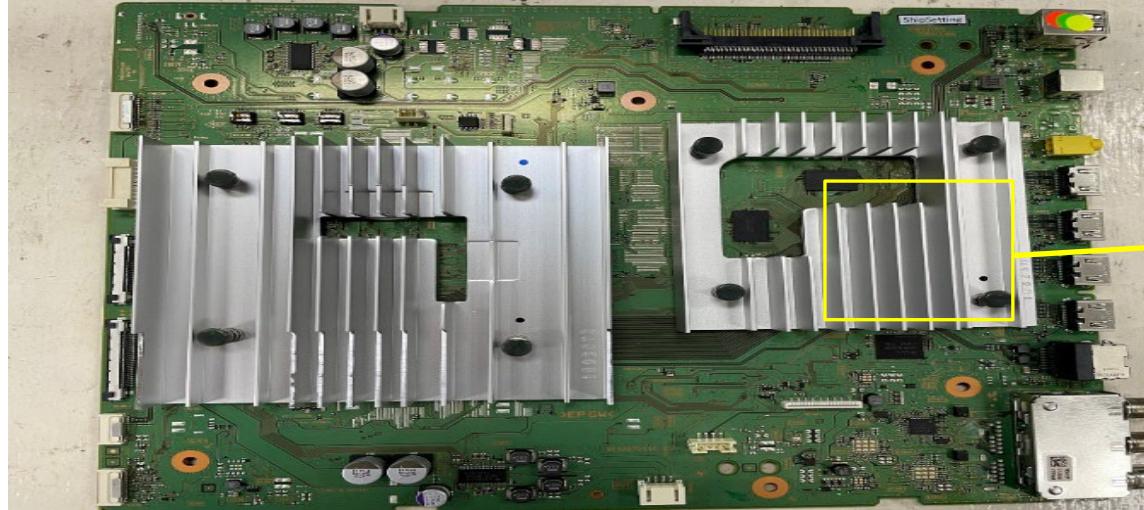


BM5STY Tuner portion(Top View)

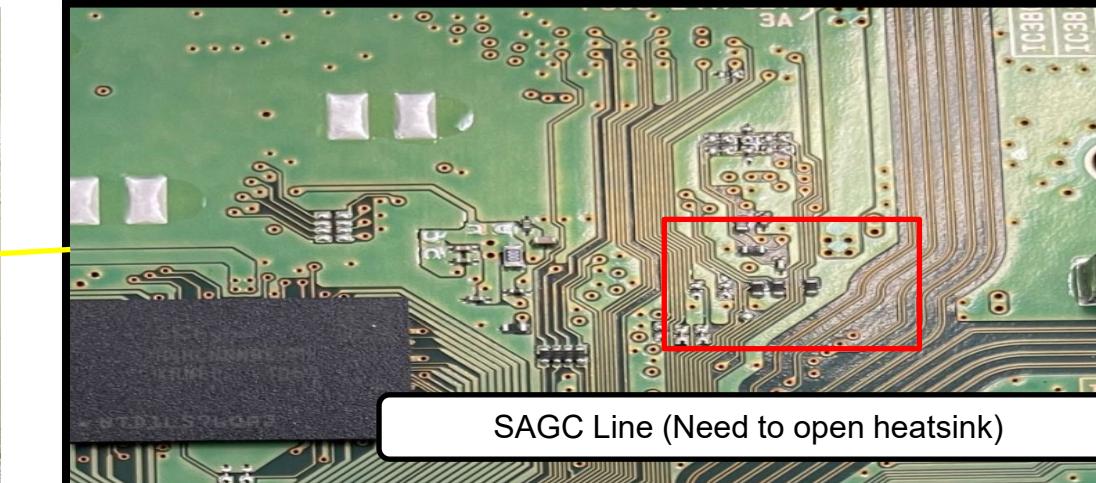

SAGC Line (Need to open heatsink)

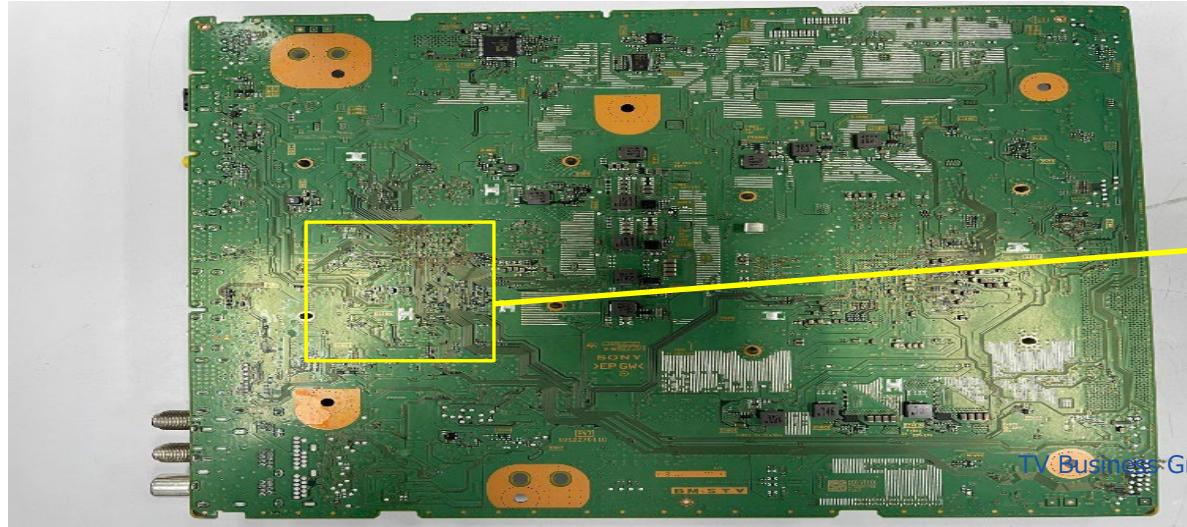

BM5STY Tuner portion(Bottom View)

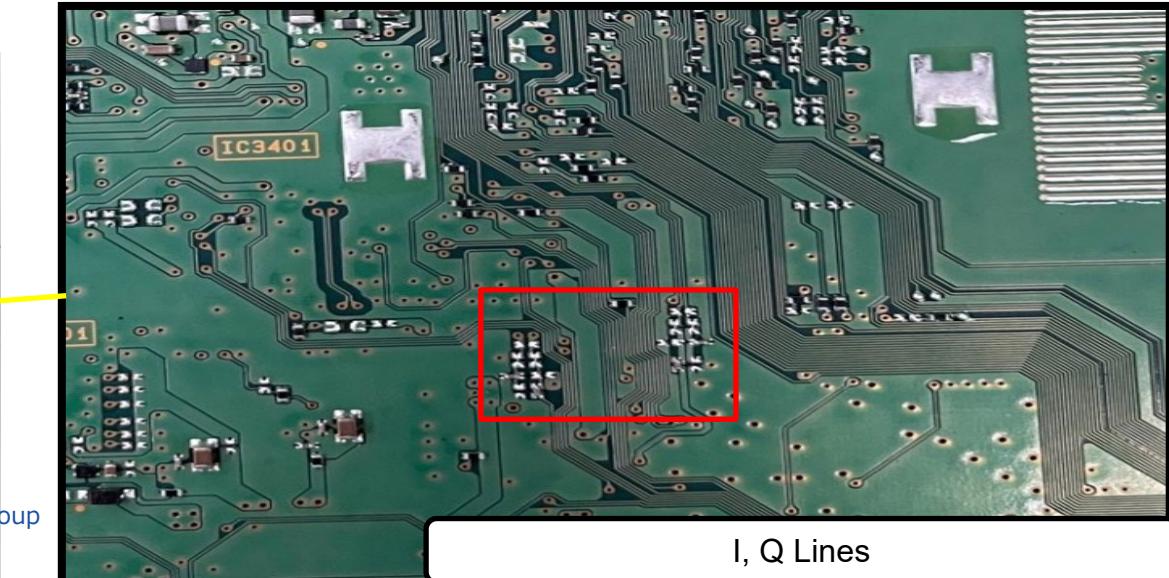


I, Q Lines


TROUBLESHOOTING

4.4 No Picture at Tuner - I,Q, SAGC(Near SOC)


BM5STY Tuner portion(Bottom View)

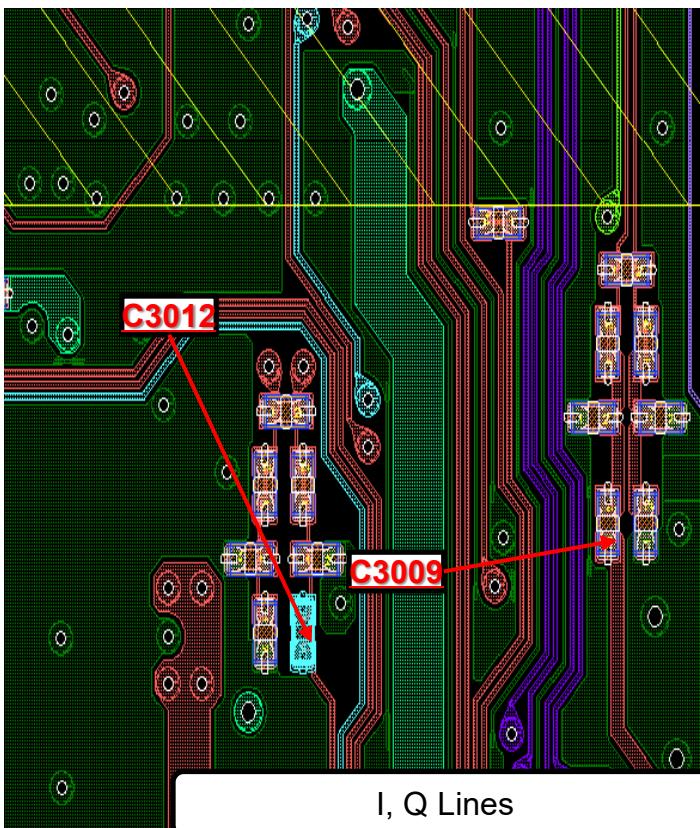

BM5STY(Top View)

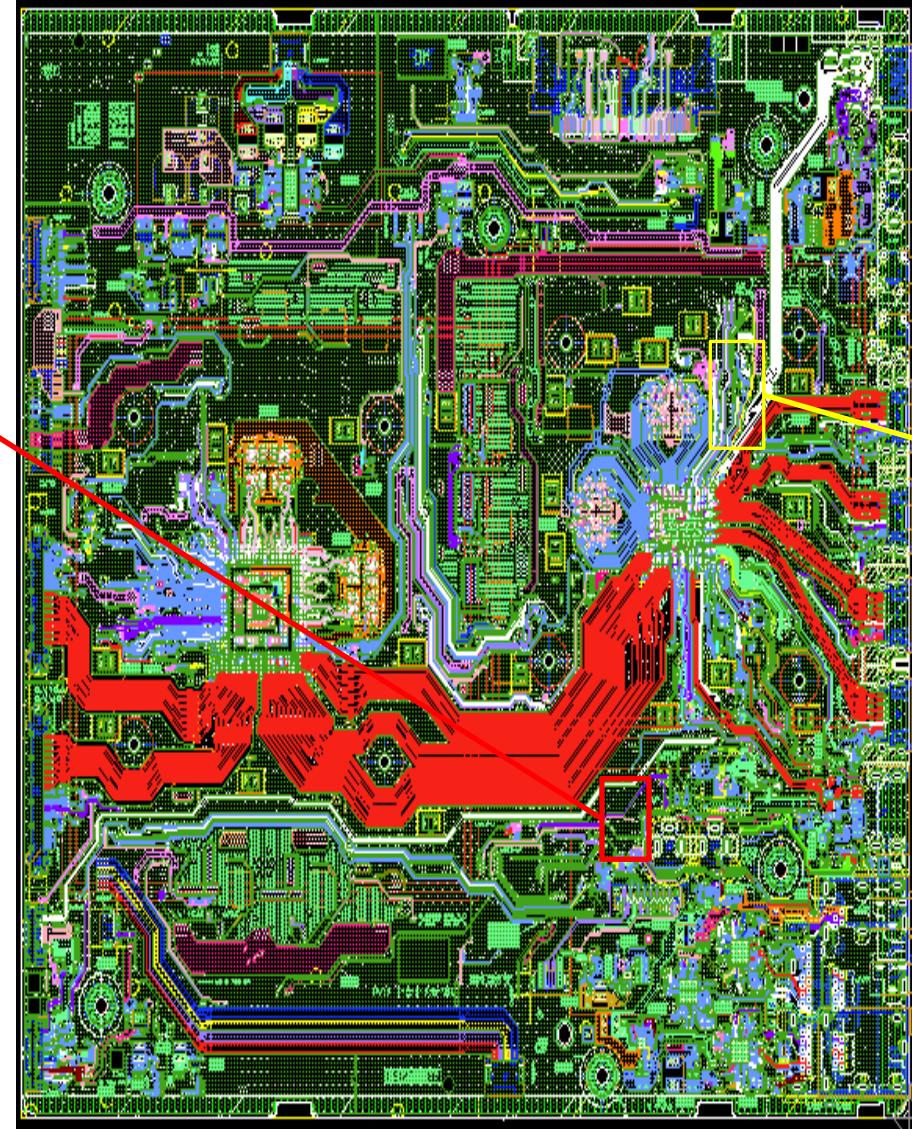


BM5STY Tuner portion(Top View)

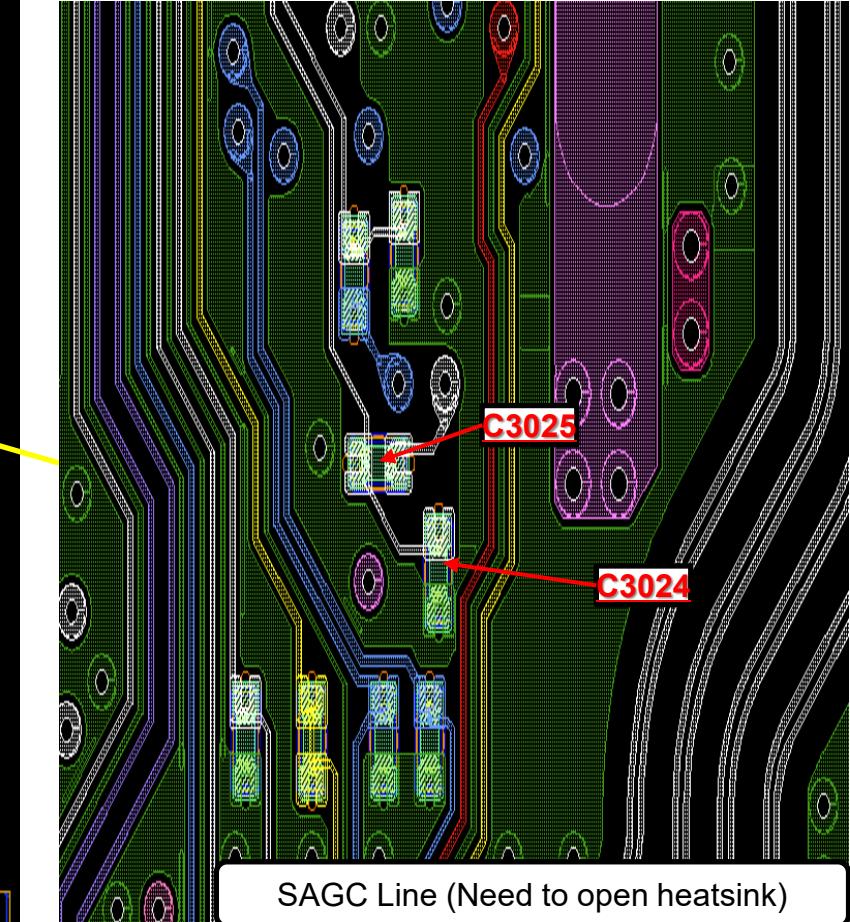


TROUBLESHOOTING

4.4 No Picture at Tuner – XR-83A80*

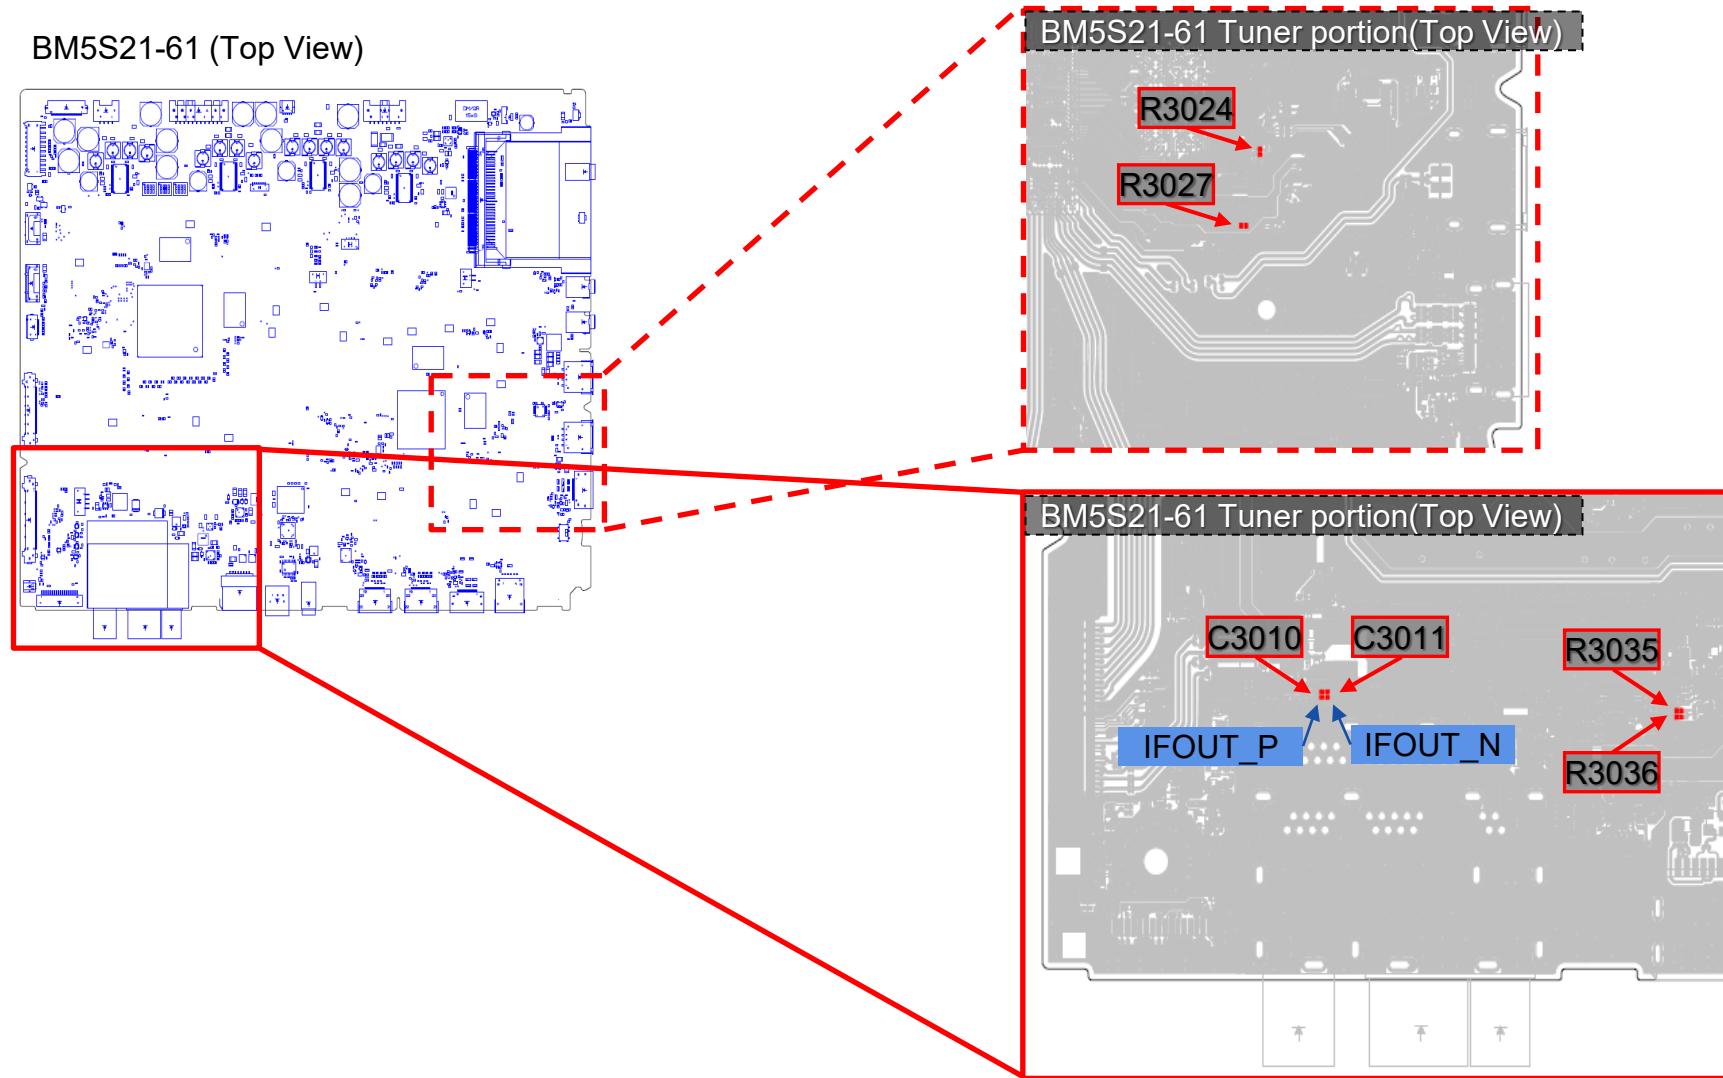


TROUBLESHOOTING

4.4 No Picture at Tuner – XR-83A80*

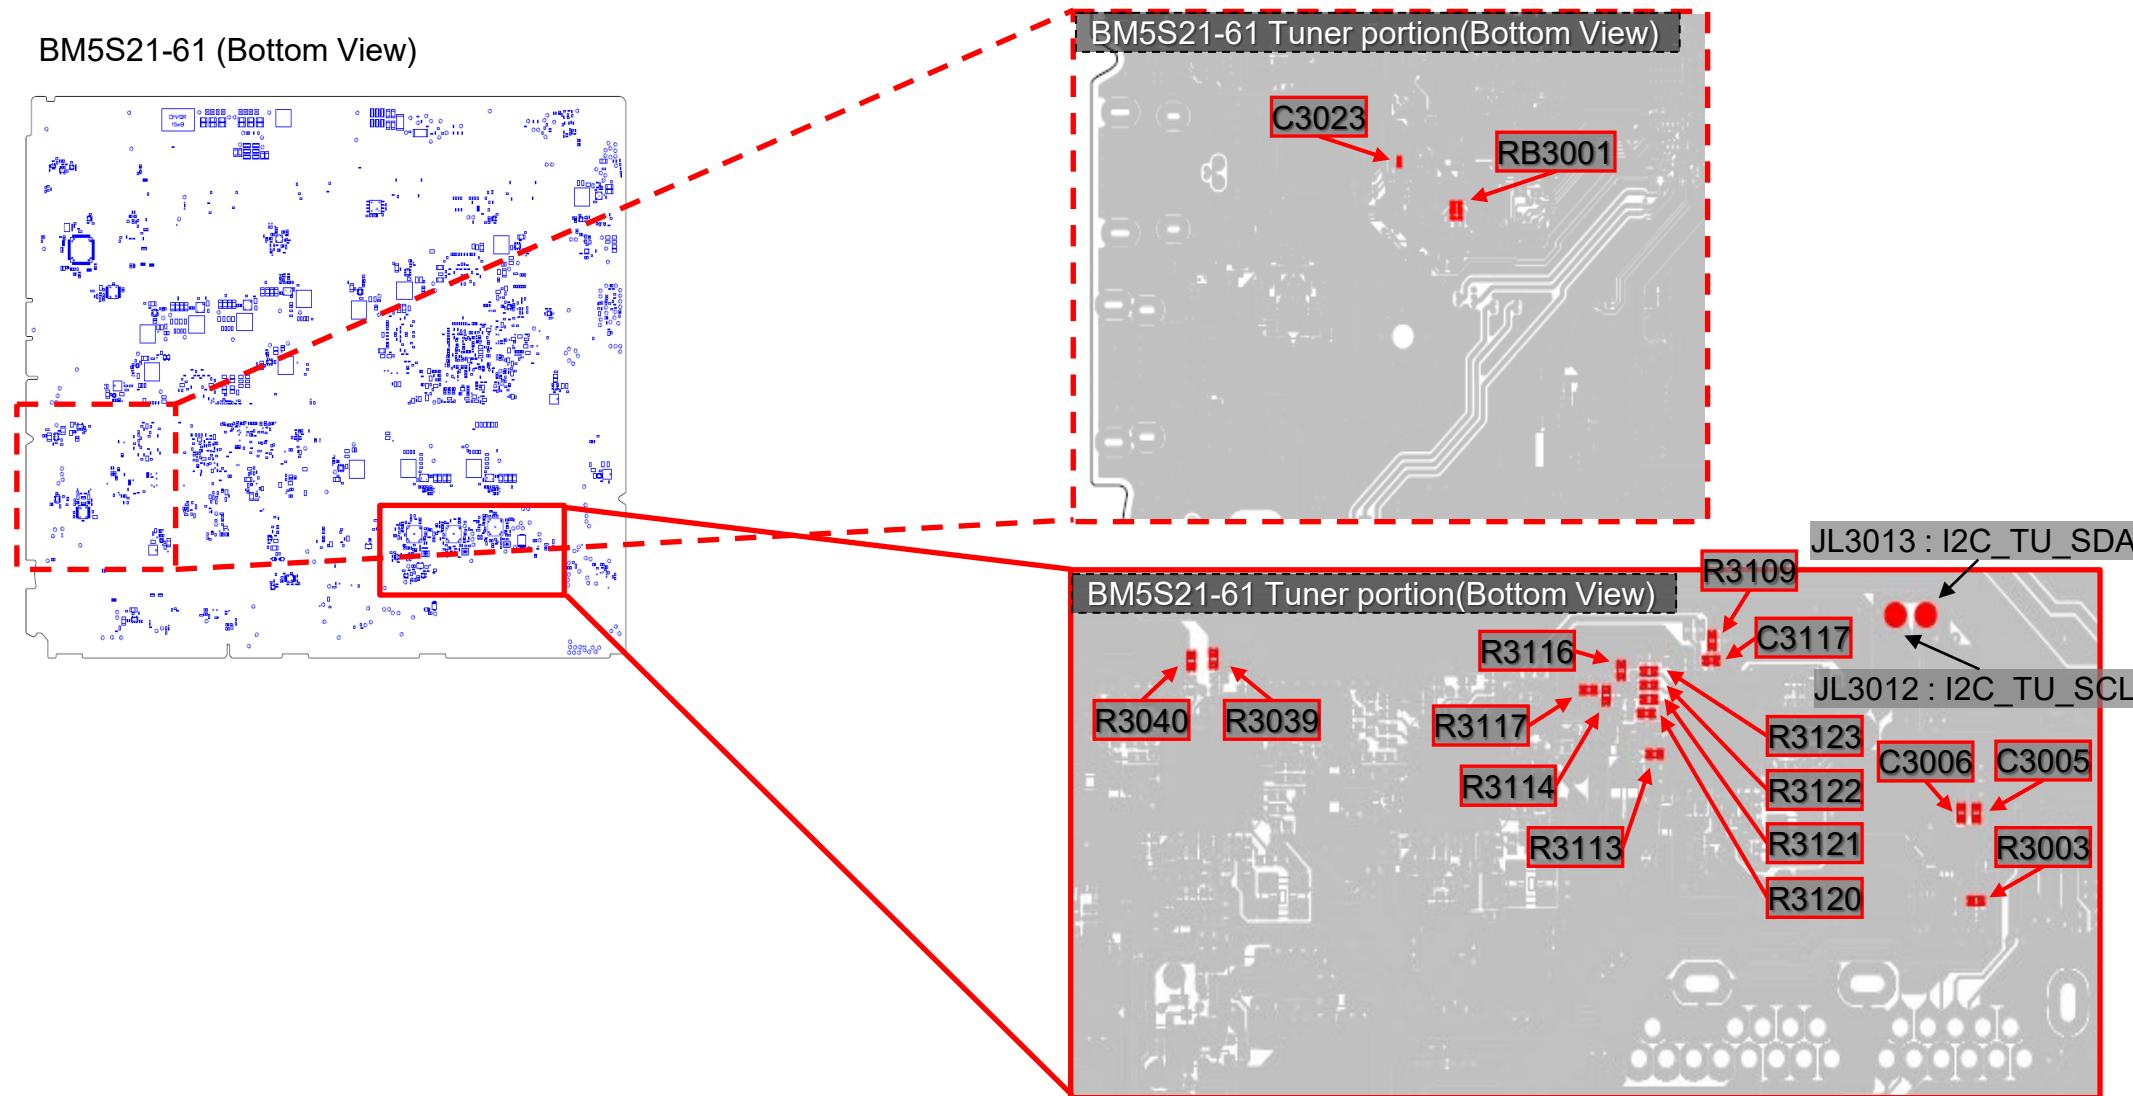


TROUBLESHOOTING

4.5 No Picture: HDMI 1/2/3/4

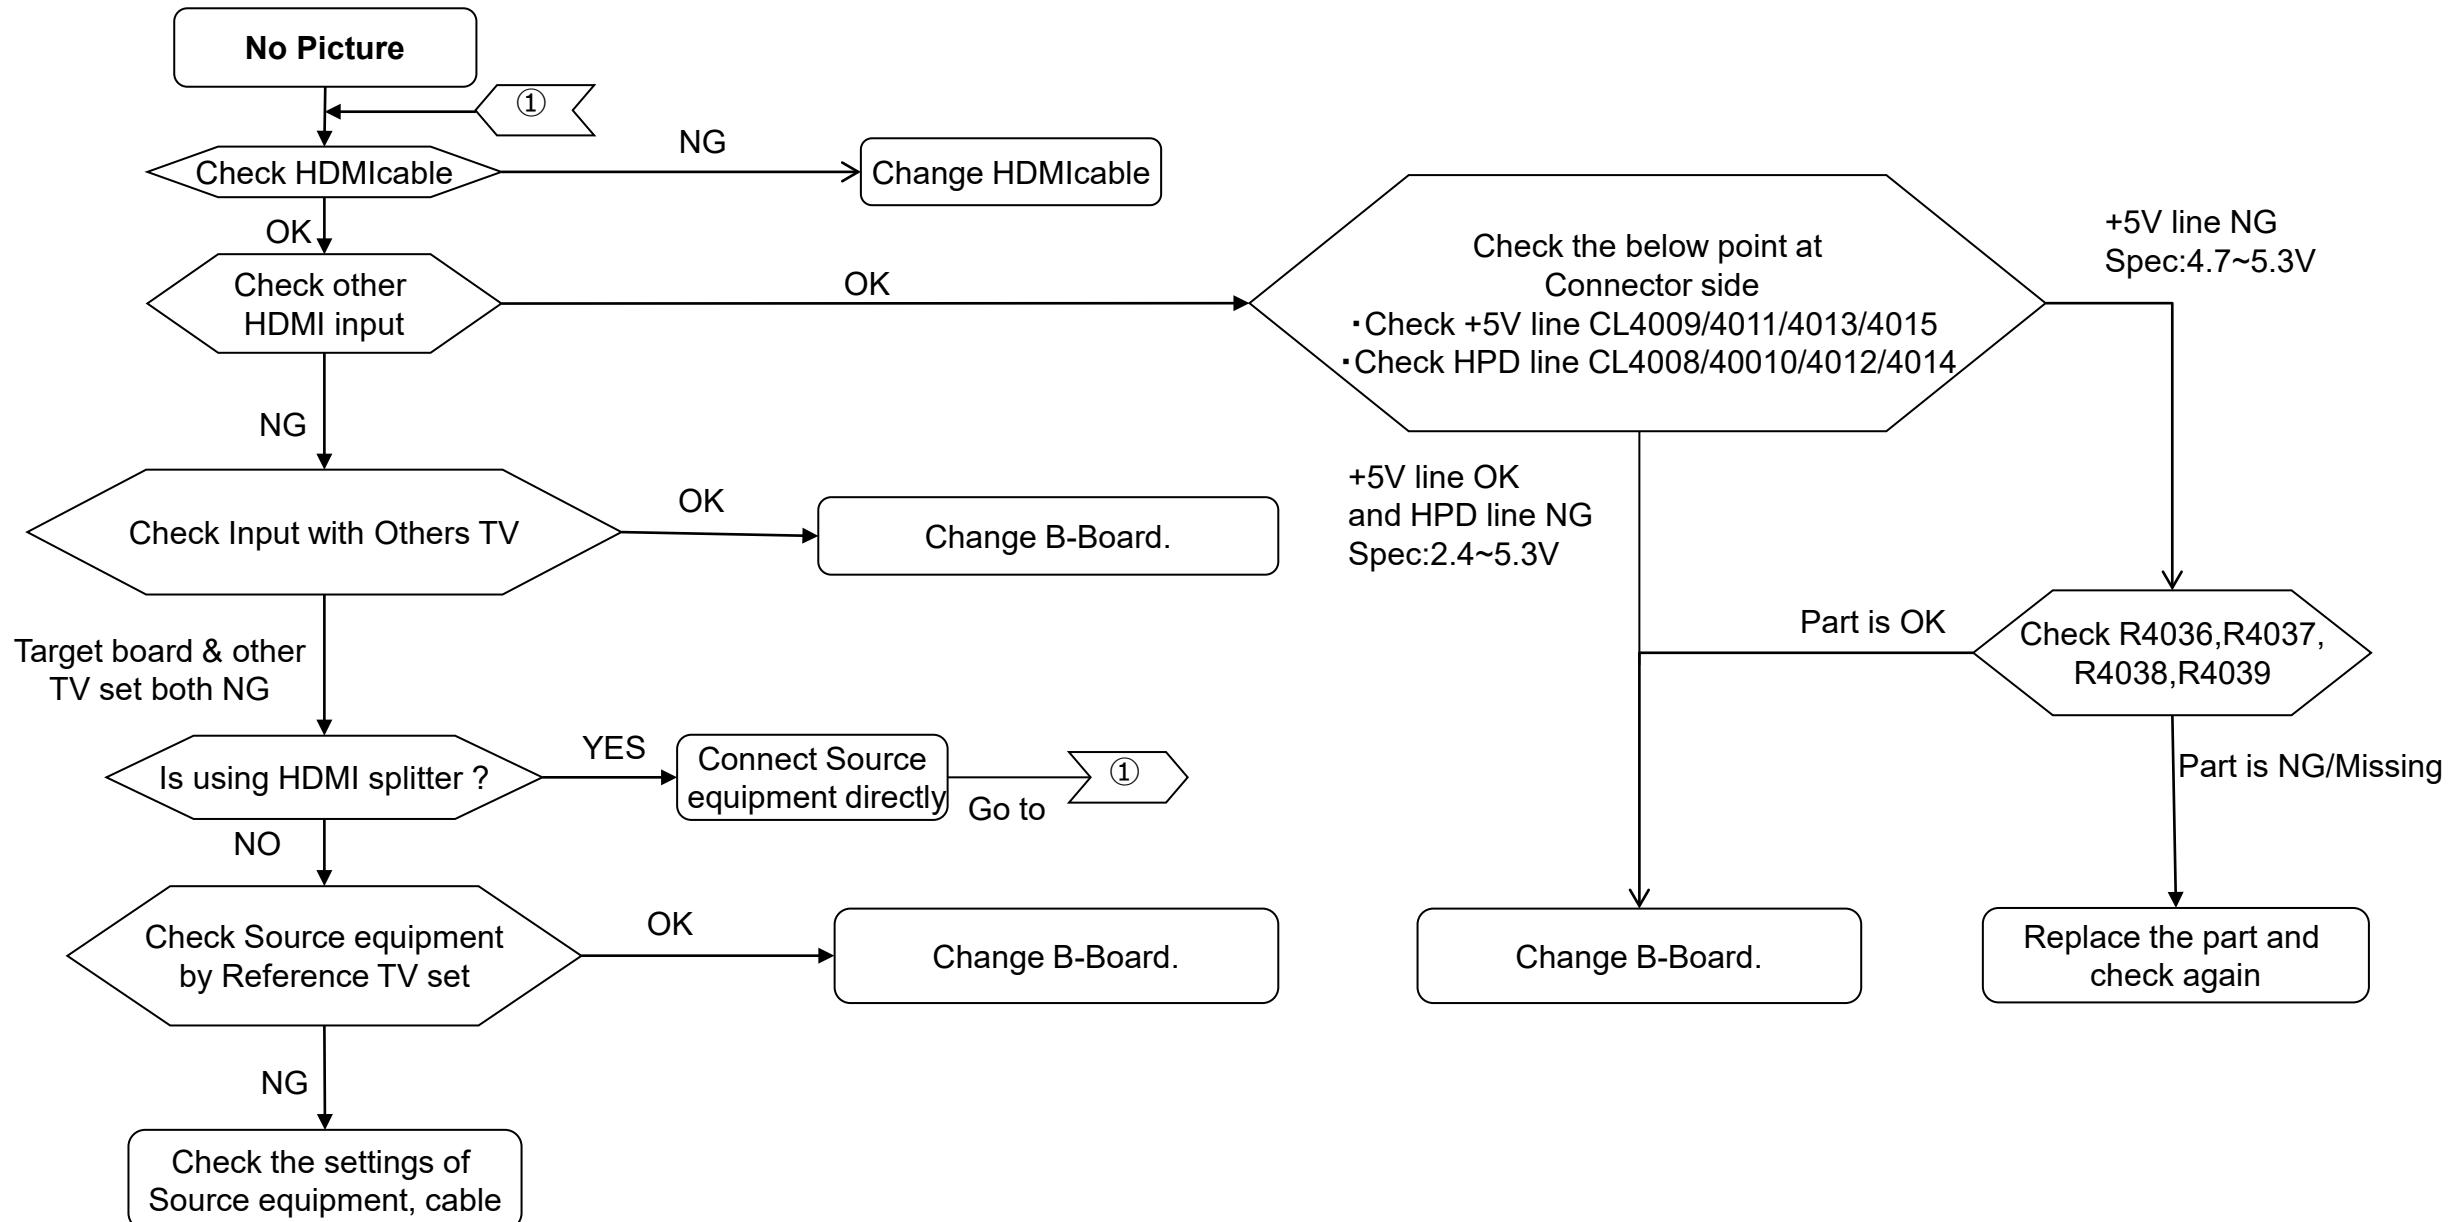

TROUBLESHOOTING

4.5 No Picture: HDMI 1/2/3/4 – XR-83A80*

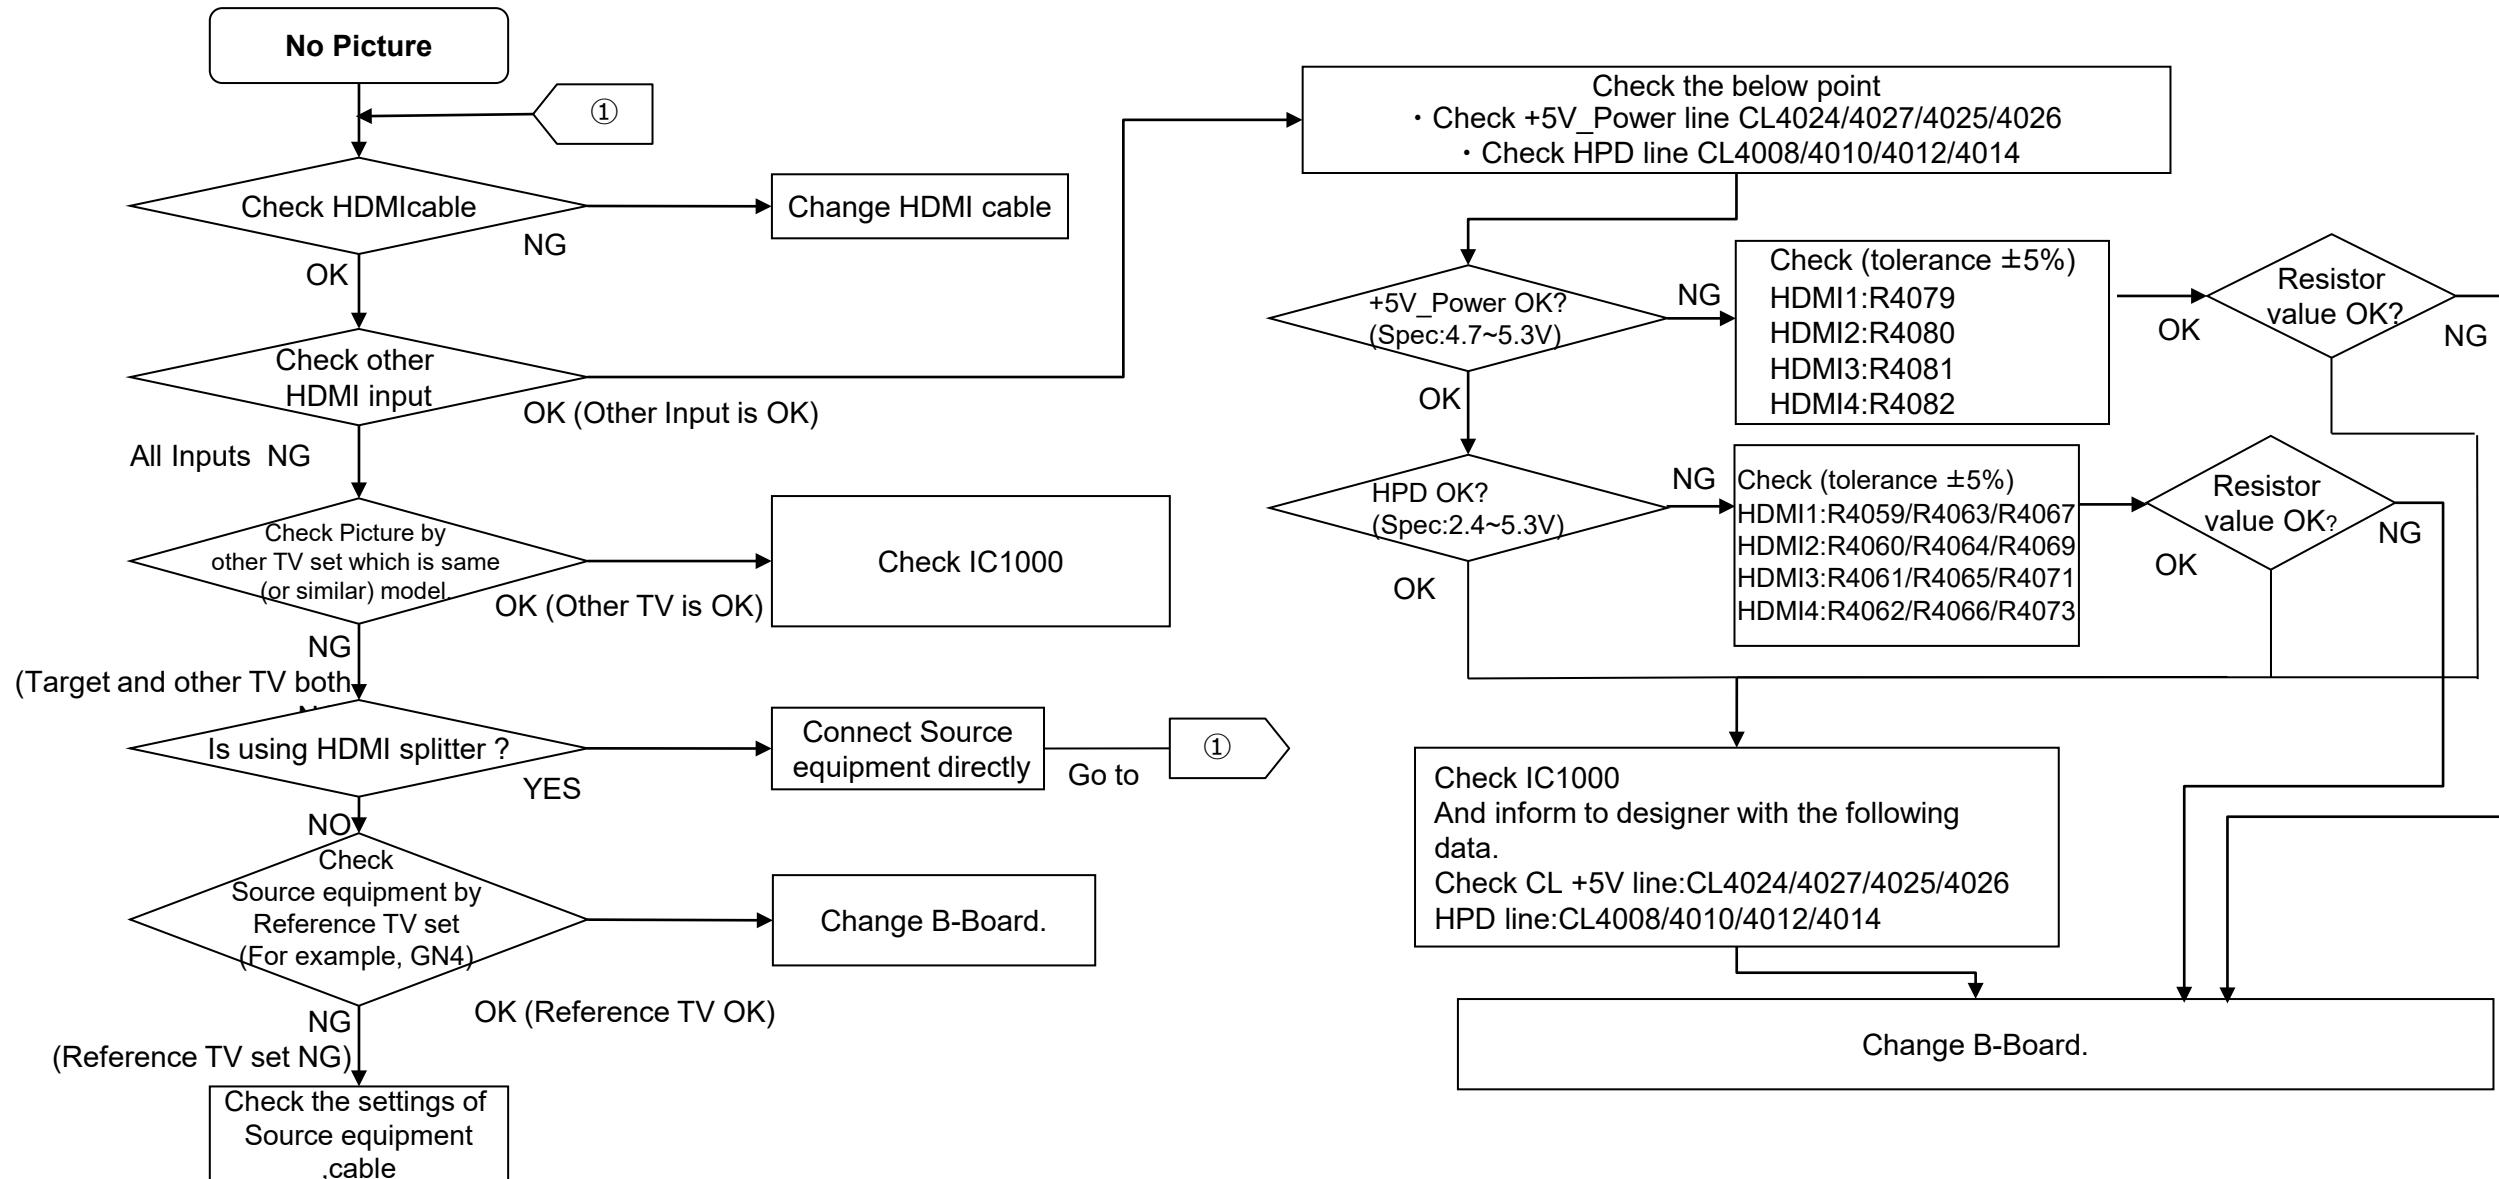

TROUBLESHOOTING


4.5 No Picture: Check Points HDMI 1,2,3 & 4

HDMI 1
+5V part :R4036
+5V line :CL4009
HPD line :CL4008

HDMI 2
+5V part :R4037
+5V line :CL4011
HPD line :CL4010

HDMI 3
+5V part :R4038
+5V line :CL4013
HPD line :CL4012

HDMI 4
+5V part :R4039
+5V line :CL4015
HPD line :CL4014

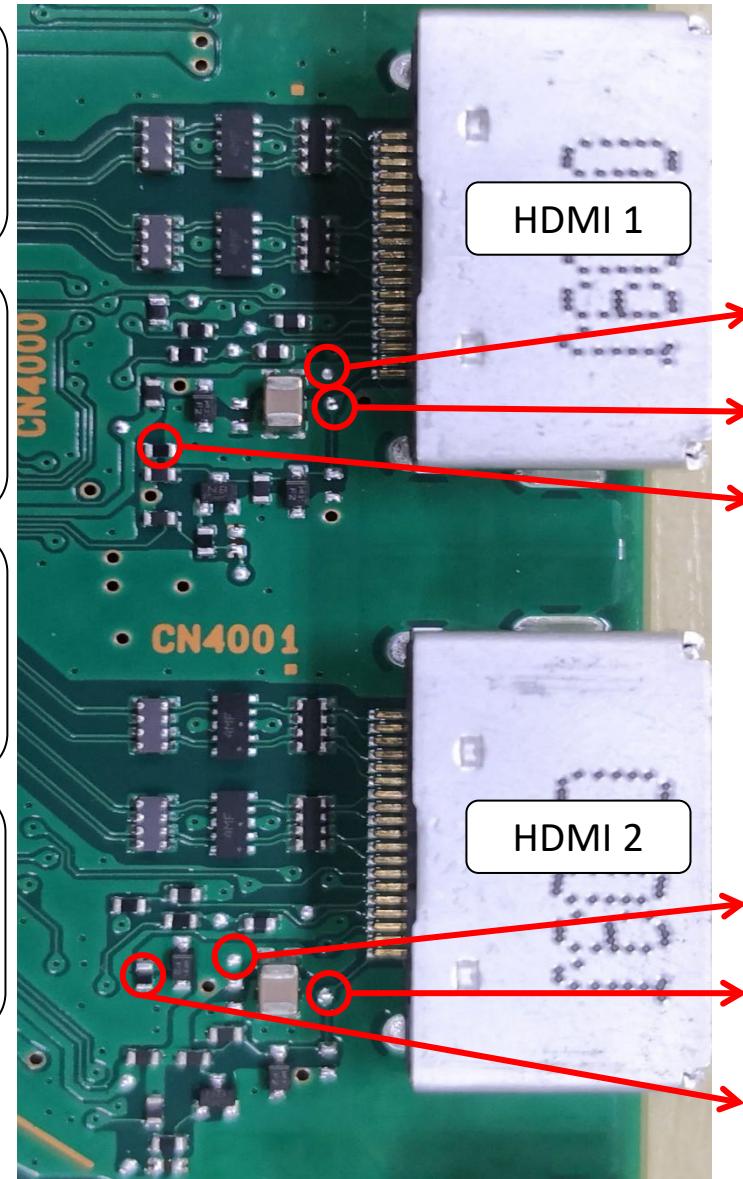


HDMI 1

- CL4009
- CL4008
- R4036

HDMI 2

- CL4011
- CL4010
- R4037

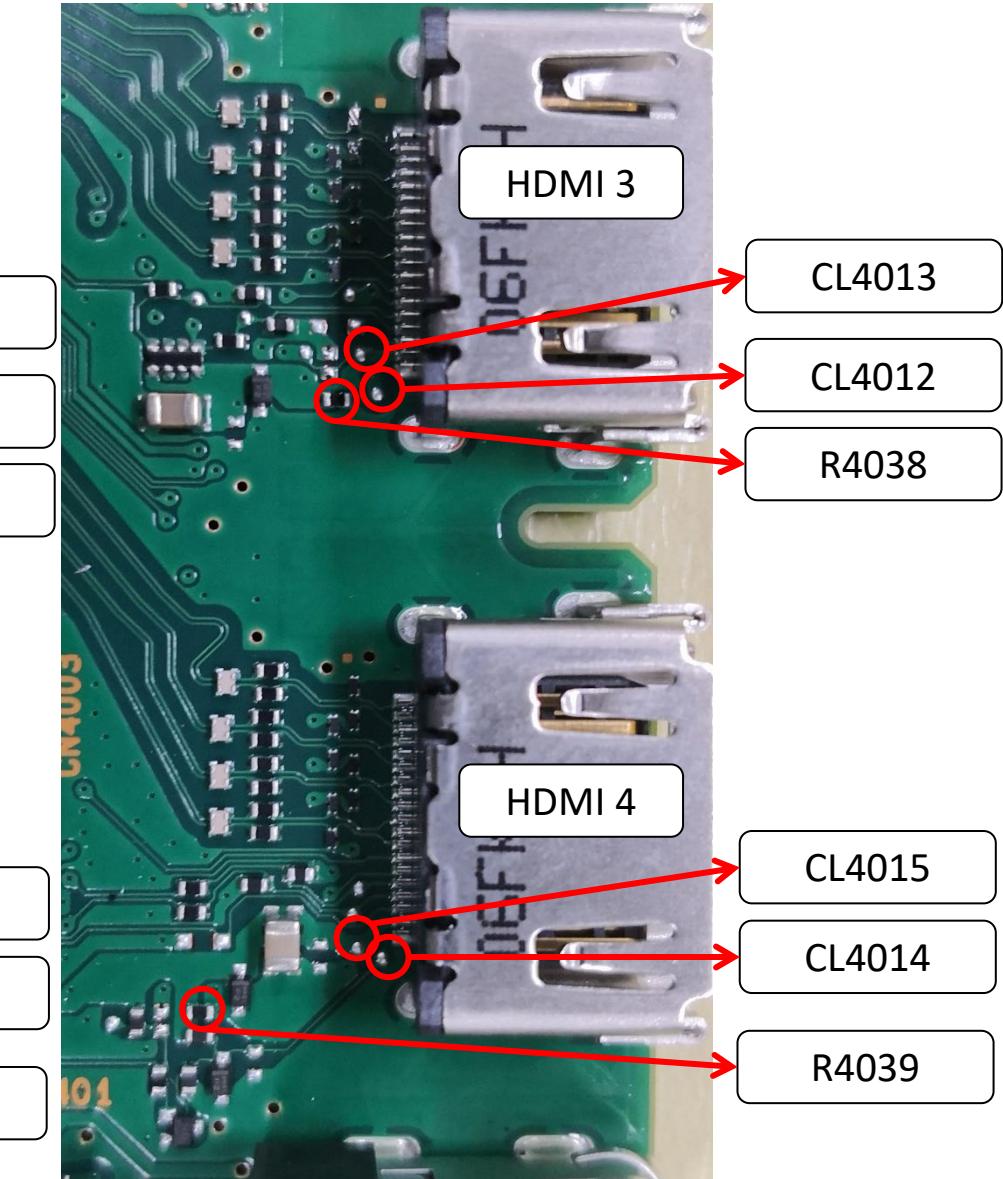

HDMI 3


- CL4013
- CL4012
- R4038

HDMI 4

- CL4015
- CL4014
- R4039


TROUBLESHOOTING

5.0 Key Switch Button Error – H-board Switch

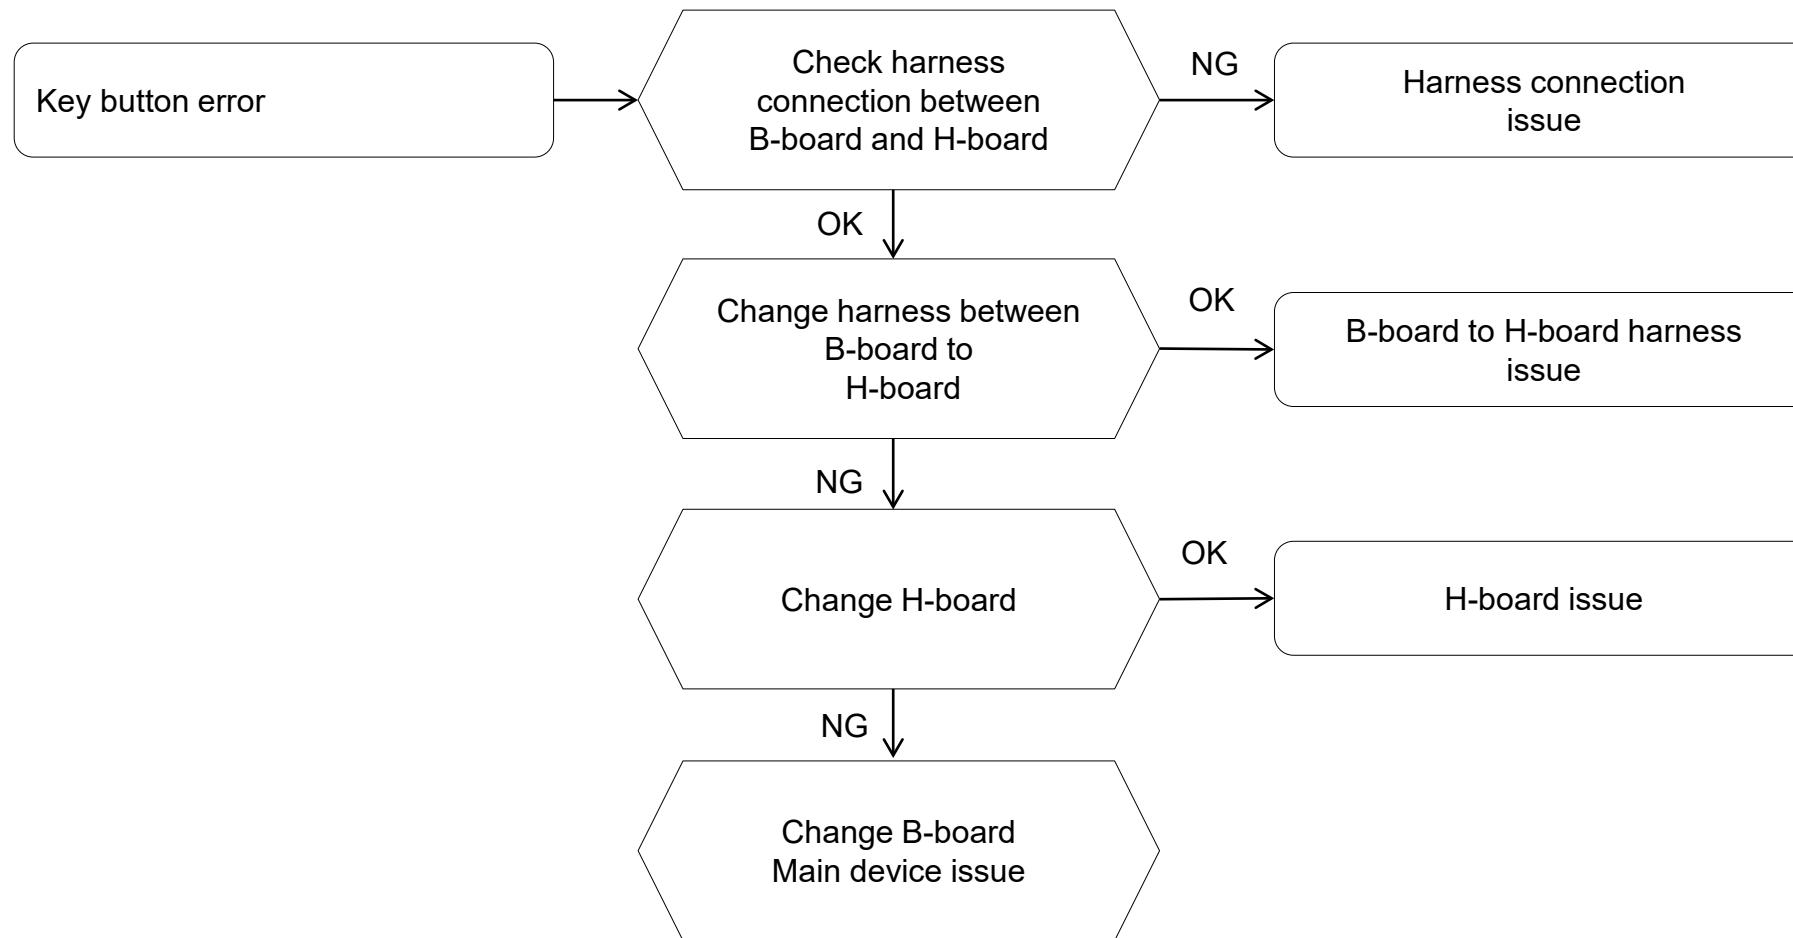


TROUBLESHOOTING

5.0 Key Switch Button Error - Switch module – XR-83A80*

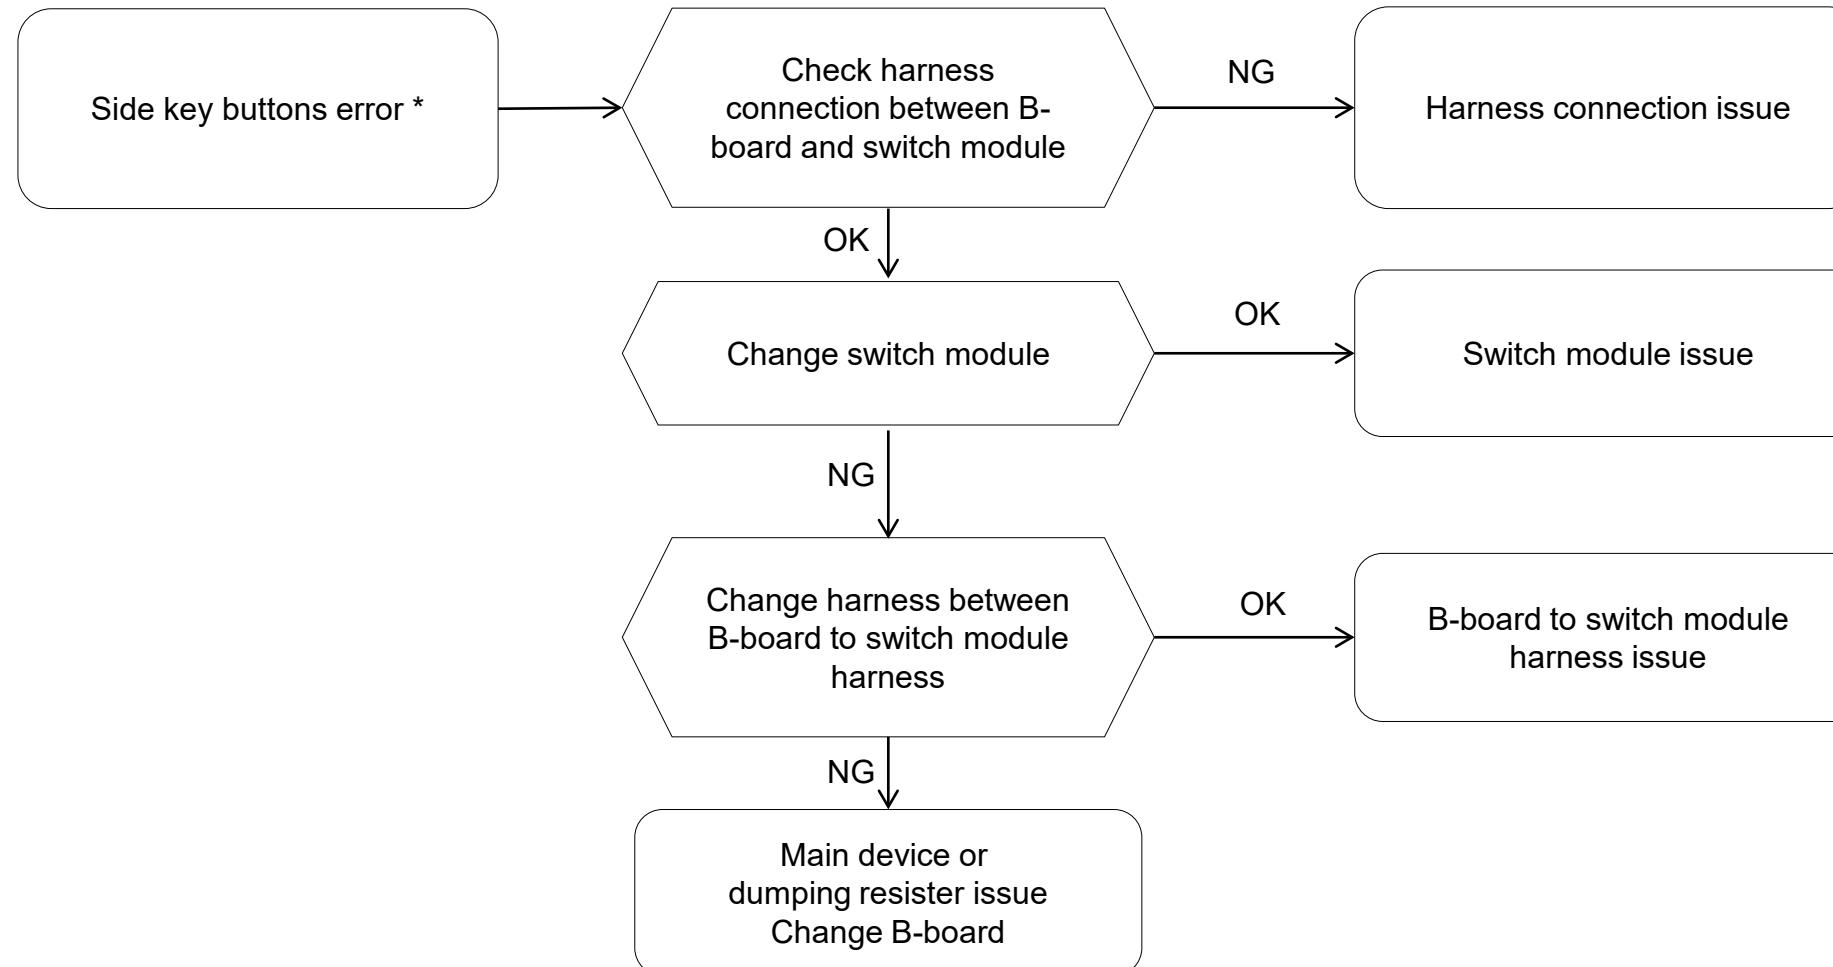


TROUBLESHOOTING

5.1 IR Remote Commander Error

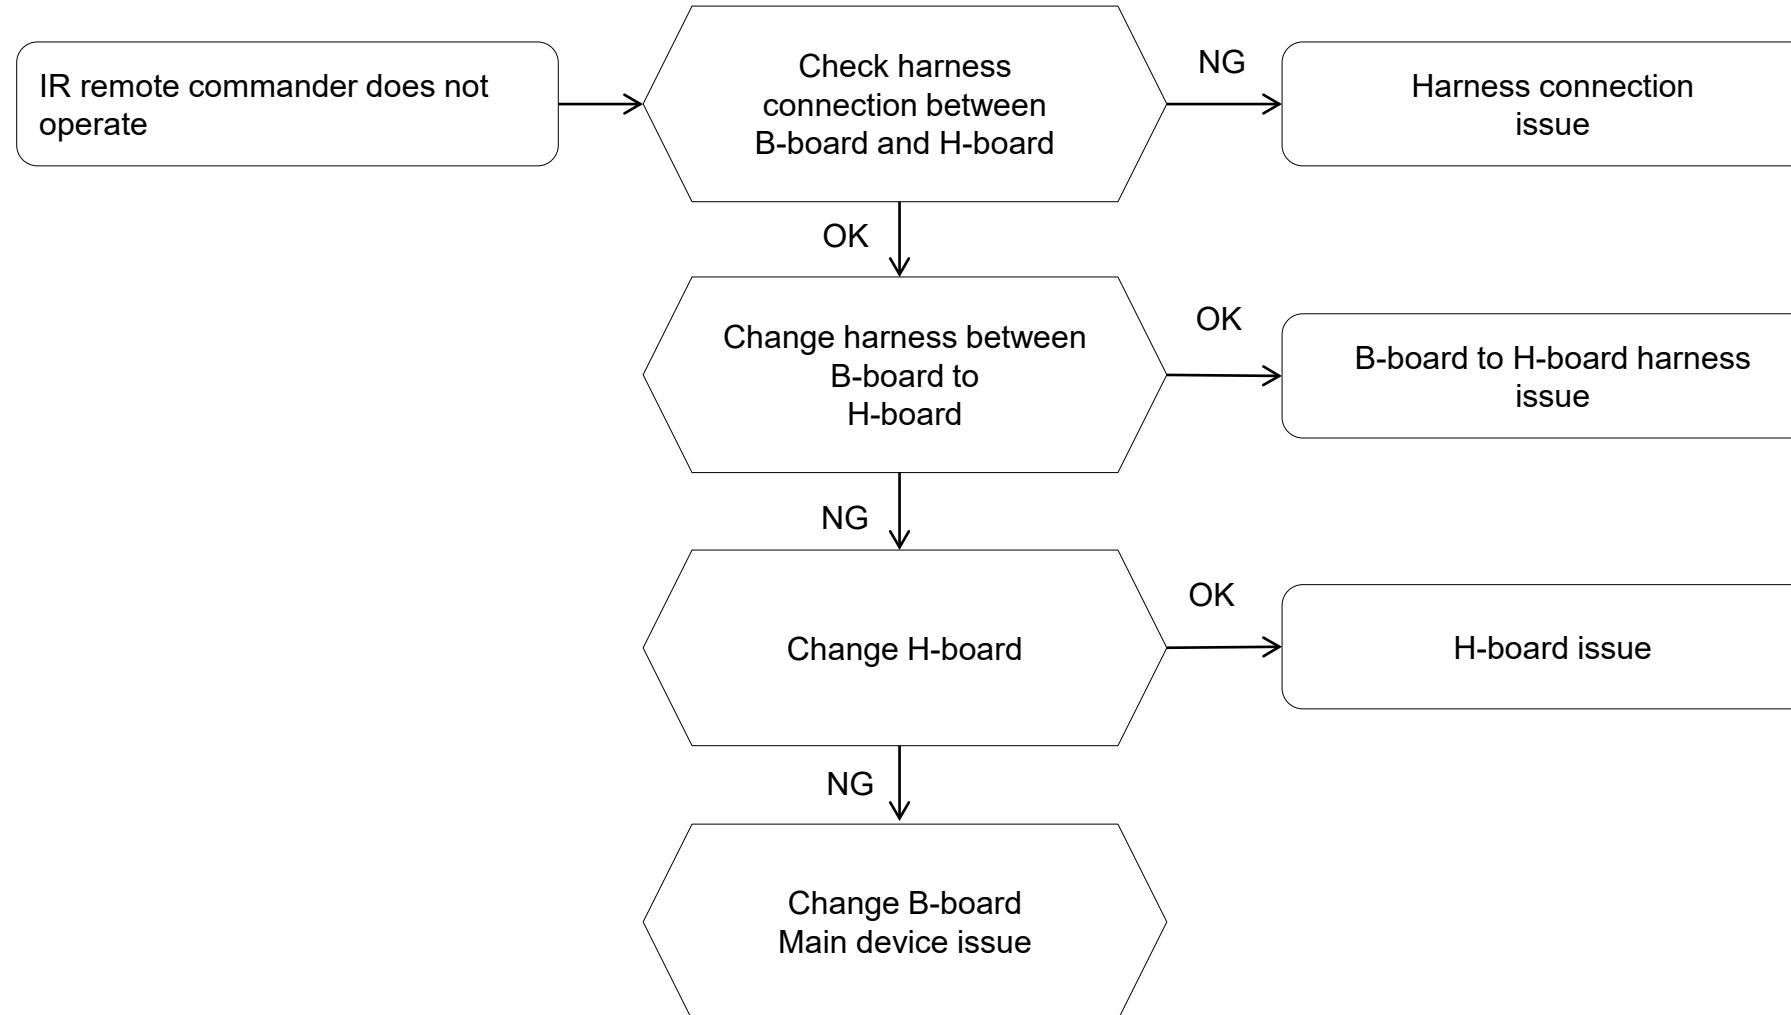

TROUBLESHOOTING


5.2 Light Sensor Error

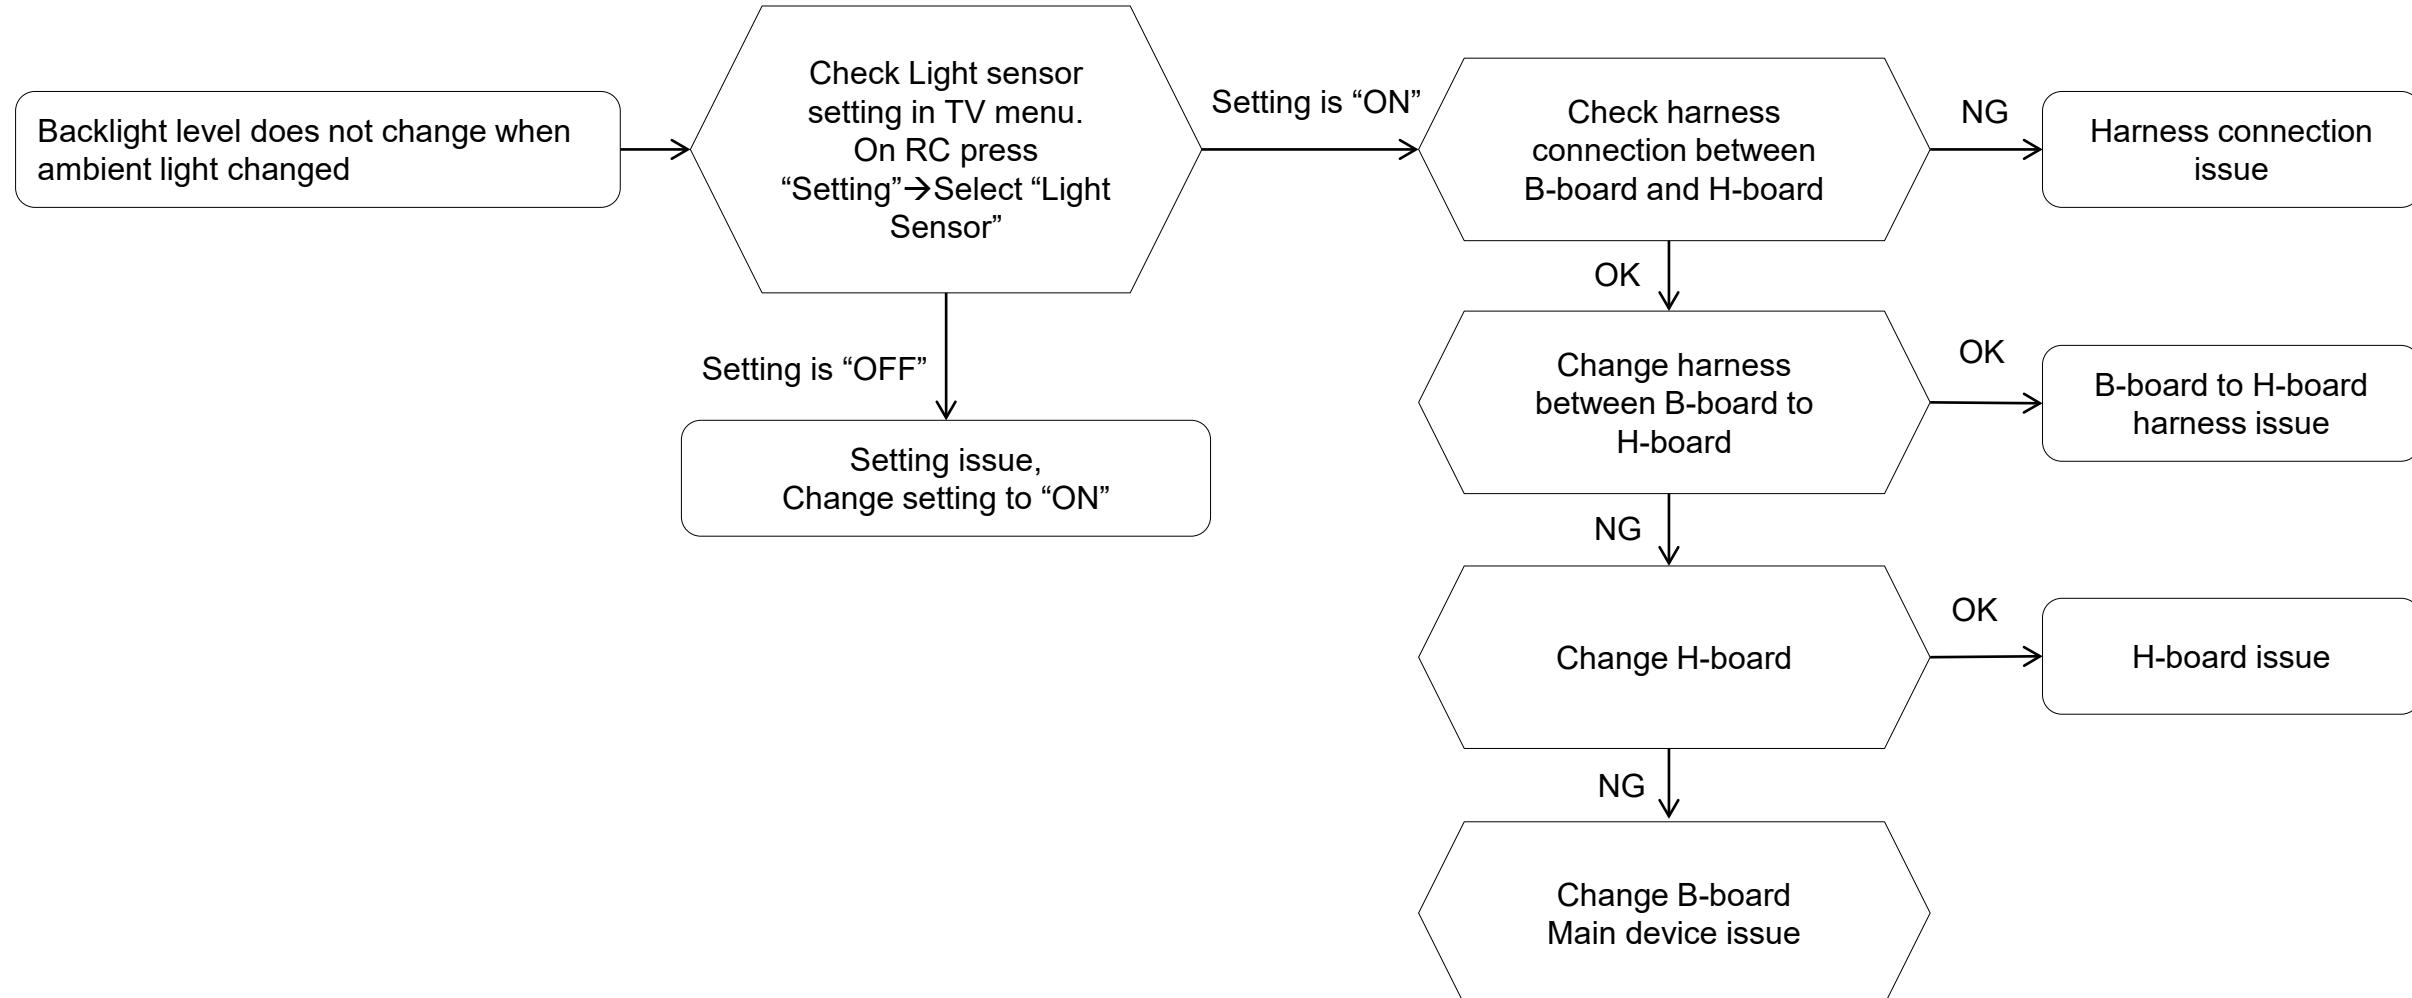

TROUBLESHOOTING

5.3 CAS ID Unknown

Digital broadcasting (terrestrial / satellite) cannot be received. And the message of Fig1 or Fig2 is displayed on the screen.

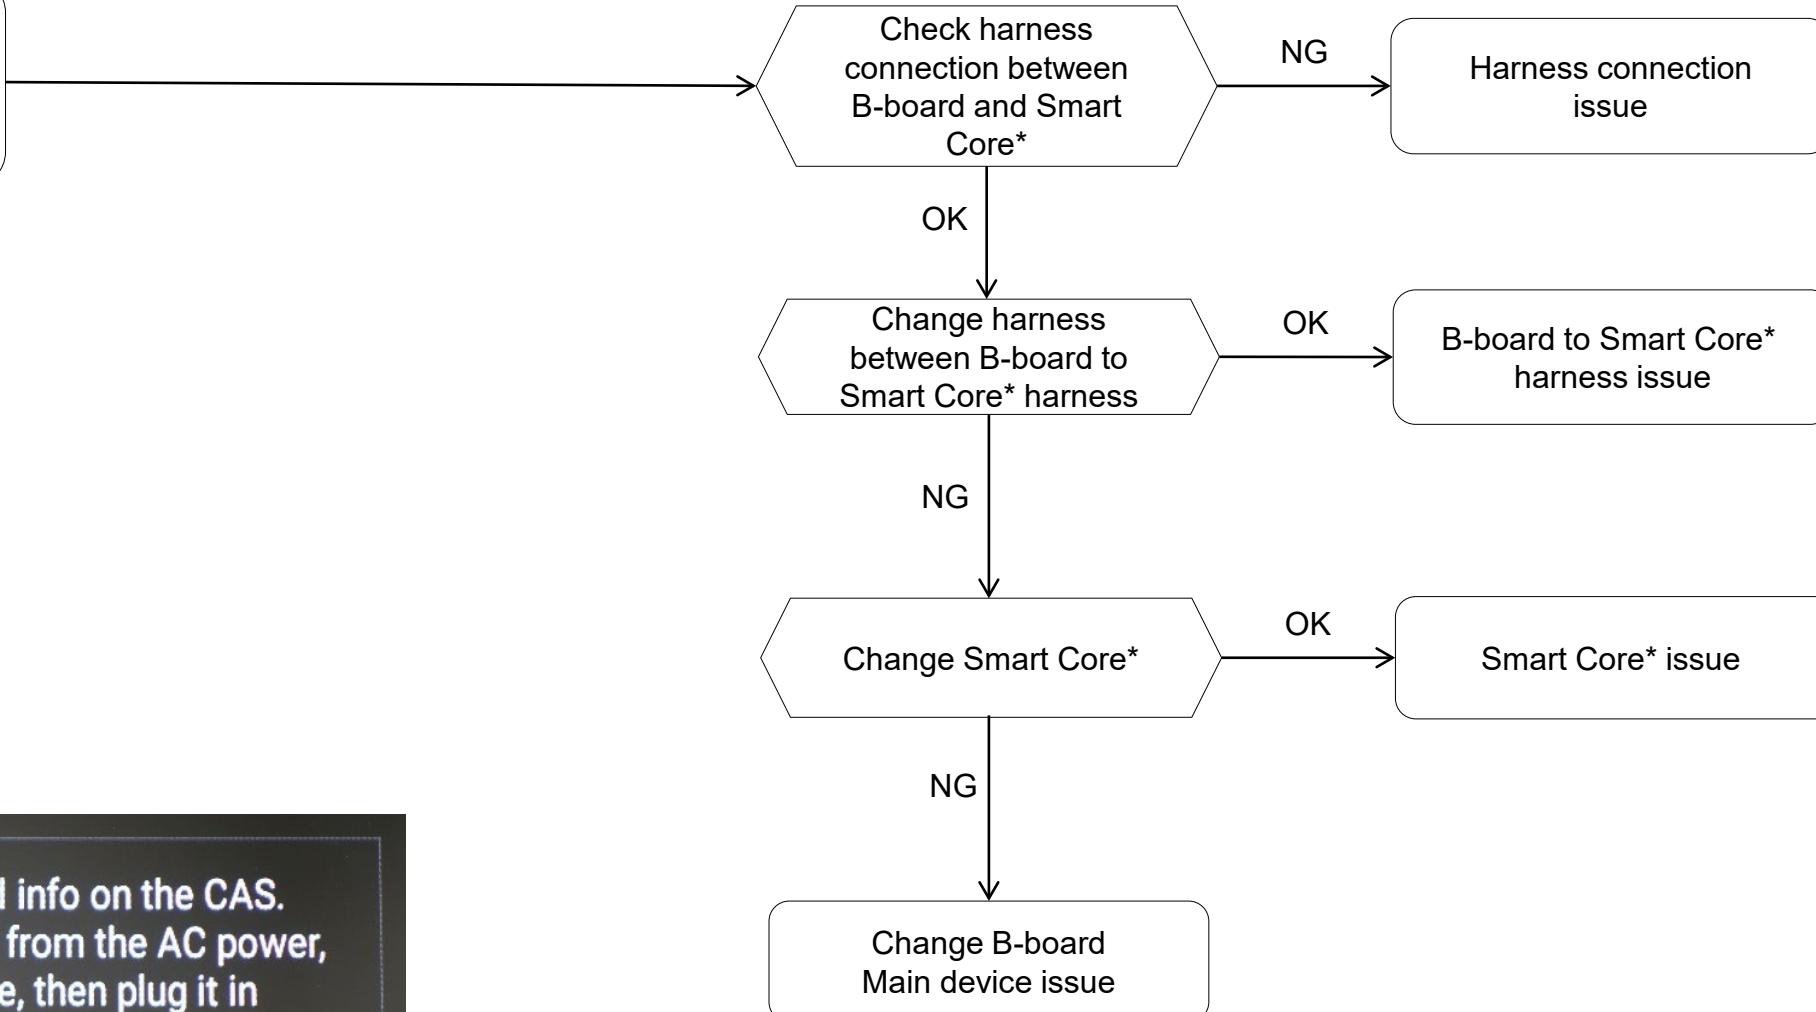


**Unable to read info on the CAS.
Unplug the TV from the AC power,
wait for a while, then plug it in
again.**

Fig2. CAS ID Error (English)

*Smart Core = H-board (HY1 / HY2)



TROUBLESHOOTING

5.3 CAS ID Unknown – XR-83A80*

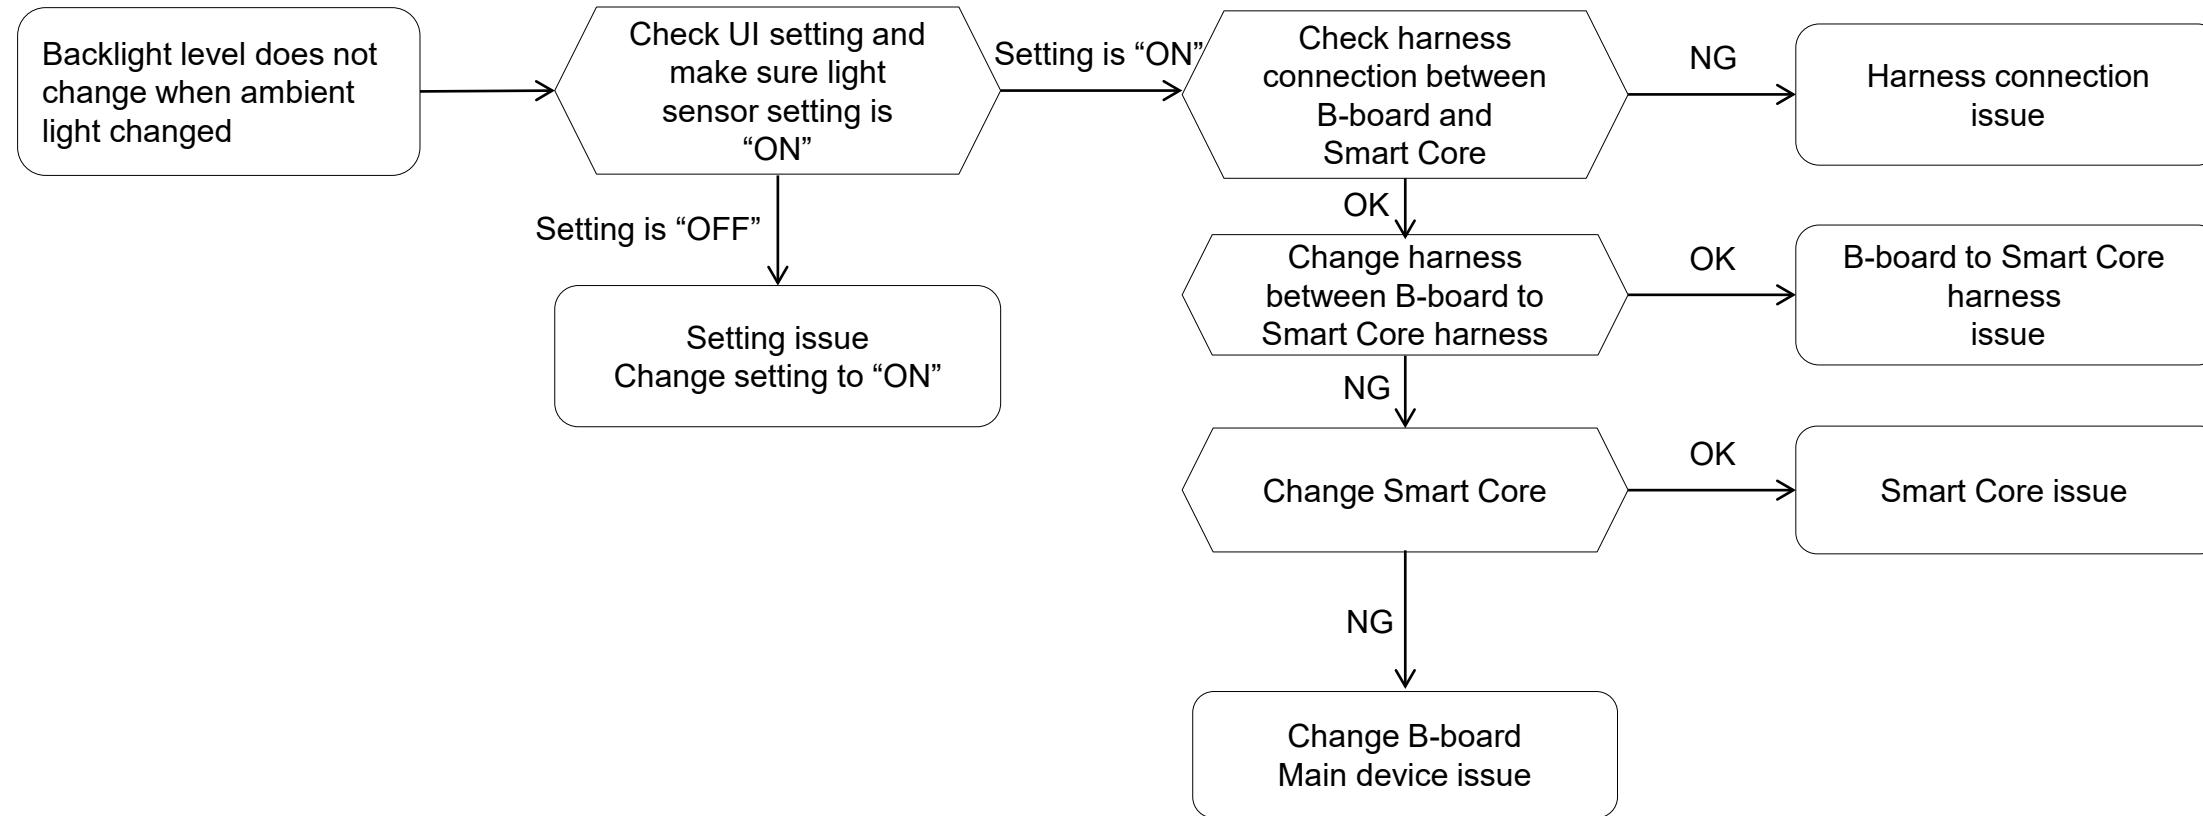



TROUBLESHOOTING

6.0 Network Malfunction: Ethernet (wired)

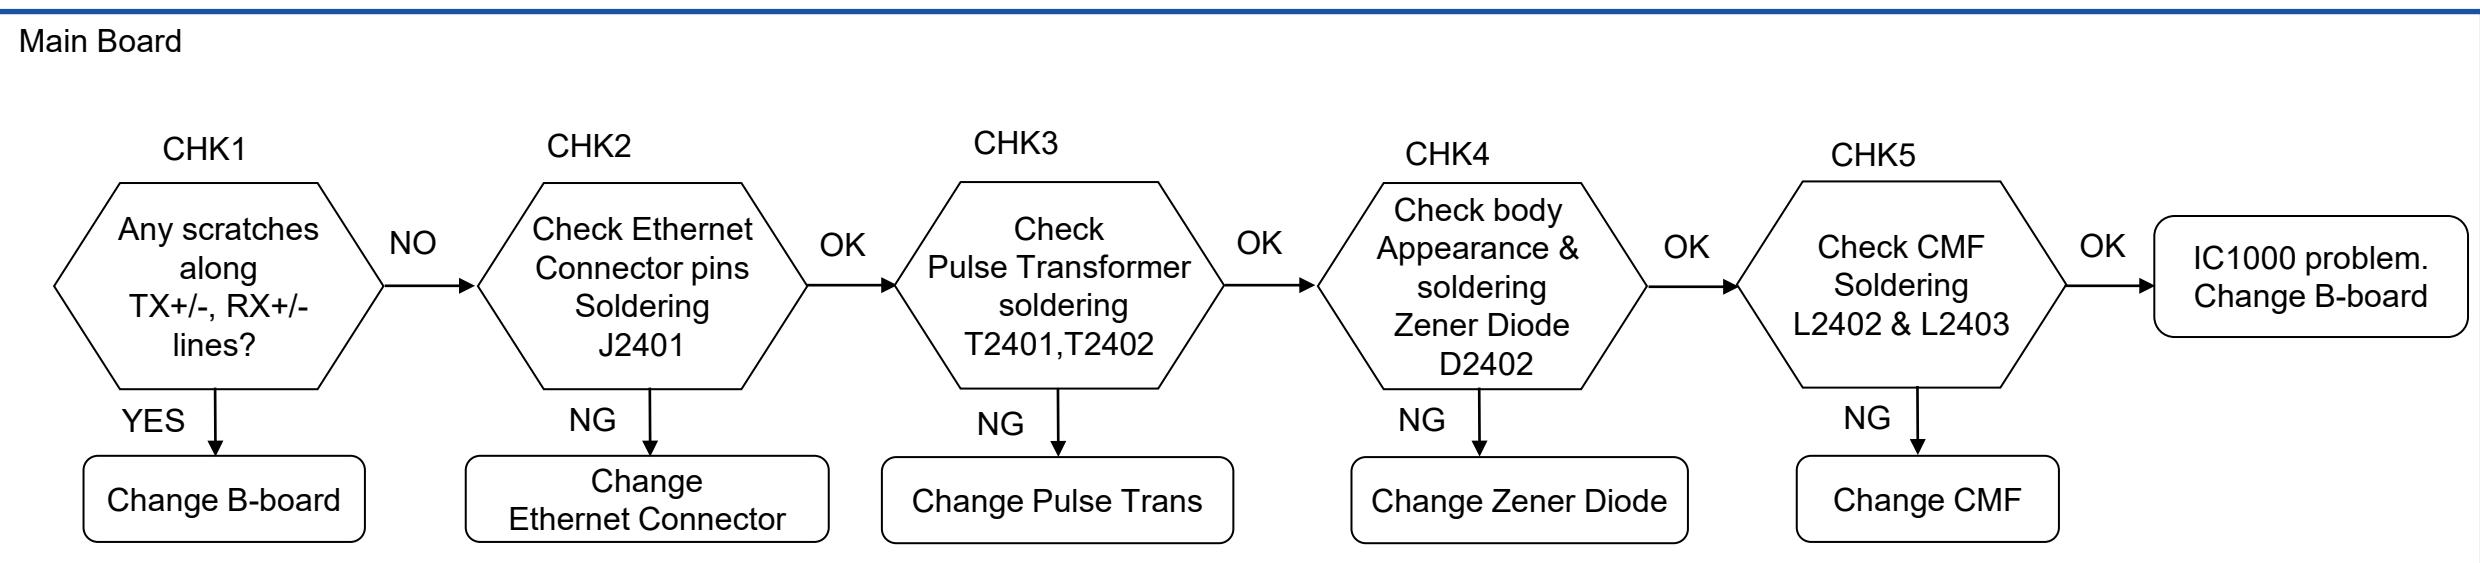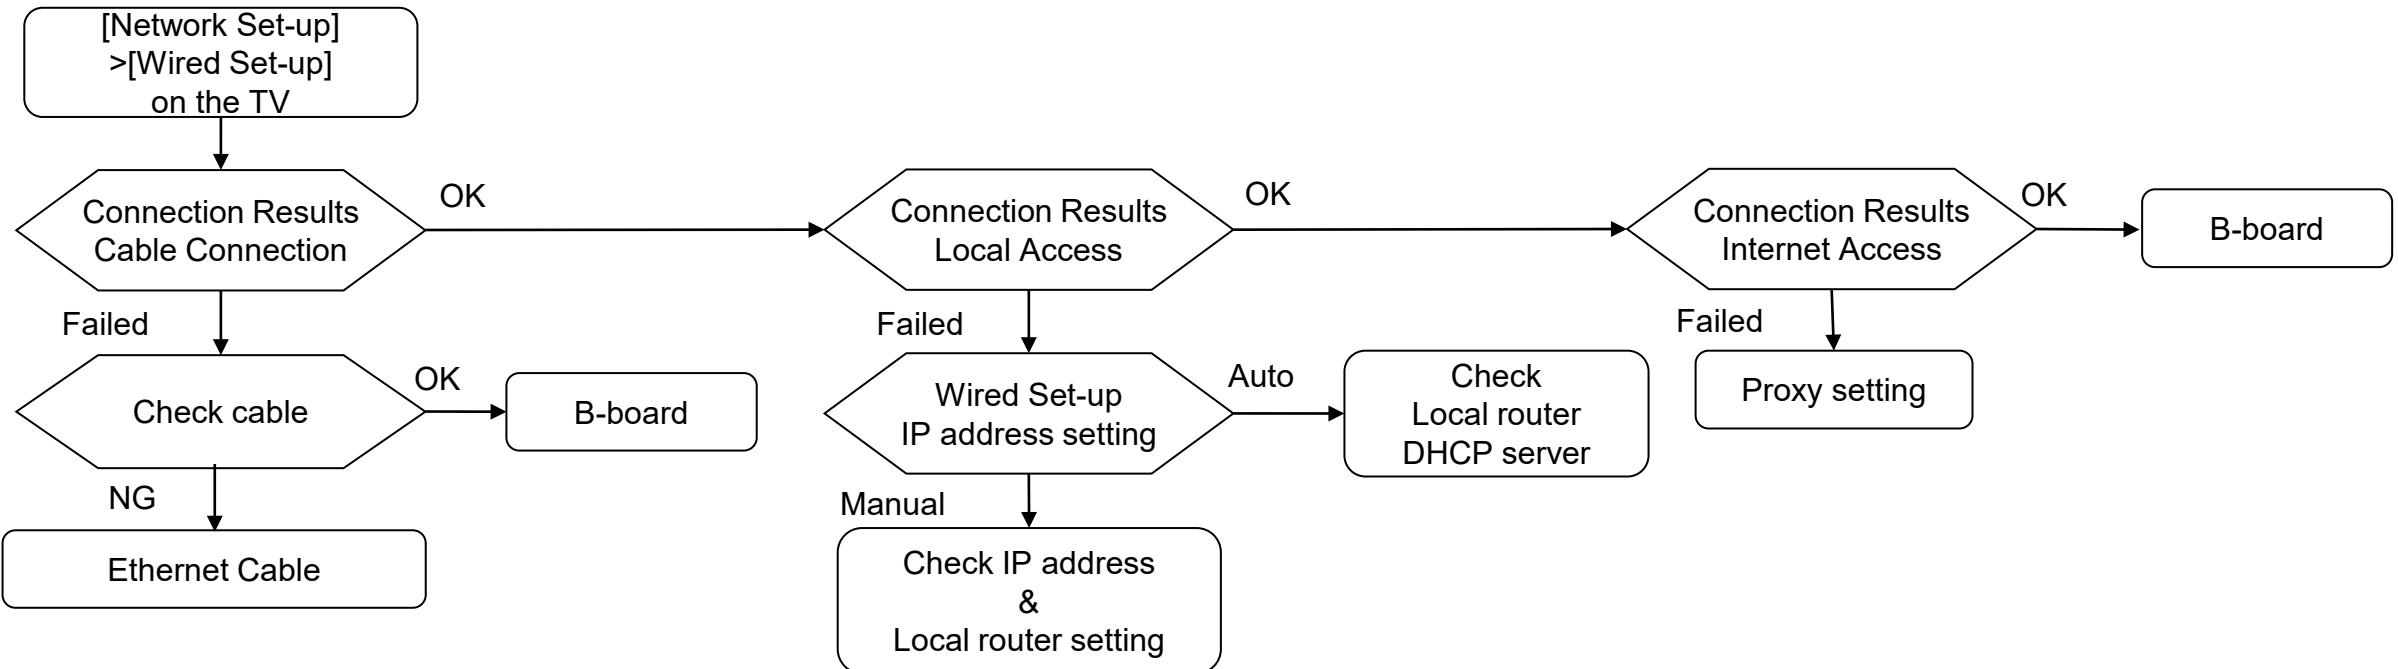


TROUBLESHOOTING

6.1 Network Malfunction: Ethernet (wired)

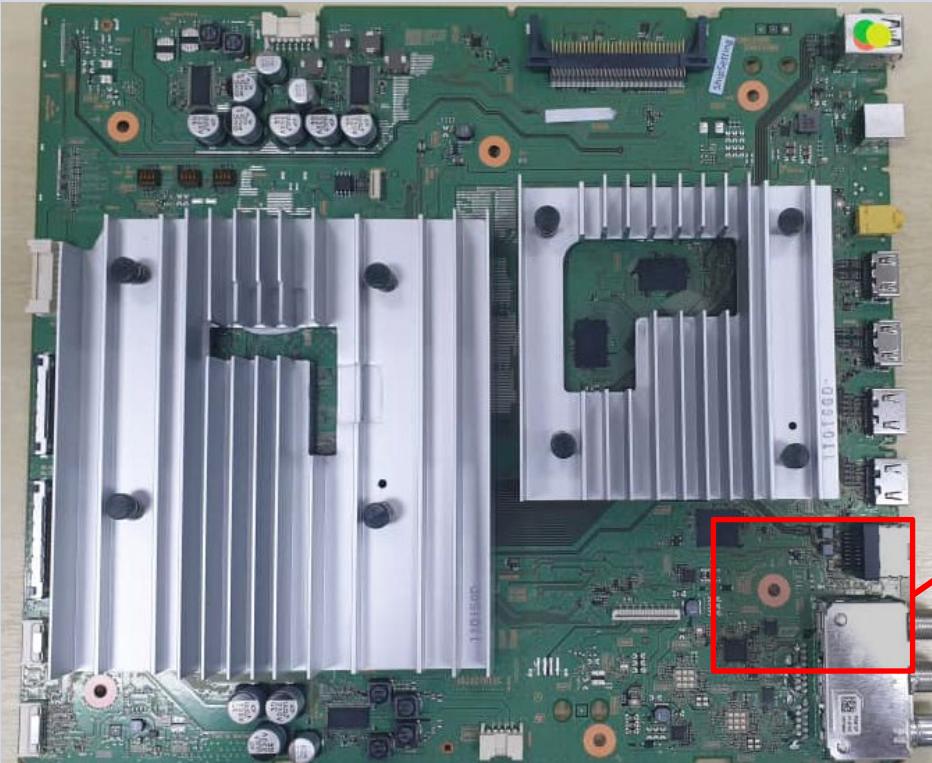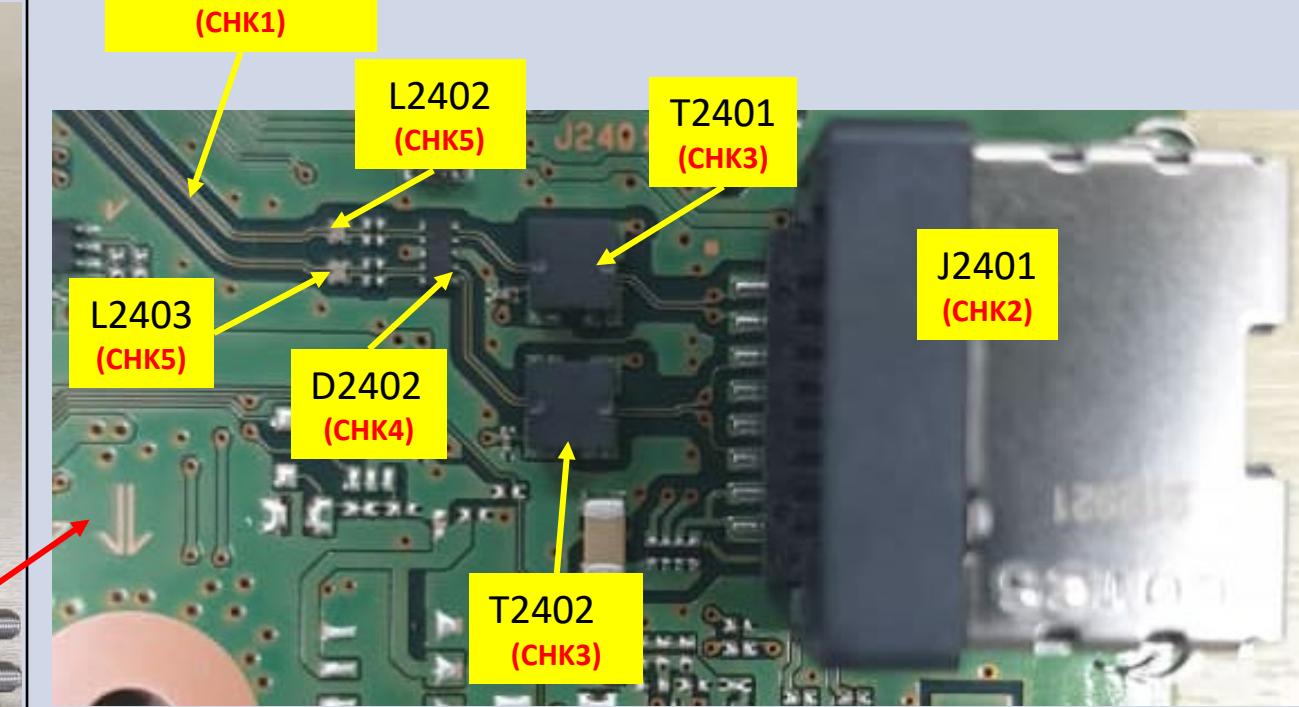Name	Full Board (A side)	Zoomed in view
BM5STY (Actual board)		 <p>TX, RX line (CHK1)</p> <p>L2402 (CHK5)</p> <p>T2401 (CHK3)</p> <p>L2403 (CHK5)</p> <p>D2402 (CHK4)</p> <p>T2402 (CHK3)</p> <p>J2401 (CHK2)</p>



TROUBLESHOOTING

6.2 Wi-Fi Bluetooth - Wireless Network malfunction

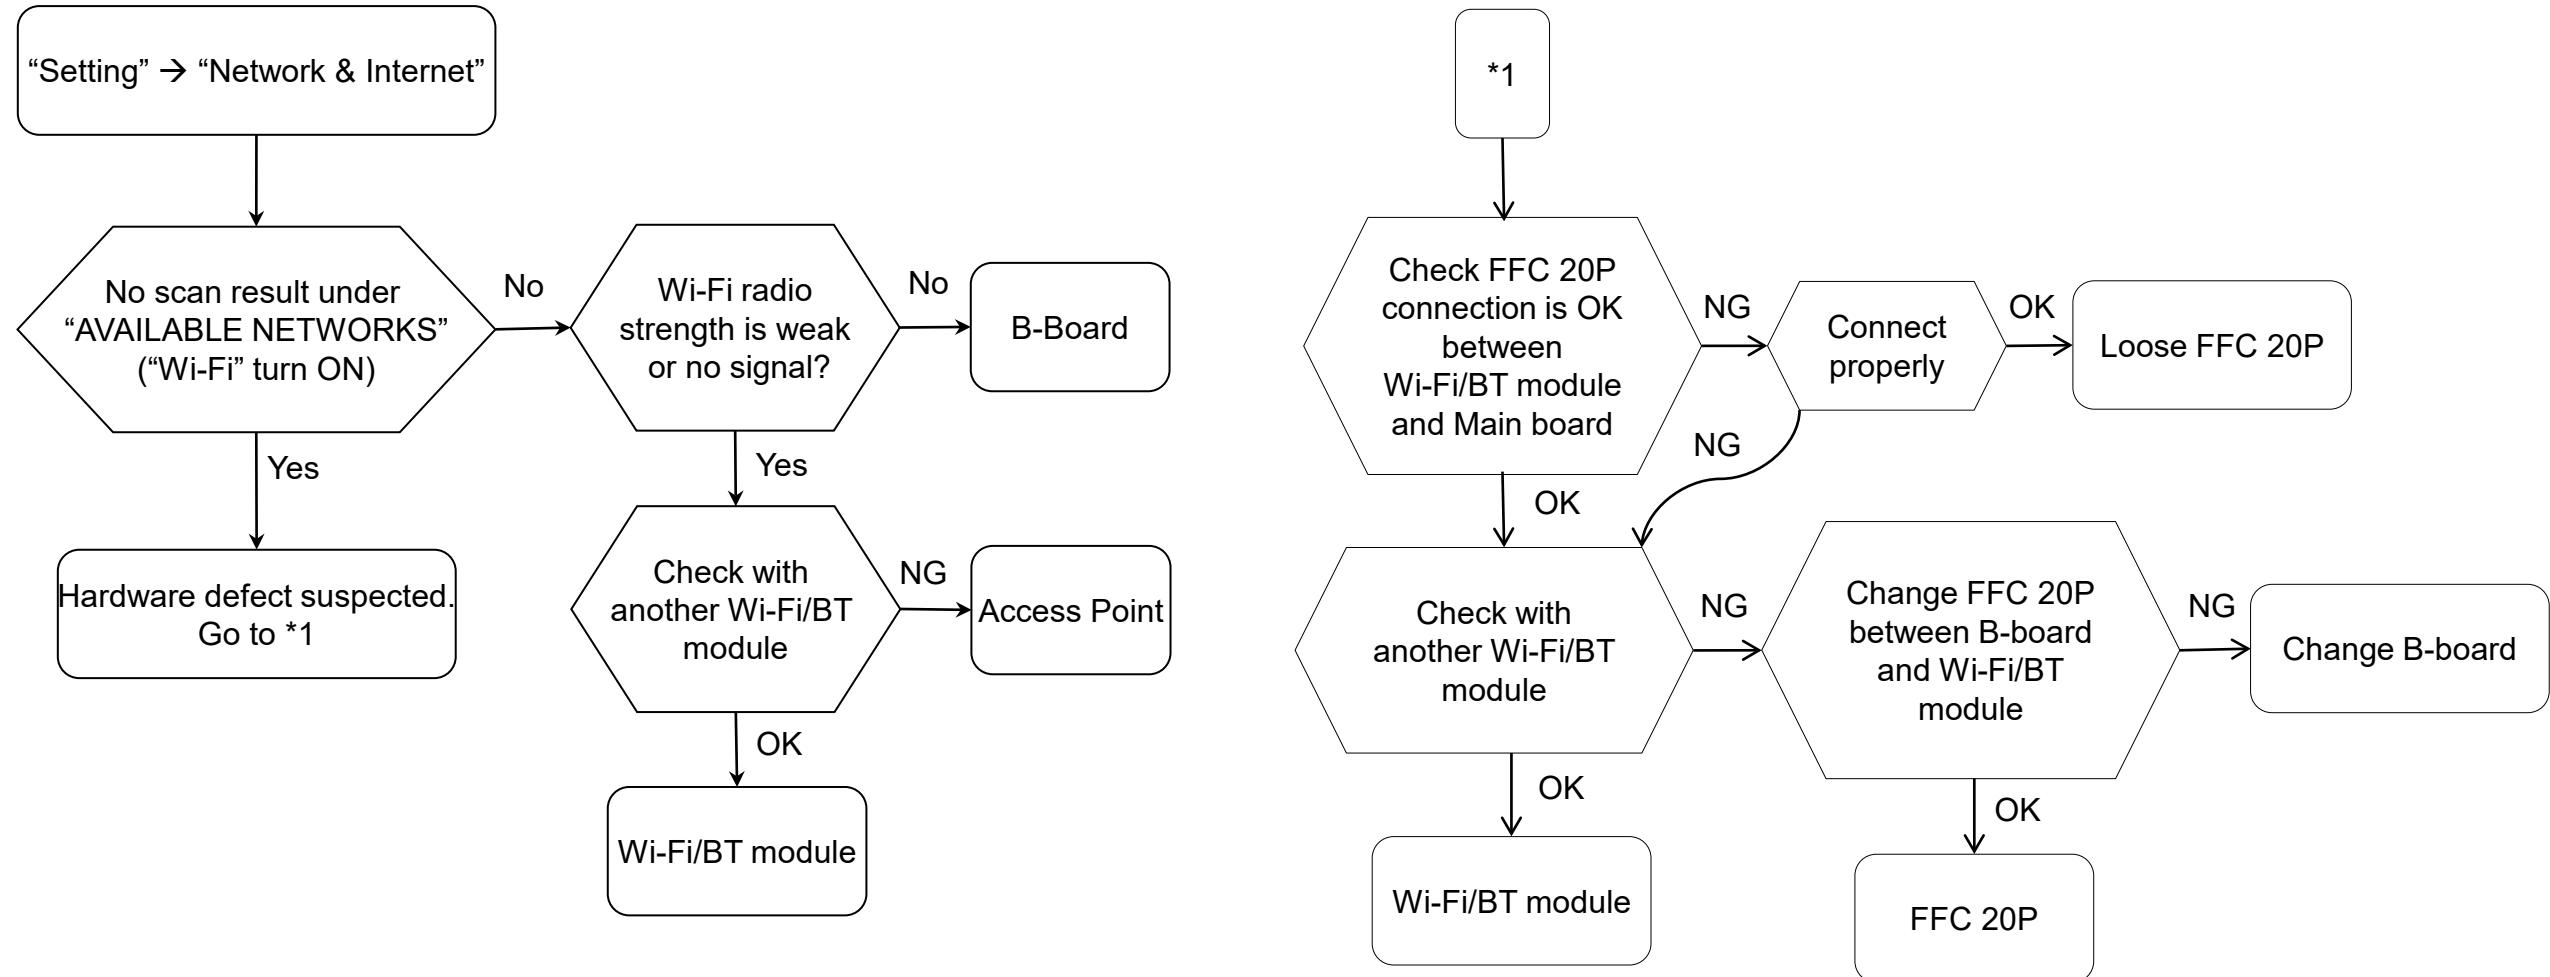


TROUBLESHOOTING

6.3 Wi-Fi Bluetooth - Bluetooth malfunction

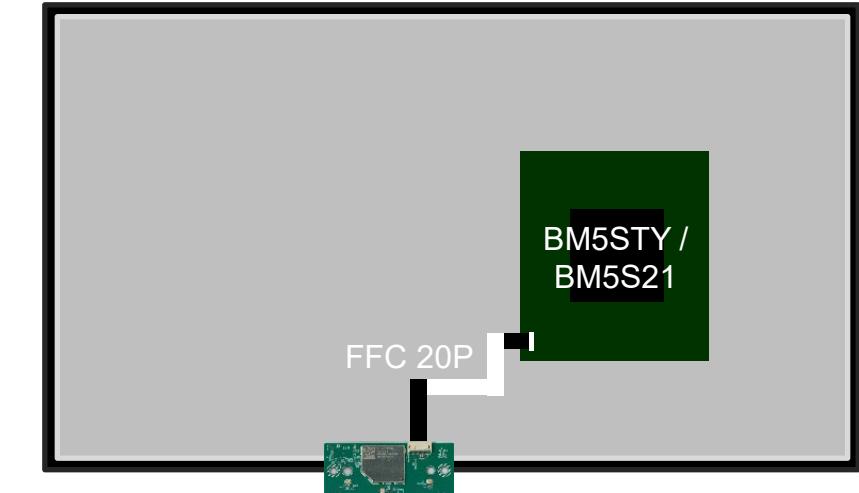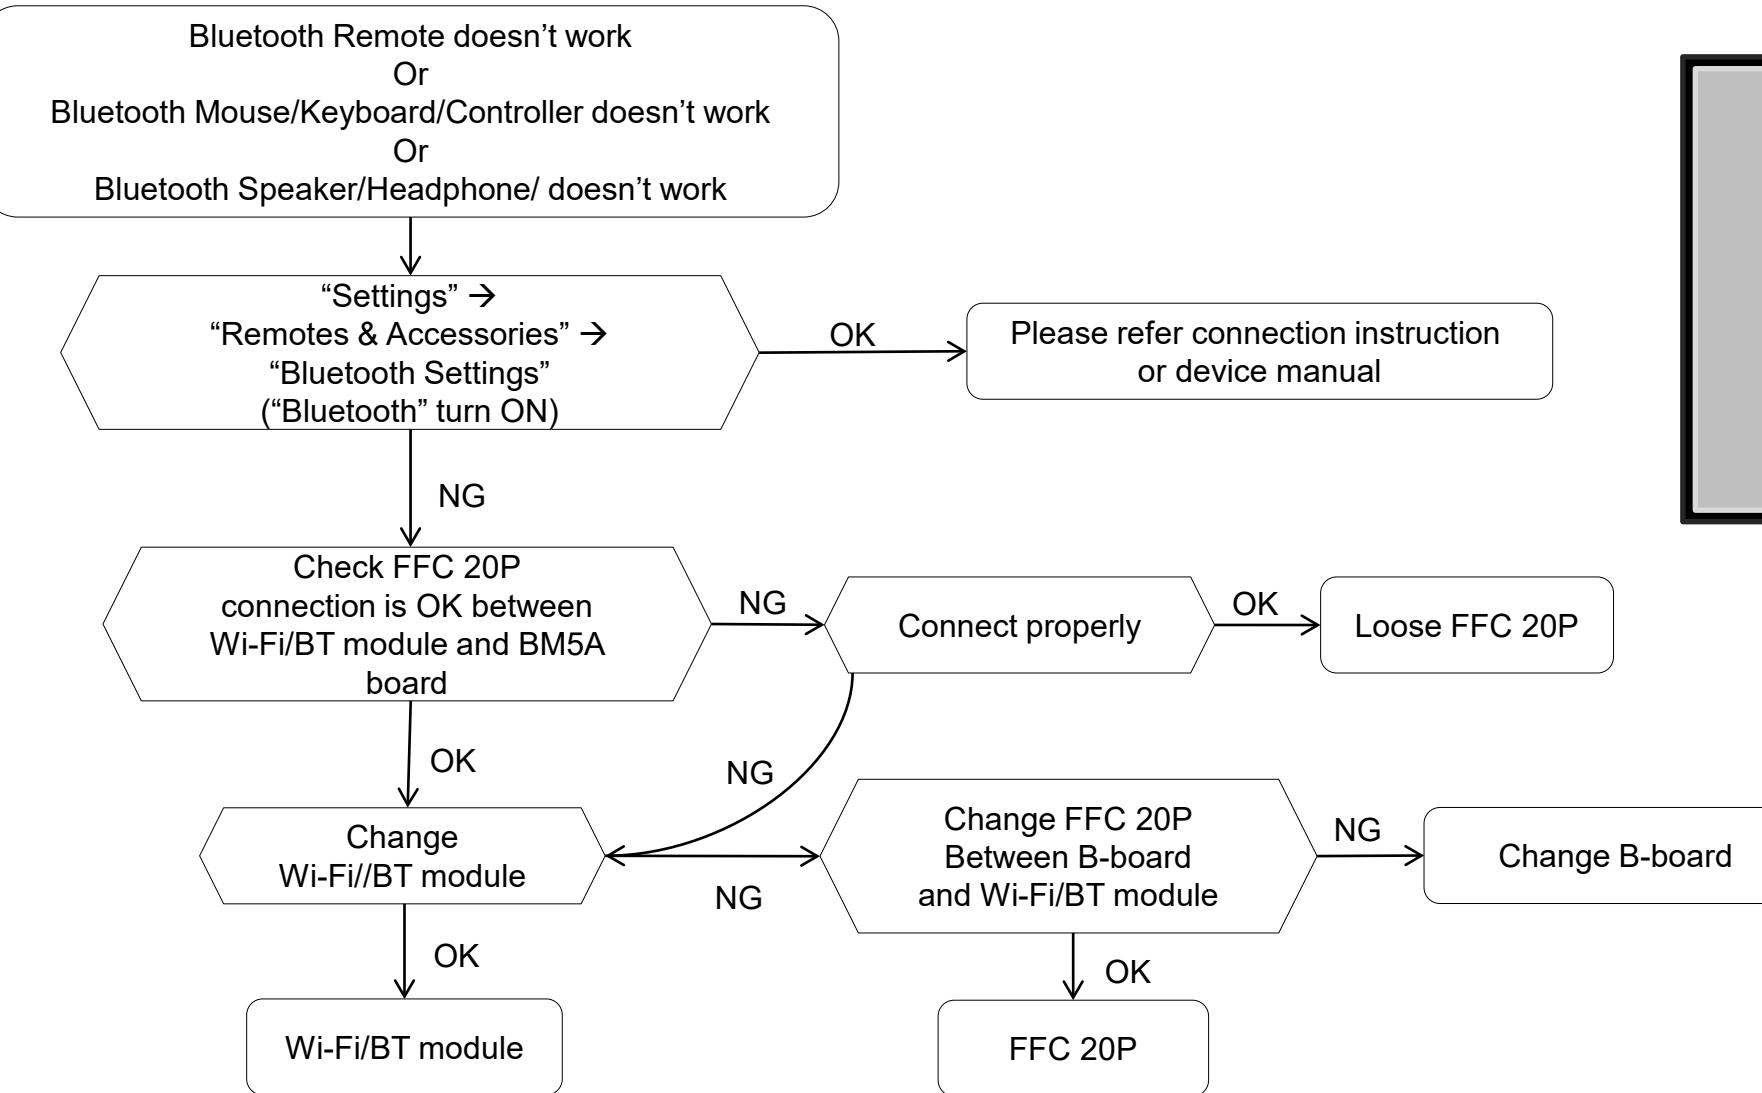


TROUBLESHOOTING

6.3 Wi-Fi Bluetooth - Bluetooth malfunction – XR-83A80*

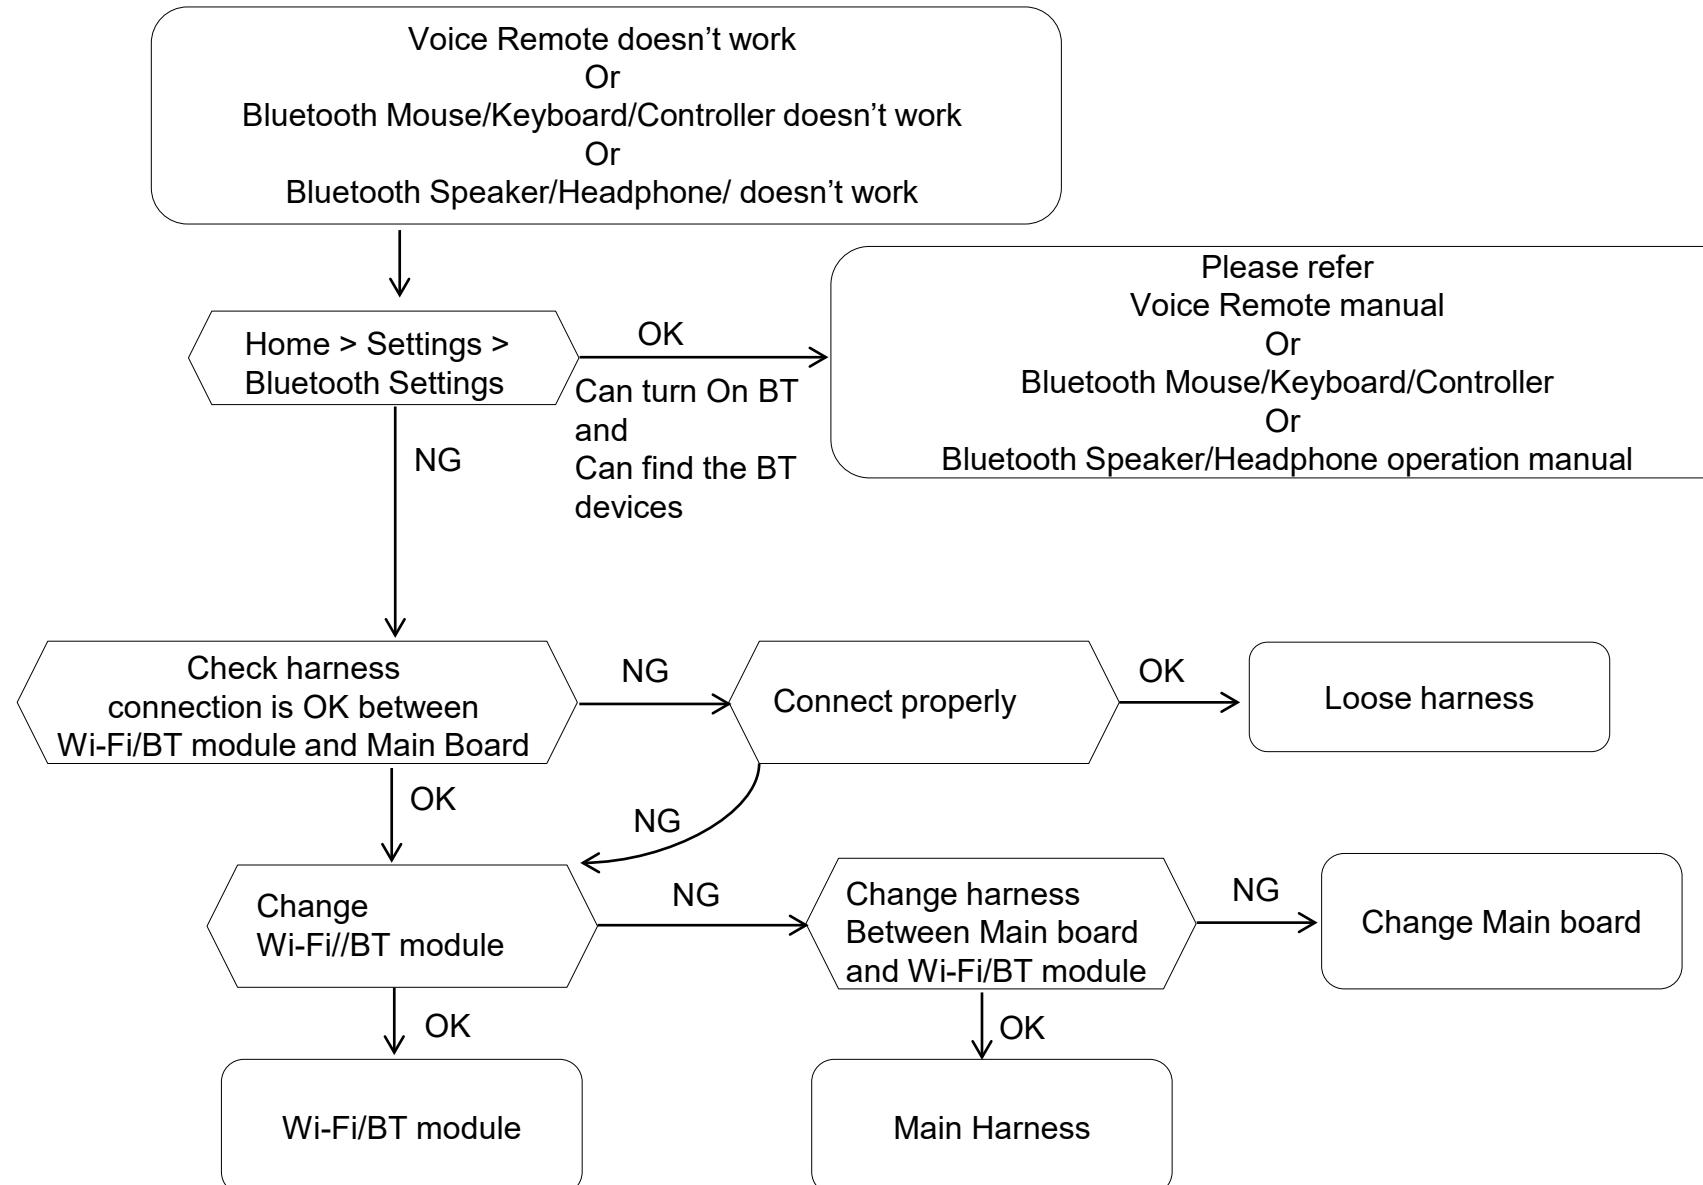


TROUBLESHOOTING

6.3 Wi-Fi Bluetooth

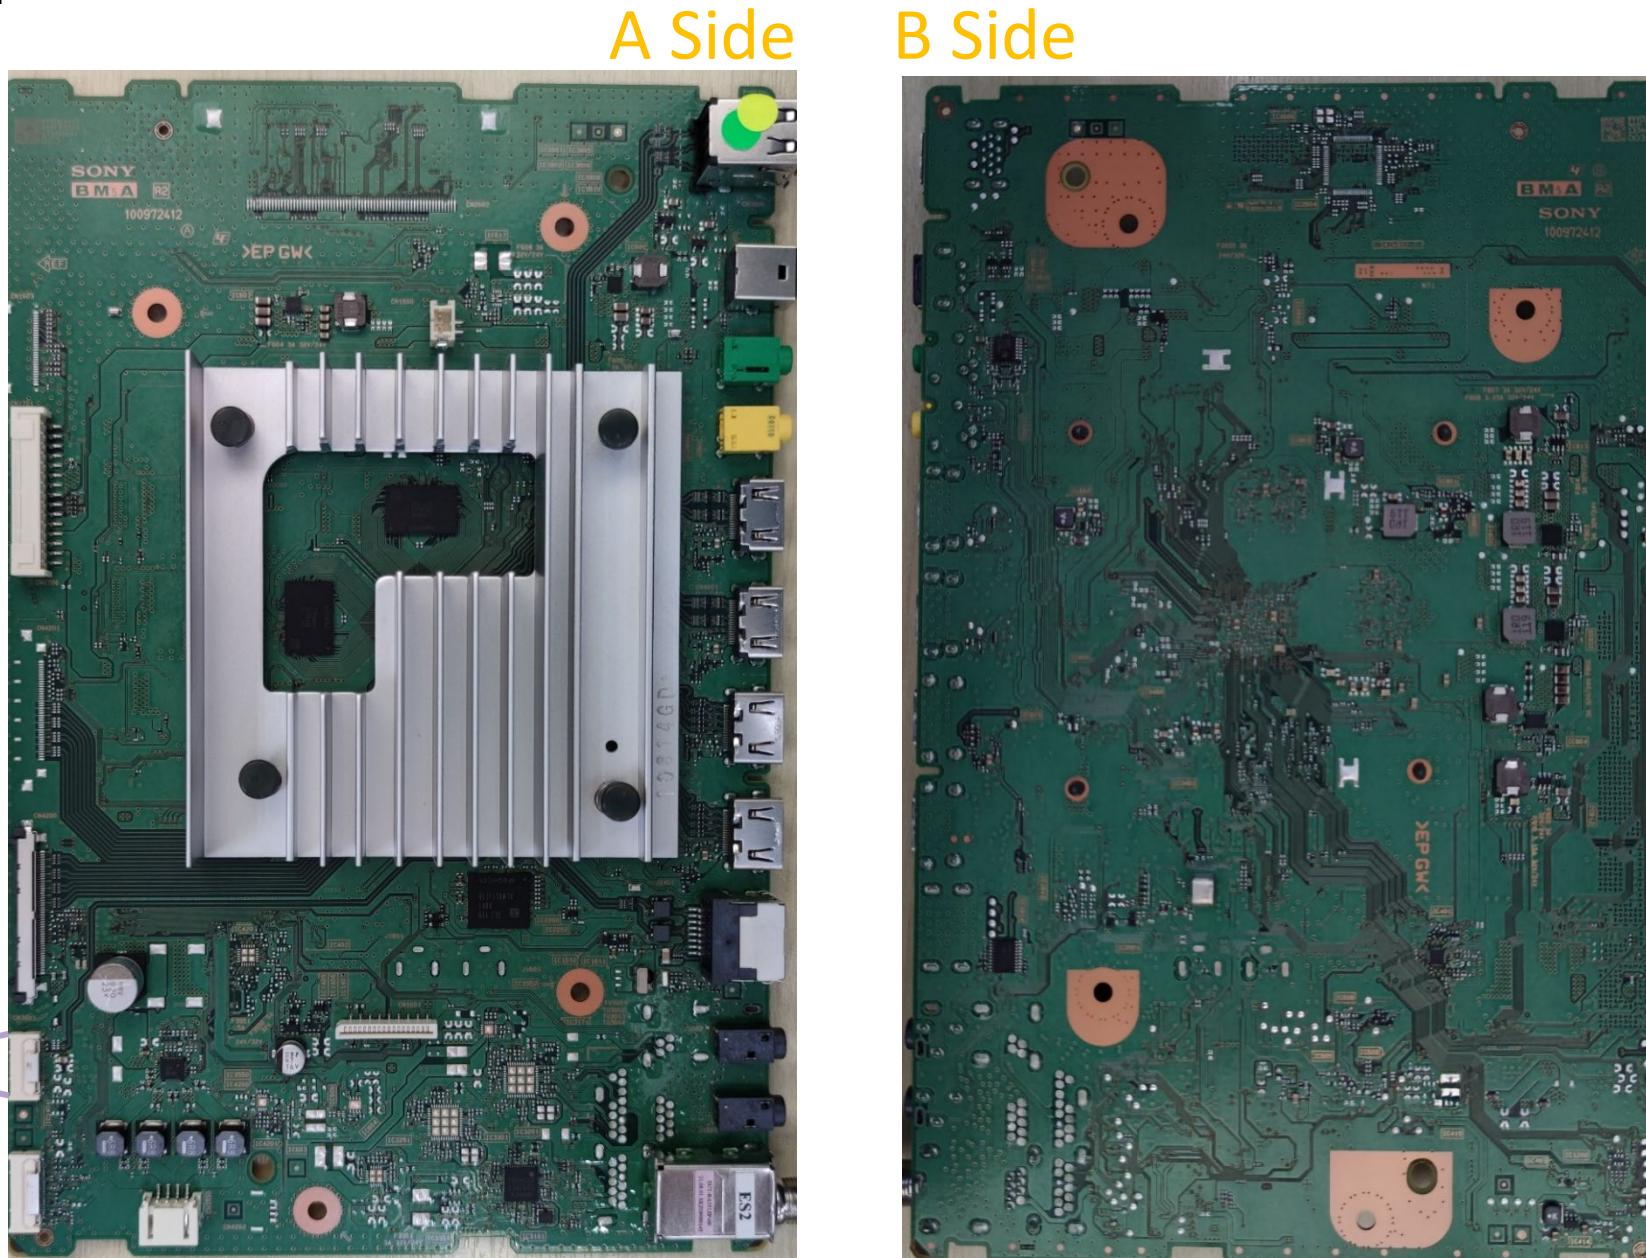


TROUBLESHOOTING

Wi-Fi Module

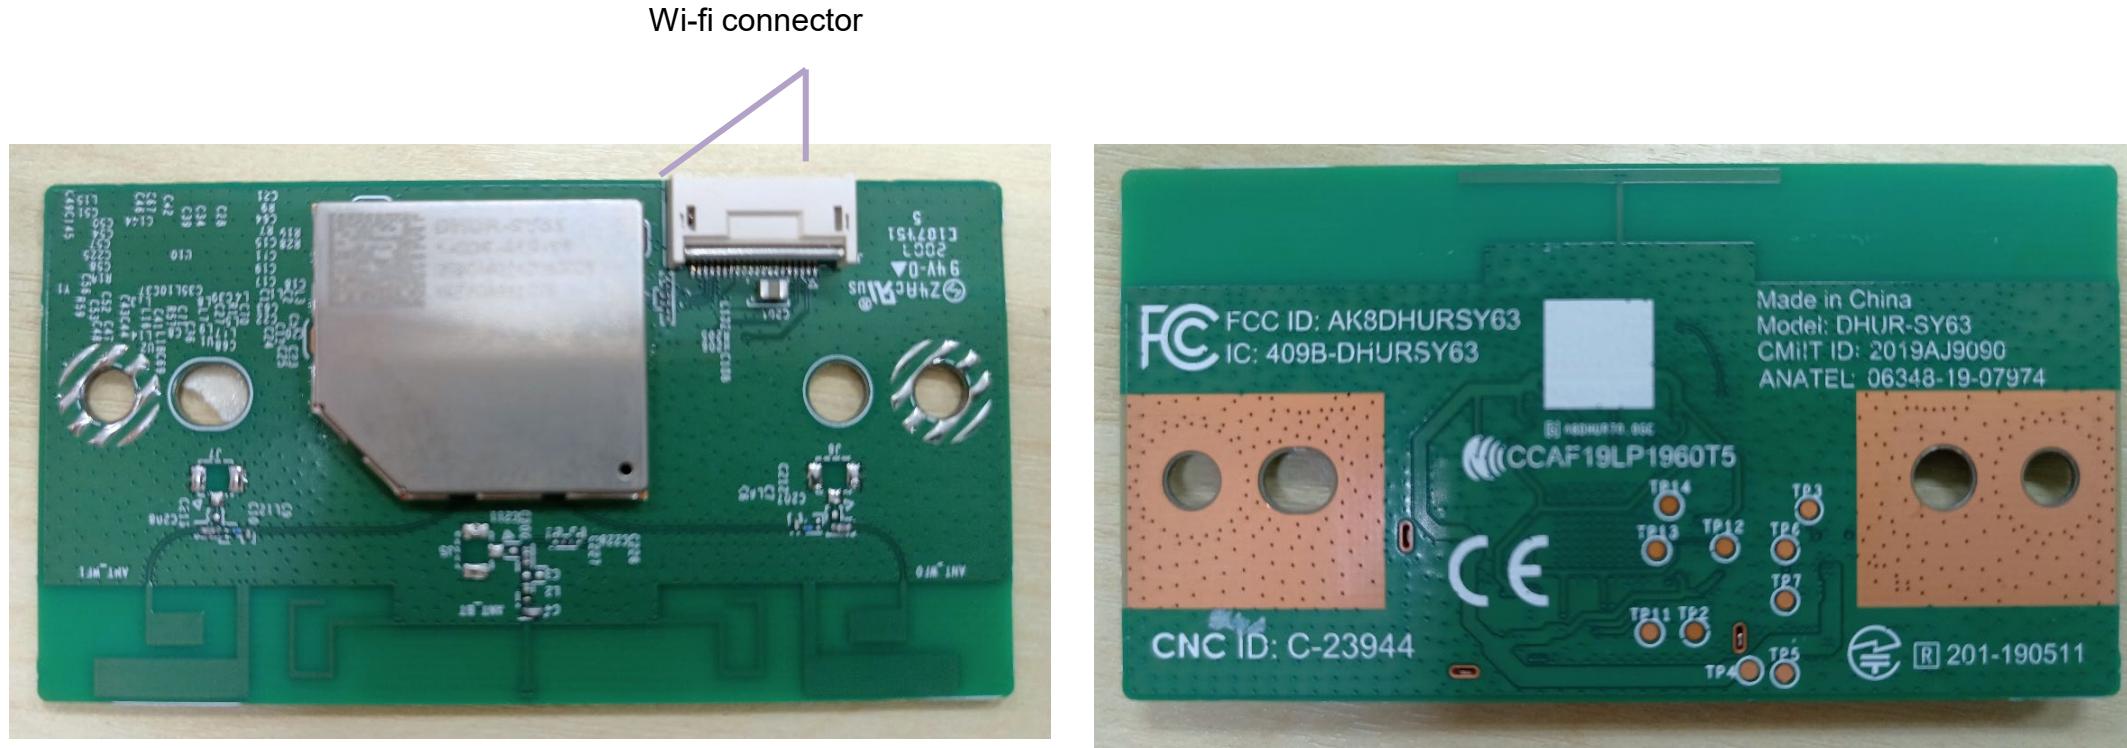


TROUBLESHOOTING

6.4 Built in Mic Malfunction

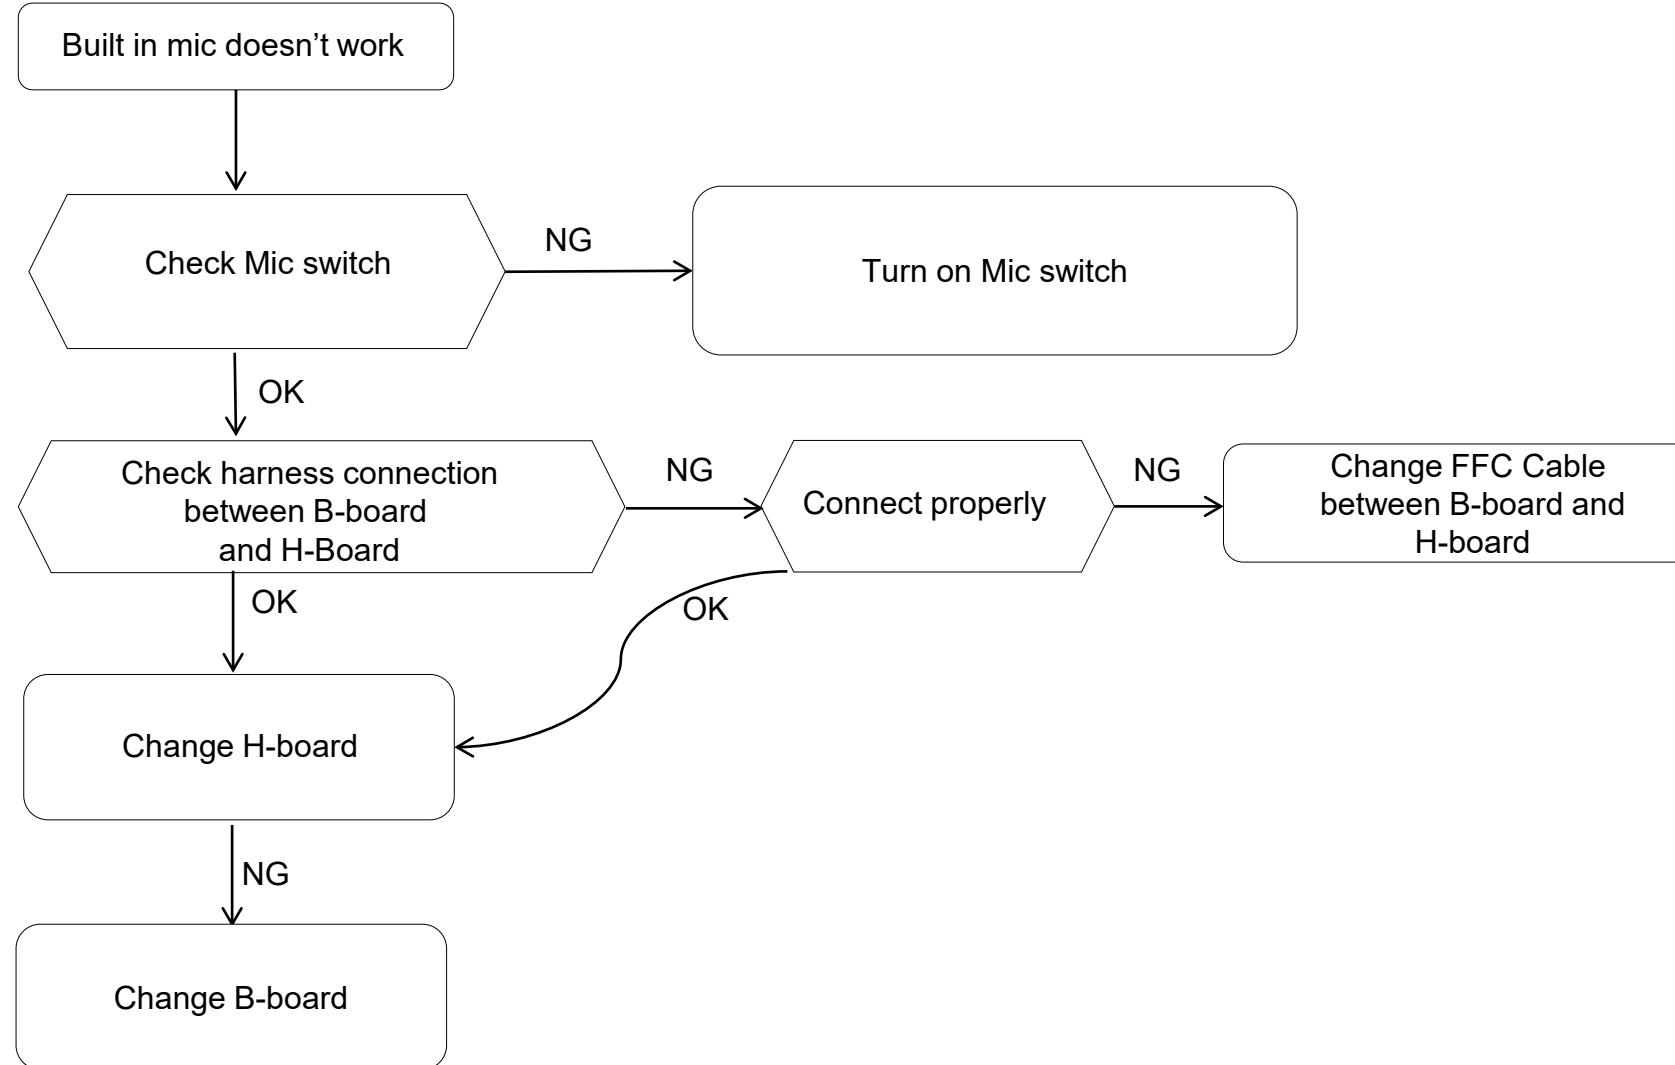


	FS / FS2 / FSL2
B-board	BM5STY
H-board	HY1 / HY2

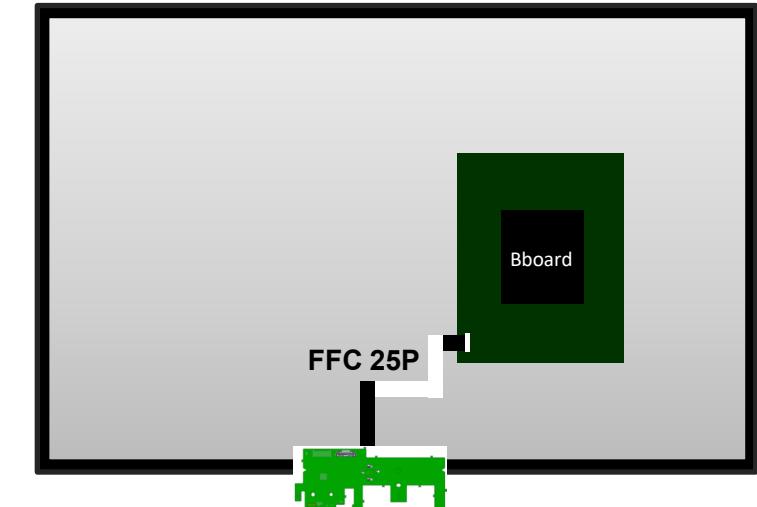

H-board


TROUBLESHOOTING

6.4 Built in Mic Malfunction - B-board or H-board Switch – XR-83A80*

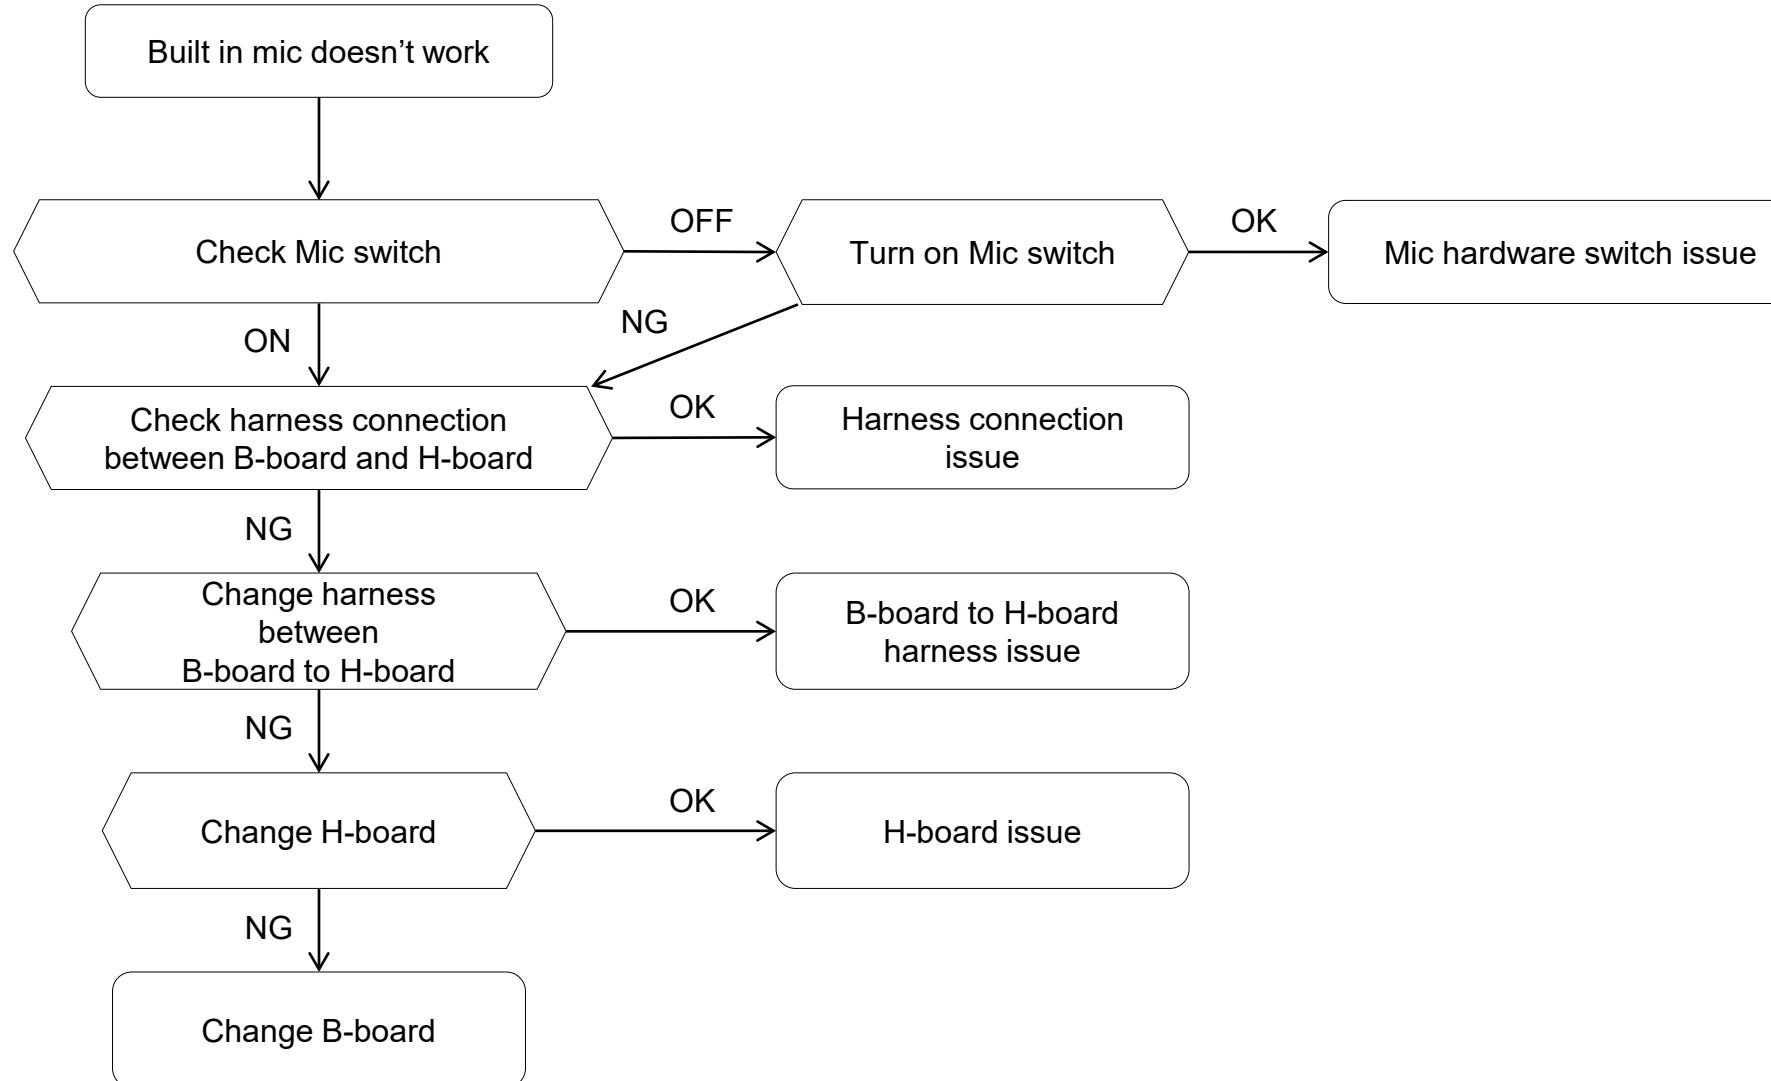


TROUBLESHOOTING

6.5 Camera Magnet connector type Camera (Bundle)

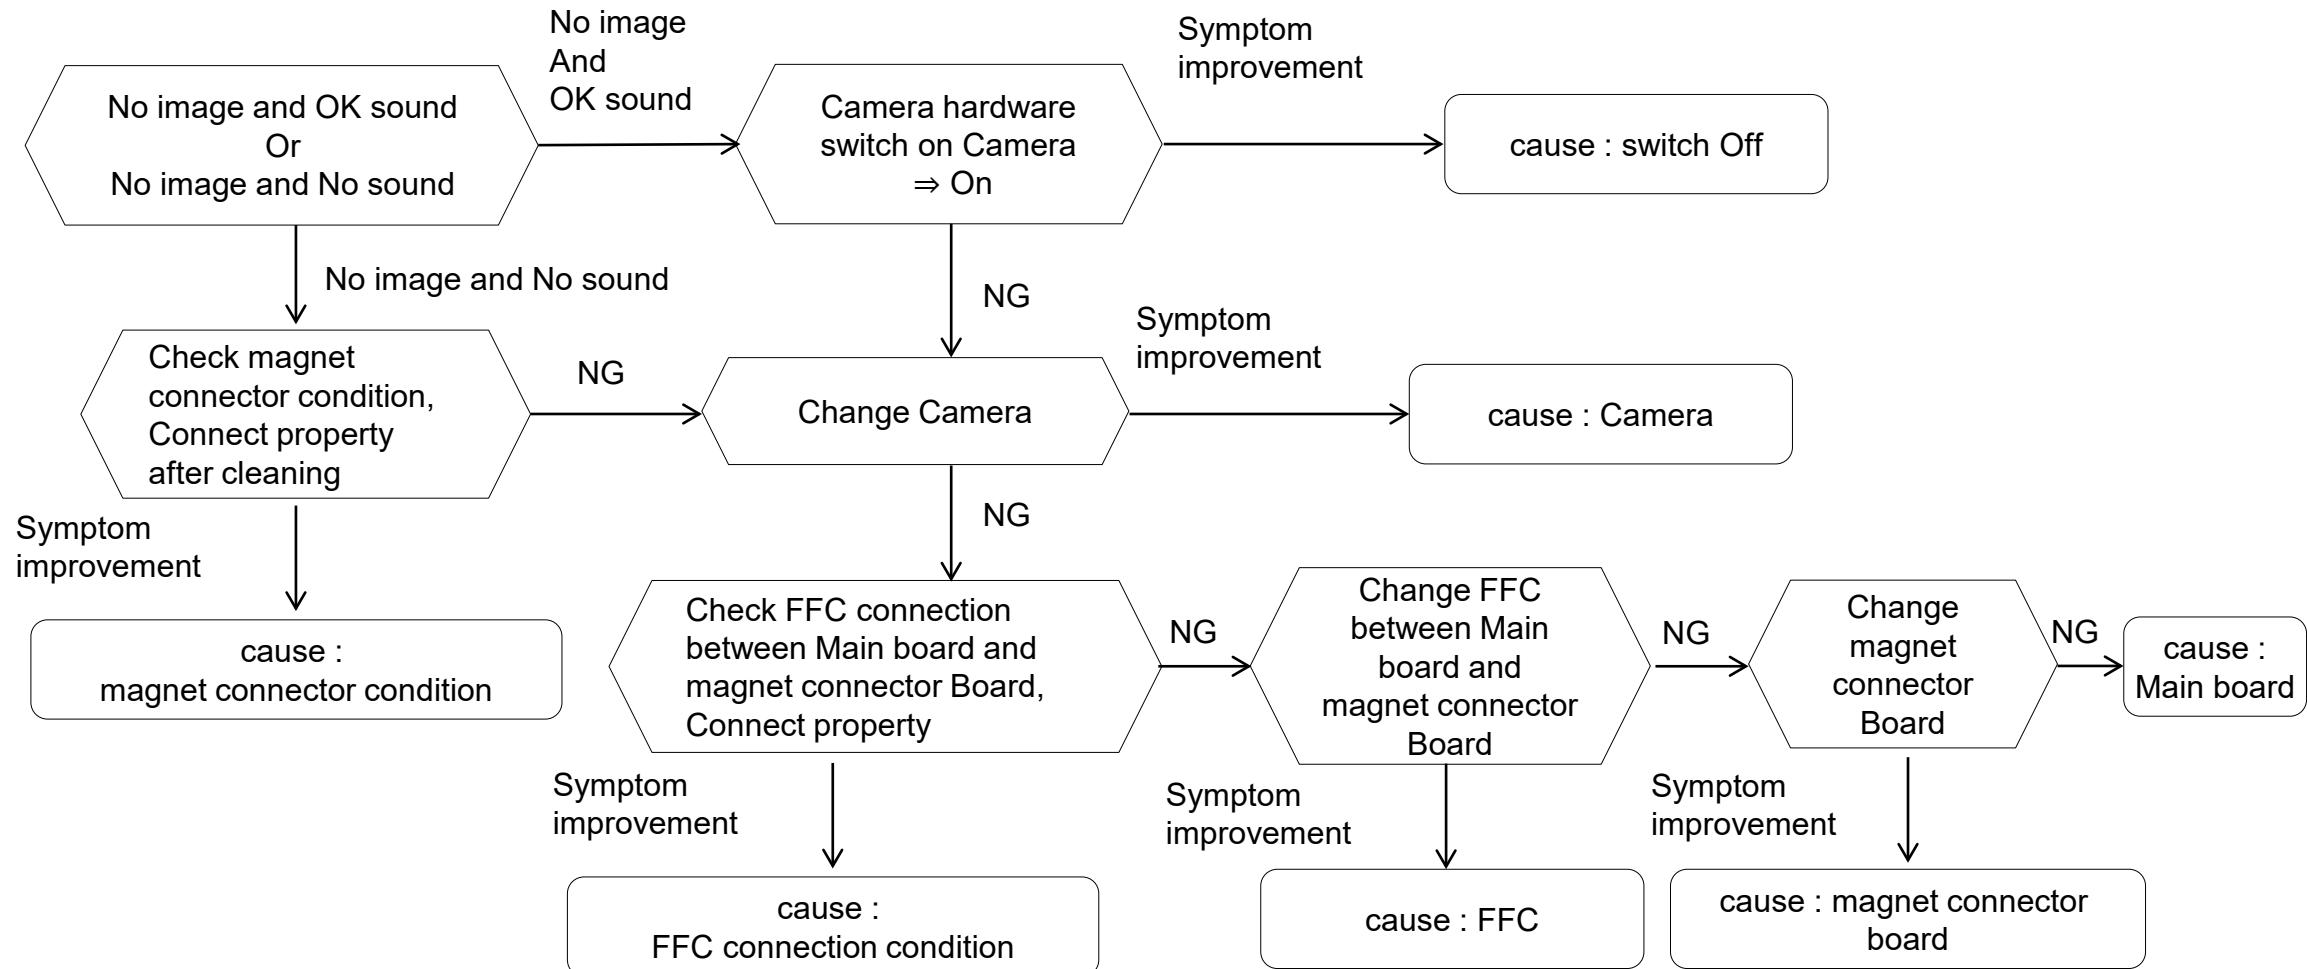

TROUBLESHOOTING


6.5 Camera USB connector type Camera (Accessory)

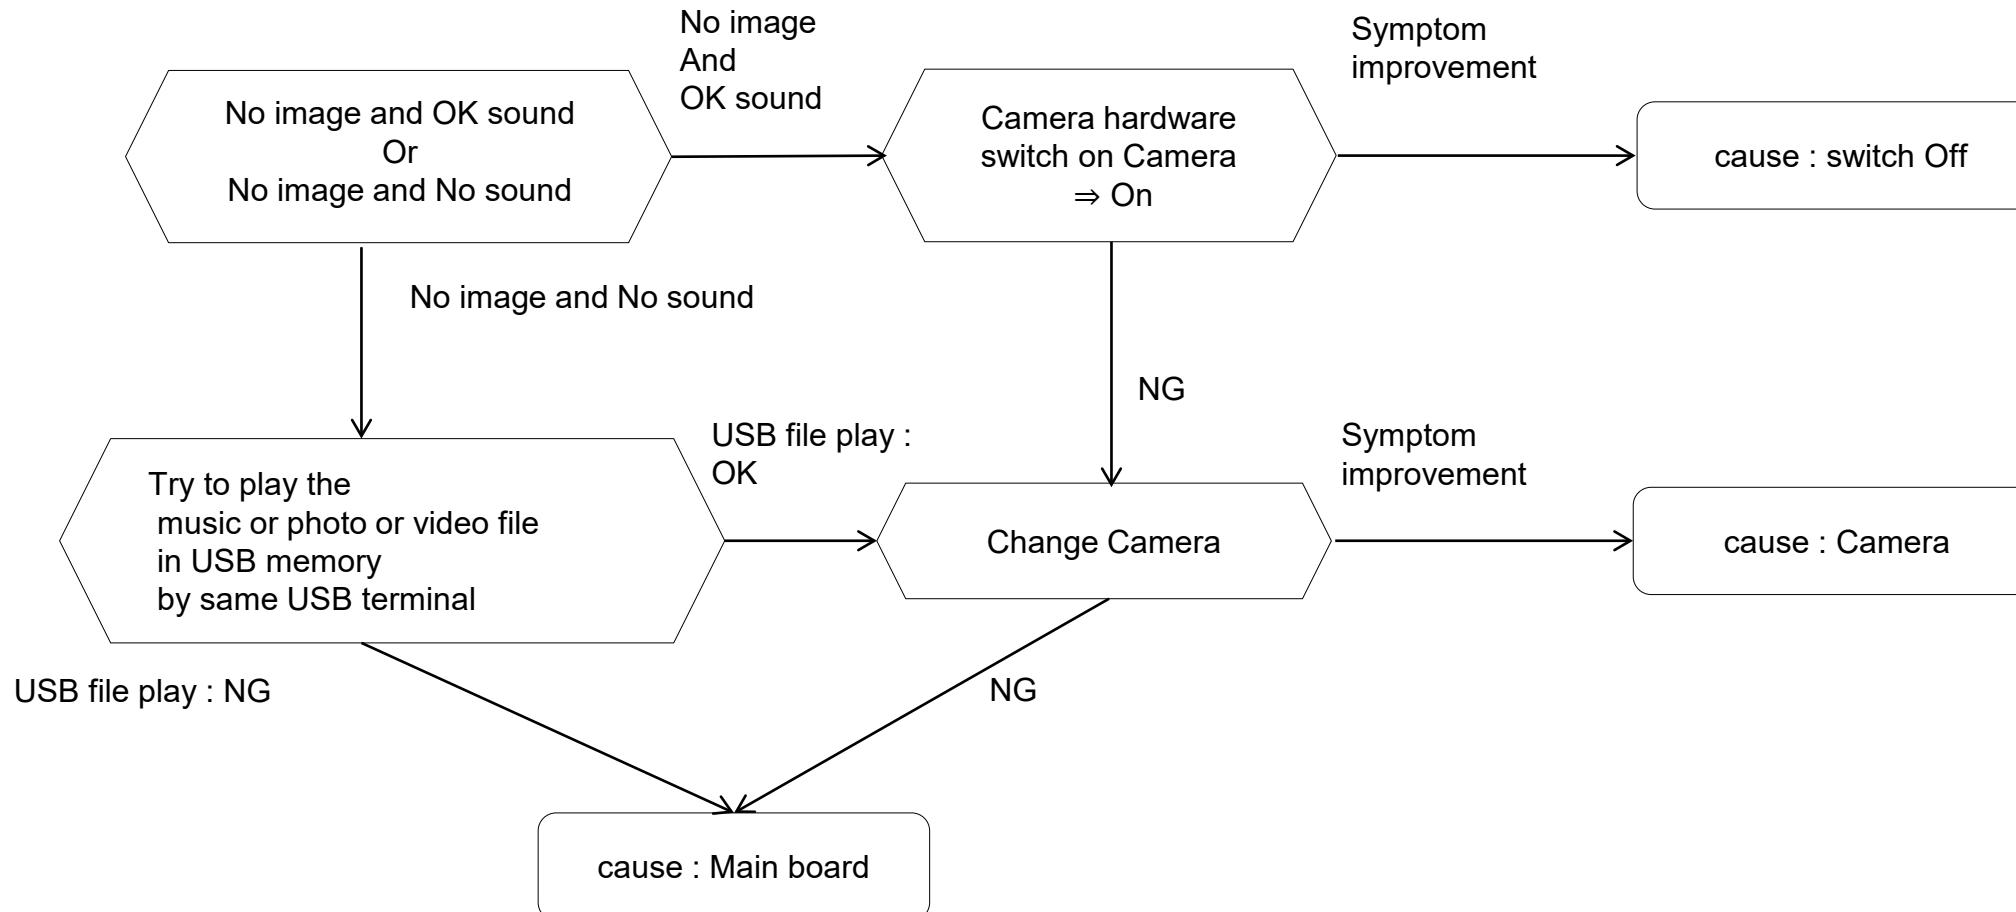

TROUBLESHOOTING

Board View

**HY1 / HY2
(Top view)**

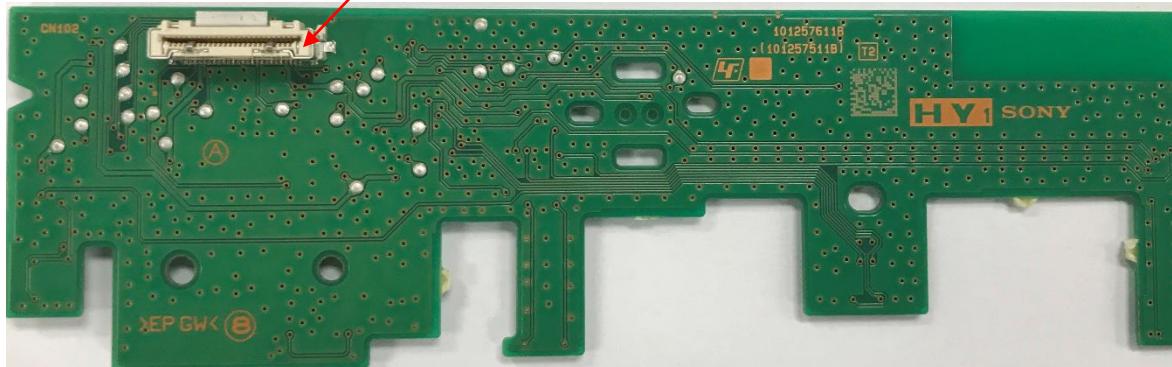

H-board
connector

BM5STY (Top view)



SOFTWARE UPDATE & RESET

USB Update

Caution: Do not power off while the update is in progress.

1: Download USB image and unzip file.

2: Copy zip file to USB memory root folder.

3: USB memory insert TV.

4-a:USB image is newer soft version.

Automatically show message and start update.
Please follow directions.

4-b:USB image is not newer soft version.

Automatically show message.
Please follow directions.

Updating your TV software...

46%

During the software update, you can't use this TV. When the software update completes, the Illumination LED stops blinking and your TV restarts automatically. Please do not remove the USB flash drive until this blinking stops. The update takes about **10** minutes to complete.
Press the BACK button on your remote control to cancel the update.

System software update

OK

Your software is up to date.
Please remove the USB device and select [OK] to exit.

5: finished



5: finished


The system reboot
will happen once or twice

※ Display may change depending on the model / SW version.


SOFTWARE UPDATE & RESET

Factory Data Reset – with UI method


1. At Home Menu, go to Settings

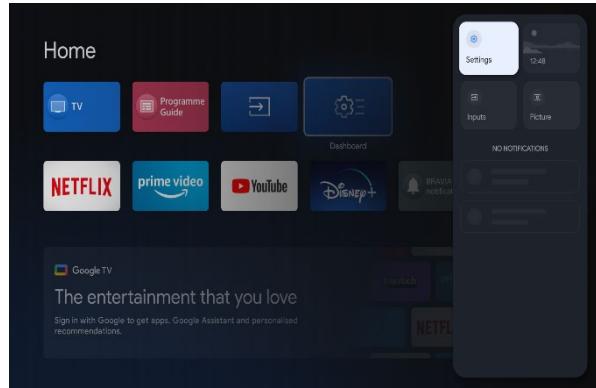


2. Select System / Device Preferences

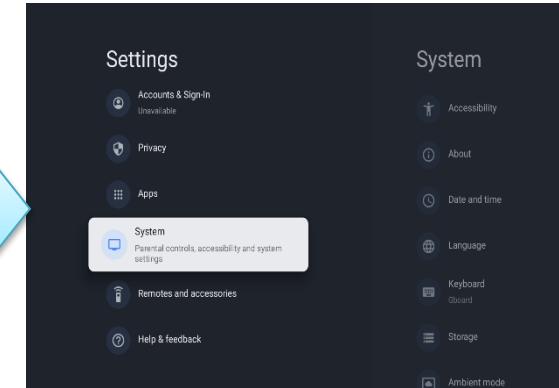


3. In System, select 'About'.

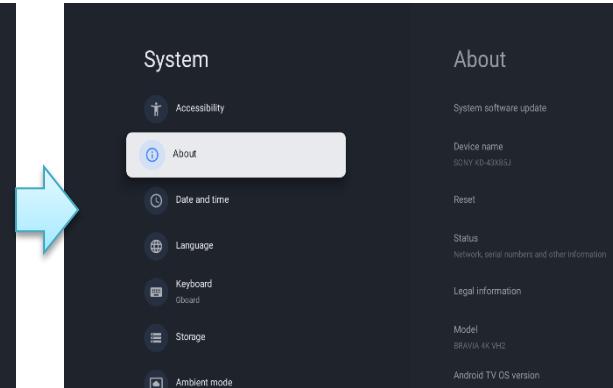


4. In About, Select 'Reset'

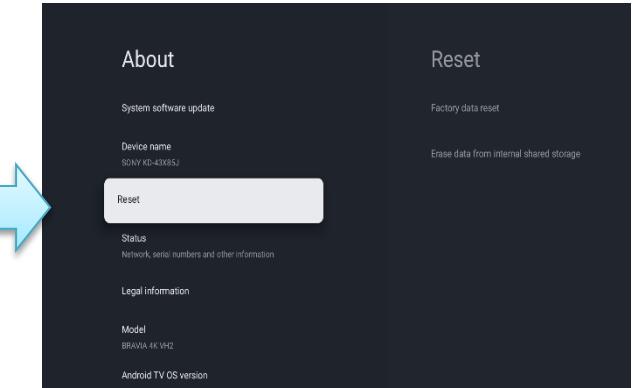


7. Select 'Yes'

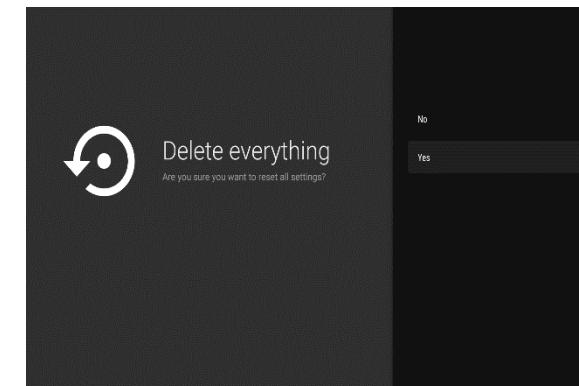

6. Select 'Delete everything'

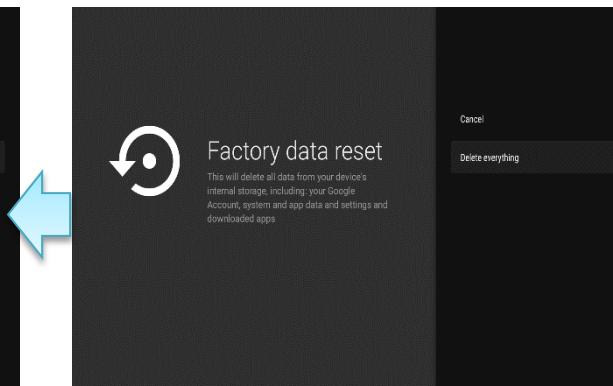


5. In Reset, Select 'Factory data reset'

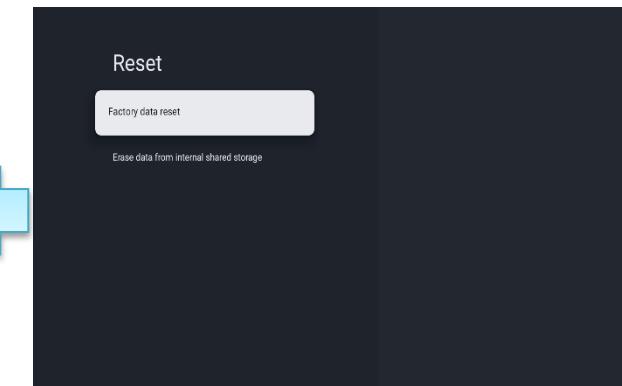

SOFTWARE UPDATE & RESET

Factory Data Reset – force method (without UI)

1. Press and hold the Power button. (The position of the Power button depends on the model.)

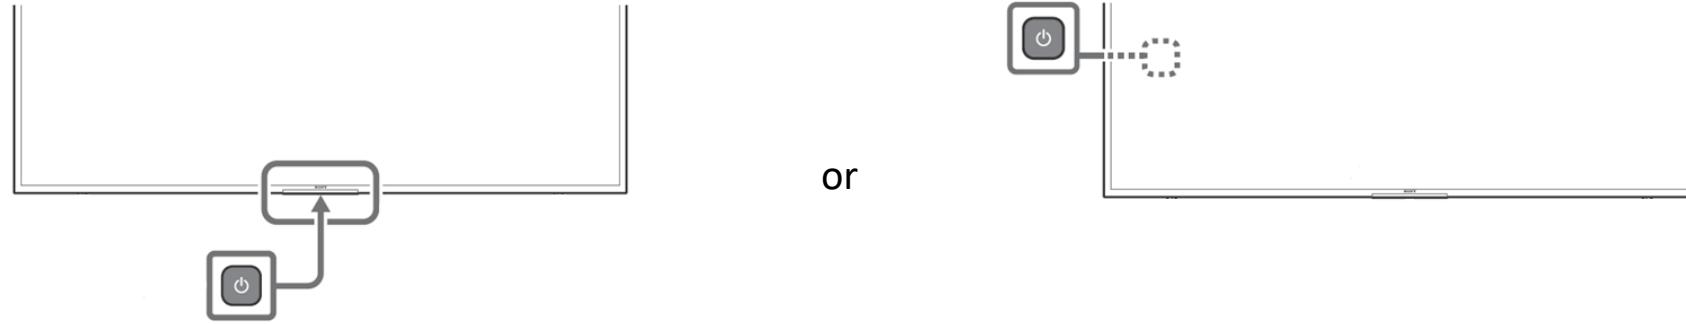


or

2. AC on.
3. Hold the Power button down for several seconds until the system starts Factory Data Reset.


DIAGRAM

Connecting Diagram: XR-55A80*K

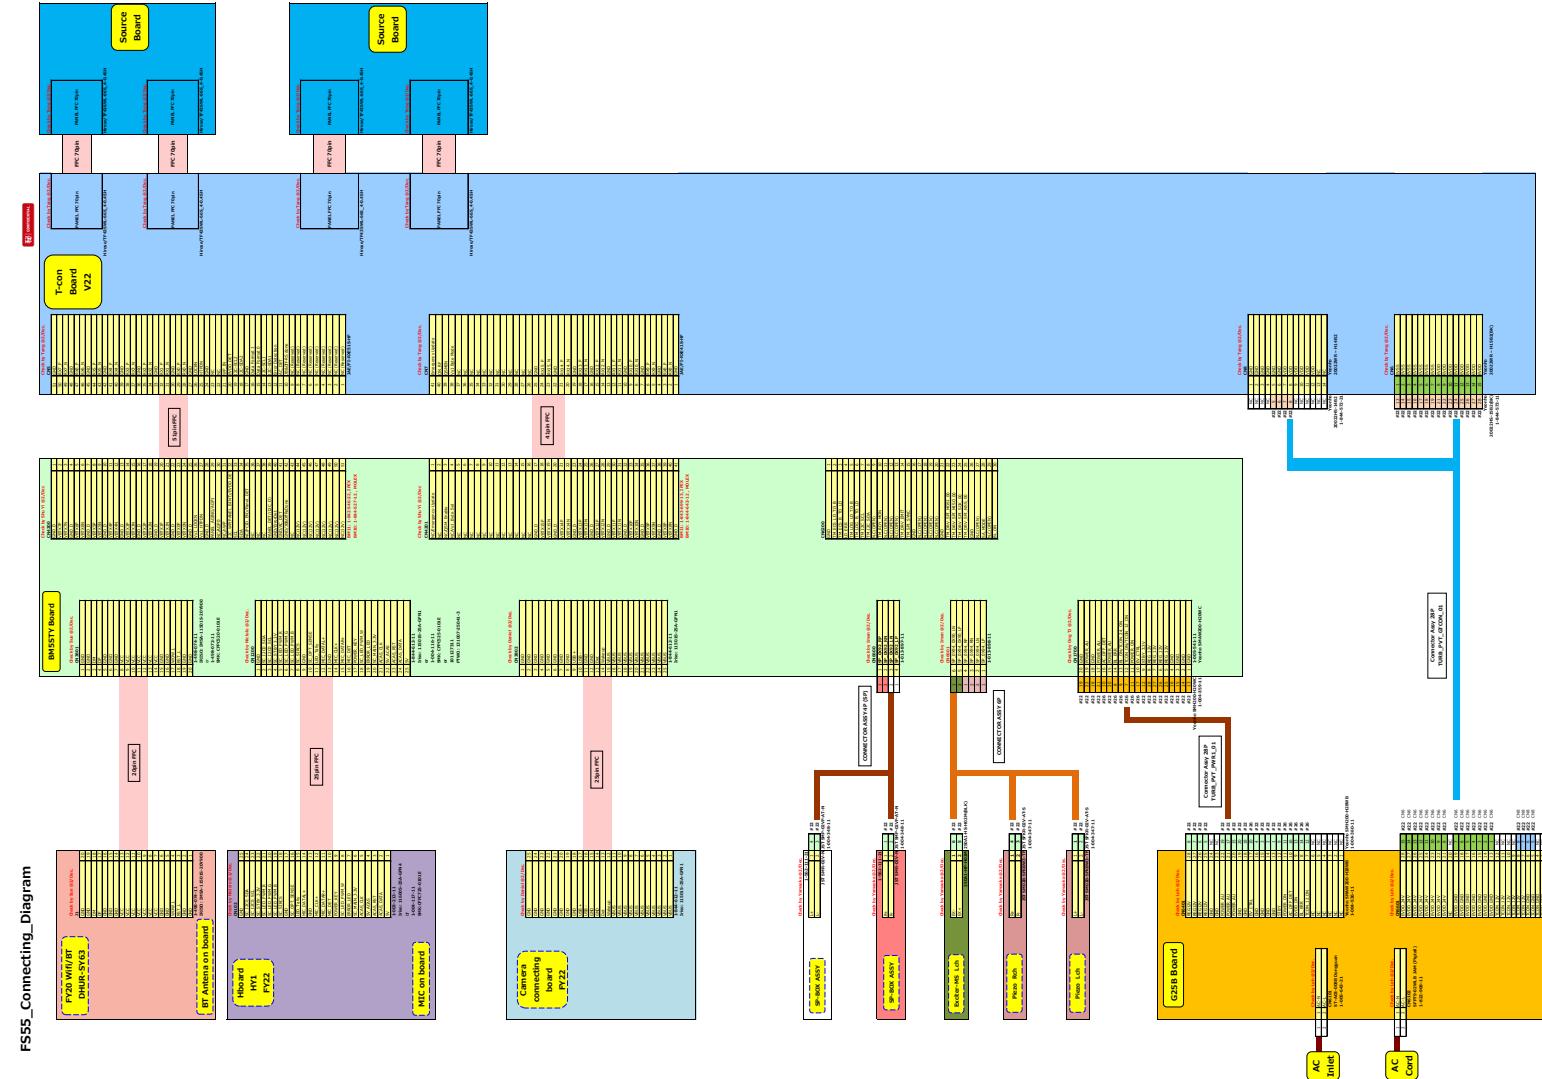


DIAGRAM

Connecting Diagram: XR-65A80*K

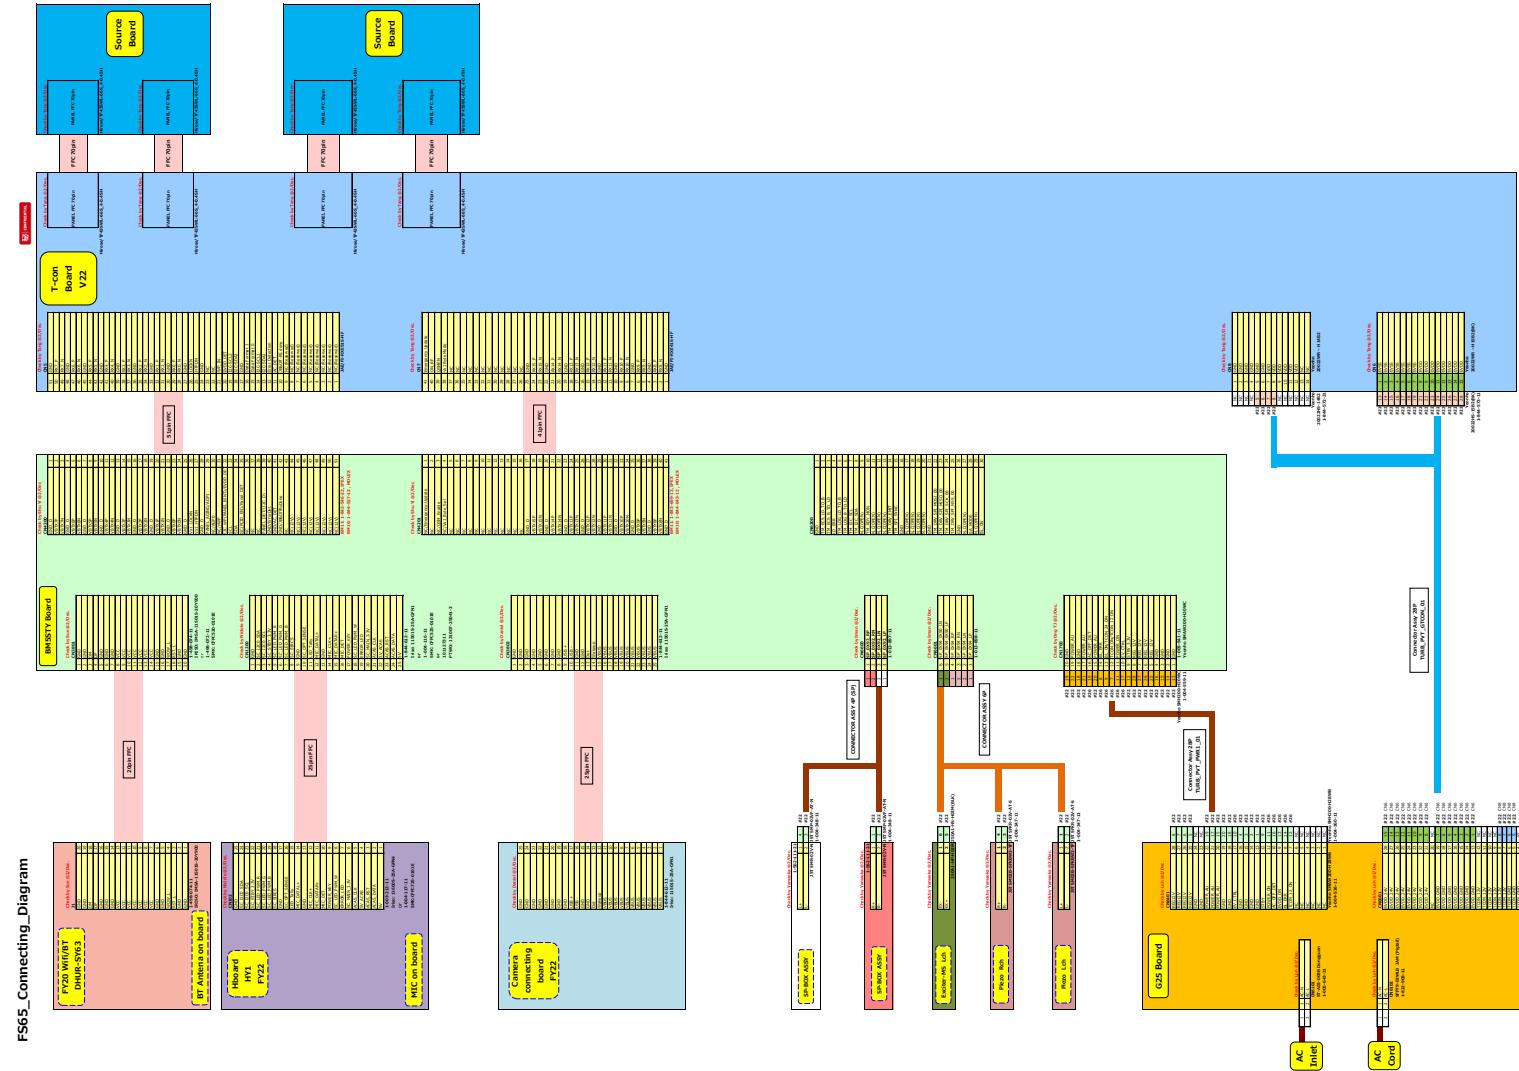


DIAGRAM

Connecting Diagram: XR-77A80*K

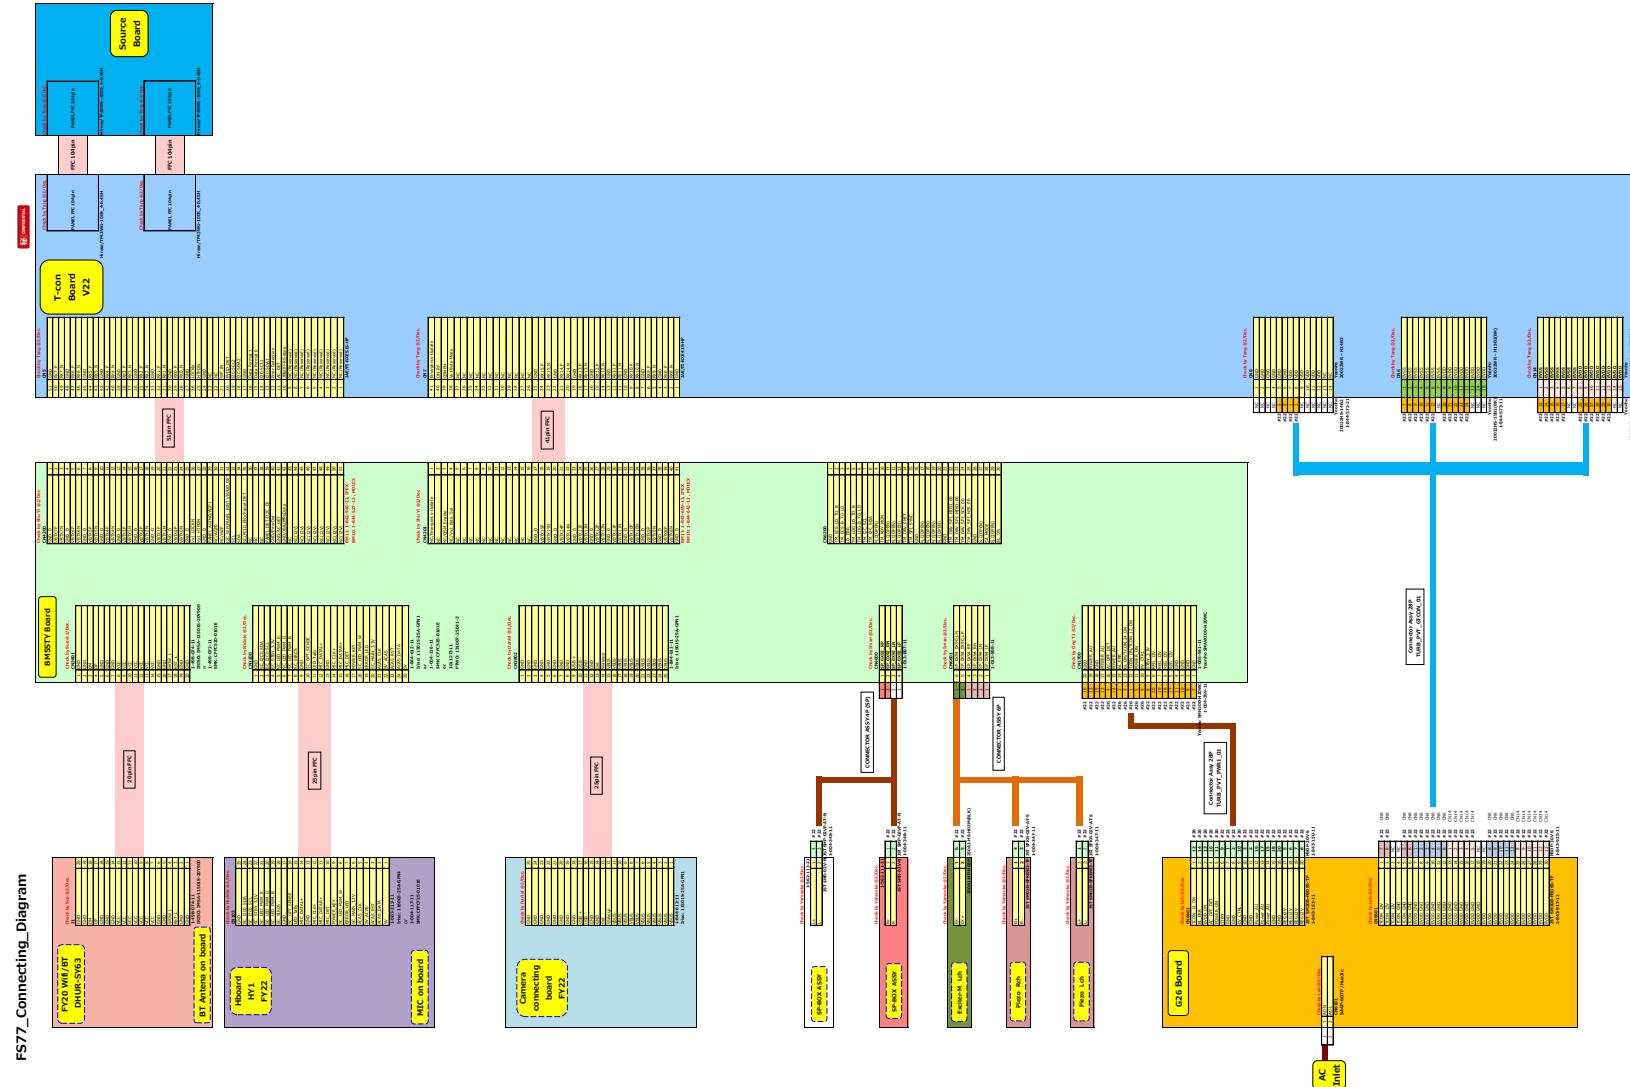


DIAGRAM

Connecting Diagram: XR-55A80*L

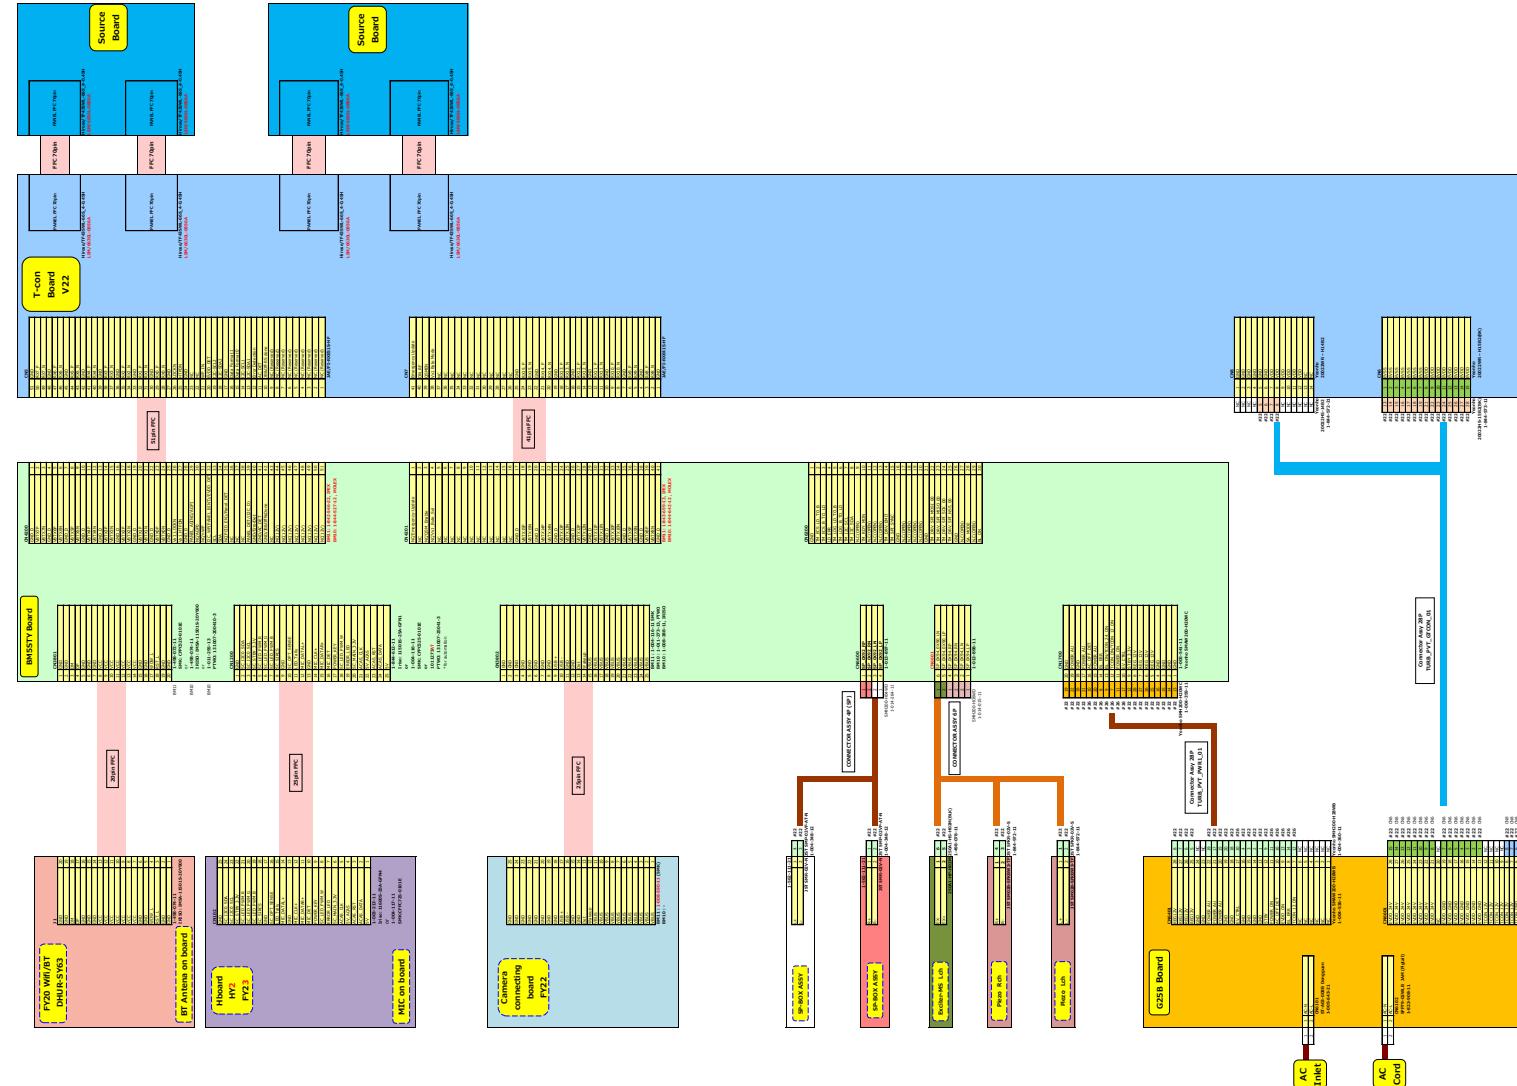


DIAGRAM

Connecting Diagram: XR-65A80*L

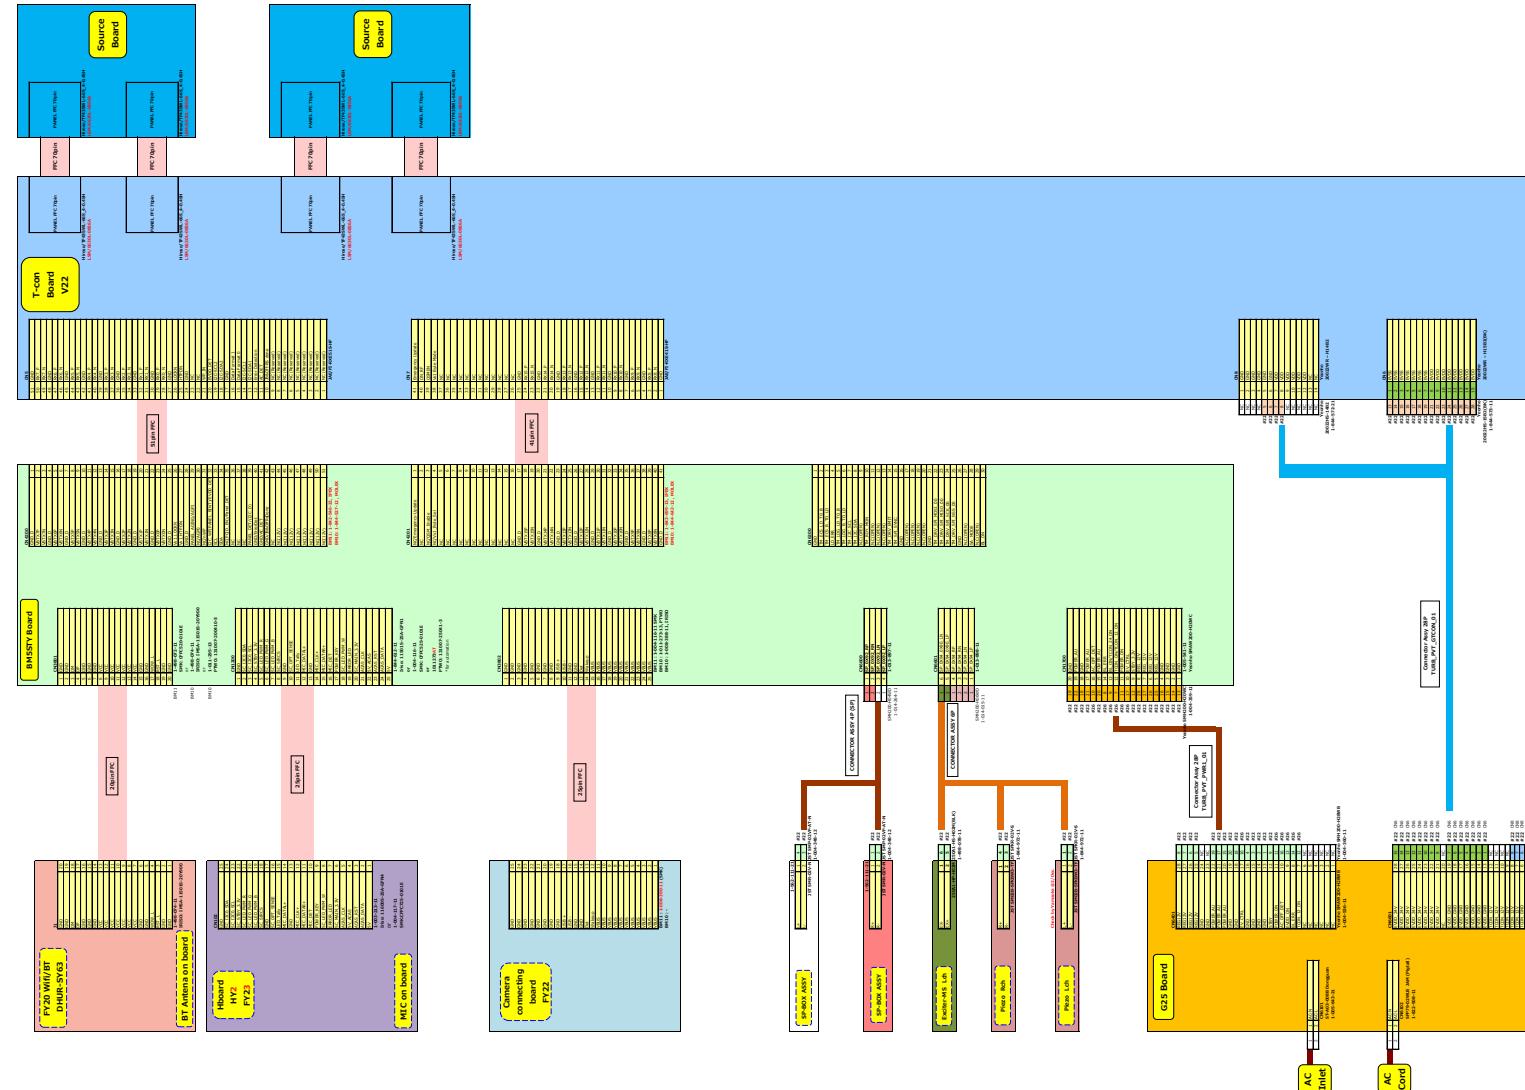


DIAGRAM

Connecting Diagram: XR-77A80*L

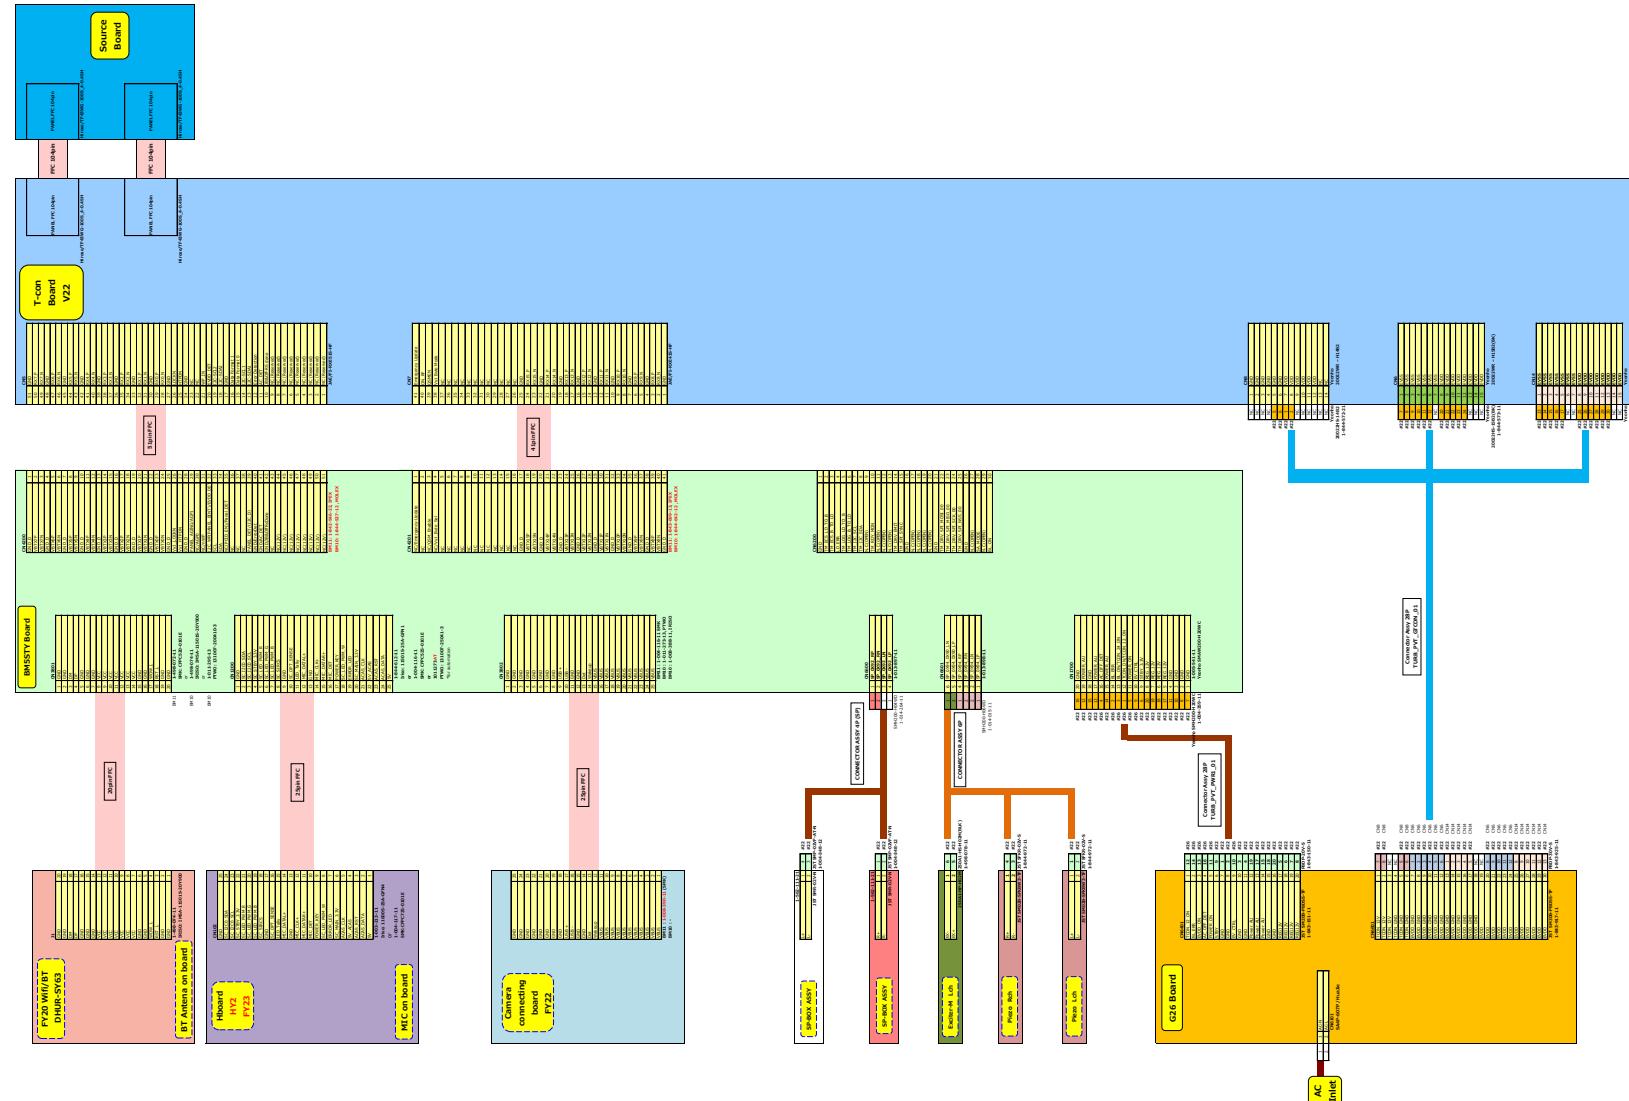


DIAGRAM

Connecting Diagram: XR-83A80*L

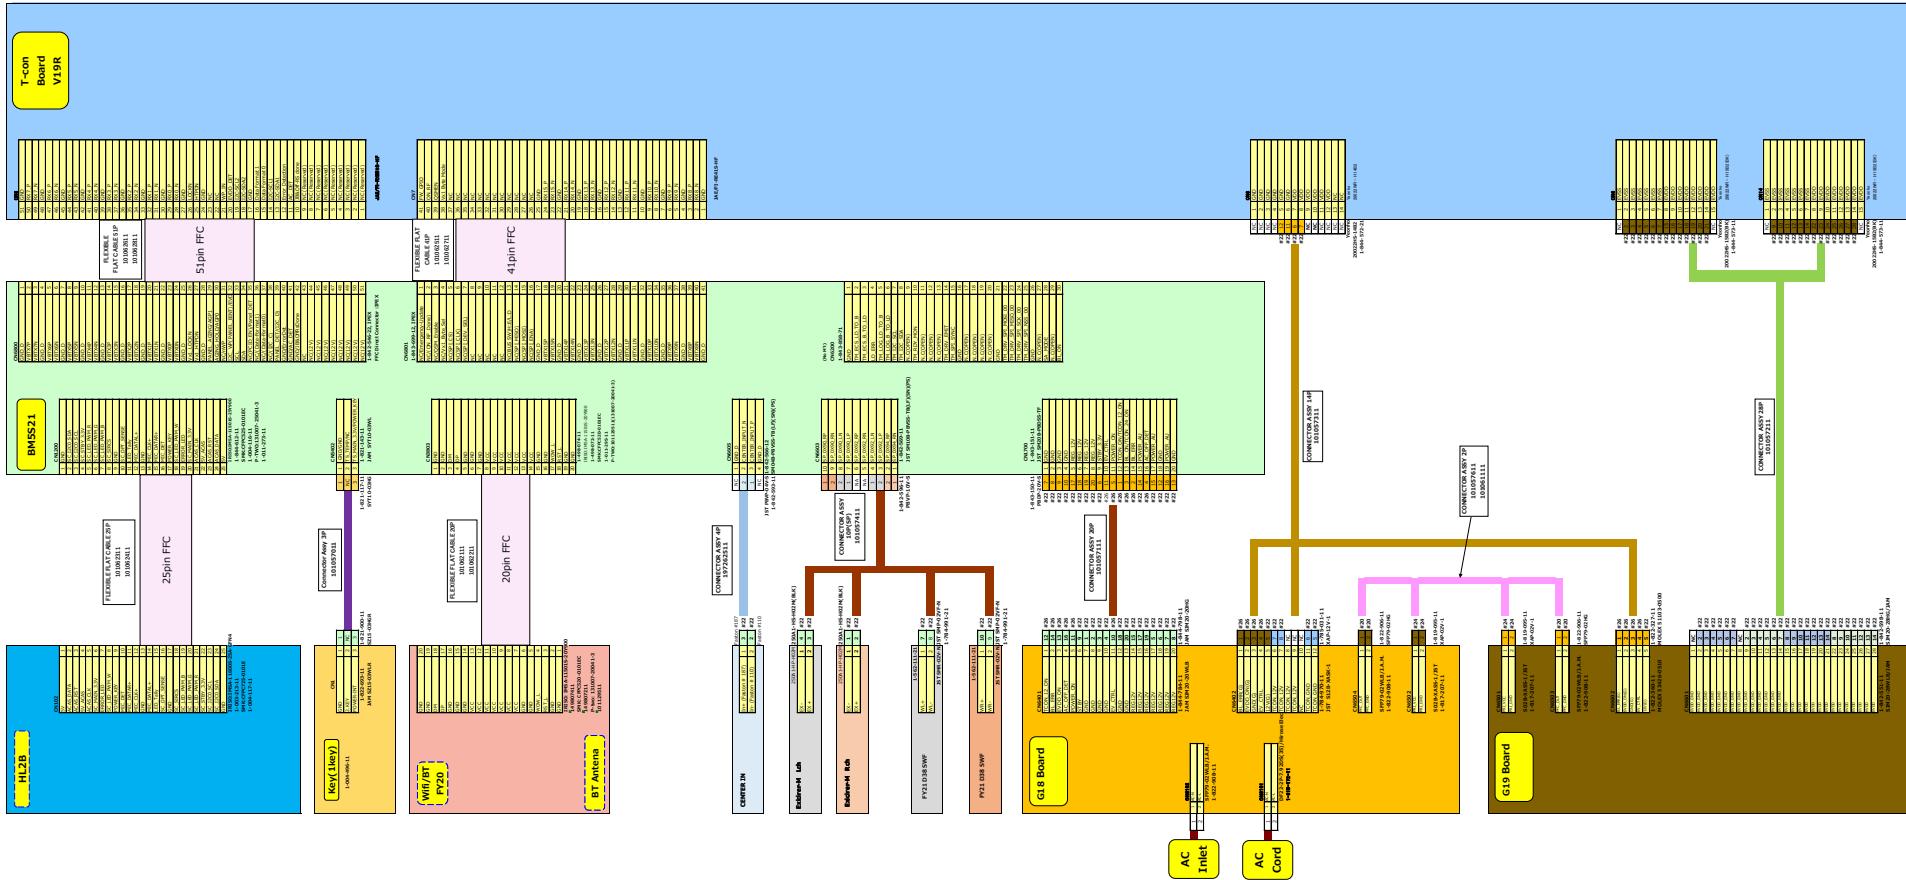


DIAGRAM

Connecting Diagram: XR-55A75L

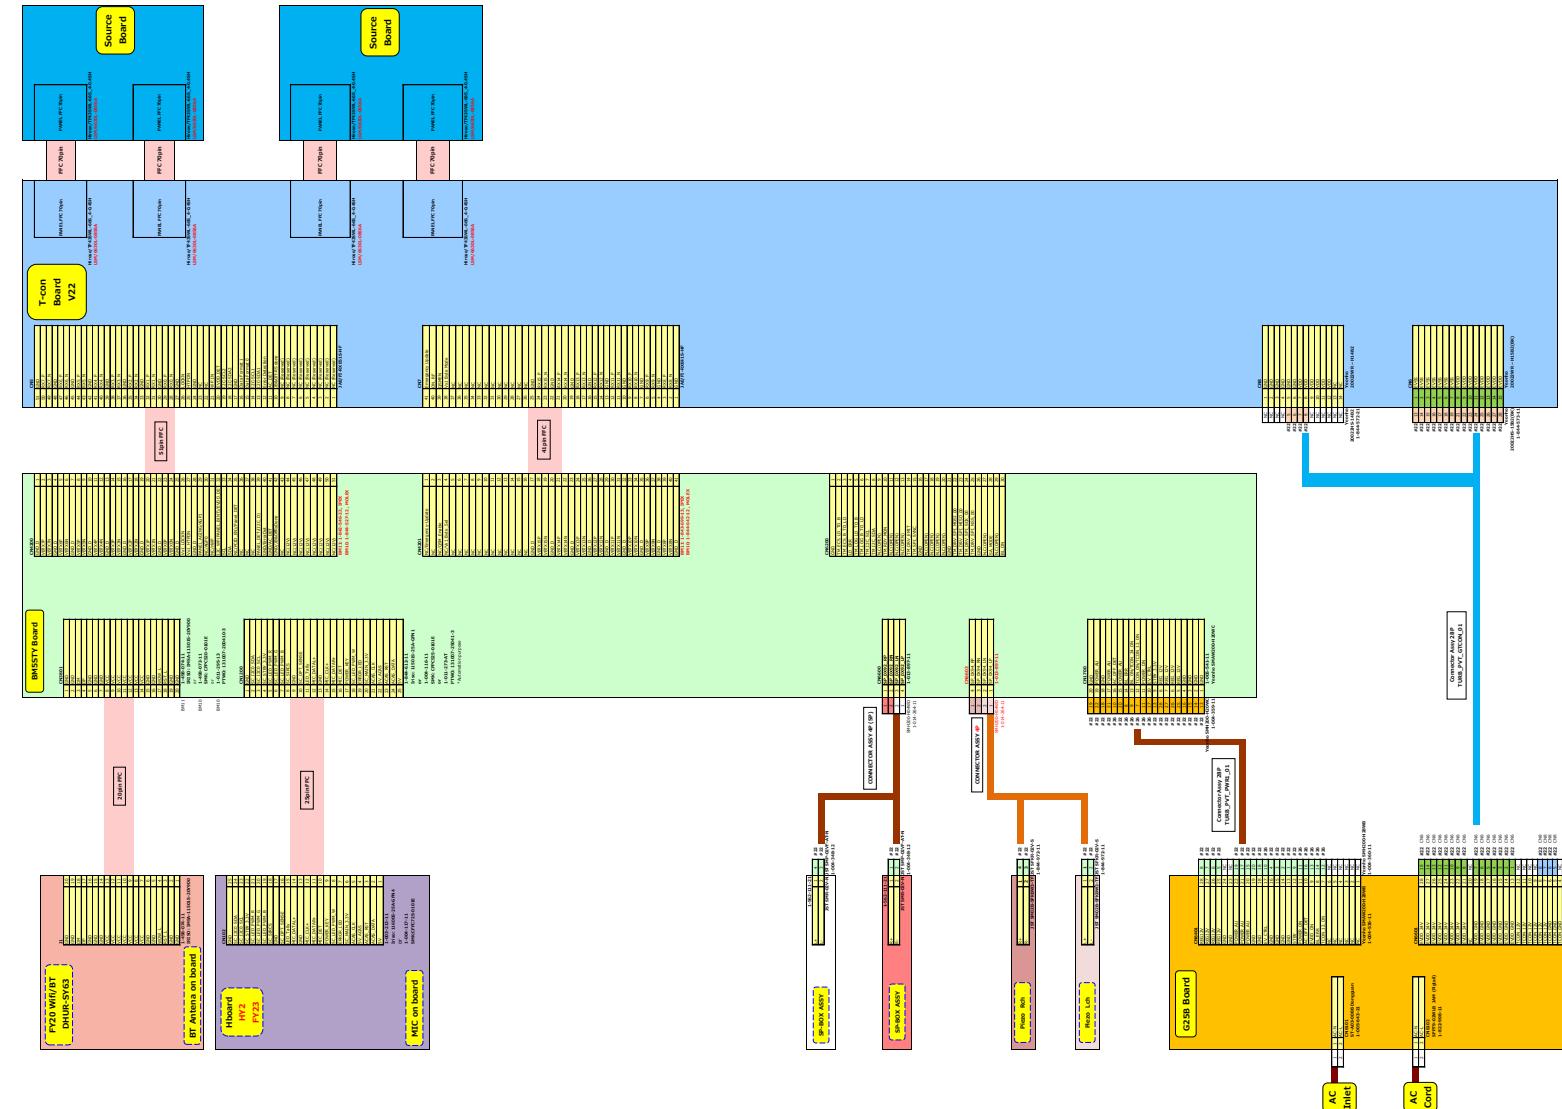

DIAGRAM

Connecting Diagram: XR-65A75L

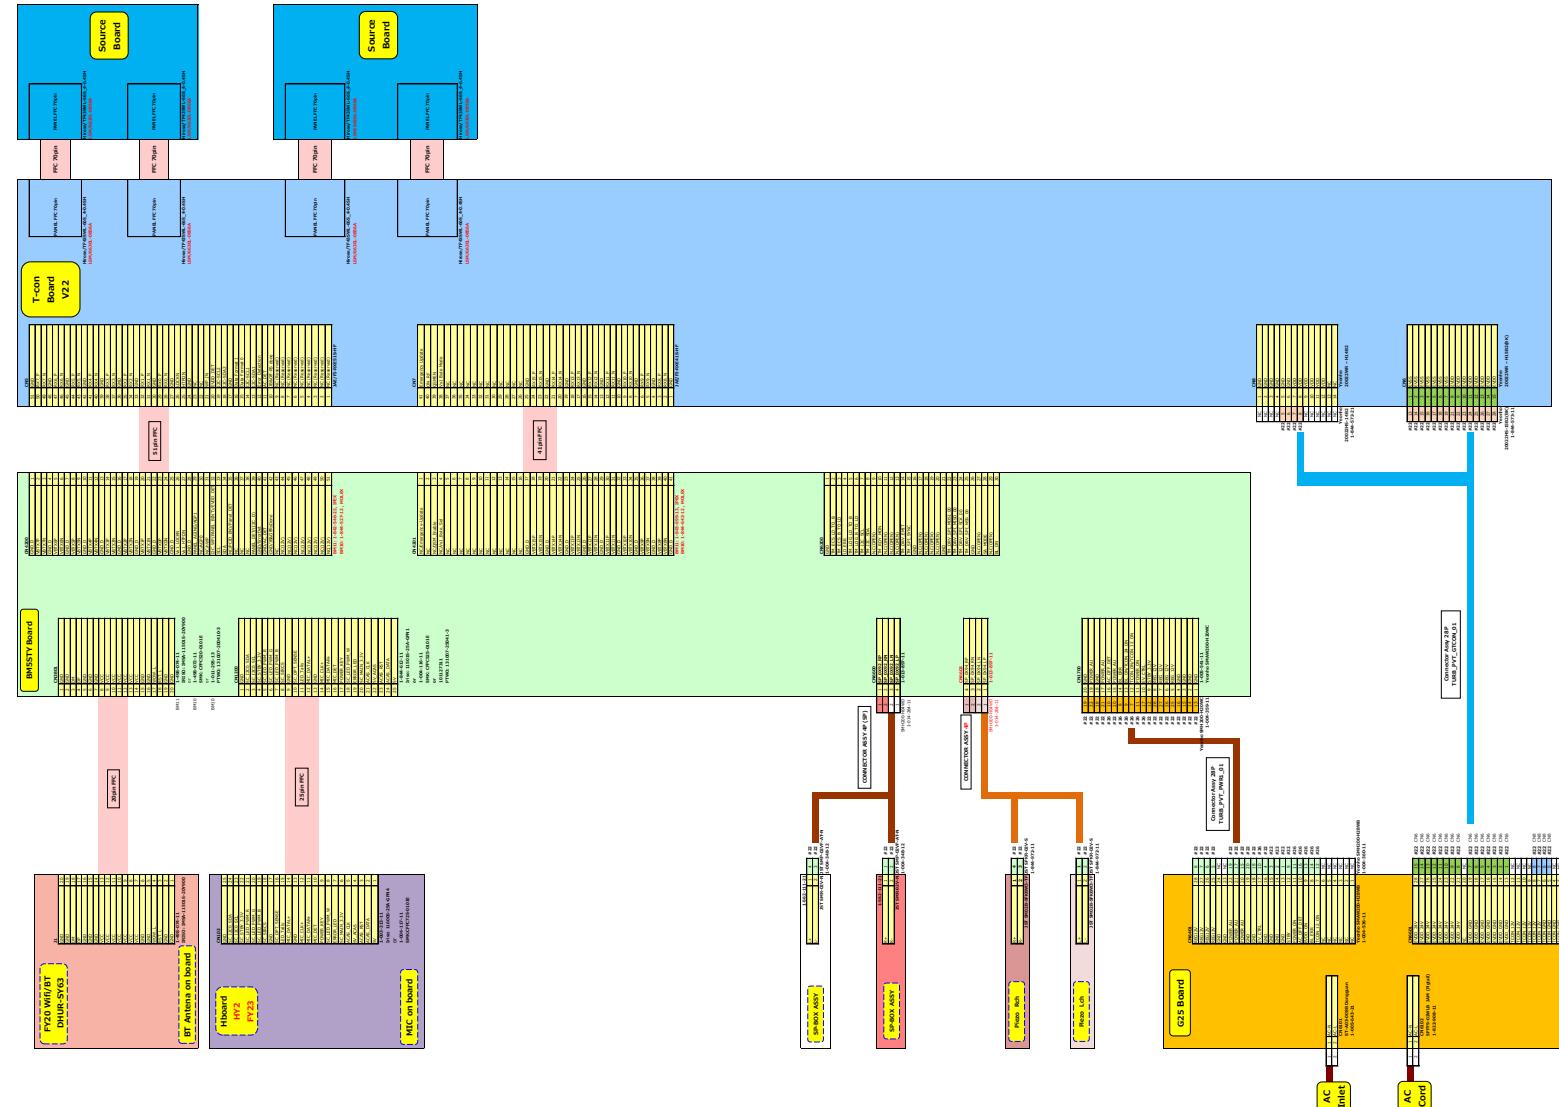

HANDLING GUIDE

Take out from P-mod packing

Hold top and bottom center.


Holding positions are as follow



HANDLING GUIDE

Holding Position

OK

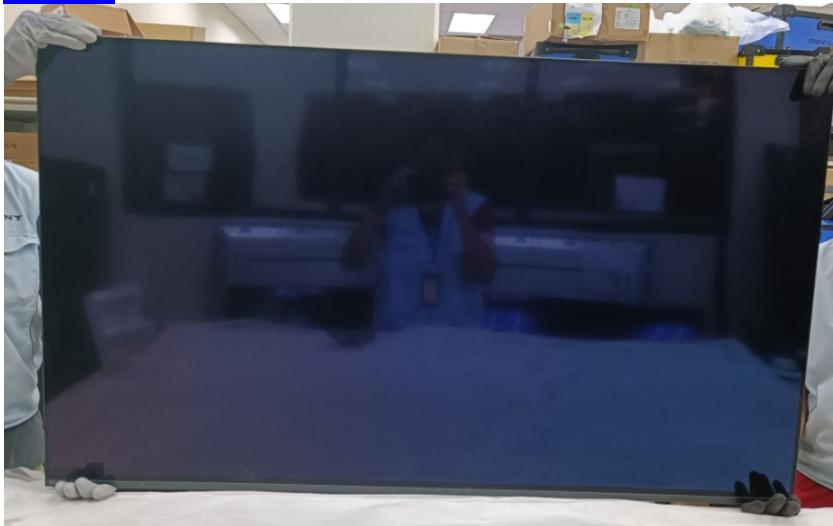

Be sure to wear gloves and work with two people

OK



OK



NG



DO NOT catch frame by finger

NG



DO NOT push display by finger

NG



DO NOT push display by finger

NG



DO NOT grab four corner


HANDLING GUIDE

Moving panel vertical position (OK)




Hold top and bottom center.
Holding positions are as follow

Holding positions

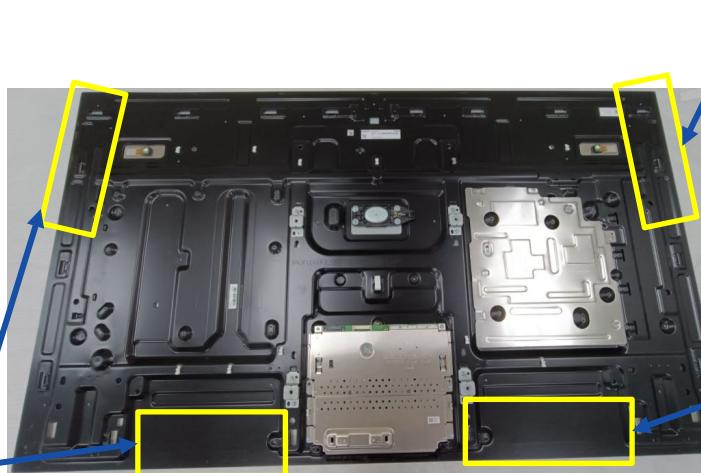

<Position>
Top side from mid.

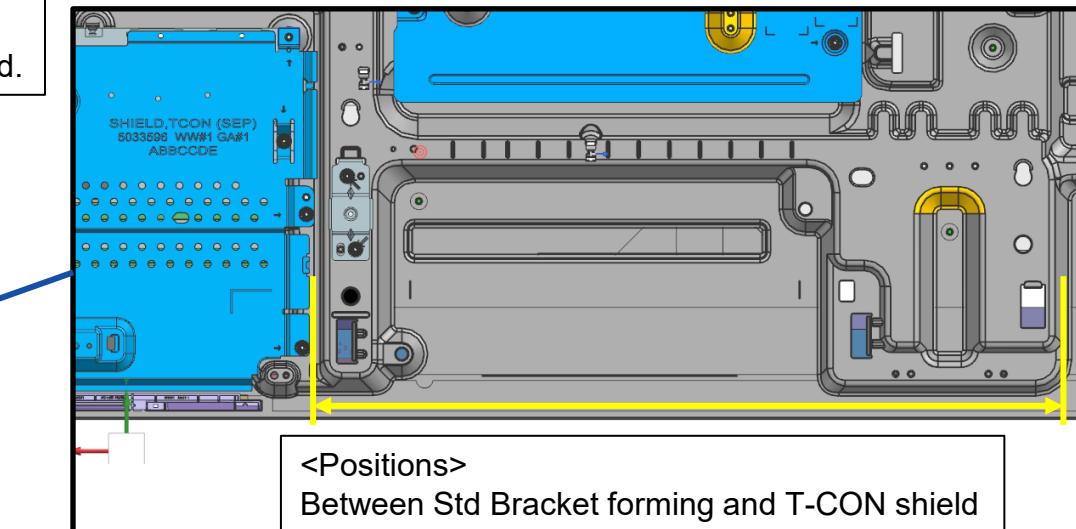

Holding
positions

HANDLING GUIDE


Moving panel vertical position (NG)

Don't allow to carry panel on face down condition.



HANDLING GUIDE

Resting Condition

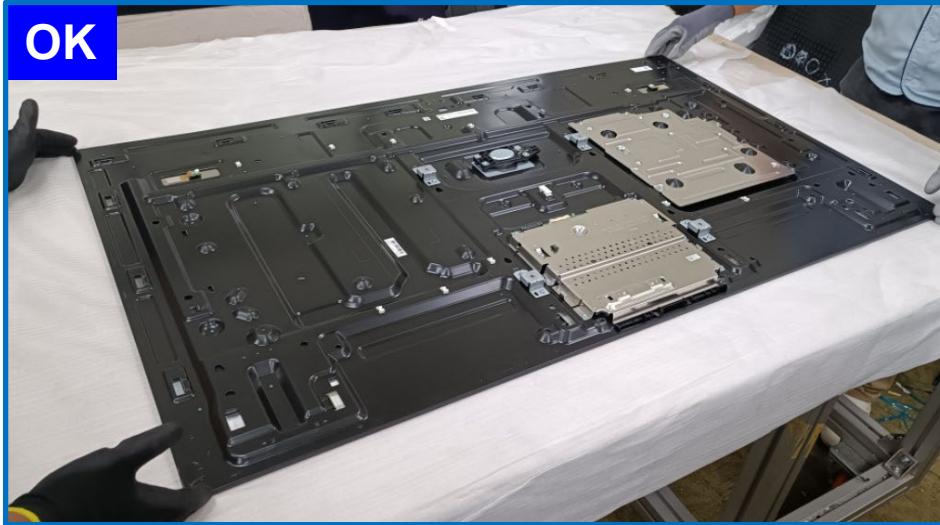


Resting P-mod by 2 persons




Resting P-mod by 1 person

Table

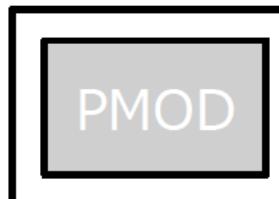

Panel can be fully supported
by table surface

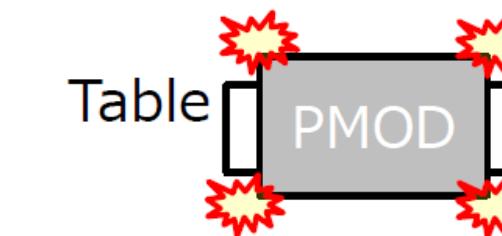

Panel is not fully supported
by table surface (Corner /
edge is hanging)

HANDLING GUIDE

Restricted Area



Avoid touch Rear Cover hook during P-mod handling



Touch on Rear Cover hemming



SERVICE MANUAL (DISASSEMBLY)

ORIGINAL MANUAL ISSUE DATE: 2023.11

DISCLAIMER: USE AT OWN RISK. SONY AND ITS AFFILIATES ARE NOT LIABLE FOR ANY DAMAGE OR INJURY CAUSED TO ANY DIGITAL ELECTRONIC EQUIPMENT, PERSON, OR PROPERTY, WHICH OCCURS DUE TO USE OF THE TOOLS, PARTS, DOCUMENTATION, OR OTHER MATERIALS HEREIN PROVIDED, WHETHER FOR REPAIR, DIAGNOSIS, MAINTENANCE, MODIFICATION, OR OTHERWISE, INCLUDING BUT NOT LIMITED TO: ANY INDIRECT, INCIDENTAL, SPECIAL, OR CONSEQUENTIAL DAMAGES; ANY LOSS OF DATA, PRIVACY OR PROFITS; OR ANY INABILITY TO USE, OR REDUCED FUNCTIONALITY OF, THE DIGITAL ELECTRONIC EQUIPMENT.

The manual is intended for a trained professional and the use of the manual is at your own risk.

9-888-906-U1

OLED TV

SONY®

Sony EMCS (Malaysia) Sdn. Bhd. HES-M
© 2023.11

MODEL LISTS

Model	Remote	Destination
XR-55A80K	RMF-TX800U	UCM
XR-55A80CK	RMF-TX900U	UC2
XR-55A80L	RMF-TX810U	UCM
XR-55A80CL	RMF-TX910U	UC2
XR-55A75L	RMF-TX810U	UC2
XR-65A80K	RMF-TX800U	UCM
XR-65A80CK	RMF-TX900U	UC2
XR-65A80L	RMF-TX810U	UCM
XR-65A80CL	RMF-TX910U	UC2
XR-65A75L	RMF-TX810U	UC2
XR-77A80K	RMF-TX800U	UCM
XR-77A80CK	RMF-TX900U	UC2
XR-77A80L	RMF-TX810U	UCM
XR-77A80CL	RMF-TX910U	UC2
XR-83A80L	RMF-TX810U	UCM
XR-83A80CL	RMF-TX910U	UC2

Self Diagnosis
Supported model



TABLE OF CONTENTS

Title	Page
TOOLS & EQUIPMENTS	4
FFC PRECAUTIONS	5
SECTION 1 : XR-55A80* / XR-55A75L	
1-1 DISASSEMBLY AND REMOVAL CAUTION	7
1-2 BOARD LOCATION	13
1-3 WIRE DRESSING	14
1-4 EXPLODED VIEW AND PART LIST	24
SECTION 2 : XR-65A80* / XR-65A75L	
2-1 DISASSEMBLY AND REMOVAL CAUTION	30
2-2 BOARD LOCATION	36
2-3 WIRE DRESSING	37
2-4 EXPLODED VIEW AND PART LIST	46
SECTION 3 : XR-77A80*	
3-1 DISASSEMBLY AND REMOVAL CAUTION	52
3-2 BOARD LOCATION	58
3-3 WIRE DRESSING	59
3-4 EXPLODED VIEW AND PART LIST	65
SECTION 4 : XR-83A80*	
4-1 DISASSEMBLY AND REMOVAL CAUTION	70
4-2 BOARD LOCATION	73
4-3 WIRE DRESSING	74
4-4 EXPLODED VIEW AND PART LIST	85

SMART CORE	
DISASSEMBLY AND REMOVAL CAUTION	91
EXPLODED VIEW AND PART LIST	92
APPENDIX	
SHARP EDGE	94
FFC REPLACEMENT CAUTIONS	95

Please refer Service Manual (Troubleshooting) for below information:

- General Safety Notes
- Self Diagnosis Function
- Triage Chart
- Troubleshooting, Troubleshooting reference
- Software Update & Reset
- Diagram: Connector Diagram
- Handling Guide

Note: Pictures provided in this manual may have difference from actual sets



TOOLS & EQUIPMENTS

1 LIST OF ITEMS TO PREPARE


- i. Screwdriver (e.g., #2 Phillips Screwdriver)
- ii. Multimeter
- iii. ESD Wrist Straps
- iv. Metal Washer (Flat) or Coin (for remove Rear Cover)
- v. Ruler (for remove Rear Cover)
- vi. Service Manual (Disassembly) (for remove & replace details)

2 OPTIONAL EQUIPMENTS

- i. Screwdriver (e.g., #0 Phillips Screwdriver)
- ii. Parts Tray for loose screws and small items
- iii. Flashlight
- iv. Service Manual (Troubleshooting)

3 PREPARATION BEFORE REPAIRS

Before you begin, unplug the TV from the wall outlet and stand it up on a level work surface to begin removing the Rear Cover. If you are working on a TV that was wall-mounted, and does not have a stand, simply place the TV faced-down on top of a thick blanket, on a large/flat surface, or you may be able to lean it up against a wall near a wall outlet.

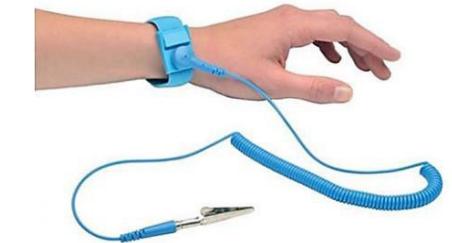

Thickness: approx. 1.5mm
Diameter: 20~25mm
(wrap in tape (L=50mm))

Plastic or Metal Ruler
(In case of Metal ruler, wrap in tape (L=50mm) for prevent scratches)

FFC PRECAUTIONS


FFC Insertion Method

※Caution: DO NOT hold / touch copper side during FFC handling.

ESSENTIAL CAUTION INFO THAT MUST BE FOLLOWED BY PRODUCTION FOR ANY FFC INSERTION METHOD


STRAIGHT INSERT

OK

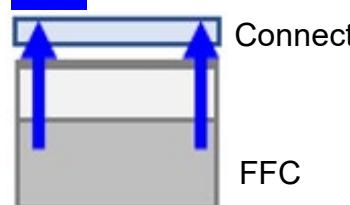

INSERT FFC IN STRAIGHT CONDITION

NG

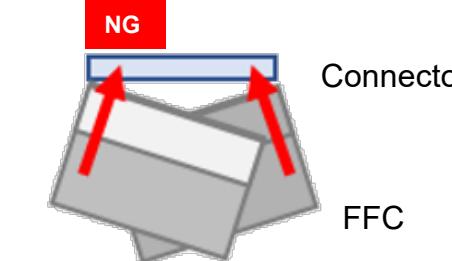

DO NOT INSERT FFC IN SLANTING CONDITION

INSERT ANGLE


OK



<15°




DO NOT APPLY EXCESSIVE FORCE DURING INSERTION

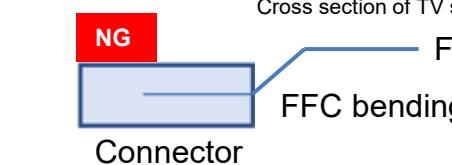

RECOMMENDED FFC HOLDING METHOD MATRIX


	A Sandwich	B Both ends	C Plate
1 One-hand	 1A	 1B	 1C
2 Both hands	 2A		 2C

INDICATION FOR FFC FULL INSERTION

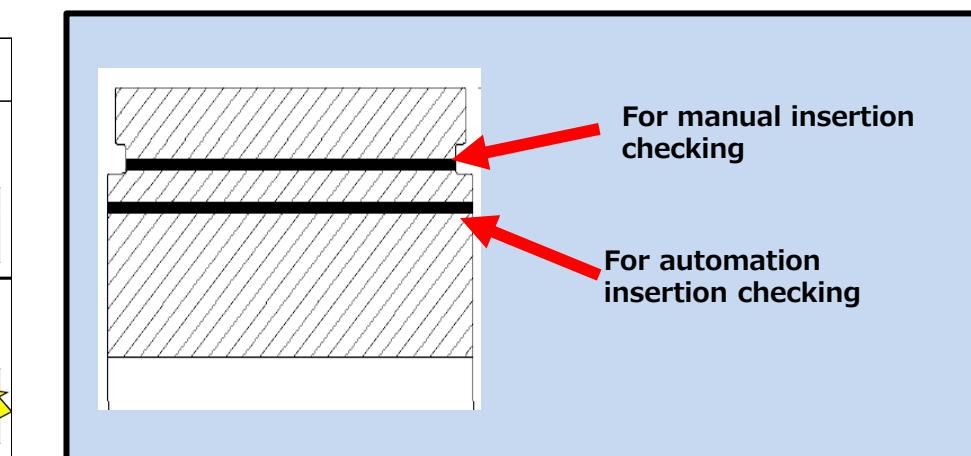


FFC PRECAUTIONS


Caution for FFC with Housing Connector

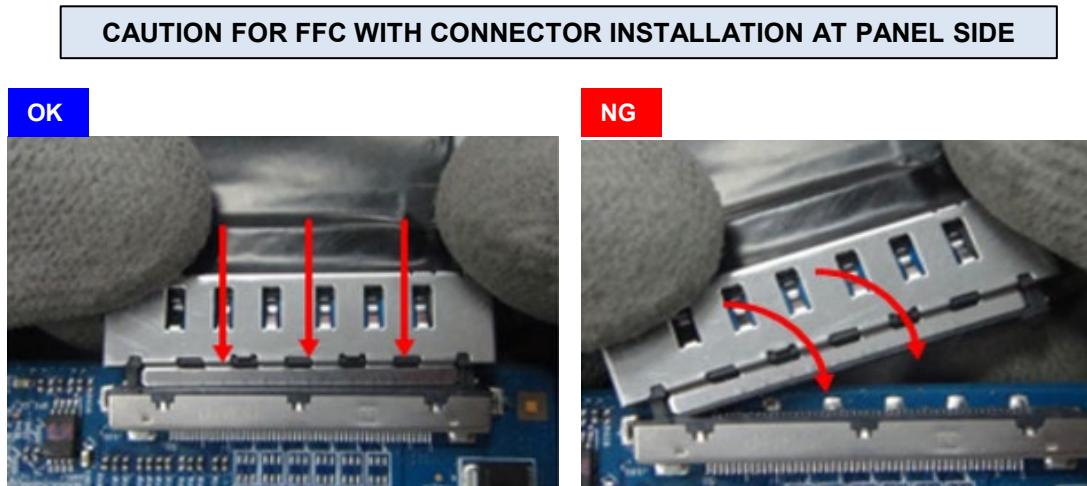


ABNORMAL HANDLING WILL CAUSE CONTACT SHIFTED & FOREIGN PARTICLES ISSUE AS PICTURE BELOW:

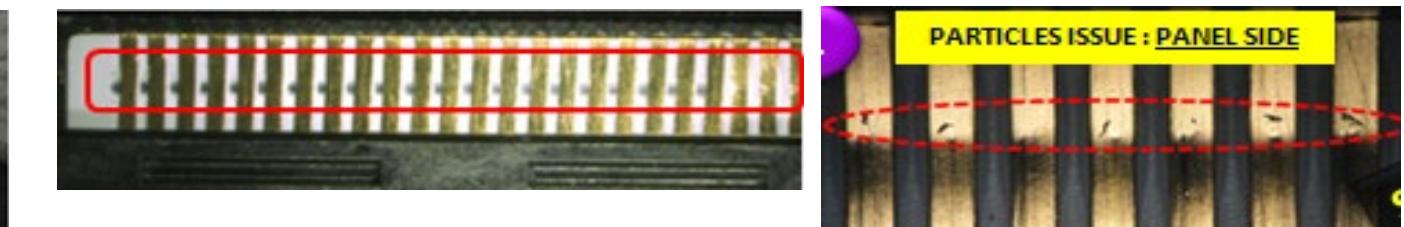


ZIFF FFC Insertion Caution

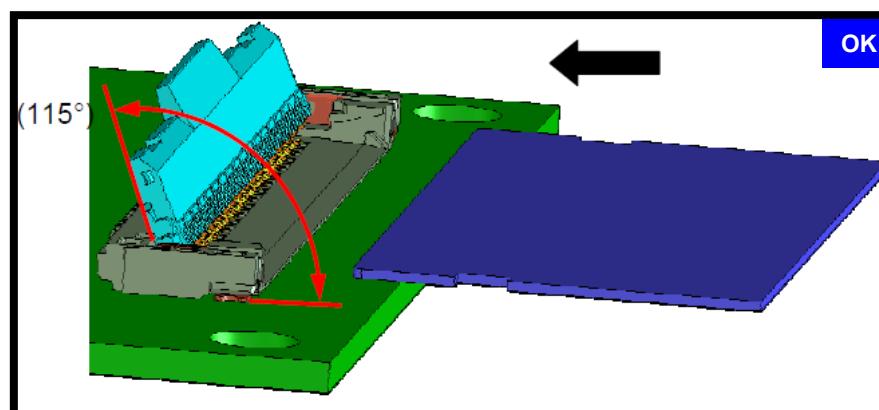

Pull up to open actuator.

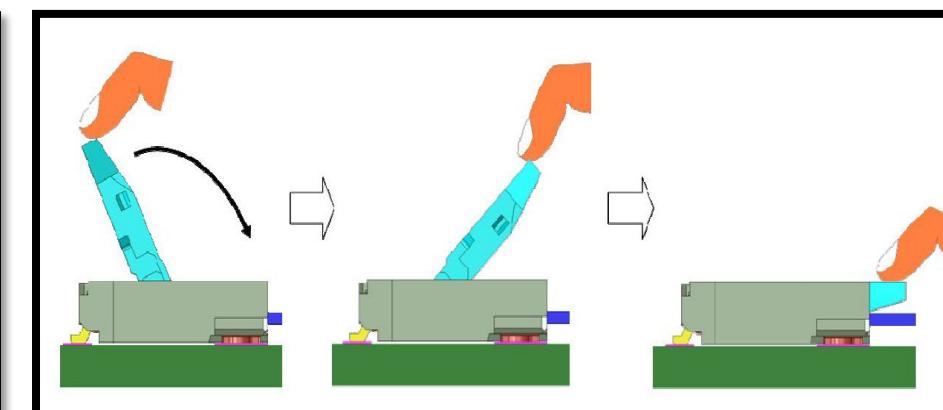


Close actuator securely to lock
Make sure line indication on FFC is align with actuator.

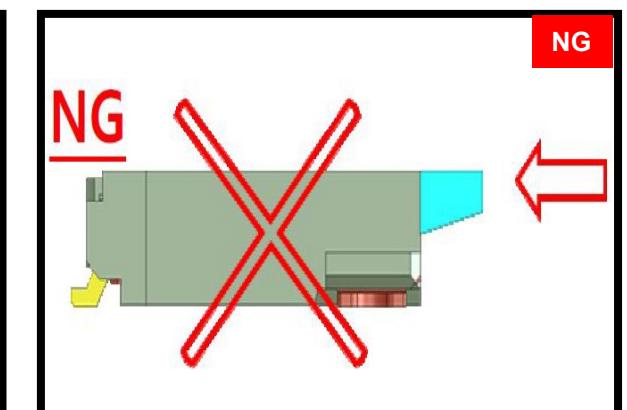

Do not push inwards with excessive force.

SECTION 1: XR-55A80* / XR-55A75L**1-1. DISASSEMBLY AND REMOVAL CAUTION****REAR COVER**

1. Remove the screws from the rear cover (4 pcs)


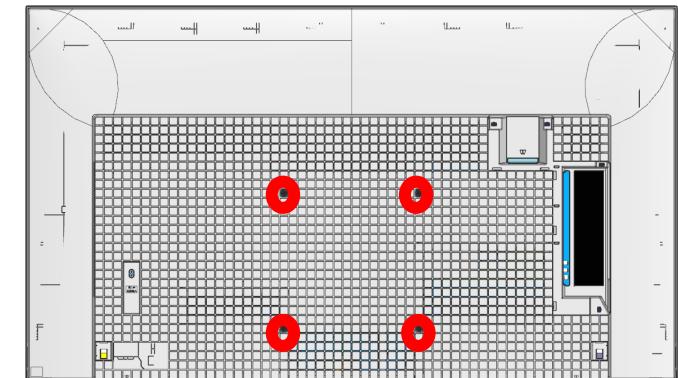


2. Remove the bottom cover in red box.



Washer or coin to unhook Cover Hook

*Wrap washer in VA tape (15mm X 55mm)

*Thickness approximately 1.5mm

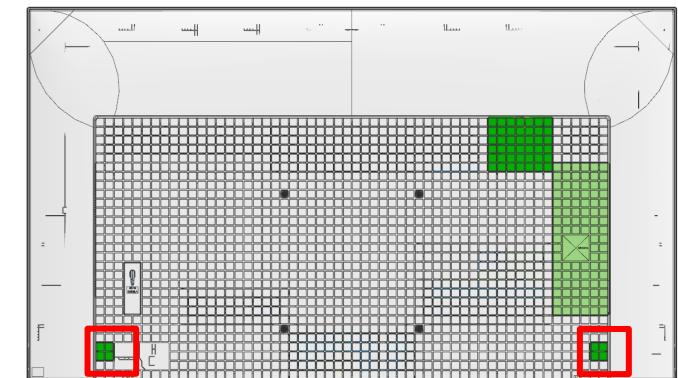
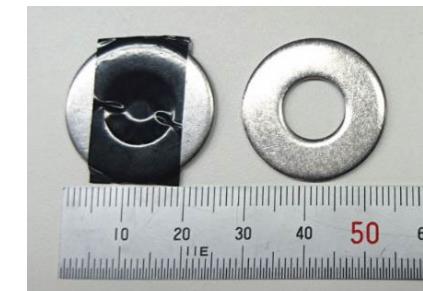


- ① Put washer or coin in the slit of cover hook.
- ② Turn washer or coin to the direction of the arrow.
- ③ Remove cover hook.

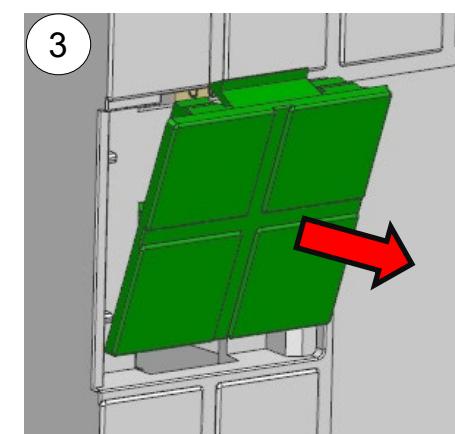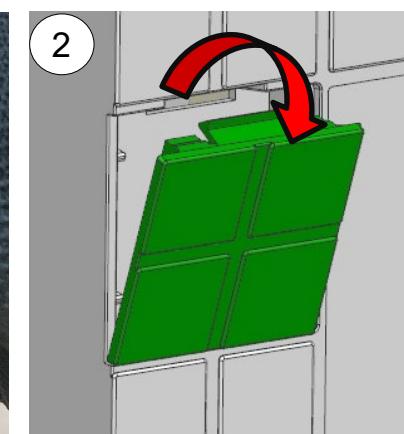

SECTION 1: XR-55A80* / XR-55A75L**1-1. DISASSEMBLY AND REMOVAL CAUTION****REAR COVER**

3. Unhook the bottom hook, starting from center.(4 hooks)

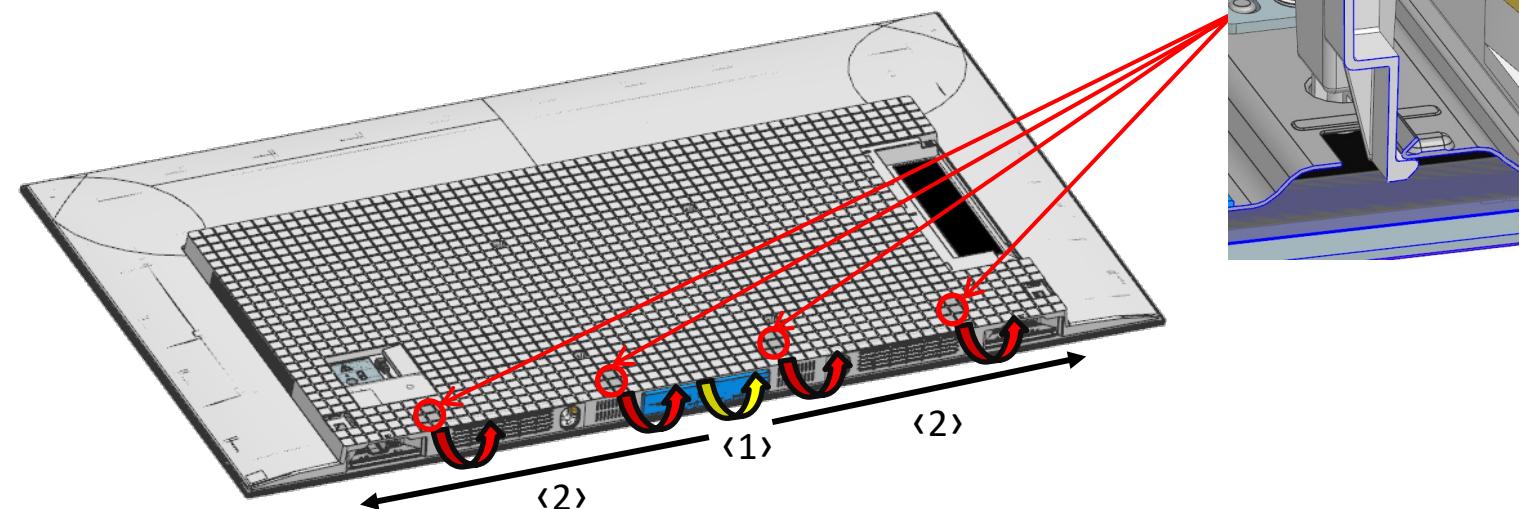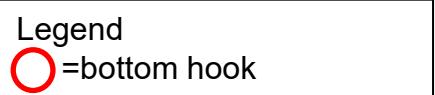

- ① Pull rear cover bottom center until hook release sound is heard.
- ② Pull rear cover towards outside direction until hook release sound is heard.




SECTION 1: XR-55A80* / XR-55A75L


1-1. DISASSEMBLY AND REMOVAL CAUTION

REAR COVER

4. Unhook the left side hooks. (3 hooks)

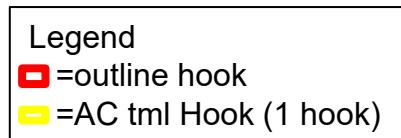

- ① When releasing hook, pull the rear cover corner and insert jig
- ② Flex the rear cover outwards to release outline hook
- ③ Pull rear cover below the AC tml to release the AC tml hook

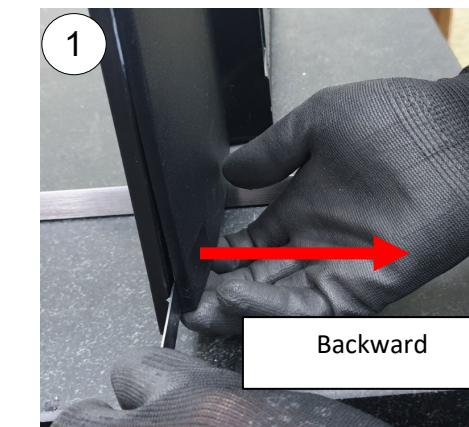


Ruler or jig to release corner hook

*Wrap ruler with tape to prevent scratch



SECTION 1: XR-55A80* / XR-55A75L**1-1. DISASSEMBLY AND REMOVAL CAUTION****REAR COVER**

5. Unhook the right-side hooks. (3 hooks)

Legend
□=outline hook
□=Side Jack Bottom Hook (3 hooks)

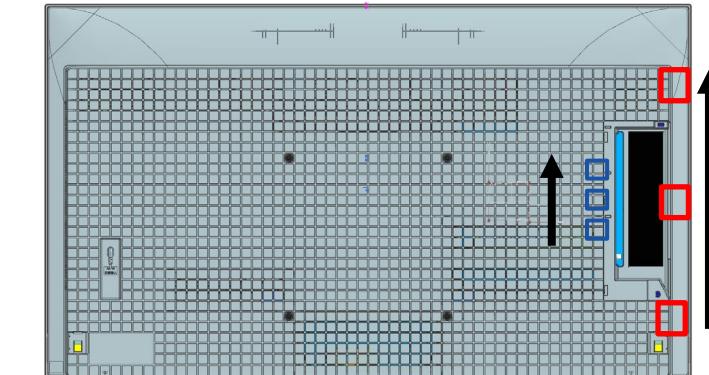

- ① When releasing hook, pull the rear cover and insert jig
- ② Flex the rear cover outwards to release outline hook
- ③ Pull rear cover below the side jack to release the side jack bottom hook.

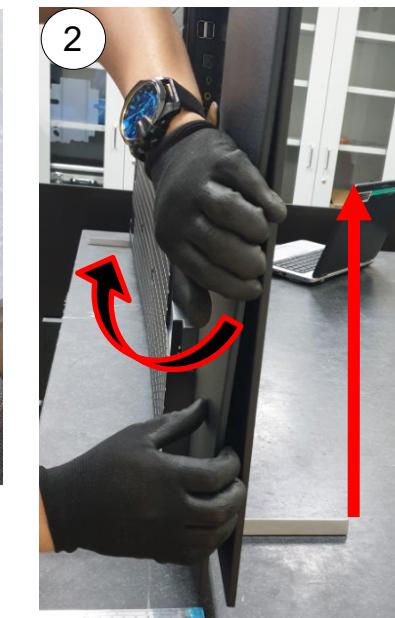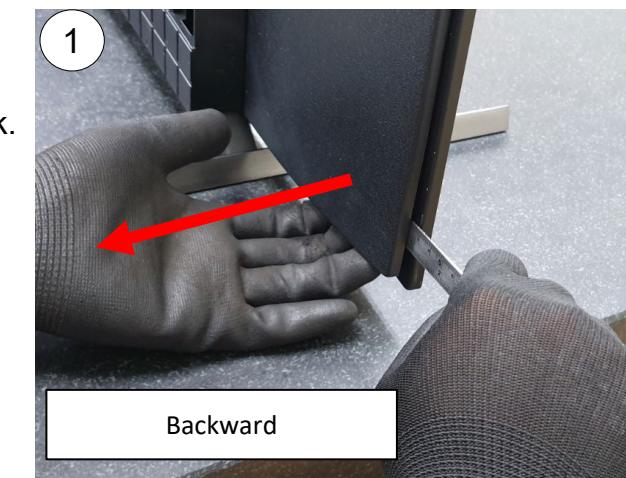


Ruler or jig to release corner hook

*Wrap ruler with tape to prevent scratch





SECTION 1: XR-55A80* / XR-55A75L**1-1. DISASSEMBLY AND REMOVAL CAUTION****REAR COVER**

6. Unhook the top row hooks. (8 hooks)

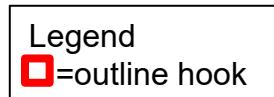



- ① Tilt the rear cover and push upwards on the left/right side.
- ② Lift the rear cover off from the center

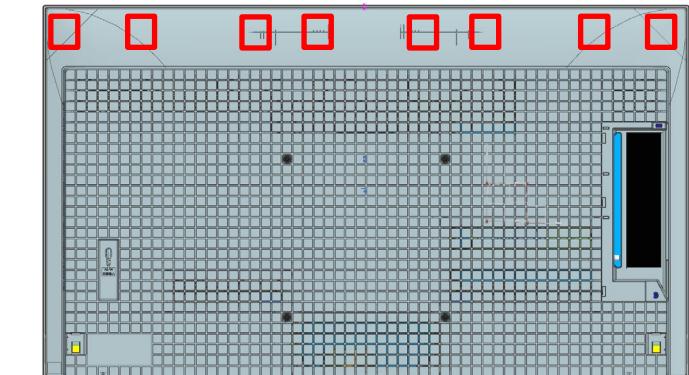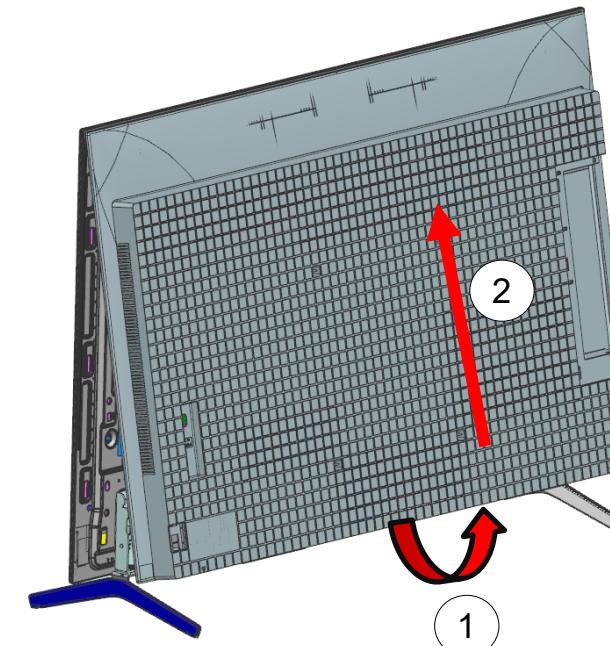

SECTION 1: XR-55A80* / XR-55A75L**1-1. DISASSEMBLY AND REMOVAL CAUTION****REAR COVER**

Hook positioning.

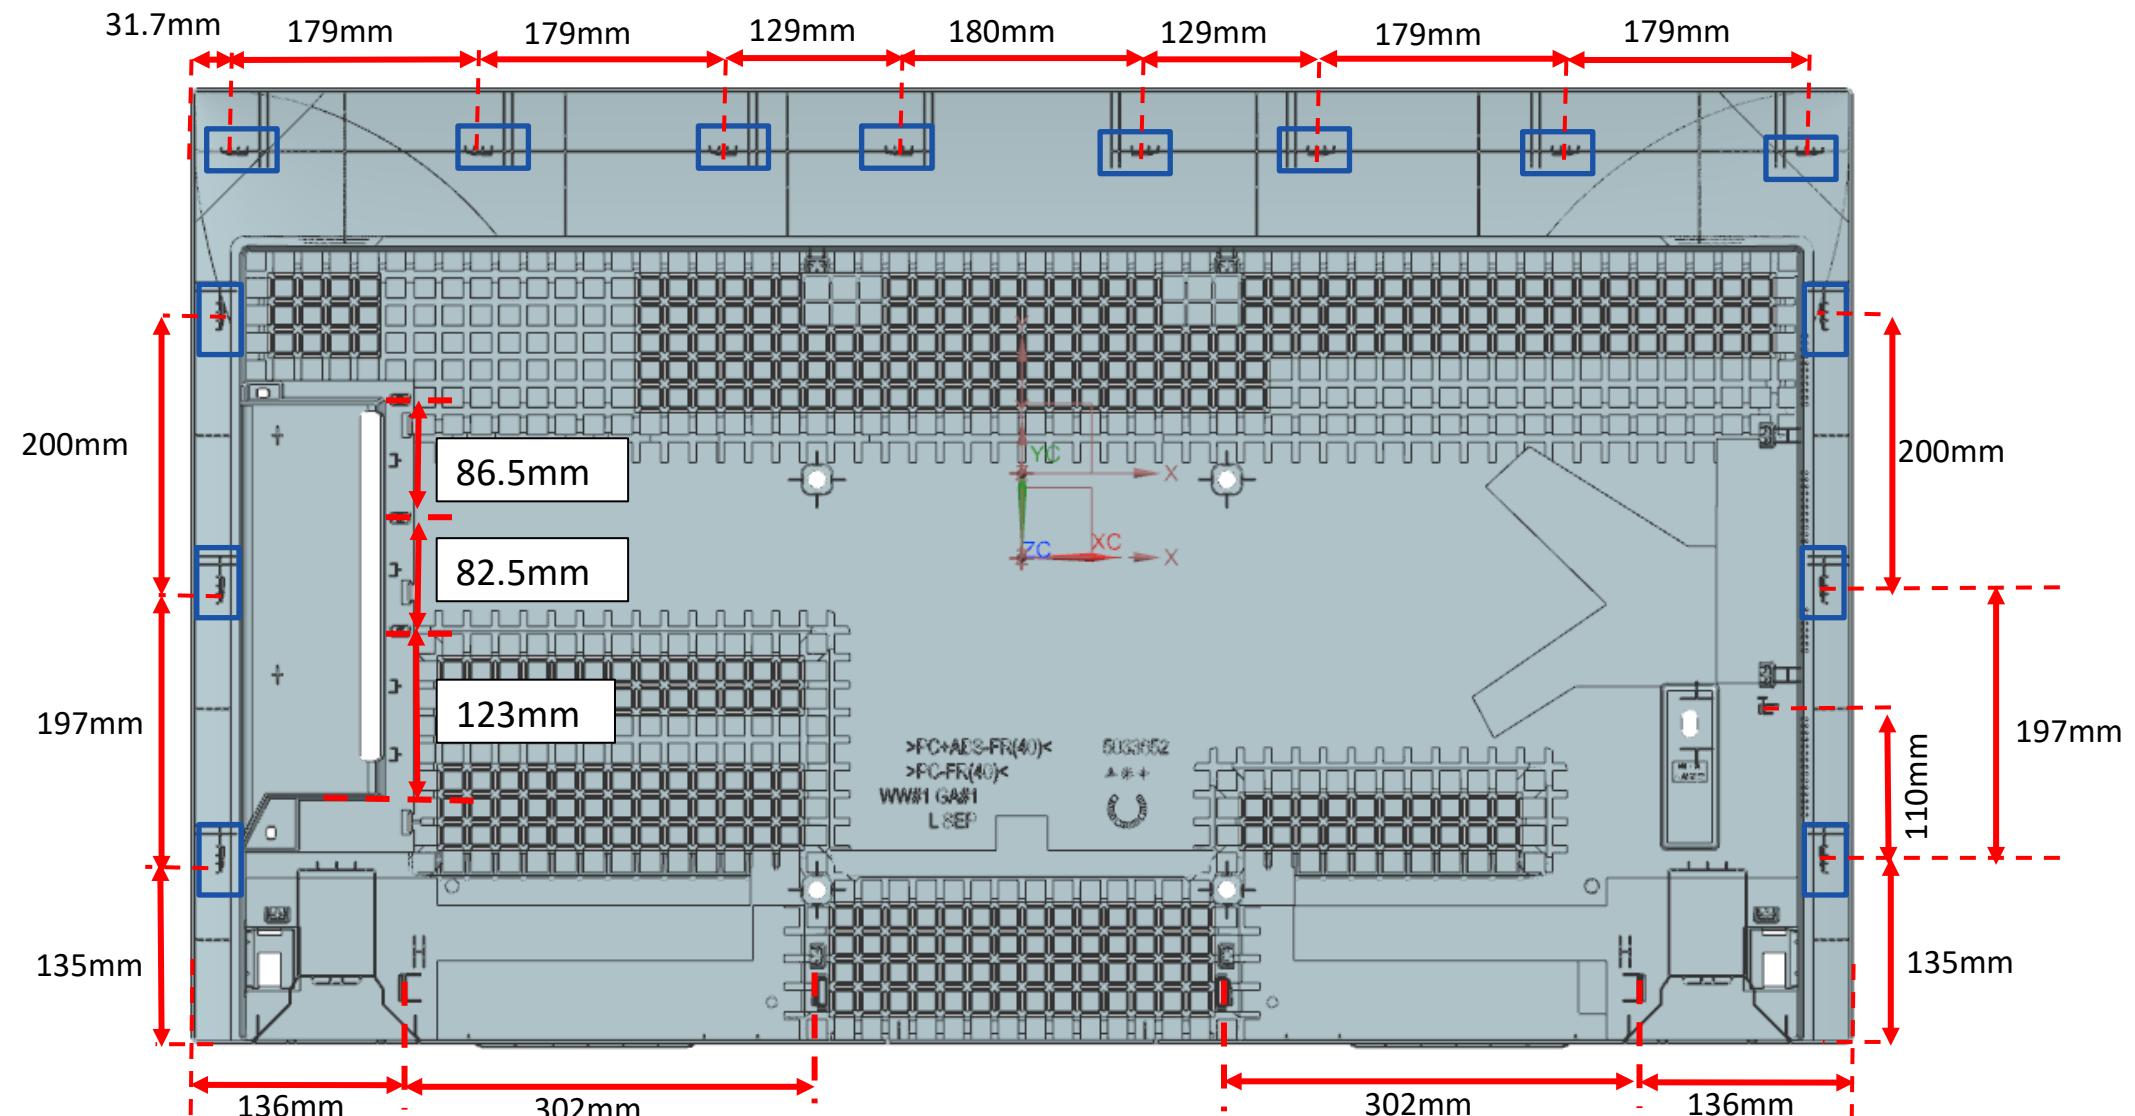


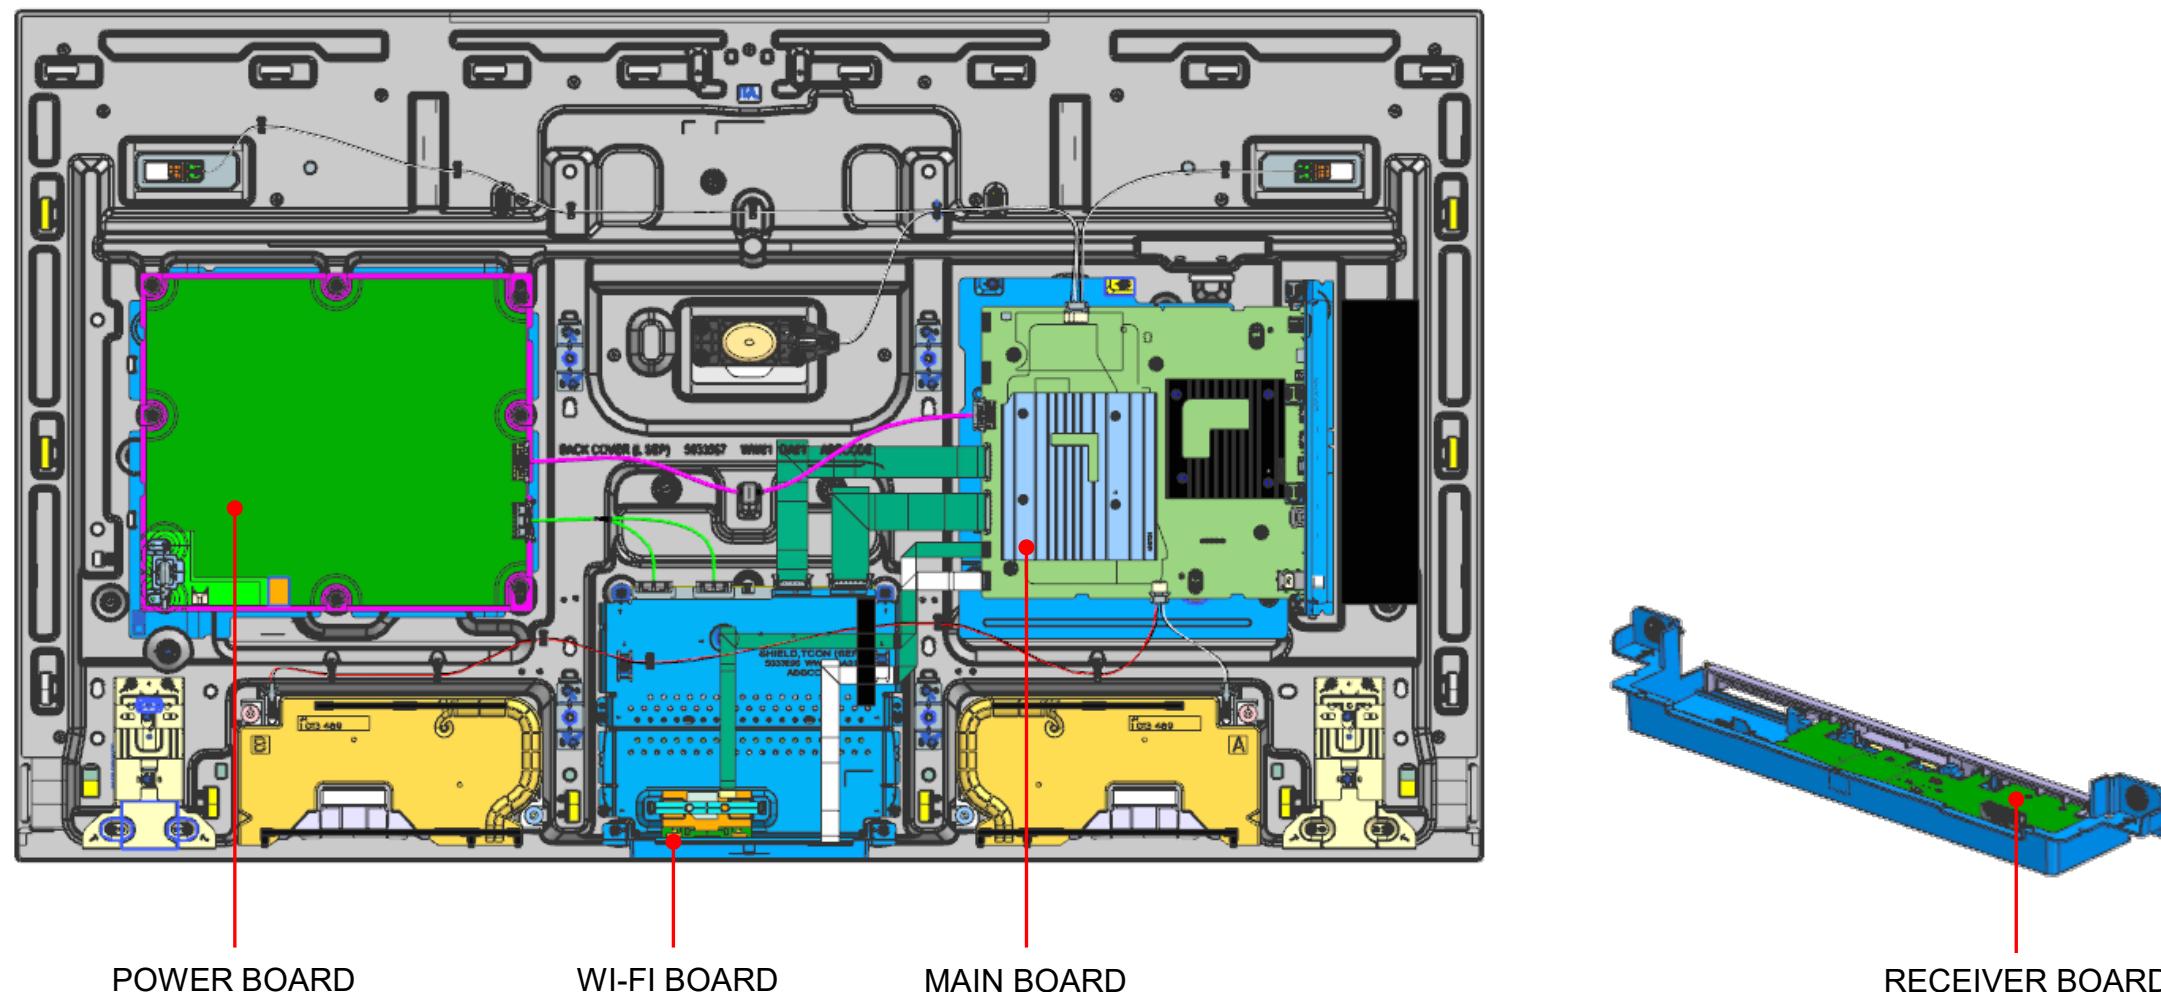SECTION 1: XR-55A80* / XR-55A75L**1-2. BOARD LOCATION**



SECTION 1: XR-55A80* / XR-55A75L**1-3. WIRE DRESSING****INFORMATION****Caution:**







1. Operator need to fix Smart Core on FLAT surface before FFC insertion to ensure FFC STRAIGHT insertion.
2. FFC side with blue supporting tape, must face CONNECTOR WITH LOCKING during FFC insertion.




After assemble Receiver board to Smart Core, operator need to insert Receiver board FFC in straight condition.

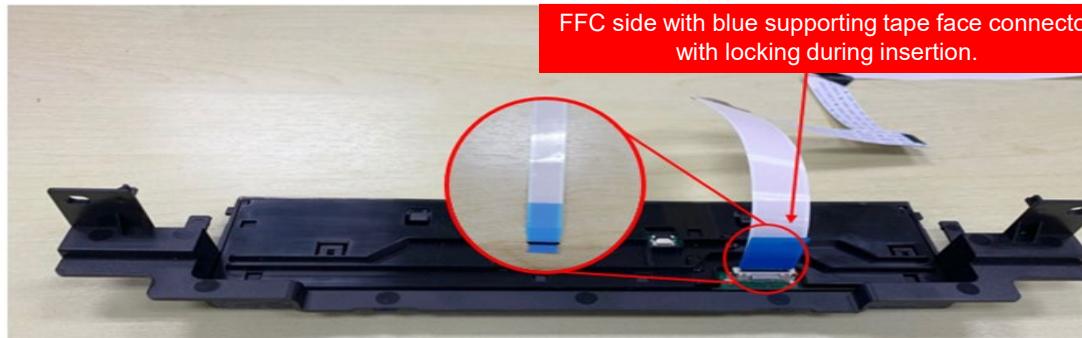

Smart Core is placed on FLAT surface during FFC insertion.

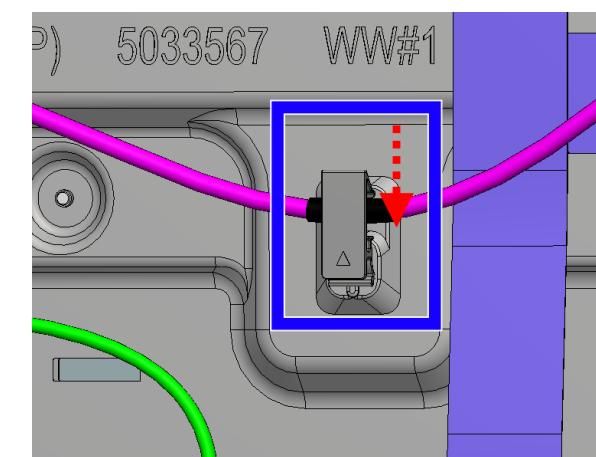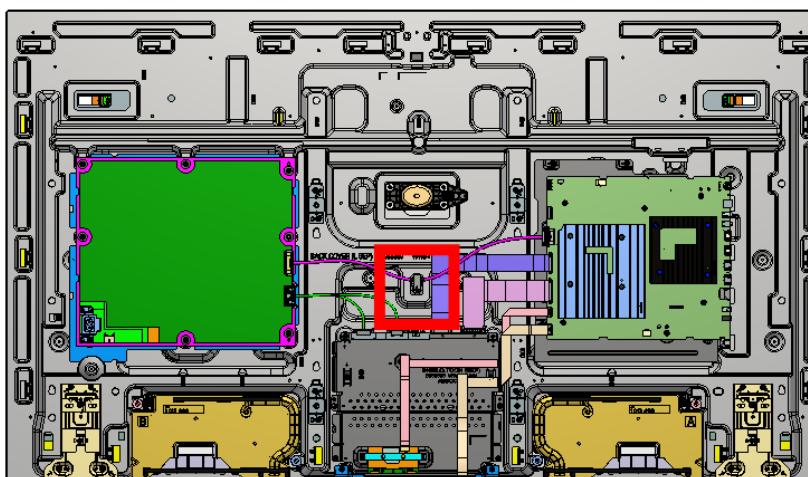
WIRE DRESSING

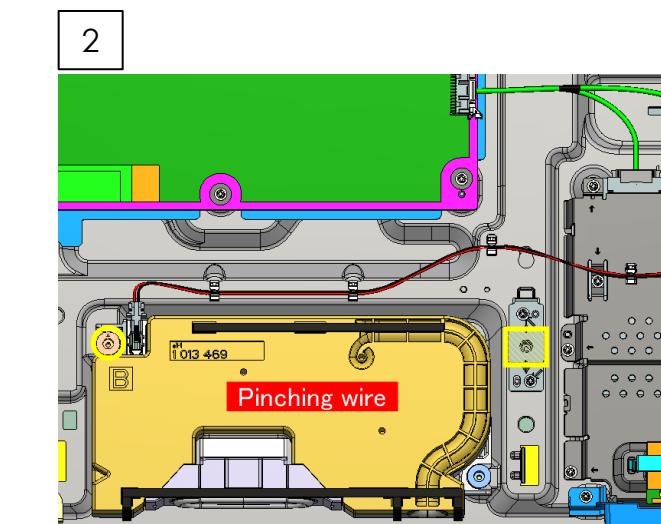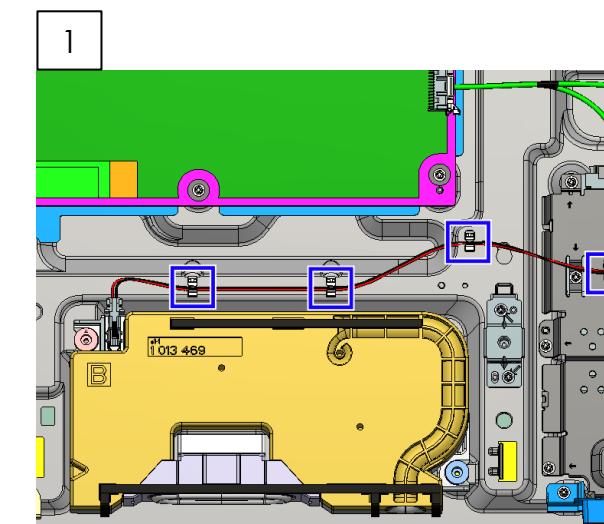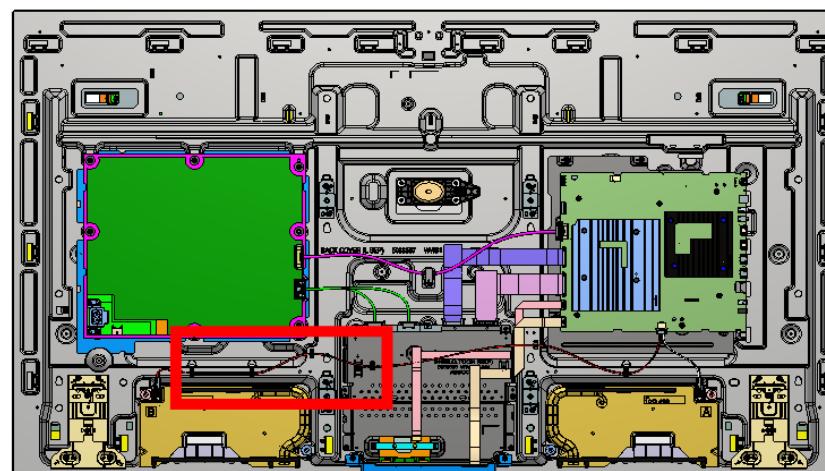
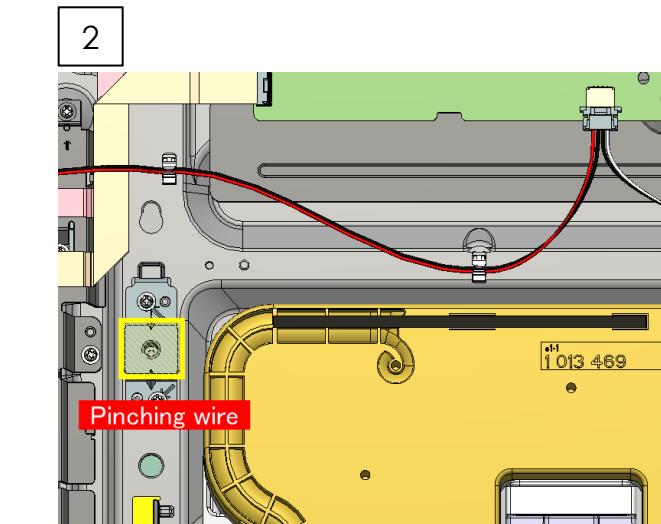
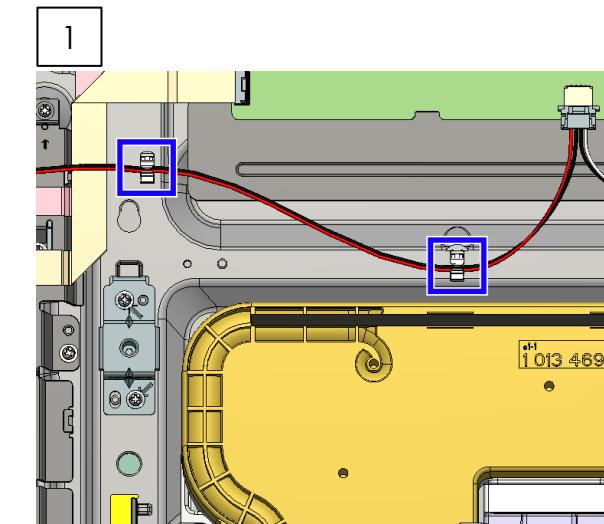
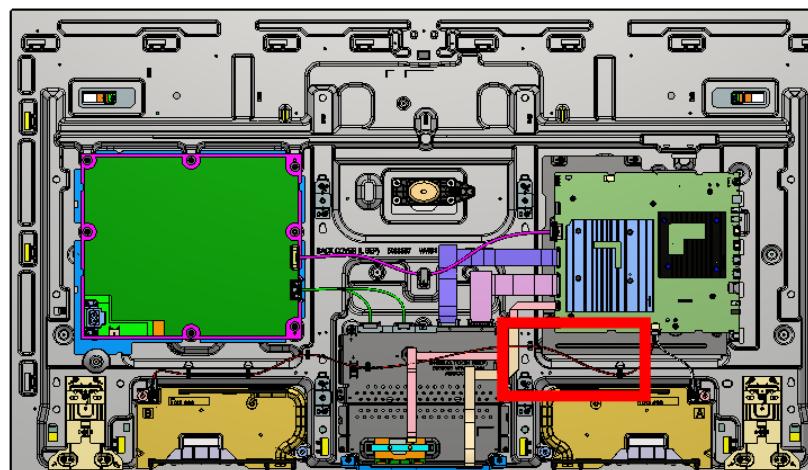
SECTION 1: XR-55A80* / XR-55A75L**1-3. WIRE DRESSING**WIRE DRESSINGWIRE DRESSING




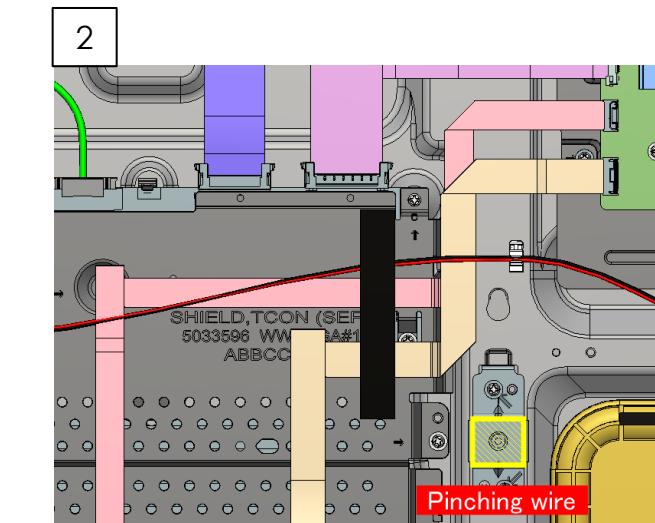
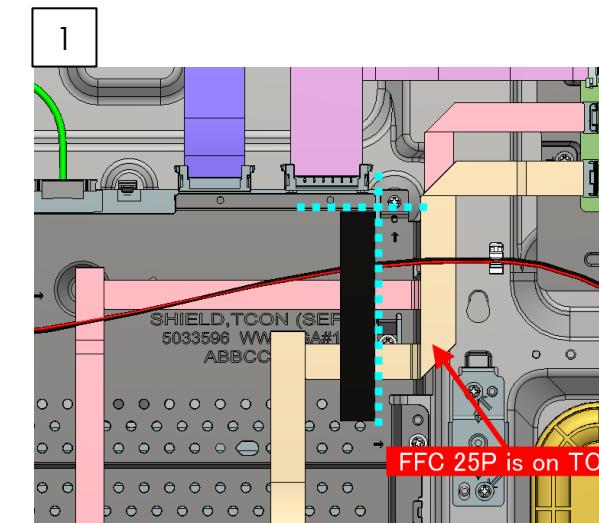
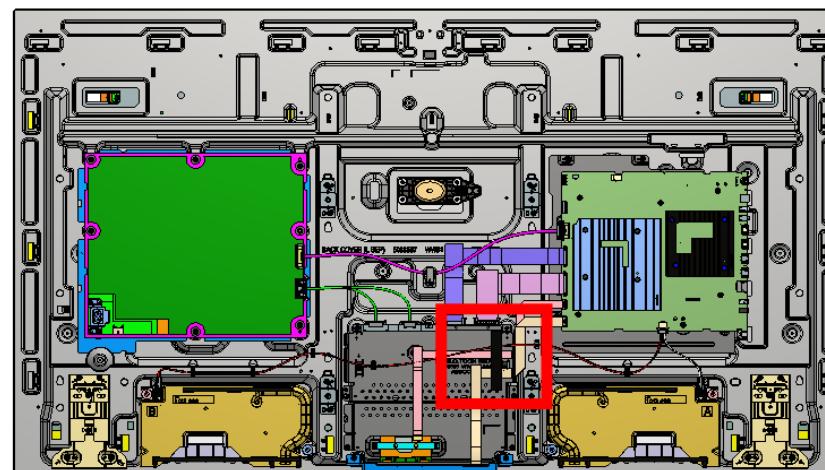
SECTION 1: XR-55A80* / XR-55A75L**1-3. WIRE DRESSING****TAPE**





SECTION 1: XR-55A80* / XR-55A75L**1-3. WIRE DRESSING****WIRE DRESSING****⟨Sequence Information⟩**







1. Connect harness at Main Board, Piezo L & R.
2. Wire dressing (clamper) for harness.
3. Connect harness at Exciter.

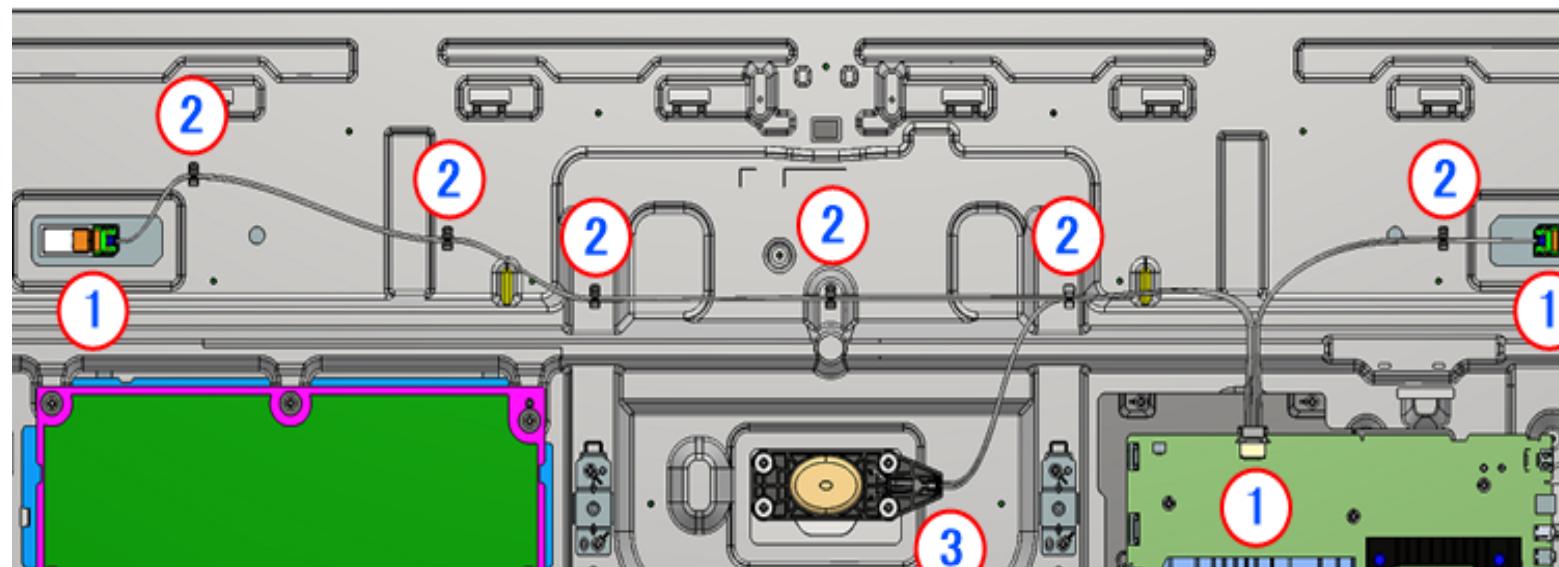

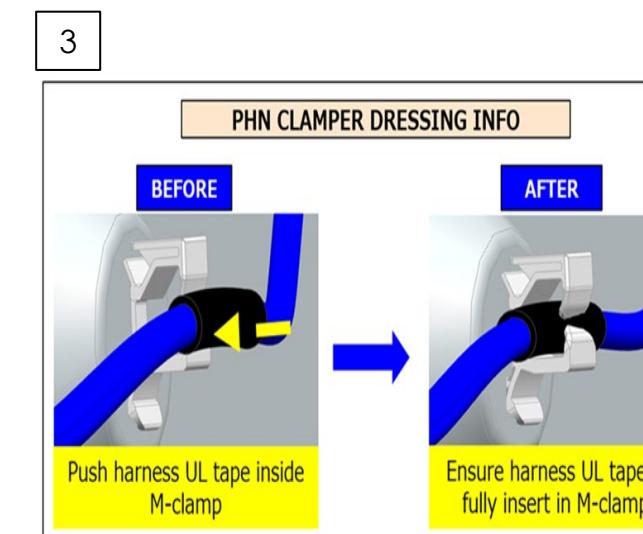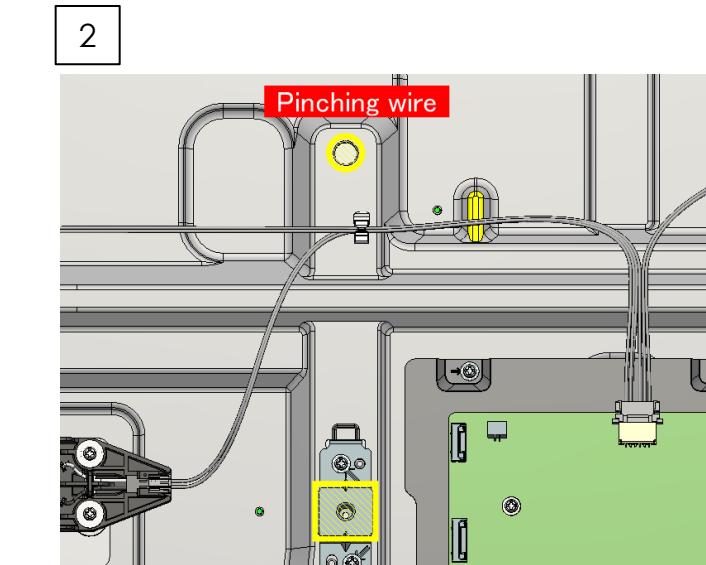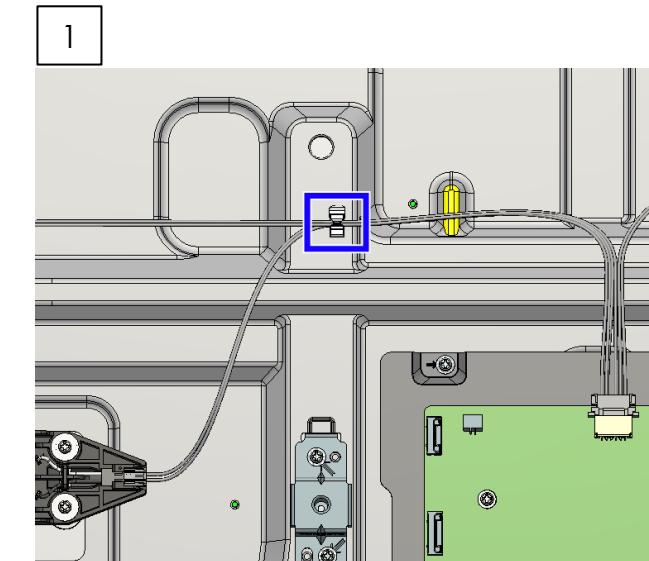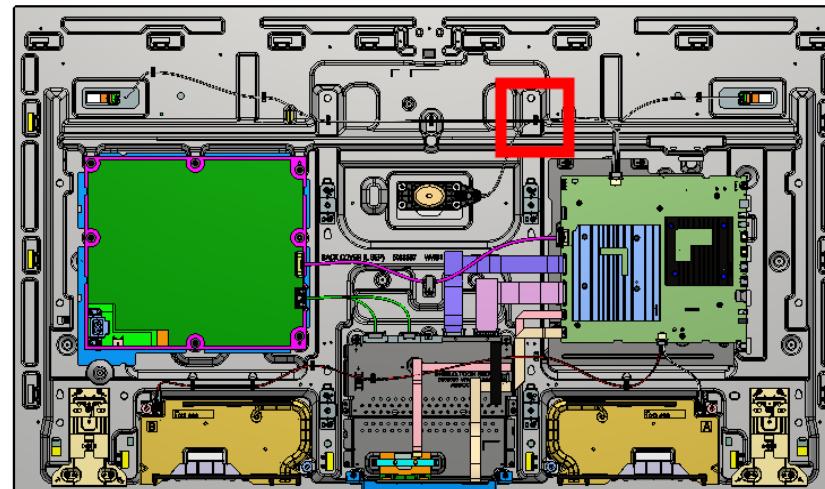SECTION 1: XR-55A80* / XR-55A75L**1-3. WIRE DRESSING****WIRE DRESSING – 80K / 80CK / 80L / 80CL**

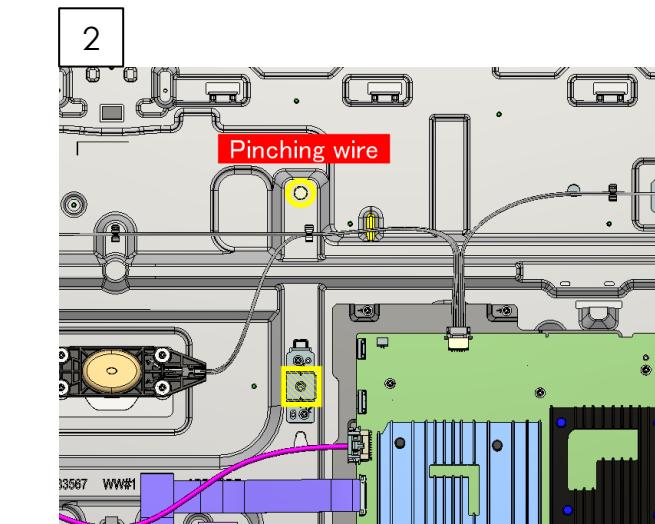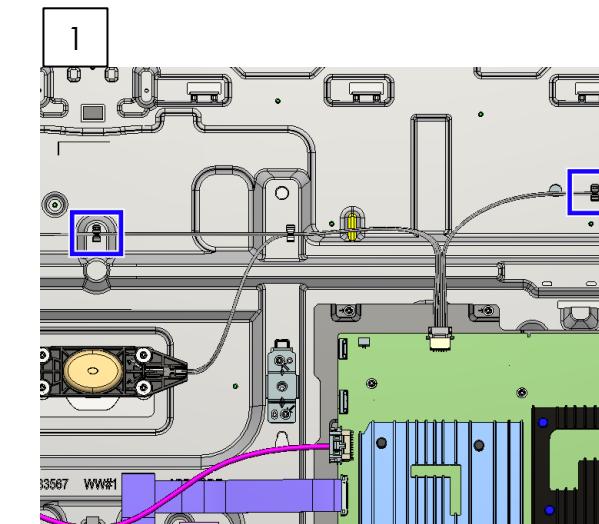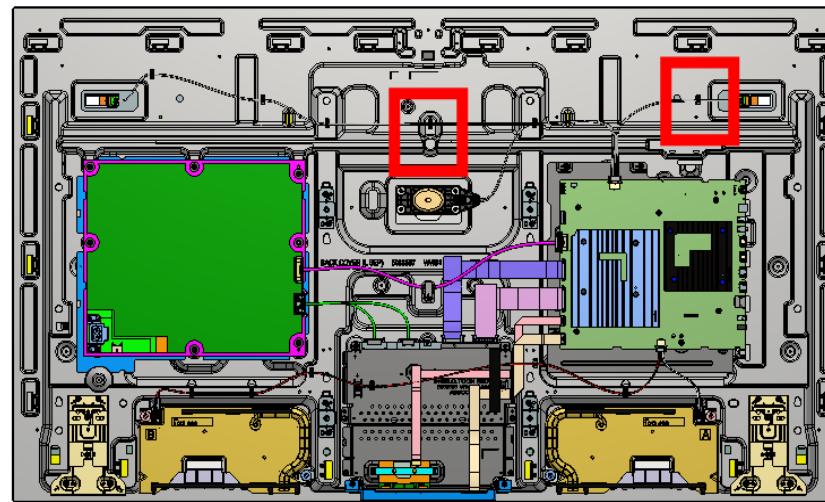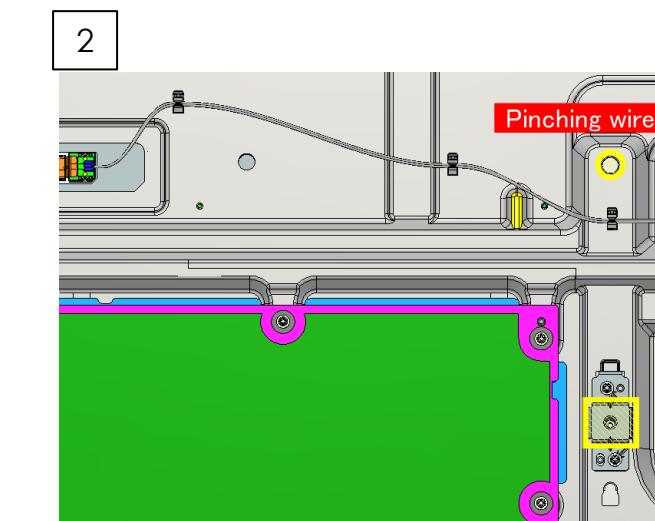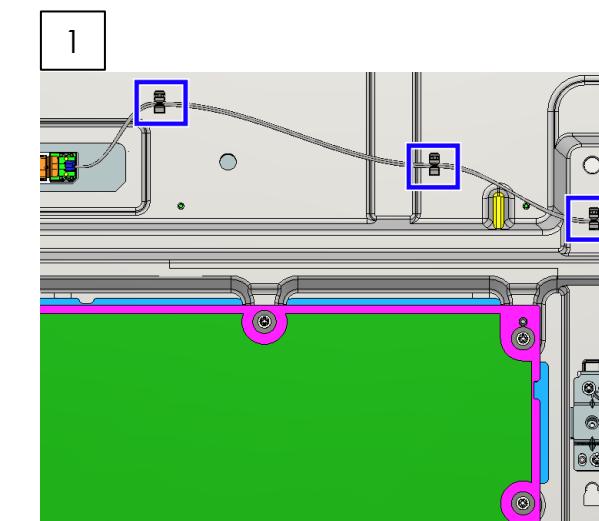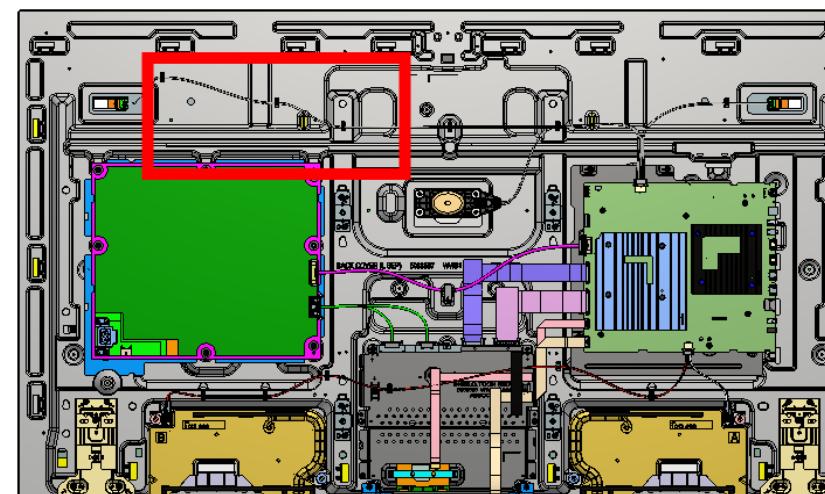
SECTION 1: XR-55A80* / XR-55A75L**1-3. WIRE DRESSING**WIRE DRESSING – 80K / 80CK / 80L / 80CLWIRE DRESSING – 80K / 80CK / 80L / 80CL

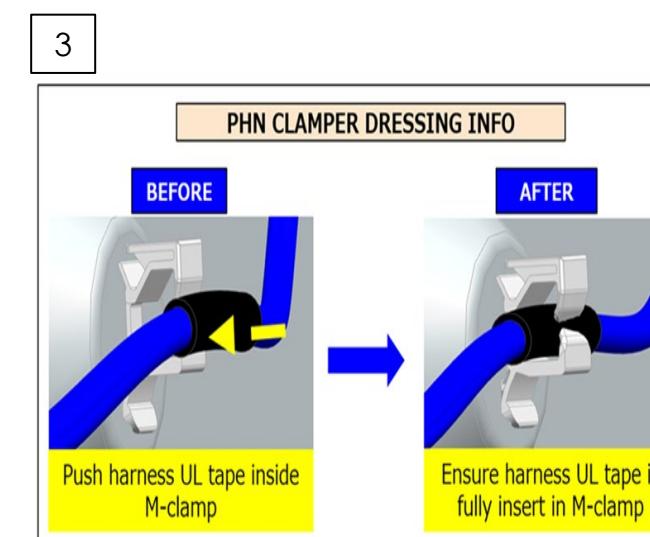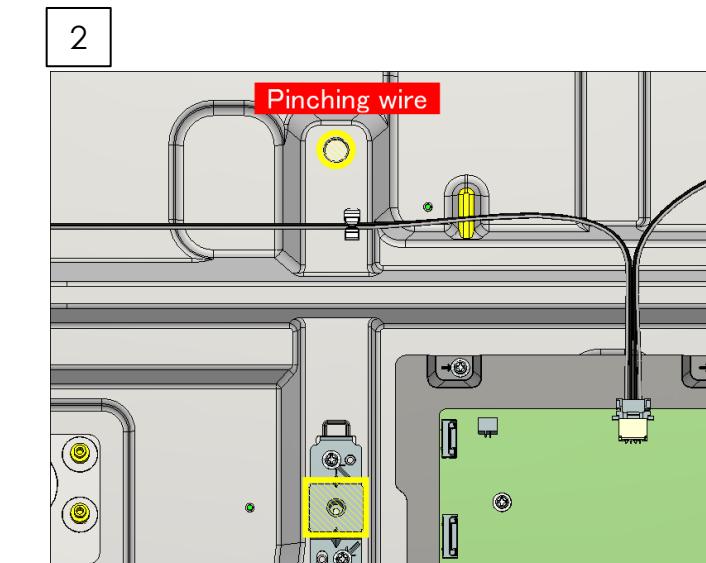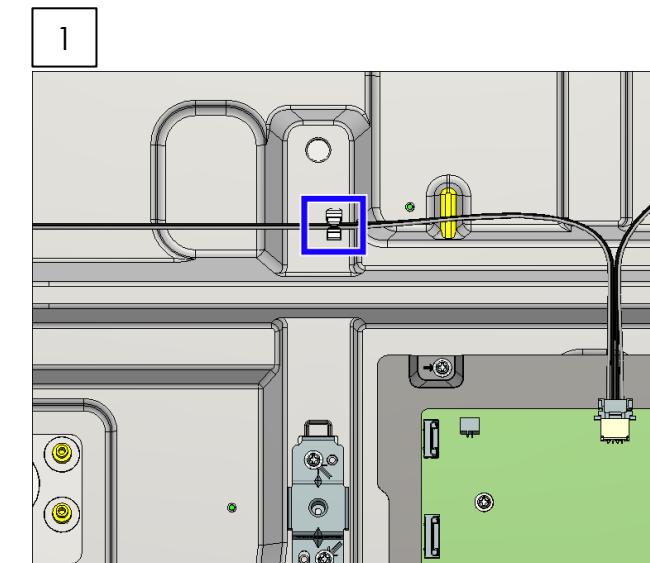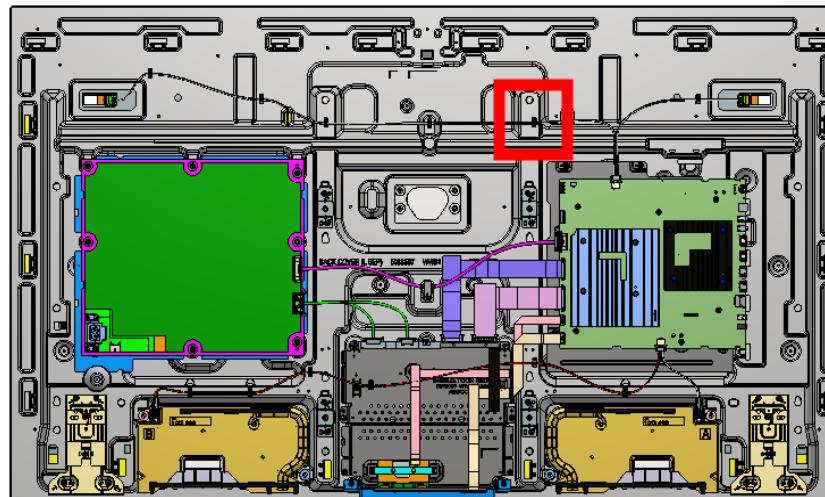SECTION 1: XR-55A80* / XR-55A75L**1-3. WIRE DRESSING****WIRE DRESSING – 75L**

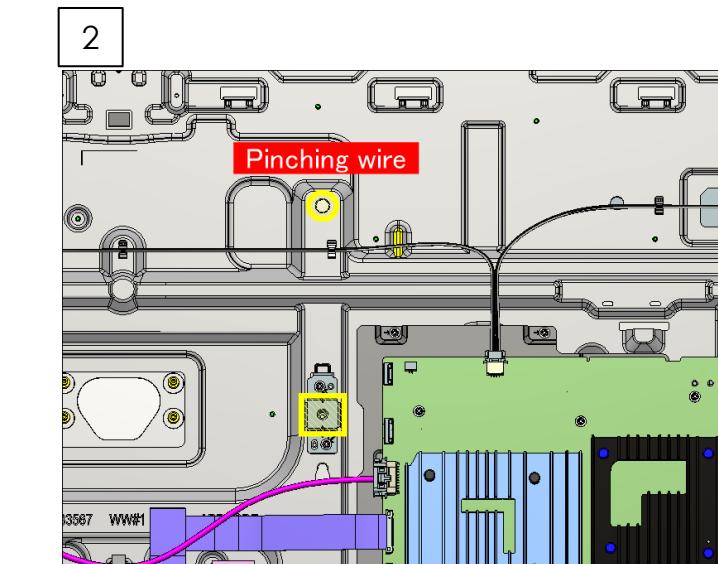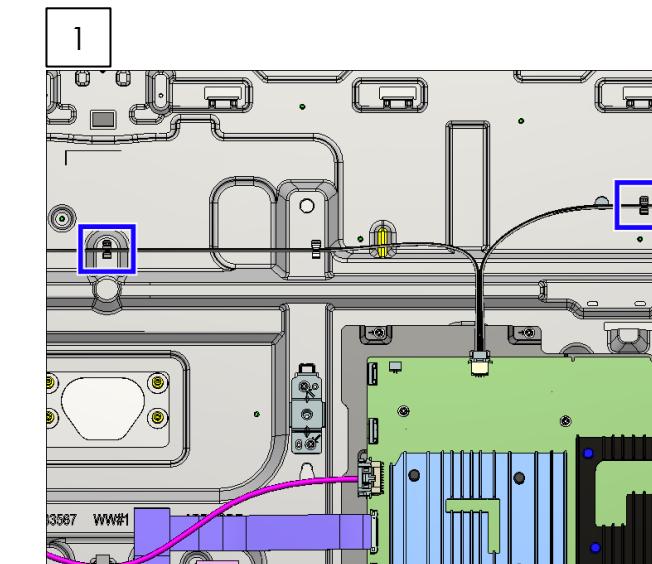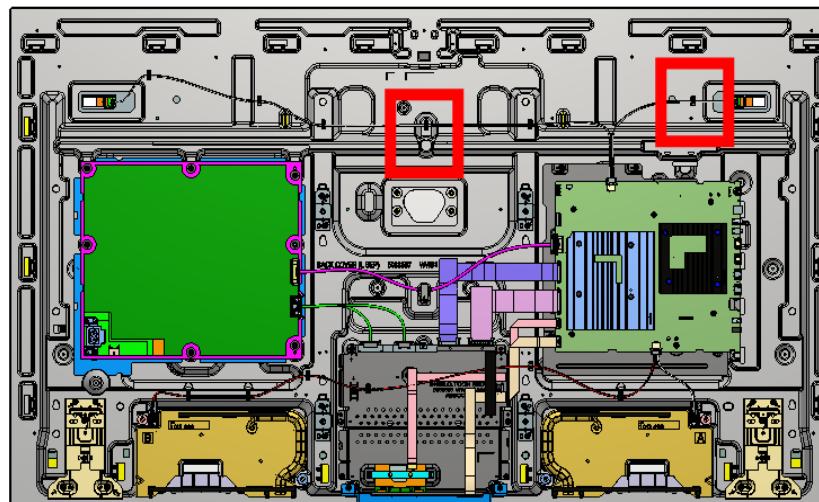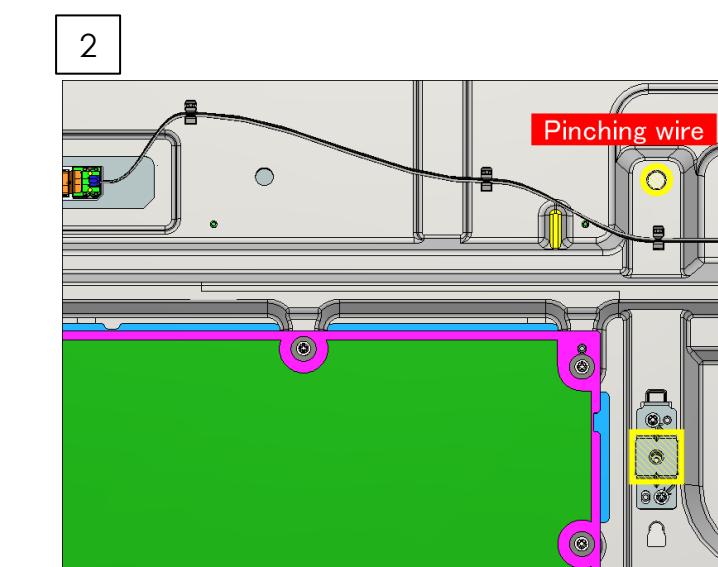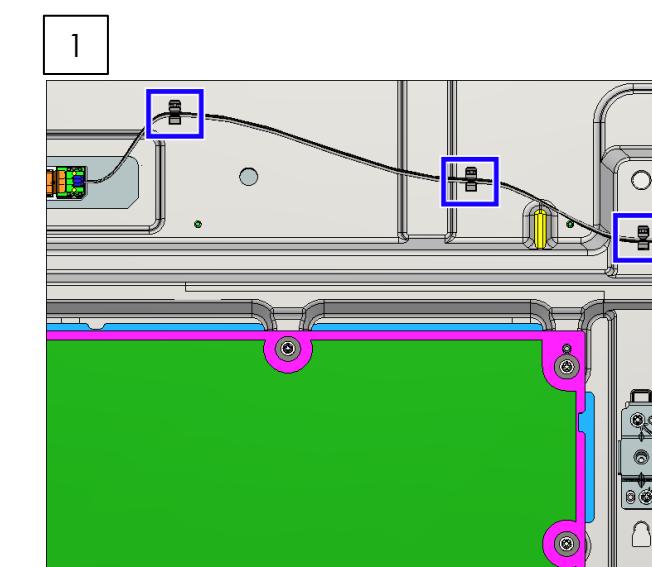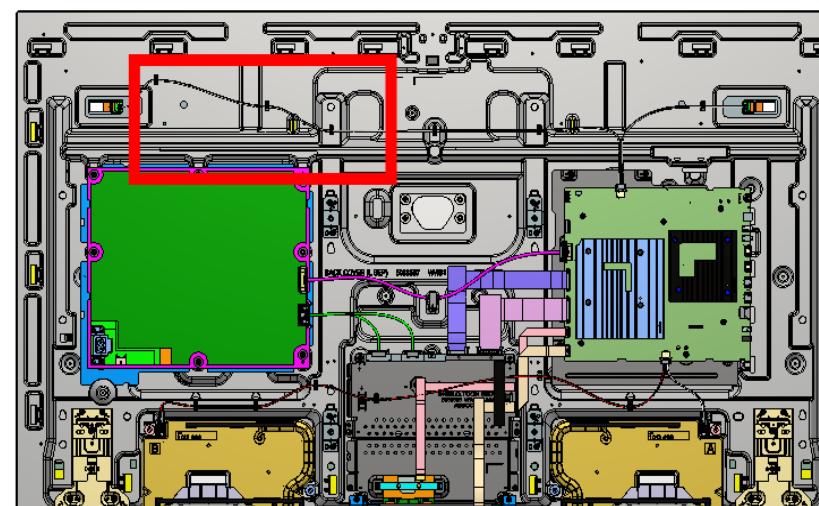SECTION 1: XR-55A80* / XR-55A75L**1-3. WIRE DRESSING****WIRE DRESSING – 75L****WIRE DRESSING – 75L**


SECTION 1: XR-55A80* / XR-55A75L**1-3. WIRE DRESSING**INFORMATION – 80K / 80CK / 80L / 80CL

Keep harness away from inhibit area.

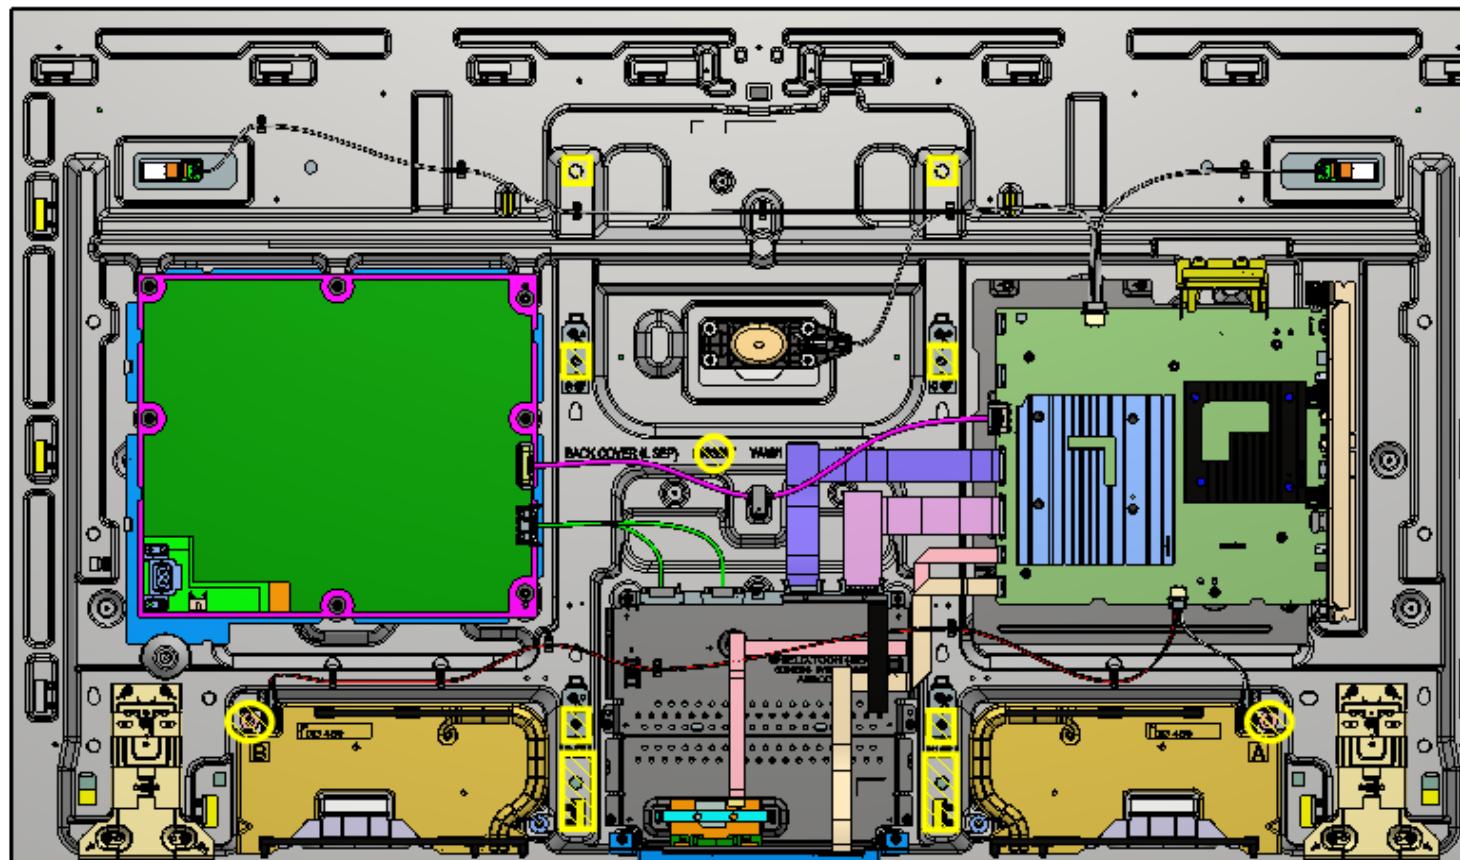

SECTION 1: XR-55A80* / XR-55A75L**1-3. WIRE DRESSING****INFORMATION – 75L**



Keep harness away from inhibit area.

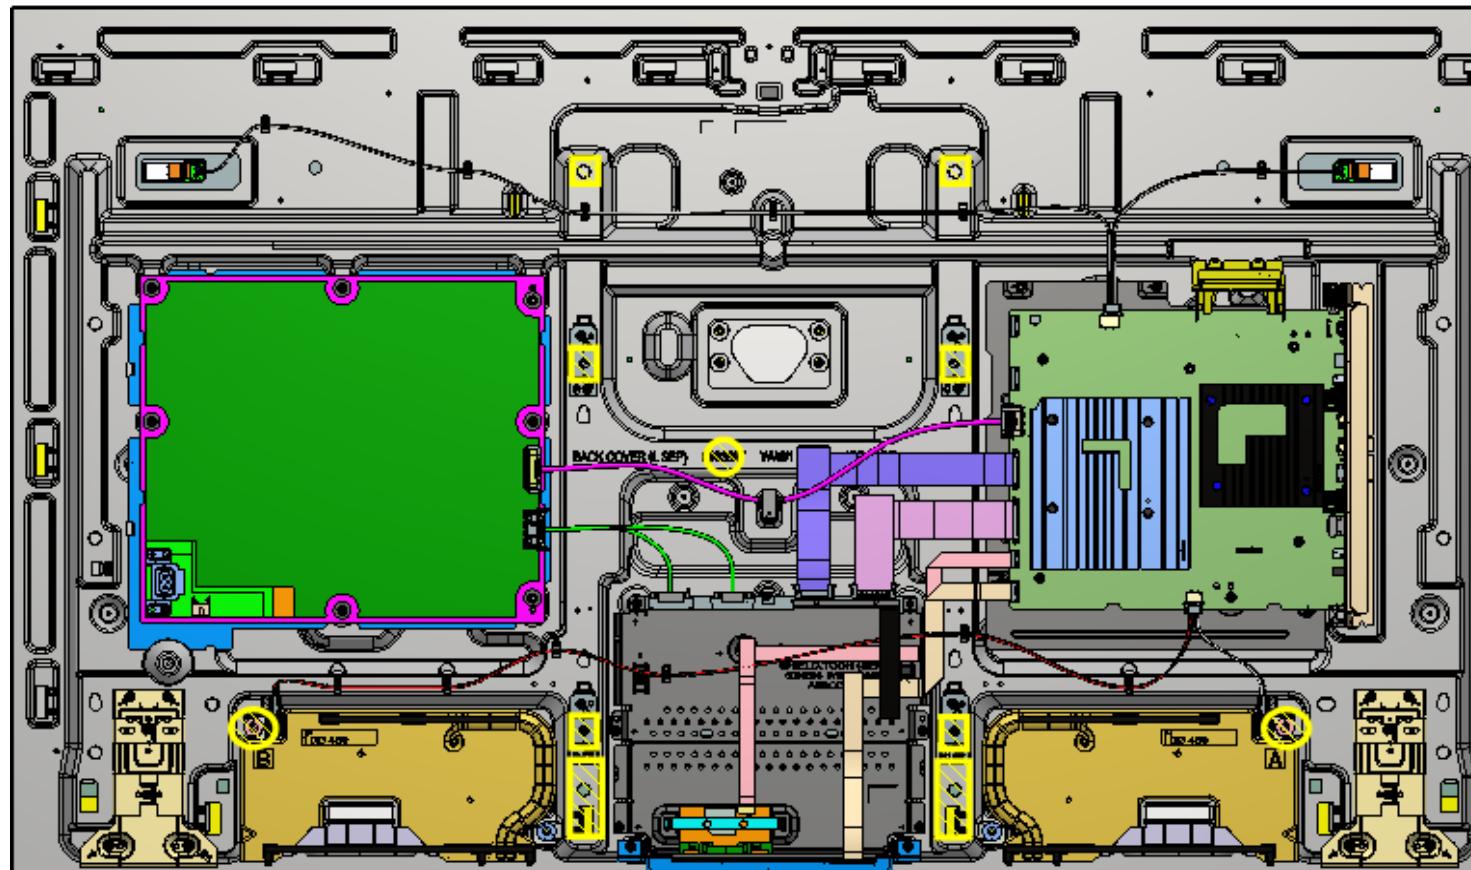

SECTION 1: XR-55A80* / XR-55A75L**1-4. EXPLODED VIEW AND PART LIST**

- Place the TV set facing downwards on a stable, level surface before disassembly and assembly of parts.
-  and shaded parts are critical for safety. Replace only with part number specified.
-  Parts contain confidential information. Strictly follow the instruction whenever the components are repaired and/or replaced

- (*) Parts are not stocked since they are seldom required for routine service. Some delays should be anticipated when ordering these components.
- Picture provided in this section might have slight difference from the actual sets.
- The reference number beside the part indicates the disassembly sequence.
- Remove screws before disassembly. Unplug connectors before disassembly

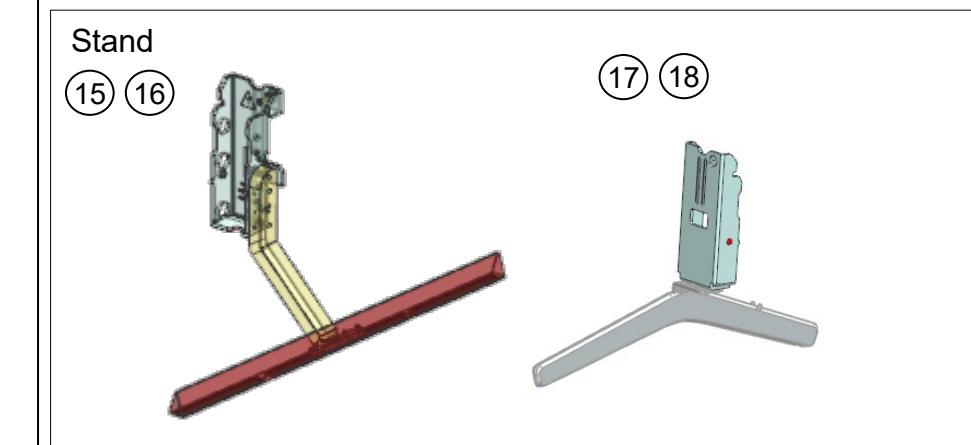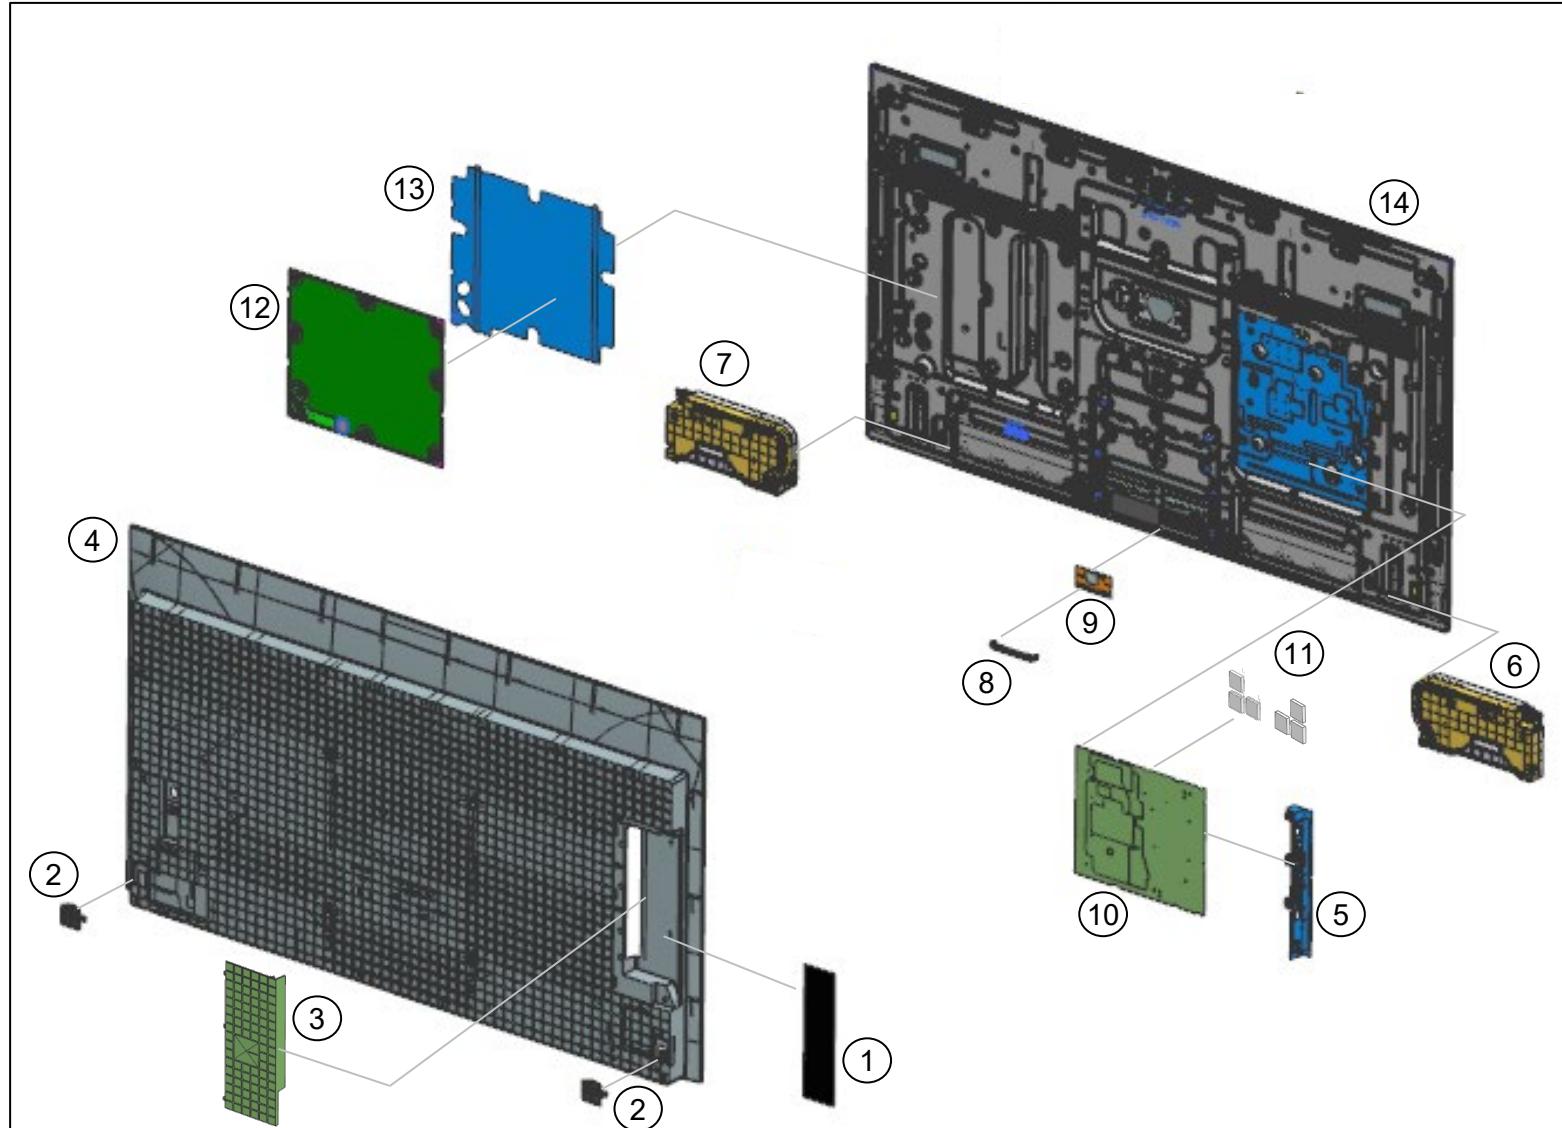


SECTION 1: XR-55A80* / XR-55A75L**1-4. EXPLODED VIEW AND PART LIST****SET PART LIST**


REF. NO	PART NO.	DESCRIPTION	XR-55A80K	XR-55A80CK	XR-55A80L	XR-55A80CL	XR-55A75L
			UCM	UC2	UCM	UC2	UC2
1	5-039-876-01	LABEL, SIDE TERMINAL HP (TGR)	•	•	n/a	n/a	n/a
2	5-033-671-01	BTM COVER BARE (COM SEP)	•	•	•	•	•
3	5-033-669-01	TERMINAL COVER (COM SEP)	•	•	•	•	•
⚠ 4	5-036-202-03	REAR COVER (L SEP) A	•	•	•	•	•
5	5-039-955-11	BRACKET SIDE (BNN) A	•	•	•	•	•
6	1-013-469-11	SP-BOX ASSY,FY22 W40L-A	•	•	n/a	n/a	n/a
6	1-016-024-11	SP-BOX ASSY,FY22 W40L-FA	n/a	n/a	•	•	•
7	1-013-469-21	SP-BOX ASSY,FY22 W40L-B	•	•	n/a	n/a	n/a
7	1-016-024-21	SP-BOX ASSY,FY22 W40L-FB	n/a	n/a	•	•	•
8	5-009-258-22	BRACKET, WIFI(BNN)	•	•	•	•	•
🔒 9	1-005-419-14	WLAN/BT MODULE(11AC)	•	•	•	•	•
🔒 10	A-5042-804-A	COMPL_SVC_BM5STY_UC_FS	•	•	n/a	n/a	n/a
🔒 10	A-5056-923-A	COMPL_SVC_BM5STY_FS2_UCM	n/a	n/a	•	•	n/a
🔒 10	A-5056-949-A	COMPL_SVC_BM5STY_FSL2_UCM	n/a	n/a	n/a	n/a	•
11	4-457-451-12	SHEET, THERMAL (BAF)	•	•	•	•	•
⚠ 12	1-013-507-22	G25BP-STATIC CONVERTER (TV)	•	•	n/a	n/a	n/a
⚠ 12	1-013-507-41	G25BP-STATIC CONVERTER (TV)	n/a	n/a	•	•	•
⚠ 13	5-035-920-11	SHEET, INSULATION (L SEP) A	•	•	•	•	•
⚠ 14	A-5044-454-A	P-MOD (YDCM055UNG01)(SVC)	•	n/a	n/a	n/a	n/a
⚠ 14	A-5058-099-A	P-MOD (YDCM055UNG01)(SVC)	n/a	n/a	•	n/a	n/a

SECTION 1: XR-55A80* / XR-55A75L**1-4. EXPLODED VIEW AND PART LIST****SET PART LIST**

REF. NO	PART NO.	DESCRIPTION	XR-55A80K	XR-55A80CK	XR-55A80L	XR-55A80CL	XR-55A75L
			UCM	UC2	UCM	UC2	UC2
15	5-034-379-02	STAND L (2L SEP) A – Silver	•	•	•	•	n/a
16	5-034-380-02	STAND R (2L SEP) A – Silver	•	•	•	•	n/a
17	5-038-127-01	STAND DERI L (2L SEP) A – Black	n/a	n/a	n/a	n/a	•
18	5-038-128-01	STAND DERI R (2L SEP) A – Black	n/a	n/a	n/a	n/a	•

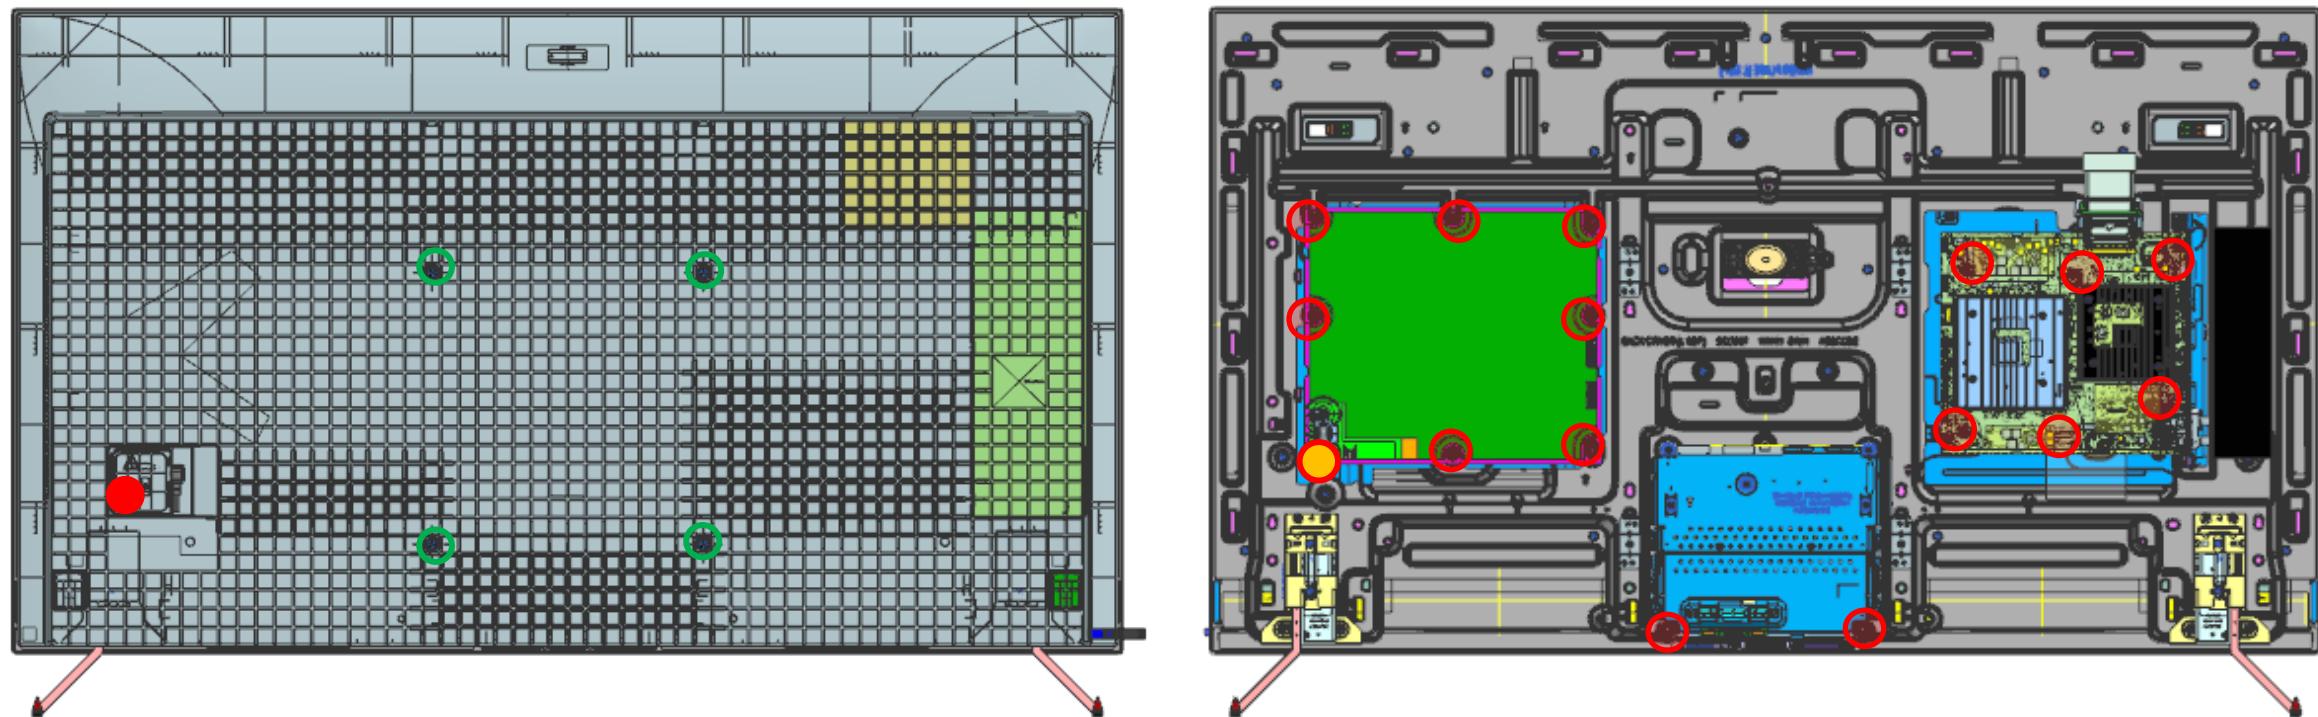SECTION 1: XR-55A80* / XR-55A75L**1-4. EXPLODED VIEW AND PART LIST****SCREW**

REMARKS	P/N	DESCRIPTION	QTY	TORQUE (N.m)
○	4-472-518-11	SCREW, +PSW M3X6	15	0.4 ± 0.05
○	2-580-592-01	SCREW, +PSW M3X8	1	0.4 ± 0.05
○	5-015-521-01	+PSW M6*16 W14	4	1.2 ± 0.1
●	4-579-926-01	SCREW M3X3.0 STEP (LA8)	1	0.4 ± 0.05

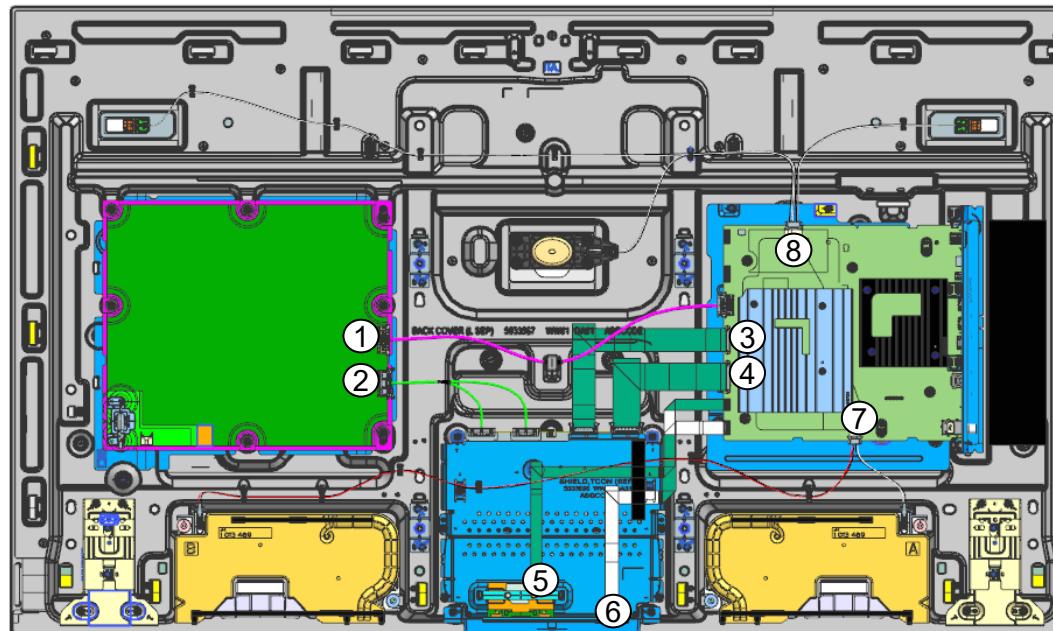SECTION 1: XR-55A80* / XR-55A75L**1-4. EXPLODED VIEW AND PART LIST****CONNECTOR**

REF. NO	PART NO.	DESCRIPTION	REMARKS	
1	1-014-495-11	CONNECTOR ASSY 28P (GB)	CN6401(G25/G25B)-CN1700(BM5STY)(1)	
2	1-014-509-11	CONNECTOR ASSY 28P (GT)	CN6601(G25/G25B)-CN6(TCON)-CN8(TCON)(1)	
3	1-014-664-11	FLEXIBLE FLAT CABLE 41P	CN4201(BM5STY)-CN7(TCON)(1)	
4	1-014-666-11	FLEXIBLE FLAT CABLE 51P	CN4200(BM5STY)-CN5(TCON)(1)	
5	1-014-658-11	FLEXIBLE FLAT CABLE 20P	CN3801(BM5STY)-J1(WIFI/BT)(1)	
6	1-014-660-11	FLEXIBLE FLAT CABLE 25P	CN1200(BM5STY)-CN102(HY1)(1)	
7	1-014-508-11	CONNECTOR ASSY 4P (SP)	CN6600(BM5STY)-SP(1)	
8	1-014-491-11	CONNECTOR ASSY 6P	CN6601(BM5STY)-PZ-EXCITER(1)	80K / 80CK / 80L / 80CL
8	1-014-741-11	CONNECTOR ASSY 4P (PZ)	CN6603(B)-PZ(1)	75L

SECTION 1: XR-55A80* / XR-55A75L**1-4. EXPLODED VIEW AND PART LIST****OTHER PARTS**


PART NO.	DESCRIPTION	XR-55A80K	XR-55A80CK	XR-55A80L	XR-55A80CL	XR-55A75L	REMARKS
		UCM	UC2	UCM	UC2	UC2	
4-535-064-62	ASSY,FALL LOCK,BELT LL	•	•	•	•	•	-
5-009-031-02	CLAMPER,CABLE S(BNN)	•	•	•	•	•	-
1-013-691-23	REMOTE COMMANDER (RMF-TX800U)	•	n/a	n/a	n/a	n/a	-
1-013-685-22	REMOTE COMMANDER (RMF-TX900U)	n/a	•	n/a	n/a	n/a	-
1-016-940-21	REMOTE COMMANDER (RMF-TX810U)	n/a	n/a	•	n/a	•	-
1-016-949-21	REMOTE COMMANDER (RMF-TX910U)	n/a	n/a	n/a	•	n/a	-
*5-037-357-11	REFERENCE GUIDE	•	•	n/a	n/a	n/a	-
*5-048-119-11	REFERENCE GUIDE	n/a	n/a	•	•	•	-
*5-050-158-11	SETUP GUIDE	n/a	n/a	•	•	n/a	-
*5-041-861-11	SETUP GUIDE	•	•	n/a	n/a	n/a	-
*5-048-125-11	SETUP GUIDE	n/a	n/a	n/a	n/a	•	-
⚠ 1-005-642-12	C7L AC POWER CORD SETS (US)	•	•	•	•	•	-
7-600-031-97	TAPE (3M 1350FB-1)15MMX66M BLK	•	•	•	•	•	-
5-009-861-02	VESA SPACER A (COM)	•	•	•	•	•	Screw extension for Fall Lock Belt and Wall Mount, Qty 1, refer setup Guide for details.

SECTION 2: XR-65A80* / XR-65A75L

2-1. DISASSEMBLY AND REMOVAL CAUTION

REAR COVER

1. Remove the screws from the rear cover (4 pcs)


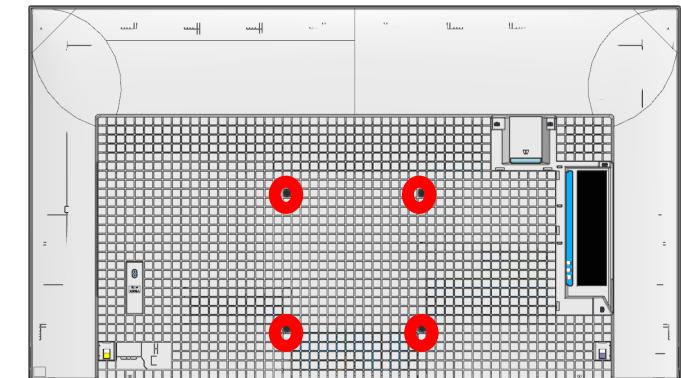


2. Remove the bottom cover.



Washer or coin to unhook Cover Hook

*Wrap washer in VA tape (15mm X 55mm)

*Thickness approximately 1.5mm

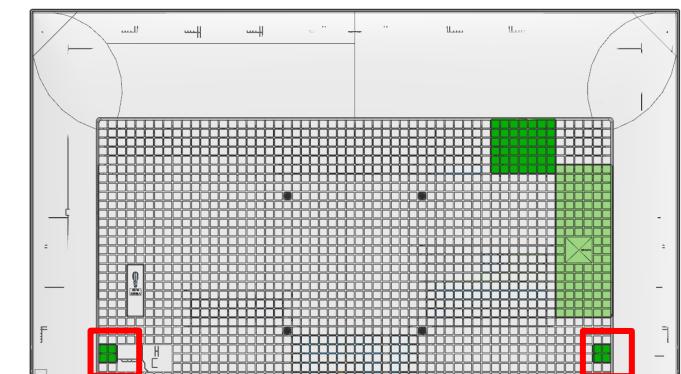
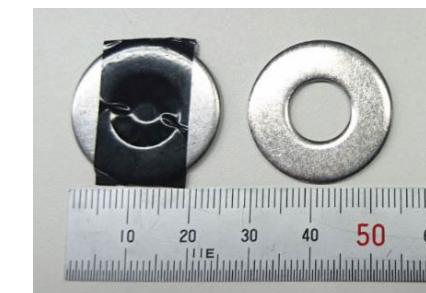


- ① Put washer or coin in the slit of cover hook.
- ② Turn washer or coin to the direction of the arrow.
- ③ Remove cover hook.

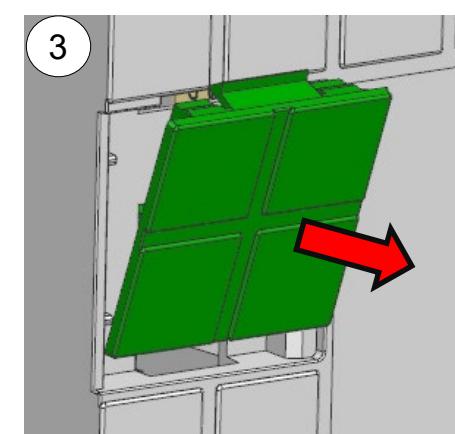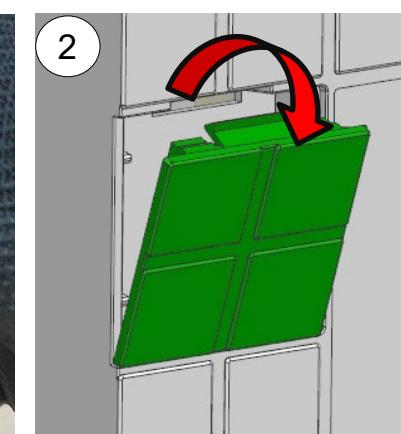

SECTION 2: XR-65A80* / XR-65A75L**2-1. DISASSEMBLY AND REMOVAL CAUTION****REAR COVER**

3. Unhook the bottom hook, starting from center.(4 hooks)

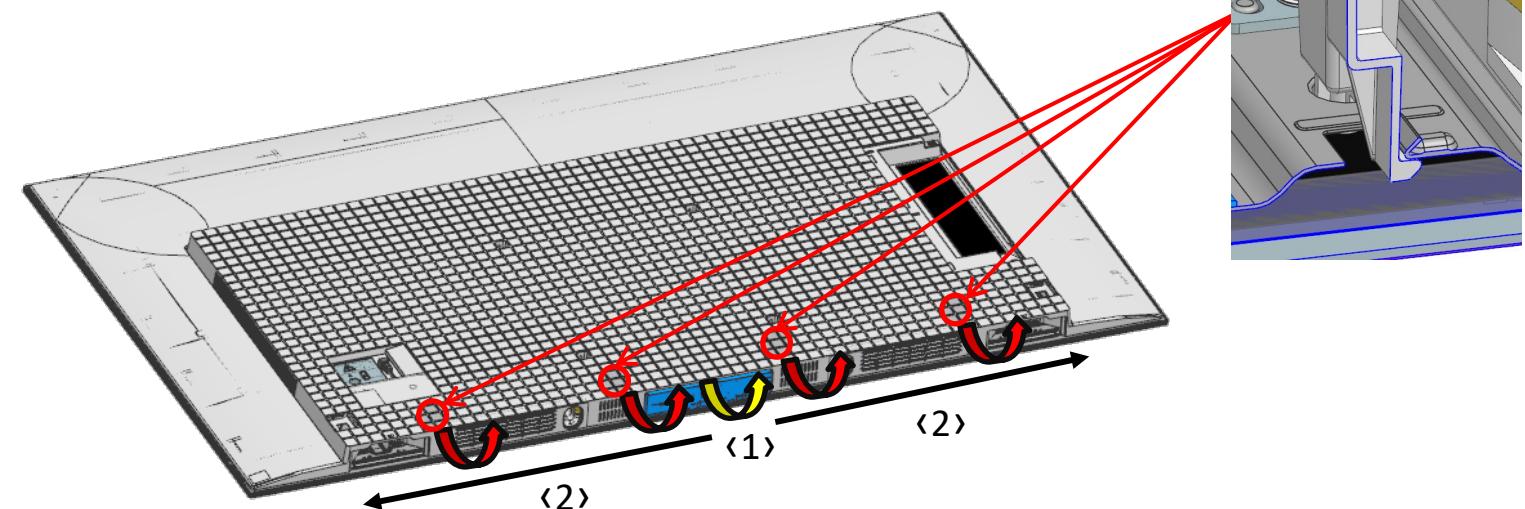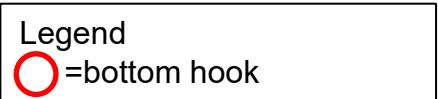

- ① Pull rear cover bottom center until hook release sound is heard.
- ② Pull rear cover towards outside direction until hook release sound is heard.





SECTION 2: XR-65A80* / XR-65A75L


2-1. DISASSEMBLY AND REMOVAL CAUTION

REAR COVER

4. Unhook the left side hooks. (4 hooks)

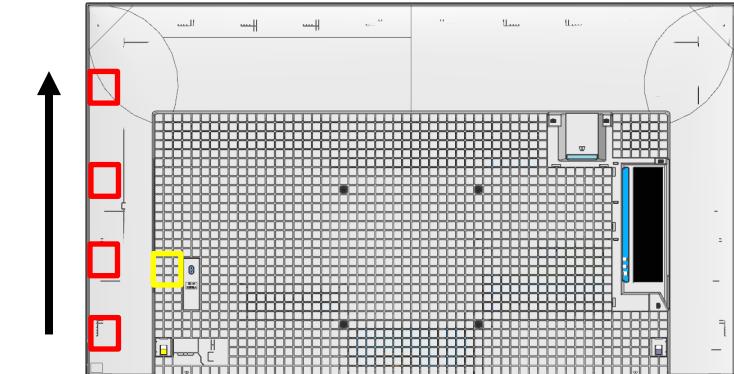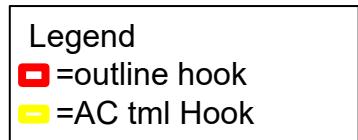

- ① When releasing hook, pull the rear cover corner and insert jig
- ② Flex the rear cover outwards to release outline hook
- ③ Pull rear cover below the AC tml to release the AC tml hook

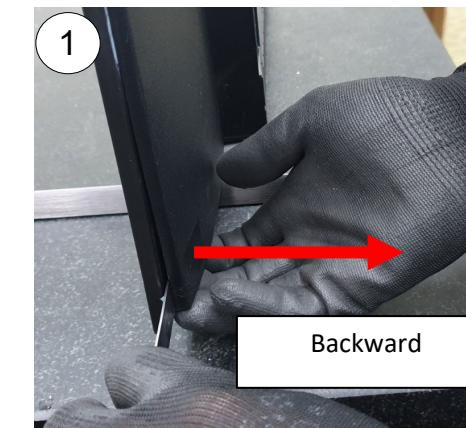

Ruler or jig to release corner hook


*Wrap ruler with tape to prevent scratch





SECTION 2: XR-65A80* / XR-65A75L**2-1. DISASSEMBLY AND REMOVAL CAUTION****REAR COVER**

5. Unhook the right-side hooks. (4 hooks)

Legend
□=outline hook
□=Side Jack Bottom Hook (3 hooks)

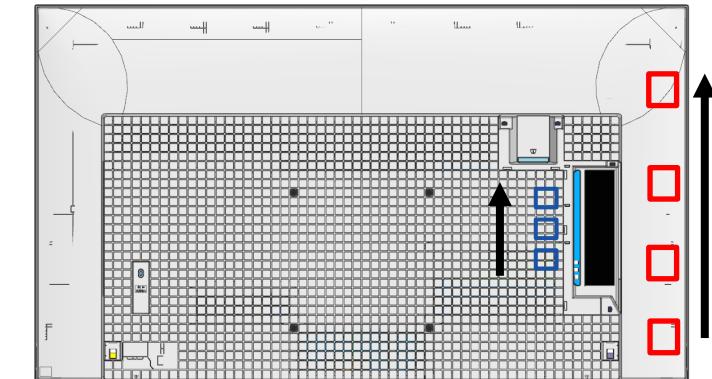

- ① When releasing hook, pull the rear cover and insert jig
- ② Flex the rear cover outwards to release outline hook
- ③ Pull rear cover below the side jack to release the side jack bottom hook.

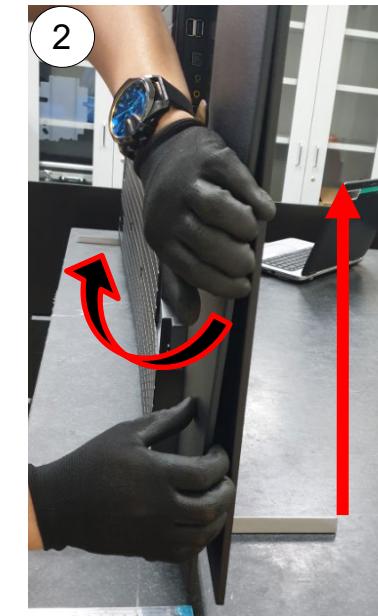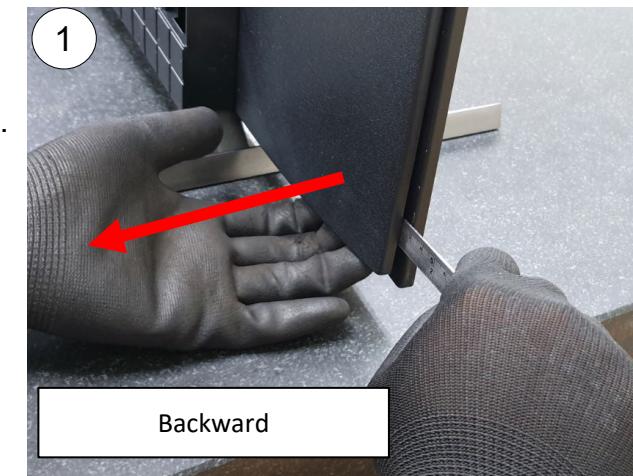

Ruler or jig to release corner hook

*Wrap ruler with tape to prevent scratch




SECTION 2: XR-65A80* / XR-65A75L

2-1. DISASSEMBLY AND REMOVAL CAUTION


REAR COVER

- Unhook the top row hooks. (10 hooks)

Legend
□=outline hook

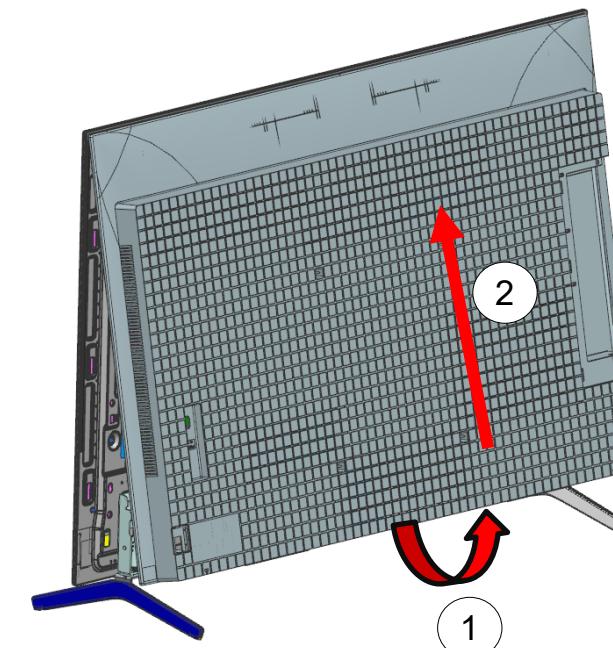



- Tilt the rear cover and push upwards on the left/right side.
- Lift the rear cover off from the center

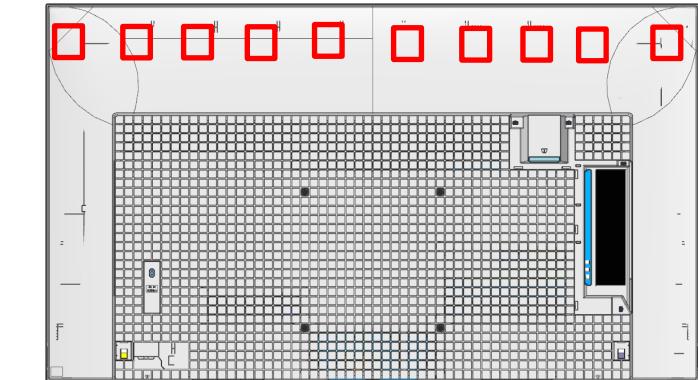

SECTION 2: XR-65A80* / XR-65A75L**2-1. DISASSEMBLY AND REMOVAL CAUTION****REAR COVER**

Hook positioning.

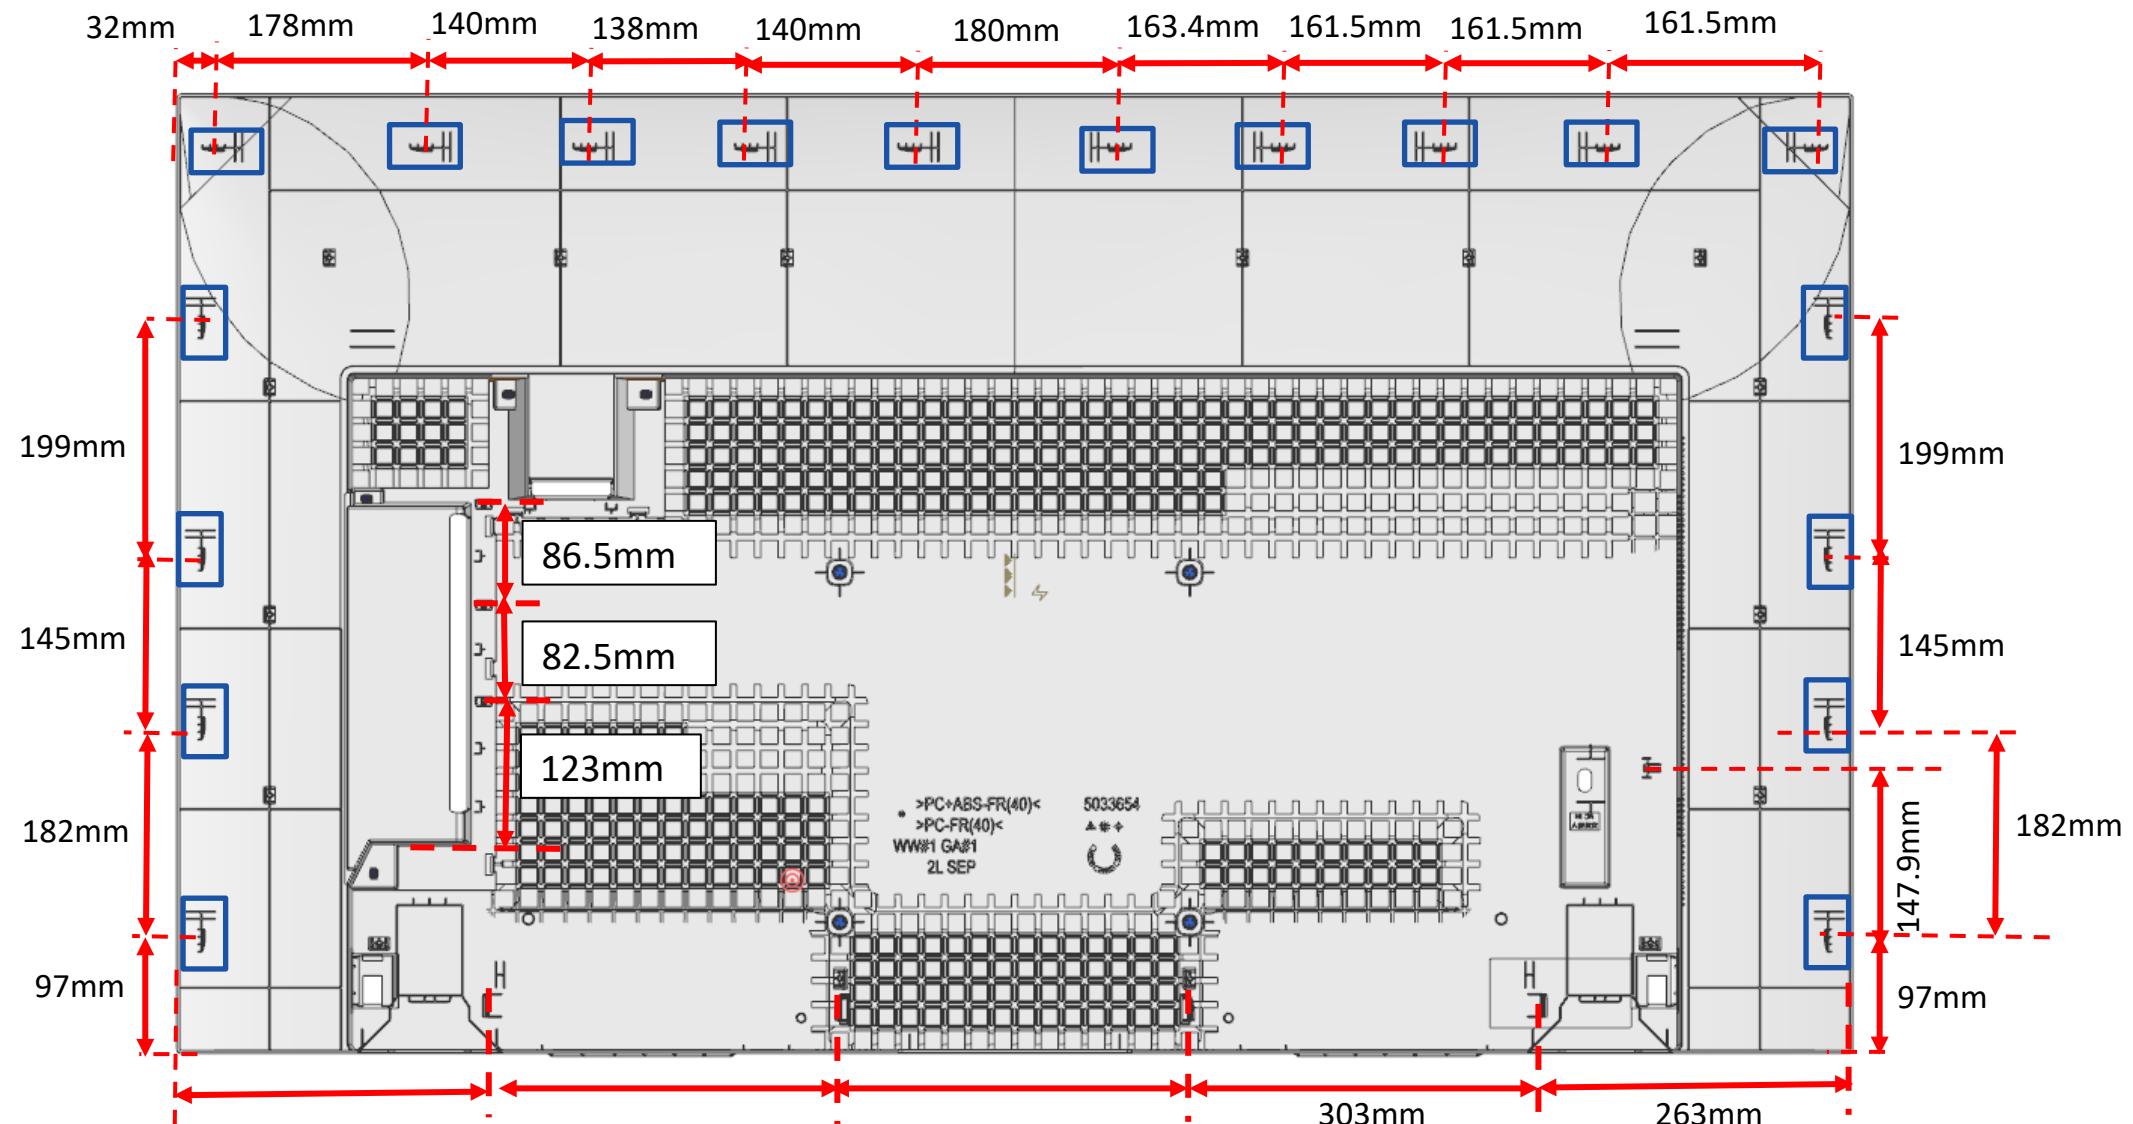


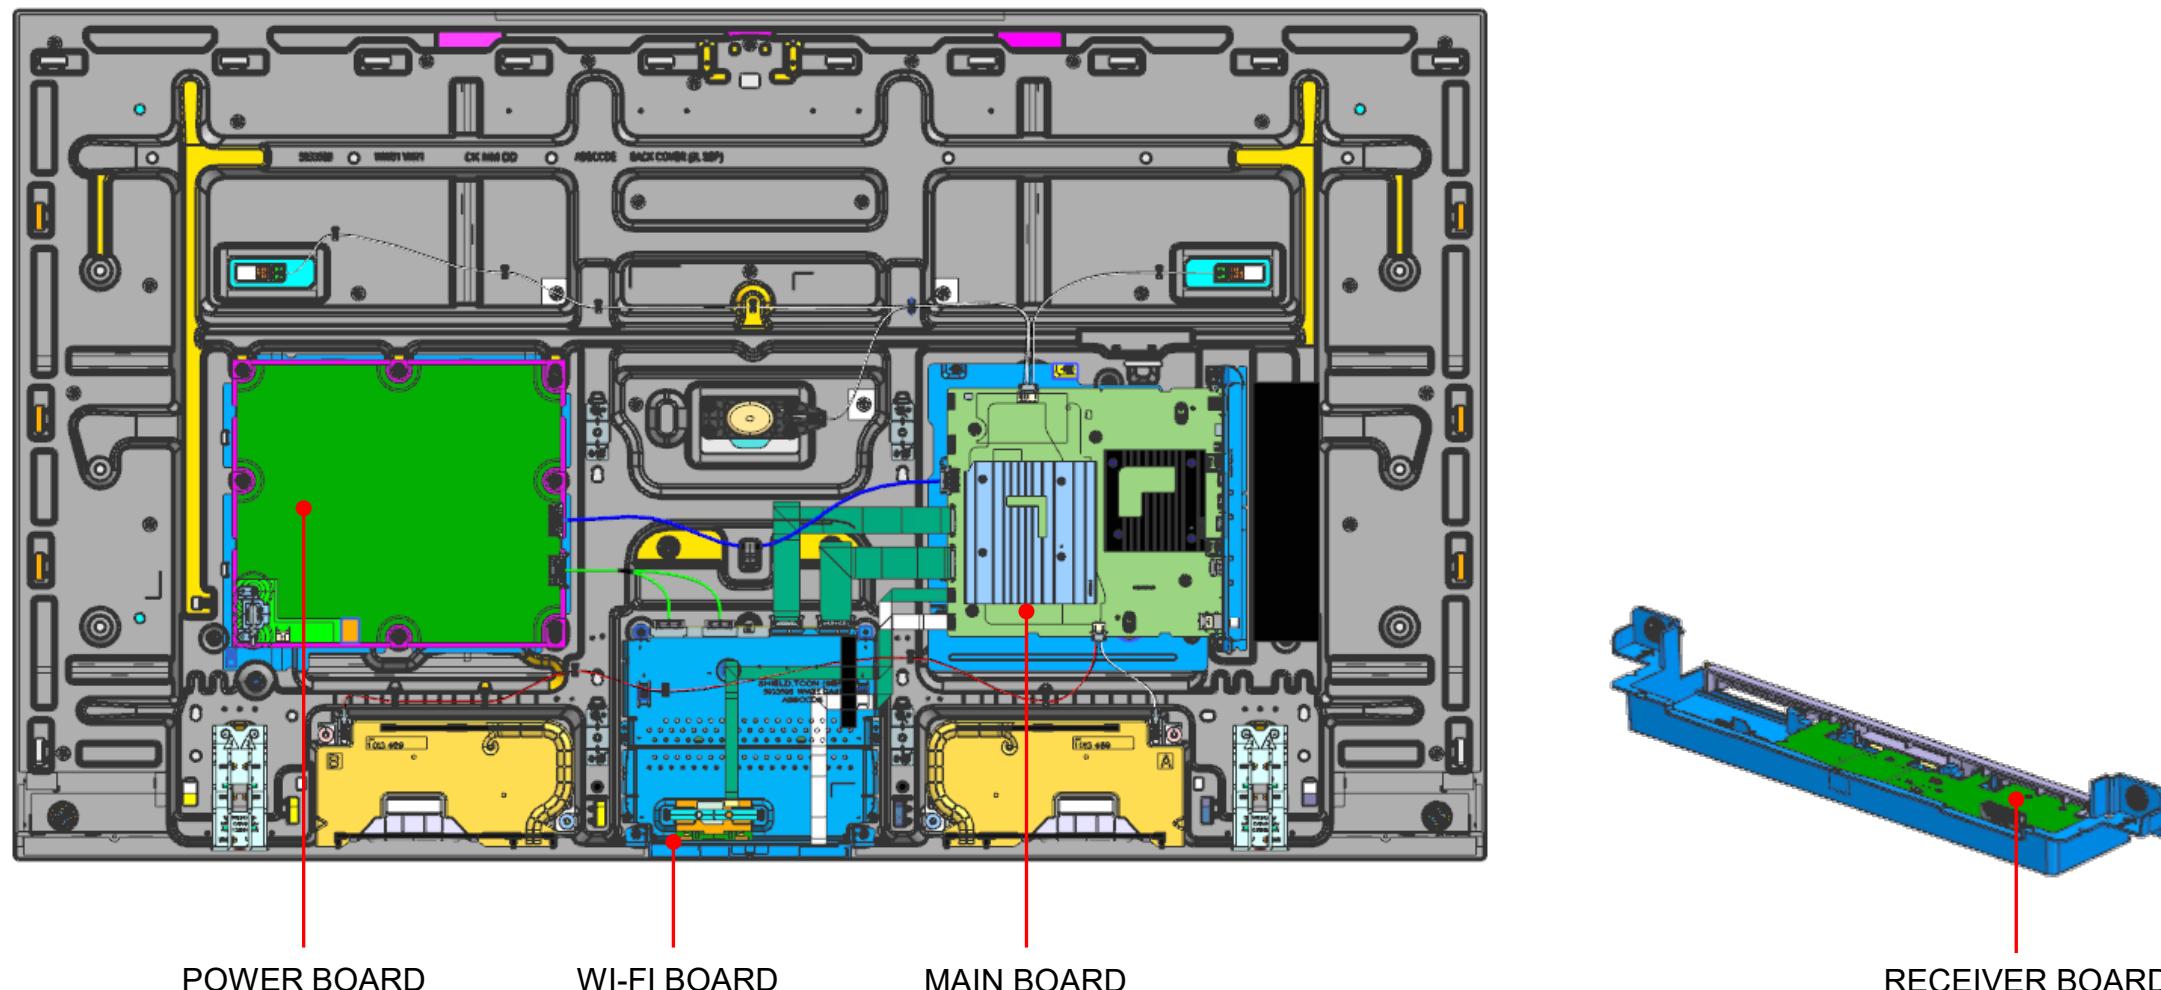SECTION 2: XR-65A80* / XR-65A75L**2-2. BOARD LOCATION**



SECTION 2: XR-65A80* / XR-65A75L**2-3. WIRE DRESSING****INFORMATION****Caution:**







1. Operator need to fix Smart Core on FLAT surface before FFC insertion to ensure FFC STRAIGHT insertion.
2. FFC side with blue supporting tape, must face CONNECTOR WITH LOCKING during FFC insertion.




After assemble Receiver board to Smart Core, operator need to insert Receiver board FFC in straight condition.




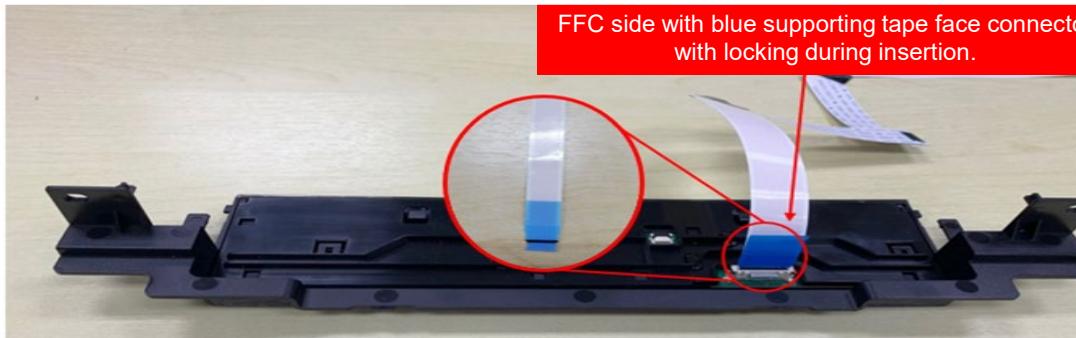








Smart Core is placed on FLAT surface during FFC insertion.



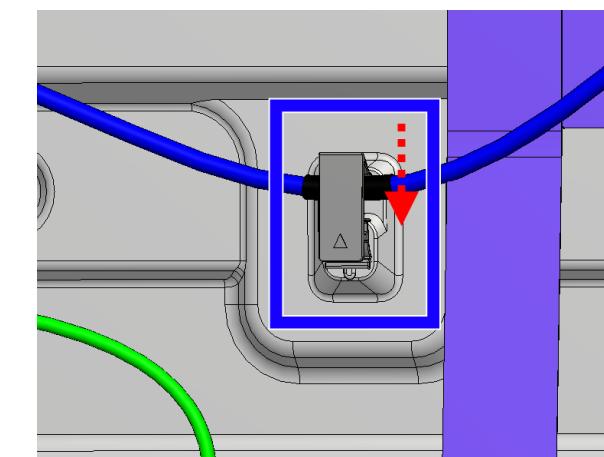
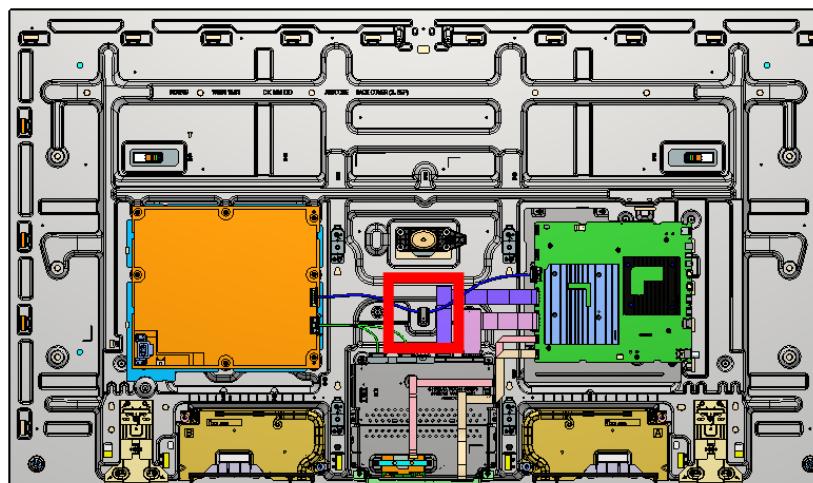
WIRE DRESSING

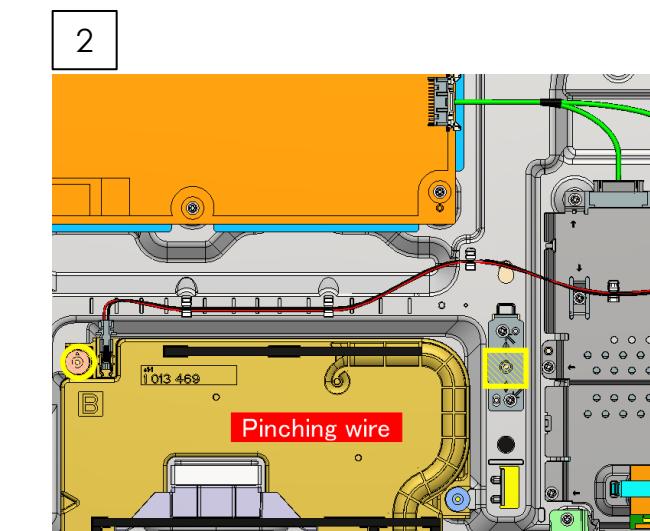
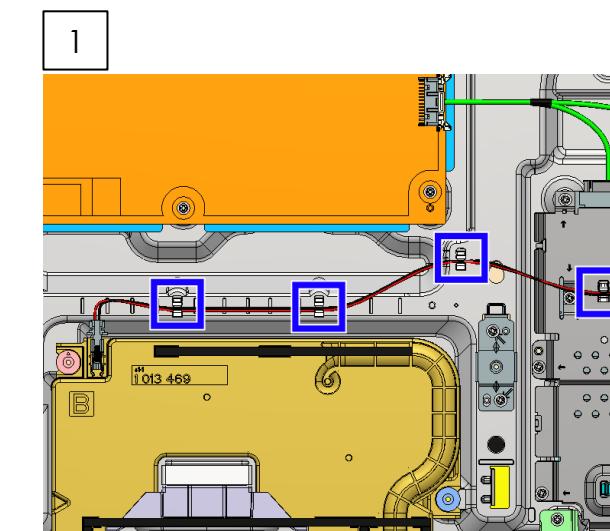
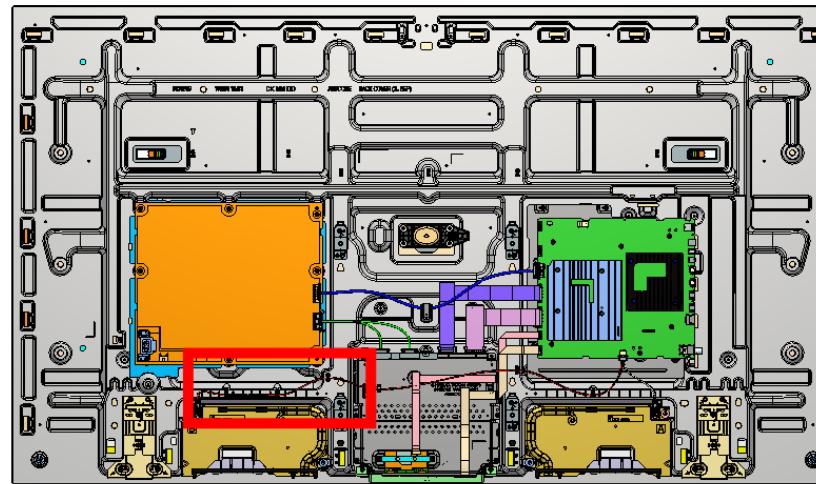
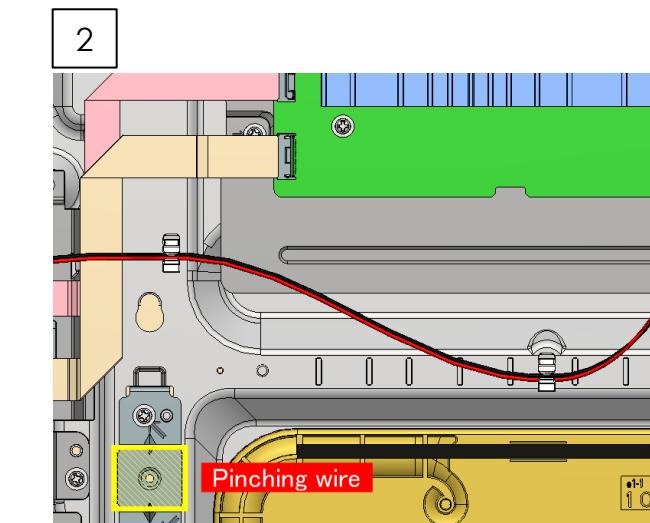
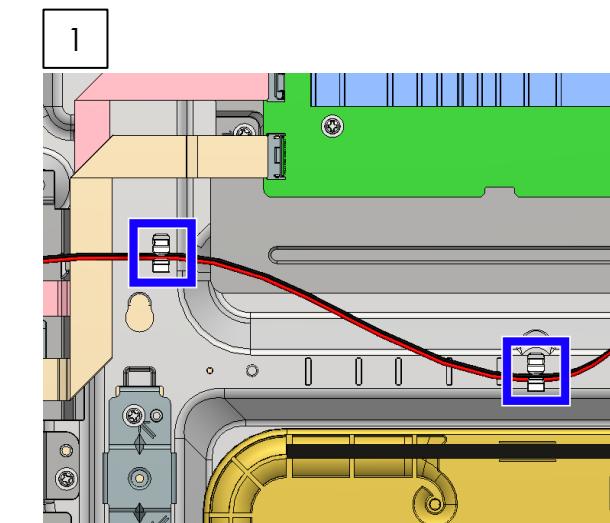
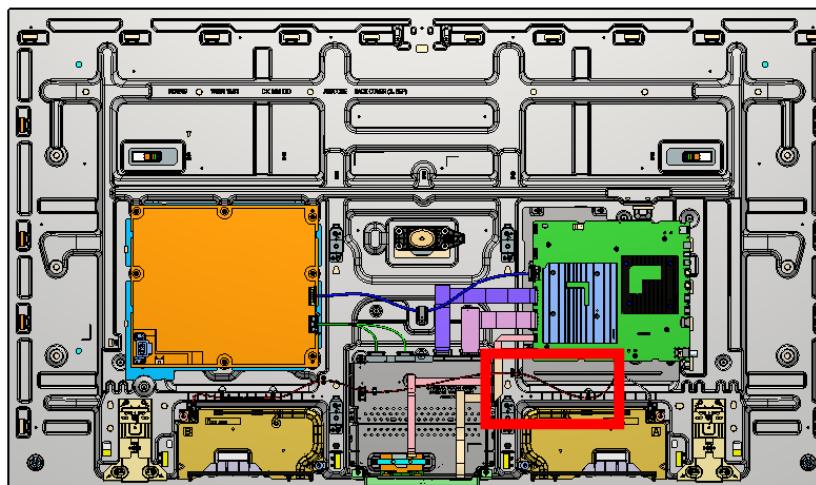
SECTION 2: XR-65A80* / XR-65A75L**2-3. WIRE DRESSING****WIRE DRESSING****WIRE DRESSING**

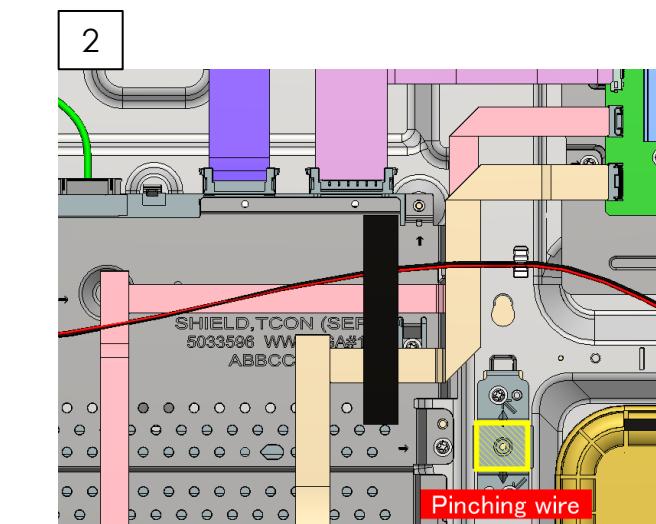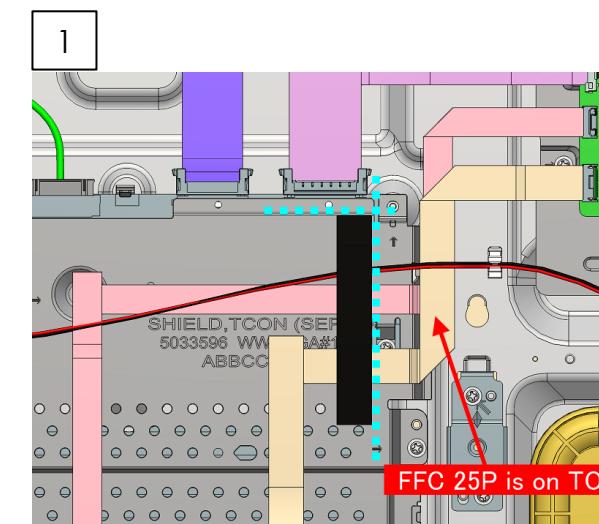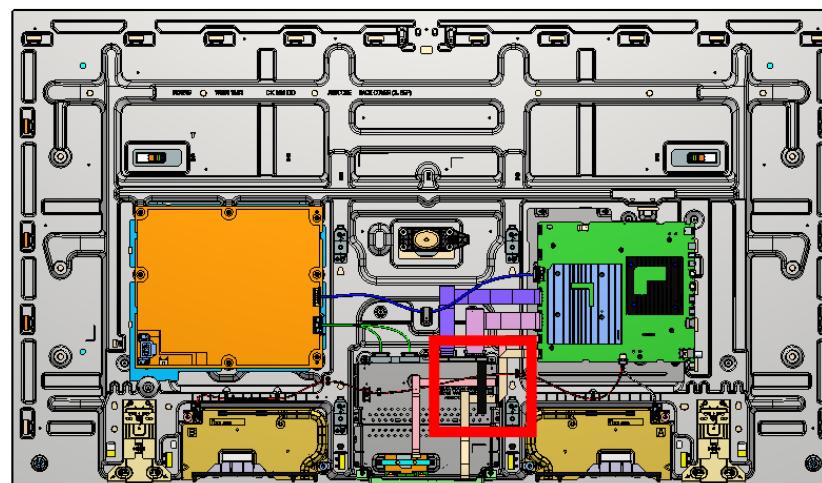
SECTION 2: XR-65A80* / XR-65A75L**2-3. WIRE DRESSING****TAPE**

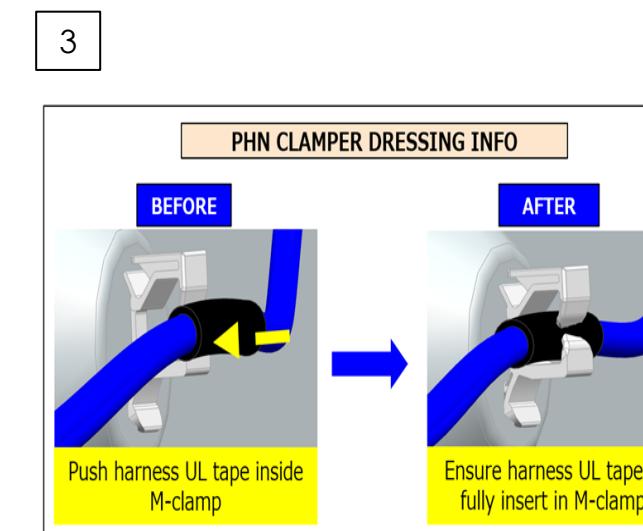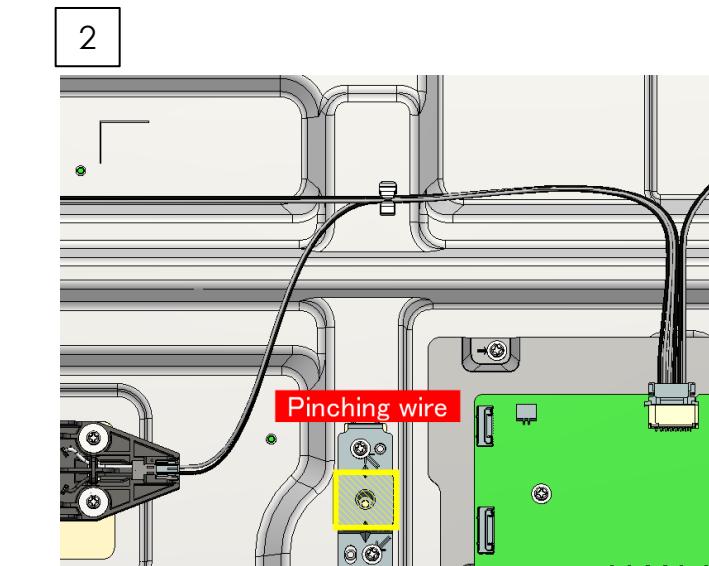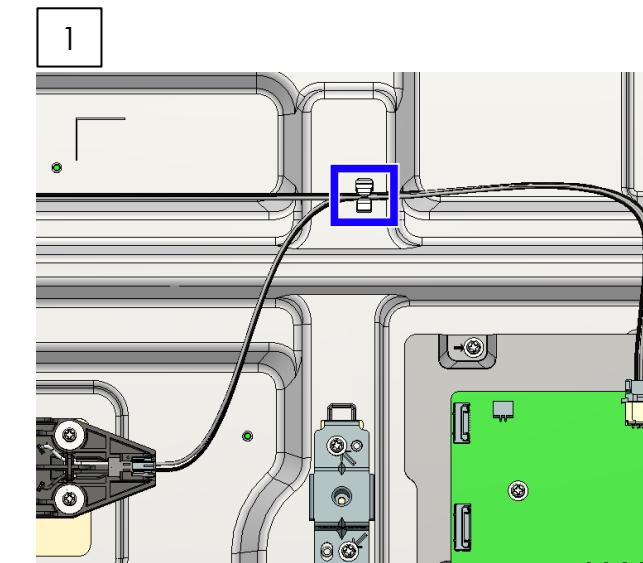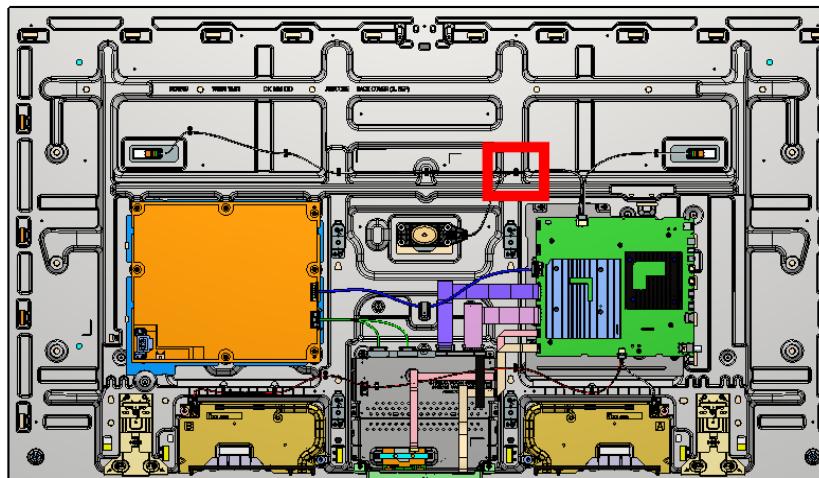SECTION 2: XR-65A80* / XR-65A75L**2-3. WIRE DRESSING****WIRE DRESSING – 80K / 80CK / 80L / 80CL**

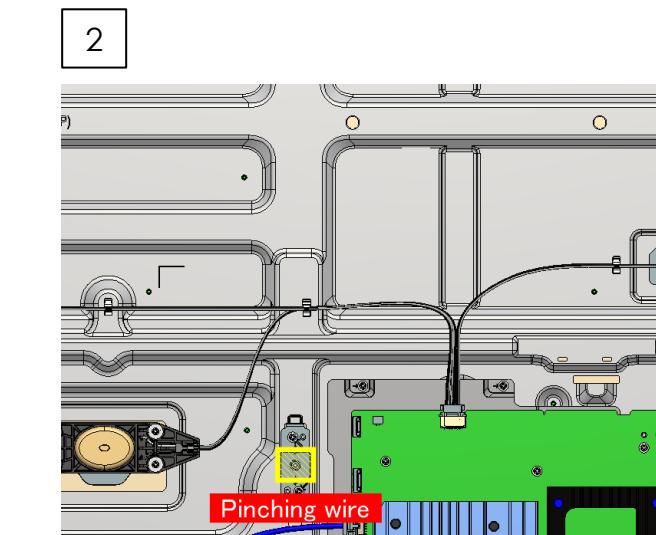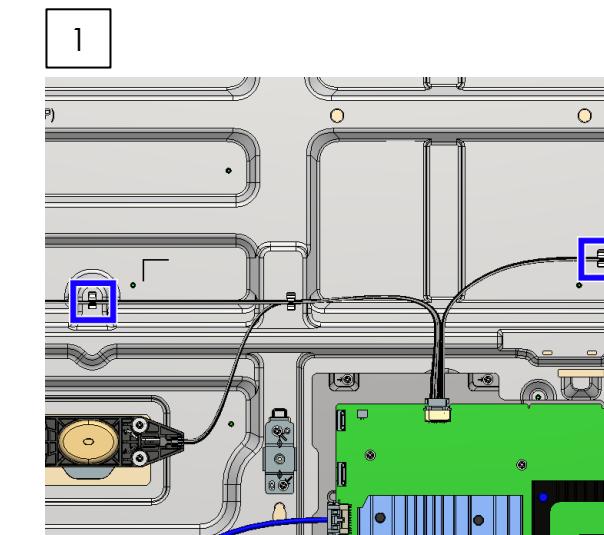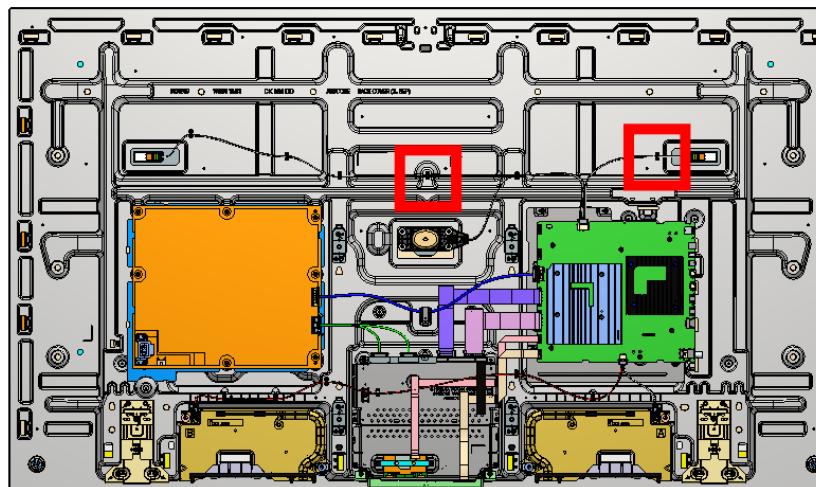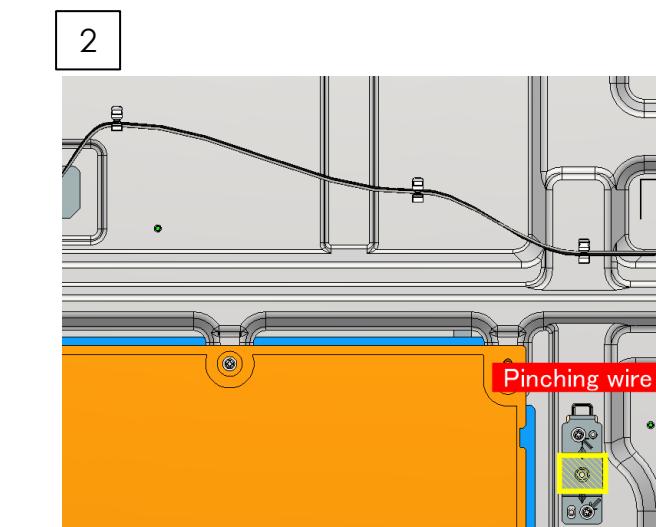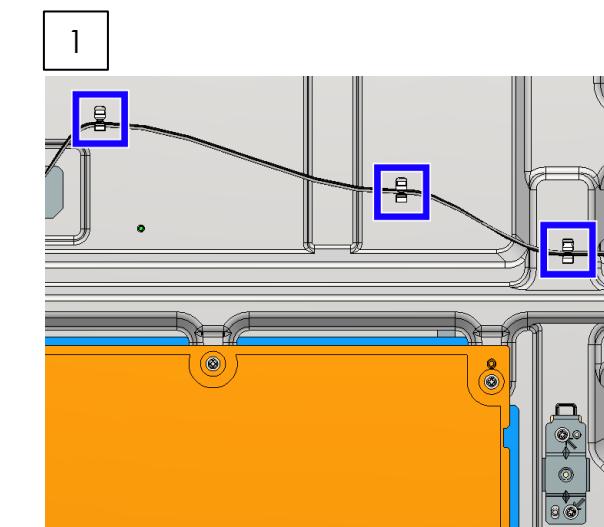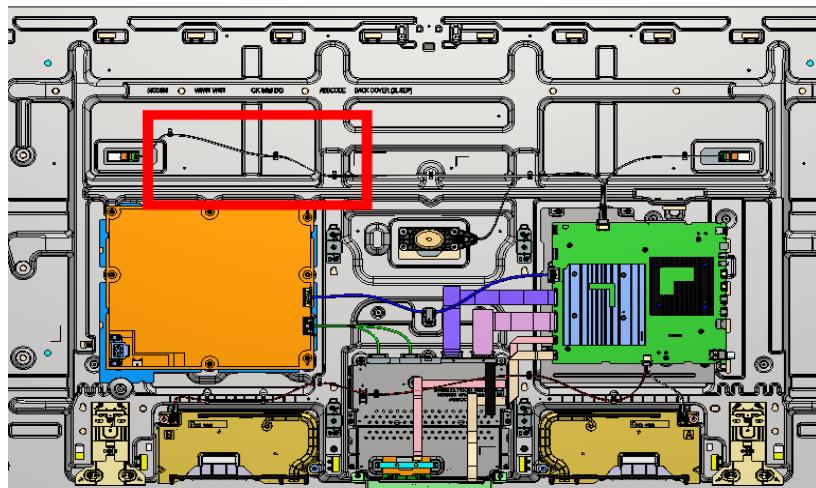
SECTION 2: XR-65A80* / XR-65A75L**2-3. WIRE DRESSING**WIRE DRESSING – 80K / 80CK / 80L / 80CLWIRE DRESSING – 80K / 80CK / 80L / 80CL

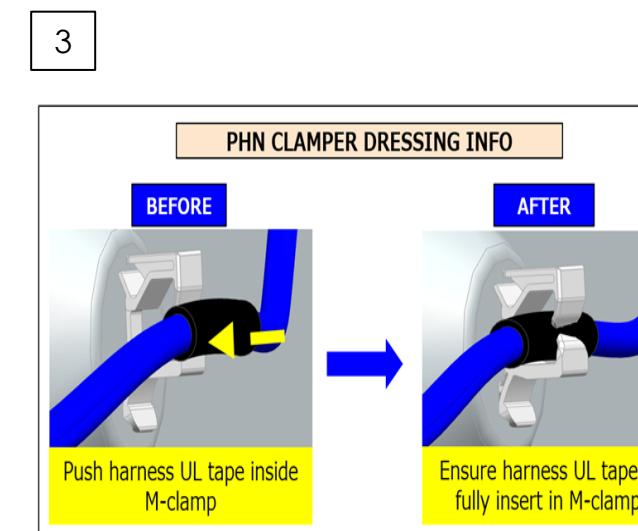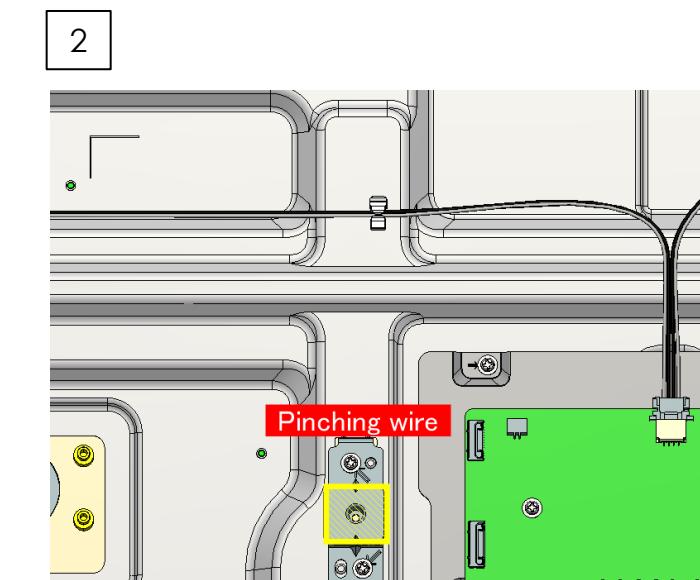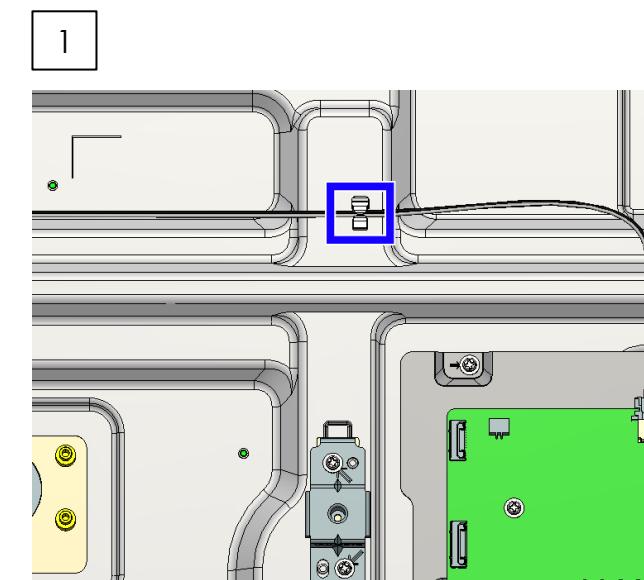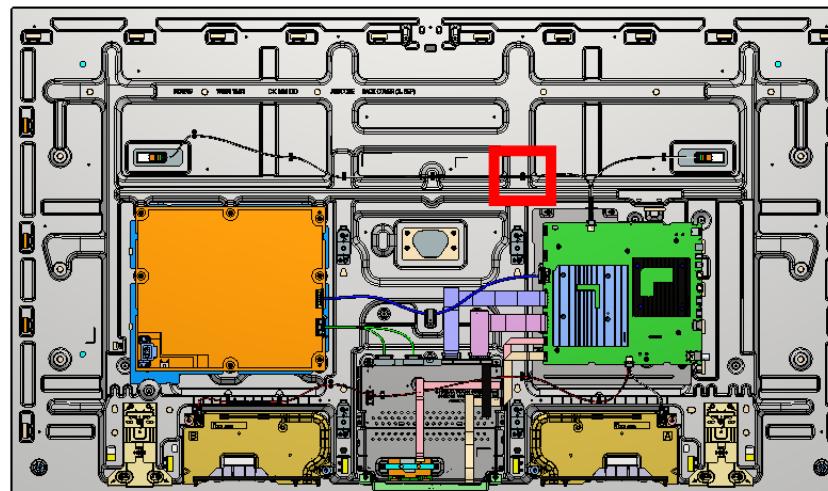SECTION 2: XR-65A80* / XR-65A75L**2-3. WIRE DRESSING****WIRE DRESSING – 75L**

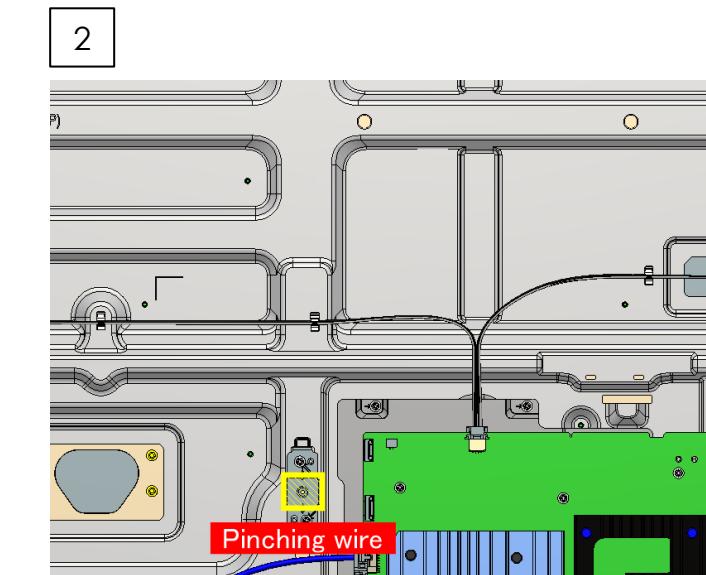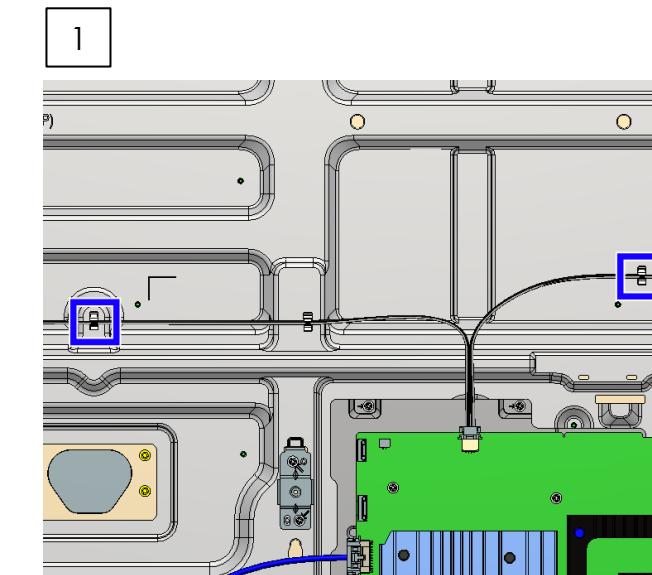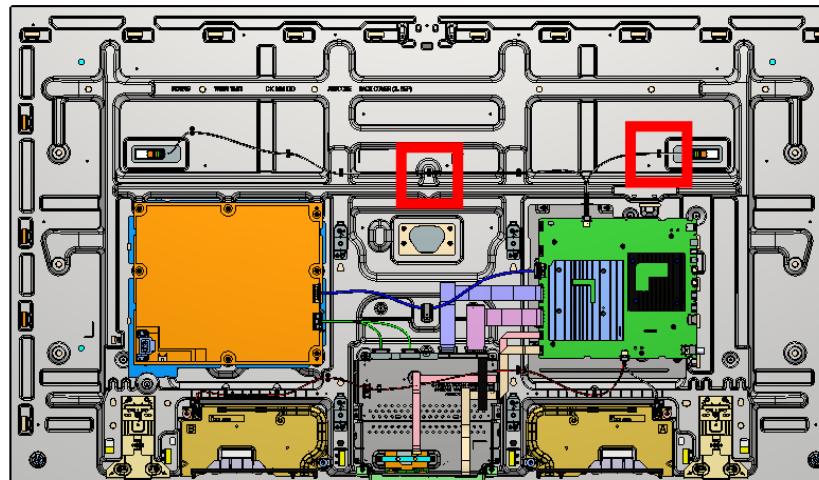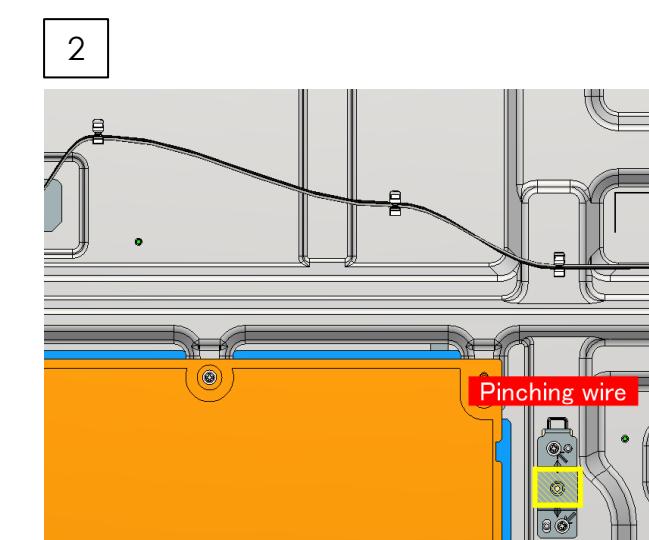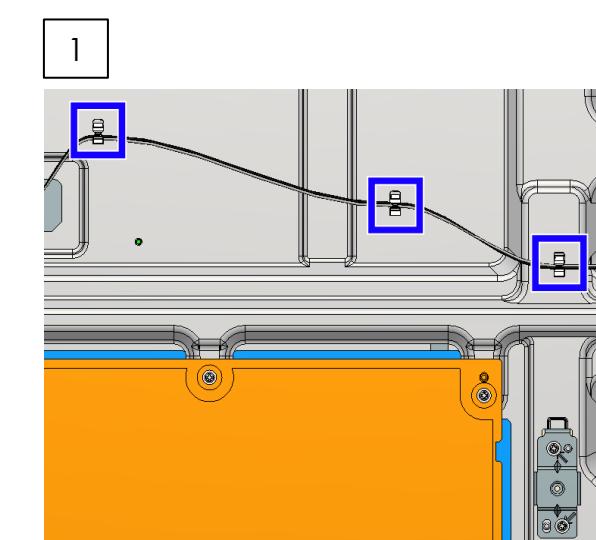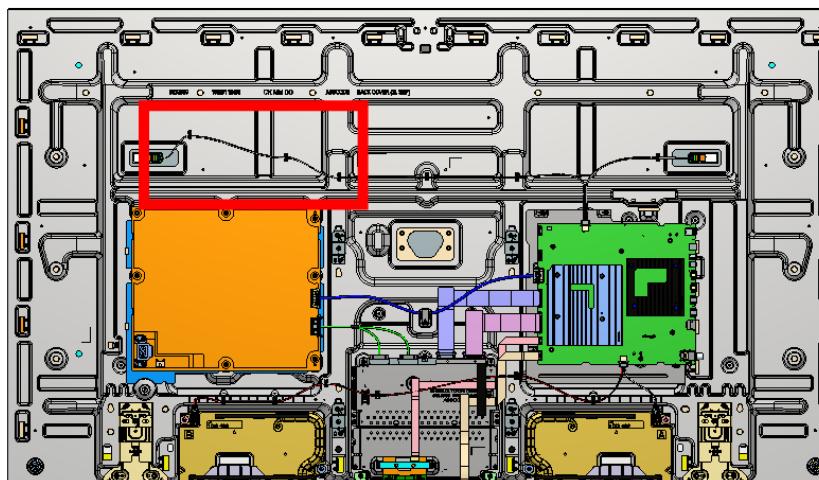SECTION 2: XR-65A80* / XR-65A75L**2-3. WIRE DRESSING****WIRE DRESSING – 75L****WIRE DRESSING – 75L**

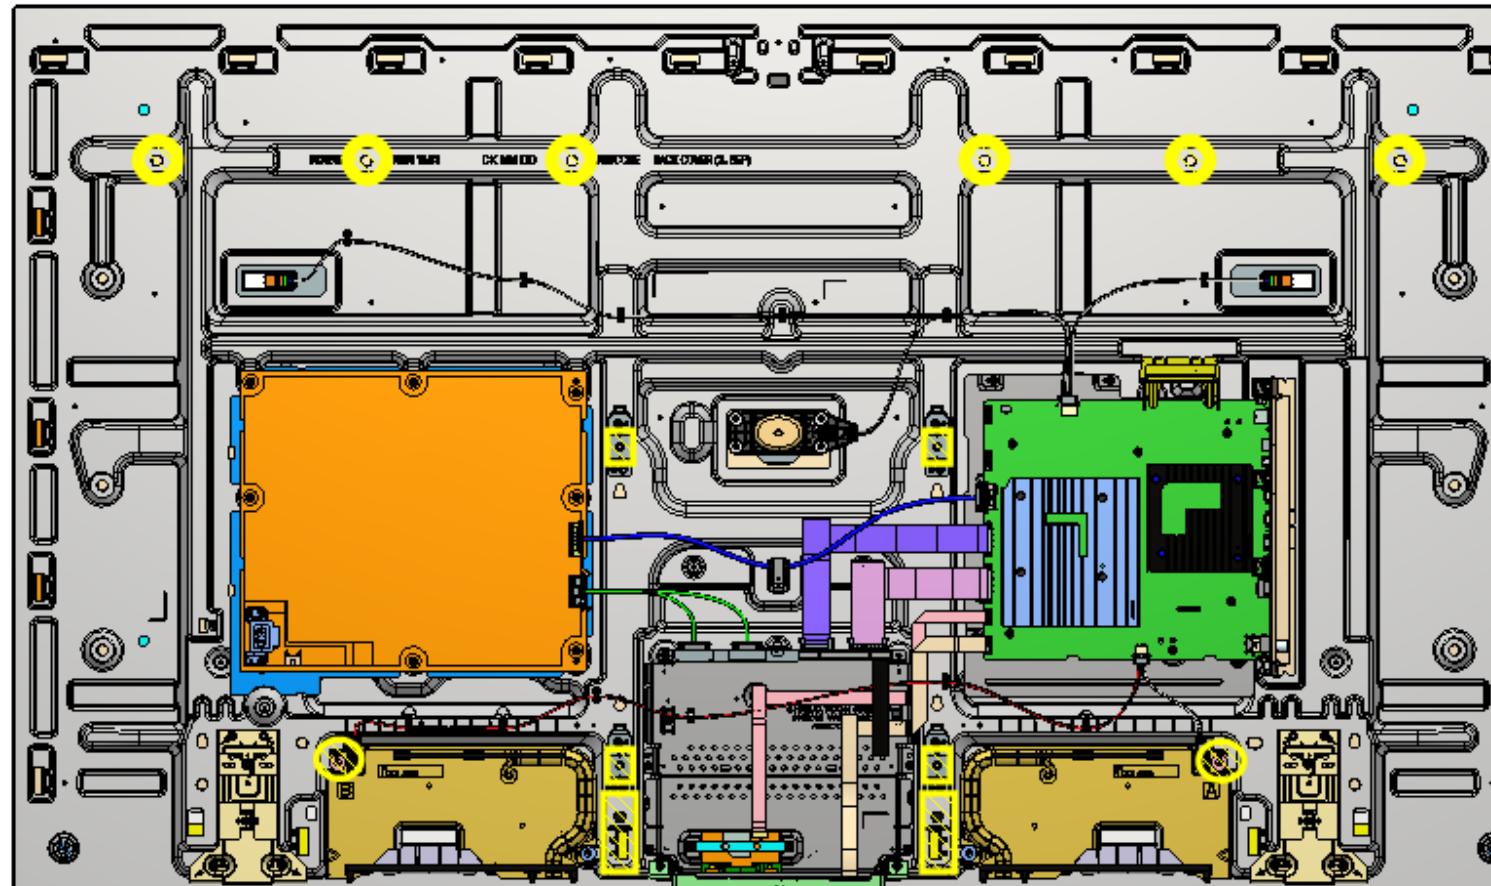SECTION 2: XR-65A80* / XR-65A75L**2-3. WIRE DRESSING**INFORMATION – 80K / 80CK / 80L / 80CL

Keep harness away from inhibit area


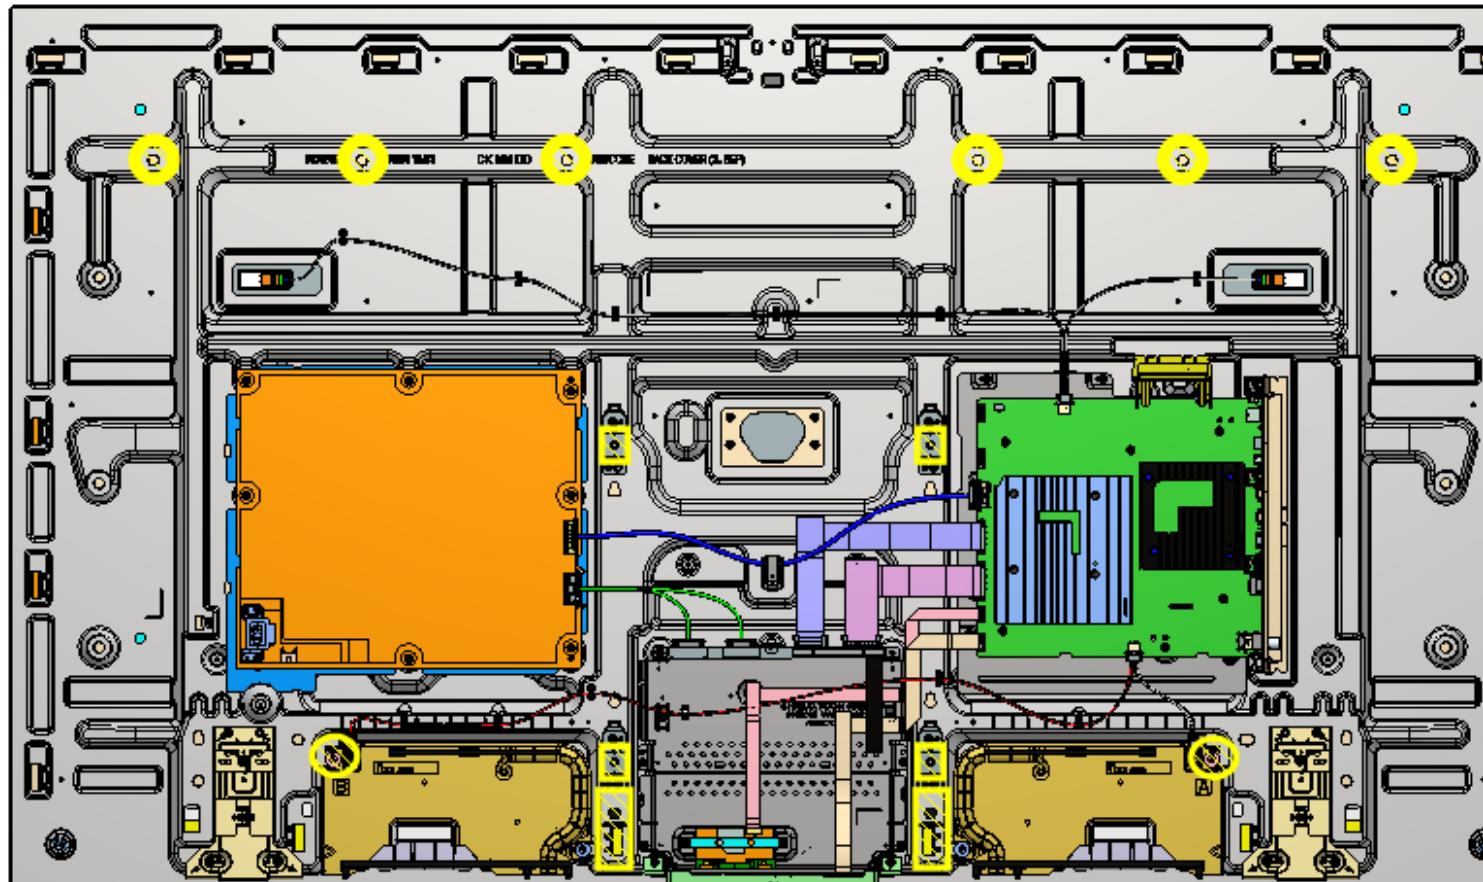
SECTION 2: XR-65A80* / XR-65A75L**2-3. WIRE DRESSING**INFORMATION – 75L

Keep harness away from inhibit area

SECTION 2: XR-65A80* / XR-65A75L**2-4. EXPLODED VIEW AND PART LIST**

- Place the TV set facing downwards on a stable, level surface before disassembly and assembly of parts.
-  and shaded parts are critical for safety. Replace only with part number specified.
-  Parts contain confidential information. Strictly follow the instruction whenever the components are repaired and/or replaced

- \\ (*) Parts are not stocked since they are seldom required for routine service. Some delays should be anticipated when ordering these components.
- \\ Picture provided in this section might have slight difference from the actual sets.
- \\ The reference number beside the part indicates the disassembly sequence.
- \\ Remove screws before disassembly. Unplug connectors before disassembly

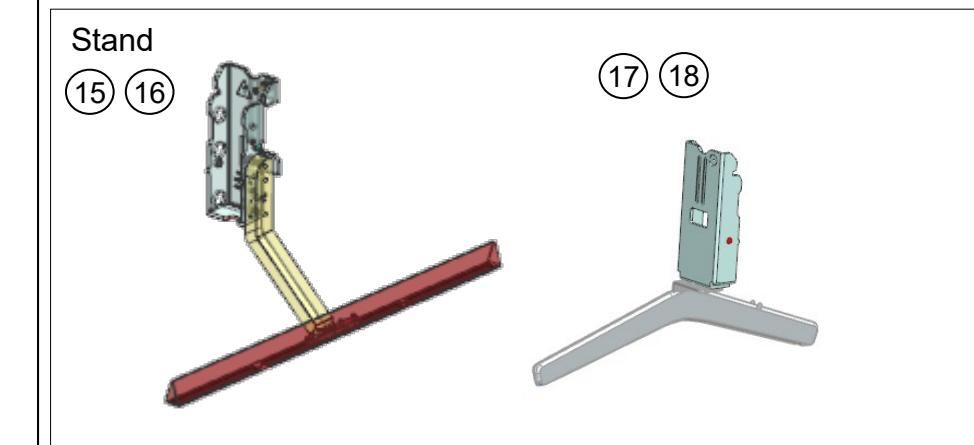
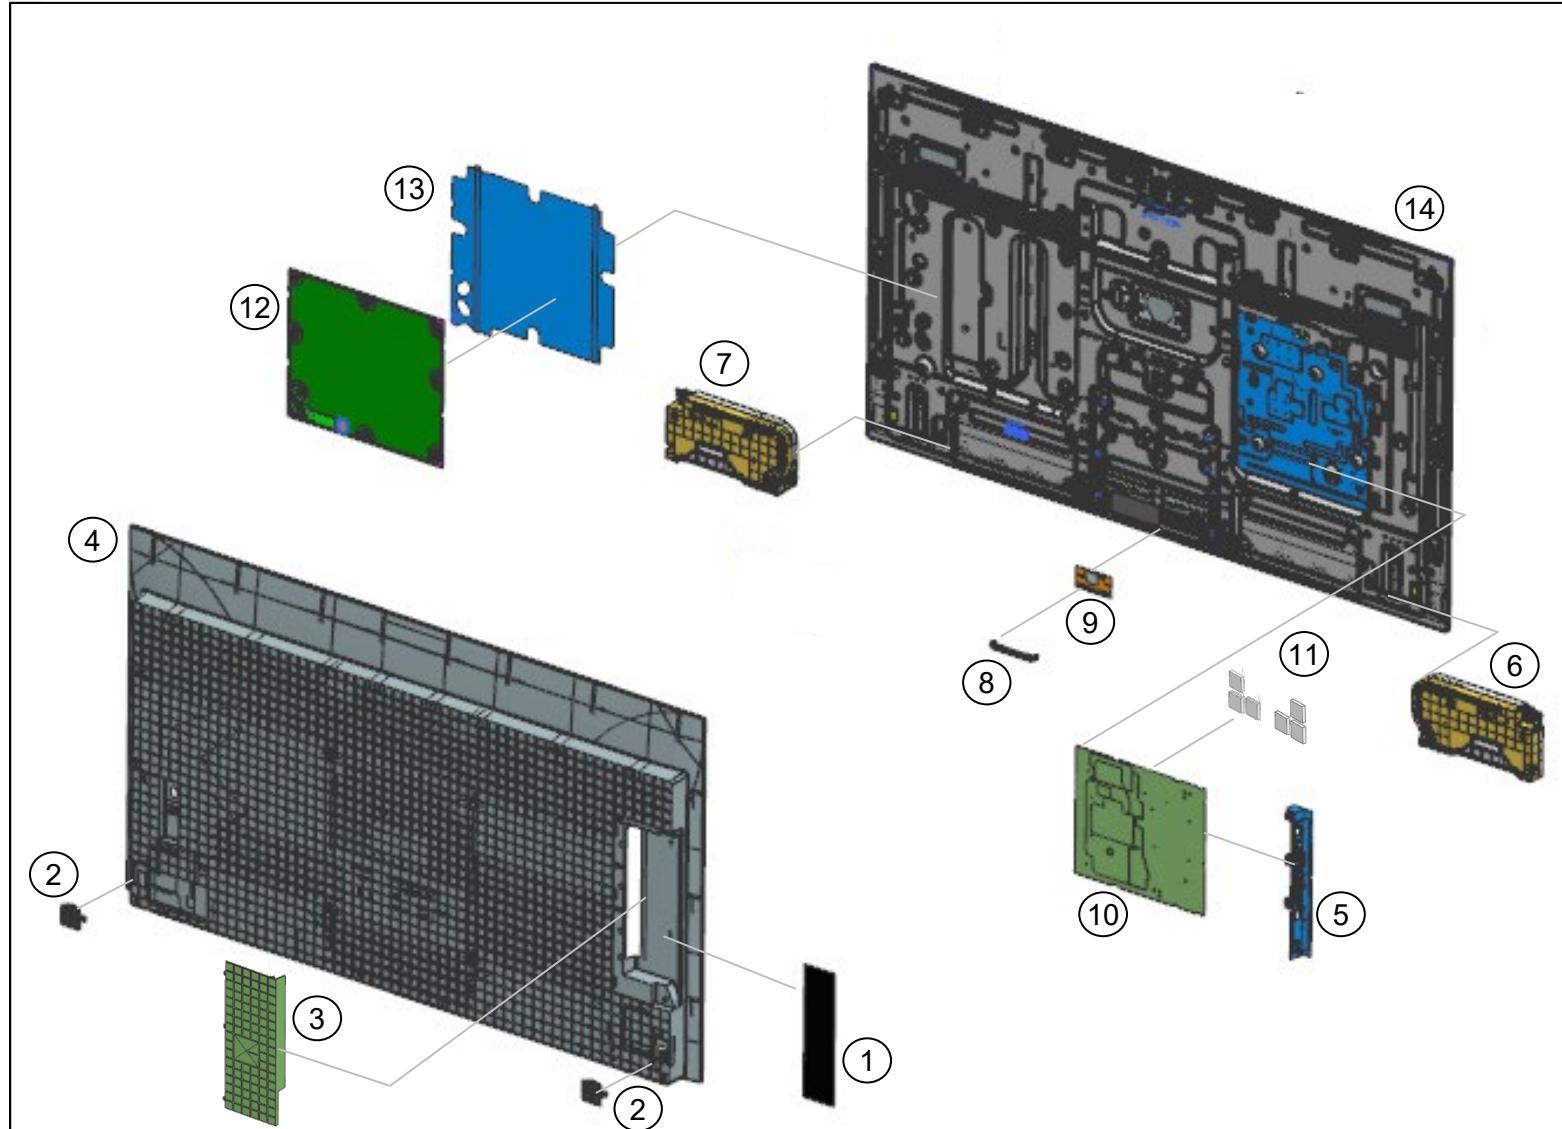


SECTION 2: XR-65A80* / XR-65A75L**2-4. EXPLODED VIEW AND PART LIST****SET PART LIST**


REF. NO	PART NO.	DESCRIPTION	XR-65A80K	XR-65A80CK	XR-65A80L	XR-65A80CL	XR-65A75L
			UCM	UC2	UCM	UC2	UC2
1	5-039-876-01	LABEL, SIDE TERMINAL HP (TGR)	•	•	n/a	n/a	n/a
2	5-033-671-01	BTM COVER BARE (COM SEP)	•	•	•	•	•
3	5-033-669-01	TERMINAL COVER (COM SEP)	•	•	•	•	•
⚠ 4	5-036-345-04	REAR COVER (2L SEP) A	•	•	•	•	•
5	5-039-955-11	BRACKET SIDE (BNN) A	•	•	•	•	•
6	1-013-469-11	SP-BOX ASSY,FY22 W40L-A	•	•	•	•	•
7	1-013-469-21	SP-BOX ASSY,FY22 W40L-B	•	•	•	•	•
8	5-009-258-22	BRACKET, WIFI(BNN)	•	•	•	•	•
🔒 9	1-005-419-14	WLAN/BT MODULE(11AC)	•	•	•	•	•
🔒 10	A-5042-804-A	COMPL_SVC_BM5STY_UC_FS	•	•	n/a	n/a	n/a
🔒 10	A-5056-923-A	COMPL_SVC_BM5STY_FS2_UCM	n/a	n/a	•	•	n/a
🔒 10	A-5056-949-A	COMPL_SVC_BM5STY_FSL2_UCM	n/a	n/a	n/a	n/a	•
11	4-457-451-12	SHEET, THERMAL (BAF)	•	•	•	•	•
⚠ 12	1-013-508-22	G25P-STATIC CONVERTER (TV)	•	•	n/a	n/a	n/a
⚠ 12	1-013-508-41	G25P-STATIC CONVERTER (TV)	n/a	n/a	•	•	•
⚠ 13	5-035-920-11	SHEET, INSULATION (L SEP) A	•	•	•	•	•
⚠ 14	A-5044-453-A	P-MOD (YDCM065UNG01)(SVC)	•	n/a	n/a	n/a	n/a
⚠ 14	A-5058-098-A	P-MOD (YDCM065UNG01)(SVC)	n/a	n/a	•	n/a	n/a

SECTION 2: XR-65A80* / XR-65A75L**2-4. EXPLODED VIEW AND PART LIST****SET PART LIST**

REF. NO	PART NO.	DESCRIPTION	XR-65A80K	XR-65A80CK	XR-65A80L	XR-65A80CL	XR-65A75L
			UCM	UC2	UCM	UC2	UC2
15	5-034-379-02	STAND L (2L SEP) A – Silver	•	•	•	•	n/a
16	5-034-380-02	STAND R (2L SEP) A – Silver	•	•	•	•	n/a
17	5-038-127-01	STAND DERI L (2L SEP) A – Black	n/a	n/a	n/a	n/a	•
18	5-038-128-01	STAND DERI R (2L SEP) A – Black	n/a	n/a	n/a	n/a	•

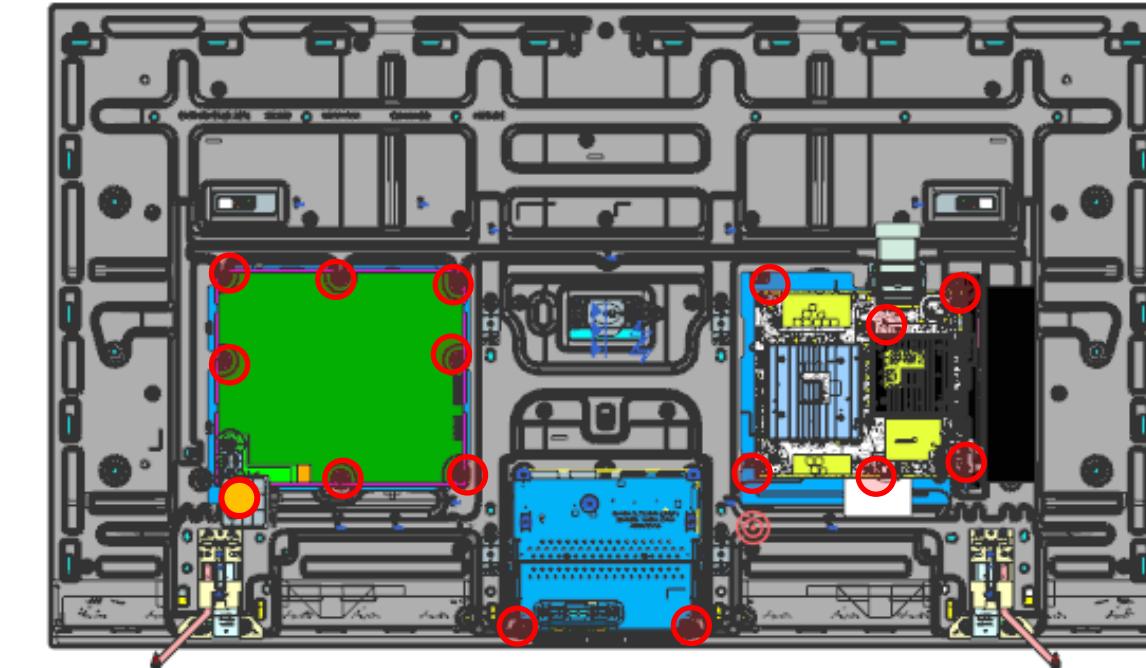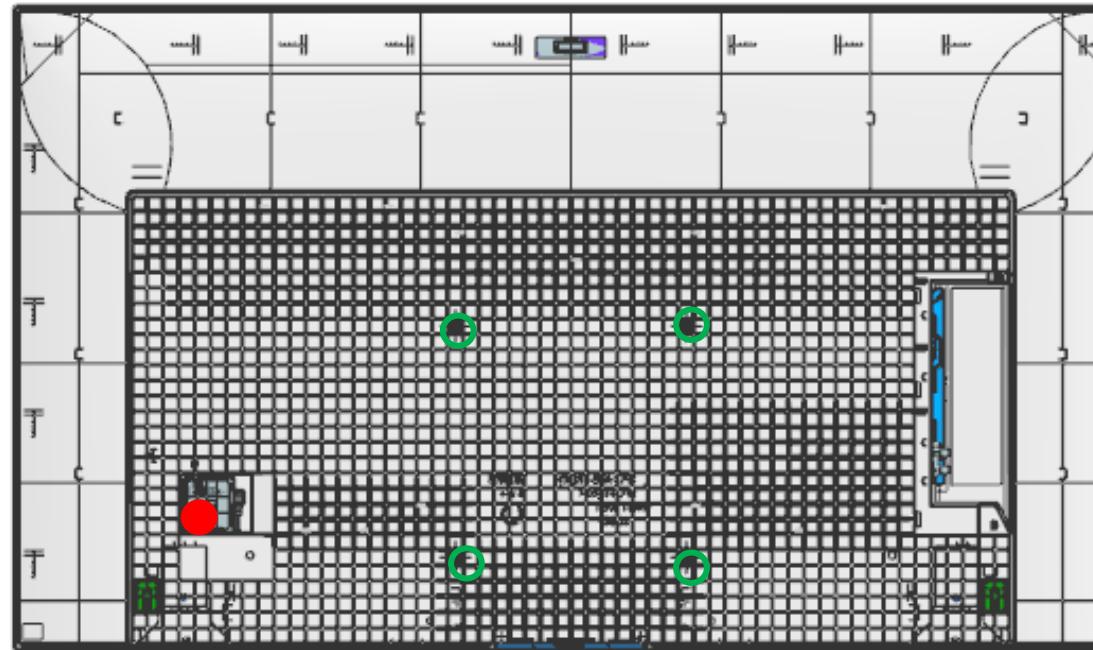SECTION 2: XR-65A80* / XR-65A75L**2-4. EXPLODED VIEW AND PART LIST****SCREW**

REMARKS	P/N	DESCRIPTION	QTY	TORQUE (N.m)
○	4-472-518-11	SCREW, +PSW M3X6	15	0.4 ± 0.05
●	2-580-592-01	SCREW, +PSW M3X8	1	0.4 ± 0.05
○	5-015-521-01	+PSW M6*16 W14	4	1.2 ± 0.1
●	4-579-926-01	SCREW M3X3.0 STEP	1	0.4 ± 0.05

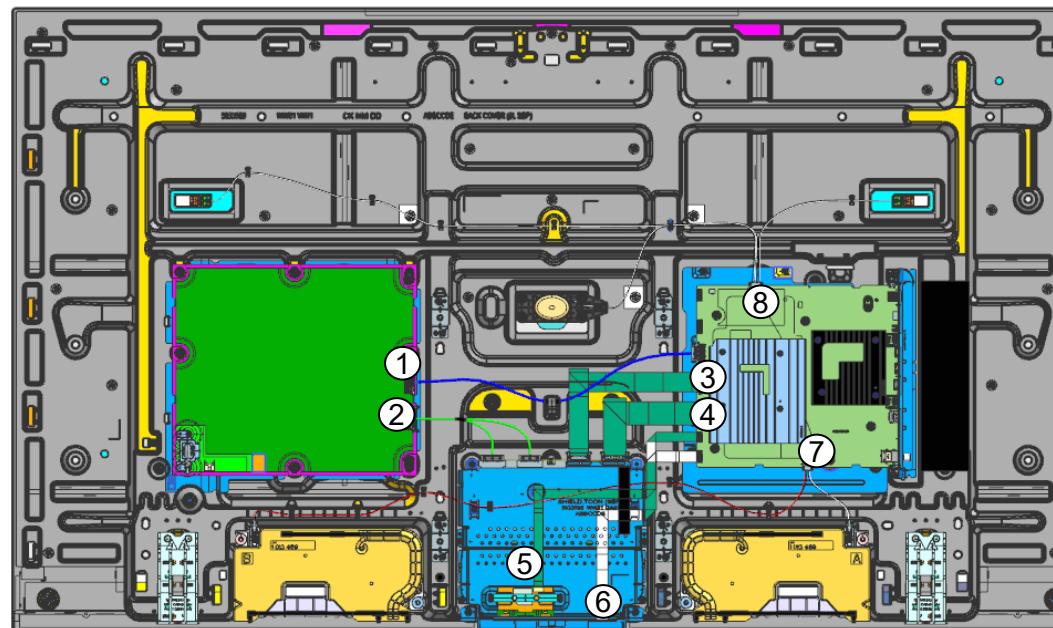SECTION 2: XR-65A80* / XR-65A75L**2-4. EXPLODED VIEW AND PART LIST****CONNECTOR**


REF. NO	PART NO.	DESCRIPTION	REMARKS	
1	1-014-495-11	CONNECTOR ASSY 28P (GB)	CN6401(G25/G25B)-CN1700(BM5STY)(1)	
2	1-014-509-11	CONNECTOR ASSY 28P (GT)	CN6601(G25/G25B)-CN6(TCON)-CN8(TCON)(1)	
3	1-014-664-11	FLEXIBLE FLAT CABLE 41P	CN4201(BM5STY)-CN7(TCON)(1)	
4	1-014-666-11	FLEXIBLE FLAT CABLE 51P	CN4200(BM5STY)-CN5(TCON)(1)	
5	1-014-658-11	FLEXIBLE FLAT CABLE 20P	CN3801(BM5STY)-J1(WIFI/BT)(1)	
6	1-014-660-11	FLEXIBLE FLAT CABLE 25P	CN1200(BM5STY)-CN102(HY1)(1)	
7	1-014-508-11	CONNECTOR ASSY 4P (SP)	CN6600(BM5STY)-SP(1)	
8	1-014-491-11	CONNECTOR ASSY 6P	CN6601(BM5STY)-PZ-EXCITER(1)	80K / 80CK / 80L / 80CL
8	1-014-741-11	CONNECTOR ASSY 4P (PZ)	CN6603(B)-PZ(1)	75L

SECTION 2: XR-65A80* / XR-65A75L**2-4. EXPLODED VIEW AND PART LIST****OTHER PARTS**

PART NO.	DESCRIPTION	XR-65A80K	XR-65A80CK	XR-65A80L	XR-65A80CL	XR-65A75L	REMARKS
		UCM	UC2	UCM	UC2	UC2	
4-535-064-62	ASSY,FALL LOCK,BELT LL	•	•	•	•	•	-
5-009-031-02	CLAMPER,CABLE S(BNN)	•	•	•	•	•	-
1-013-691-23	REMOTE COMMANDER (RMF-TX800U)	•	n/a	n/a	n/a	n/a	-
1-013-685-22	REMOTE COMMANDER (RMF-TX900U)	n/a	•	n/a	n/a	n/a	-
1-016-940-21	REMOTE COMMANDER (RMF-TX810U)	n/a	n/a	•	n/a	•	-
1-016-949-21	REMOTE COMMANDER (RMF-TX910U)	n/a	n/a	n/a	•	n/a	-
*5-037-357-11	REFERENCE GUIDE	•	•	n/a	n/a	n/a	-
*5-048-119-11	REFERENCE GUIDE	n/a	n/a	•	•	•	-
*5-048-121-11	SETUP GUIDE	n/a	n/a	•	•	n/a	-
*5-048-124-11	SETUP GUIDE	n/a	n/a	n/a	n/a	•	-
*5-037-358-11	SETUP GUIDE	•	•	n/a	n/a	n/a	-
⚠ 1-005-642-12	C7L AC POWER CORD SETS (US)	•	•	•	•	•	-
7-600-031-97	TAPE (3M 1350FB-1)15MMX66M BLK	•	•	•	•	•	-
5-009-861-02	VESA SPACER A (COM)	•	•	•	•	•	Screw extension for Fall Lock Belt and Wall Mount, Qty 1, refer setup Guide for details.

SECTION 3: XR-77A80***3-1. DISASSEMBLY AND REMOVAL CAUTION****REAR COVER**

1. Remove the screws from the rear cover (4 pcs)

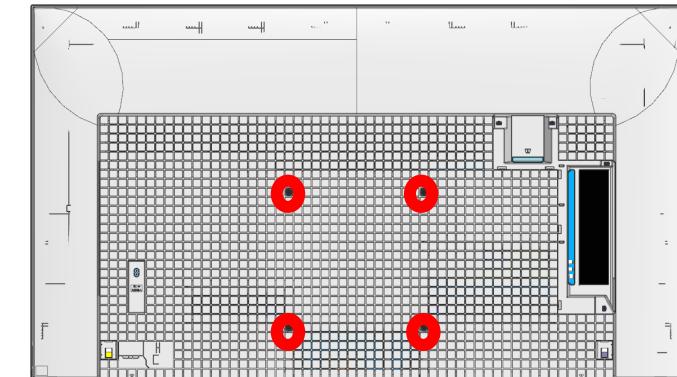


2. Remove the bottom cover.



Washer or coin to unhook Cover Hook

*Wrap washer in VA tape (15mm X 55mm)

*Thickness approximately 1.5mm


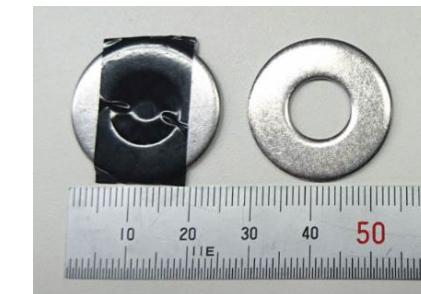


- ① Put washer or coin in the slit of cover hook.
- ② Turn washer or coin to the direction of the arrow.
- ③ Remove cover hook.

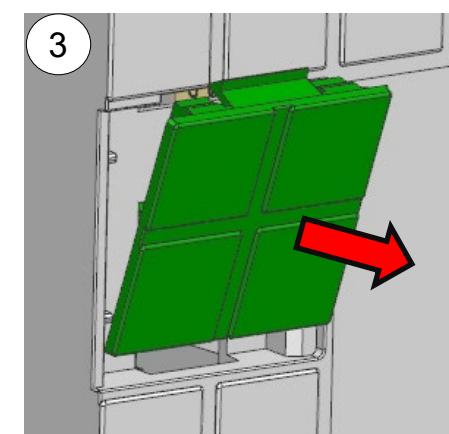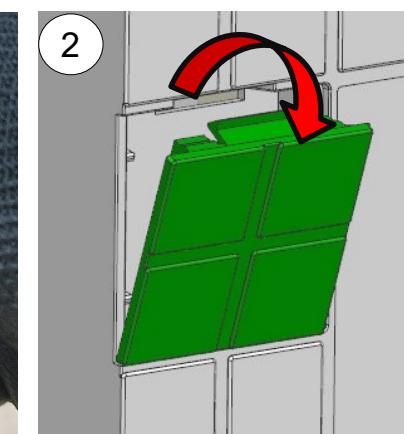


SECTION 3: XR-77A80***3-1. DISASSEMBLY AND REMOVAL CAUTION****REAR COVER**

3. Unhook the bottom hook, starting from center.(6 hooks)

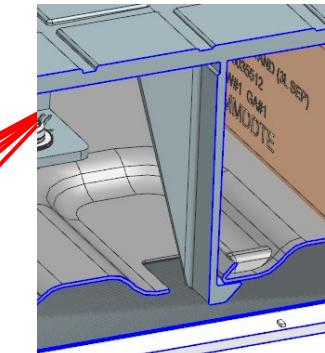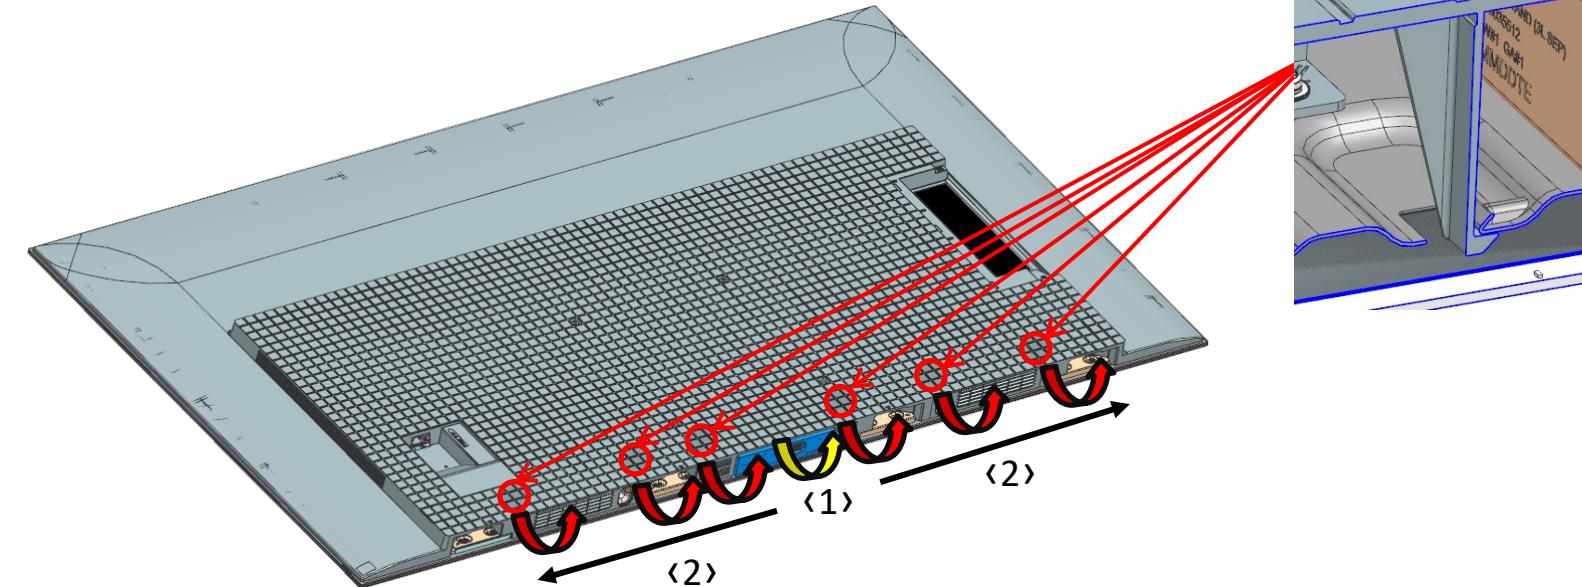

- ① Pull rear cover bottom center until hook release sound is heard.
- ② Pull rear cover towards outside direction until hook release sound is heard.


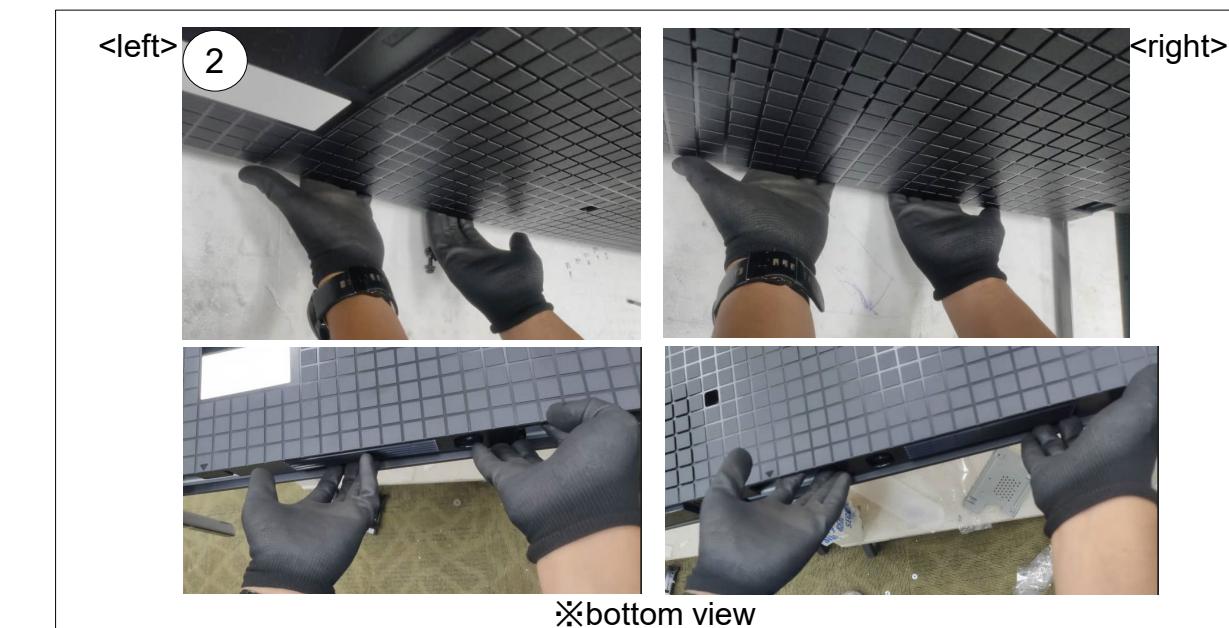


SECTION 3: XR-77A80*


3-1. DISASSEMBLY AND REMOVAL CAUTION

REAR COVER

4. Unhook the left side hooks. (5 hooks)

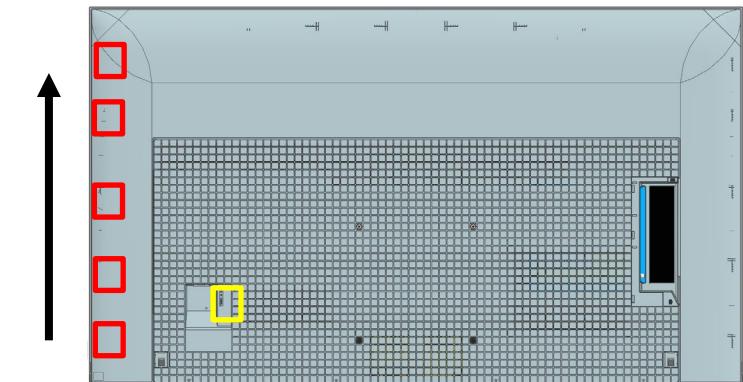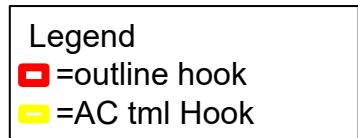

- ① When releasing hook, pull the rear cover corner and insert jig
- ② Flex the rear cover outwards to release outline hook
- ③ Pull rear cover below the AC tml to release the AC tml hook

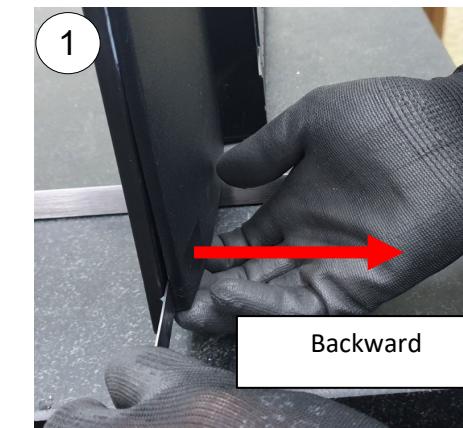

Ruler or jig to release corner hook


*Wrap ruler with tape to prevent scratch





SECTION 3: XR-77A80***3-1. DISASSEMBLY AND REMOVAL CAUTION****REAR COVER**

5. Unhook the right-side hooks. (5 hooks)

Legend
□=outline hook
□=Side Jack Bottom Hook (3 hooks)

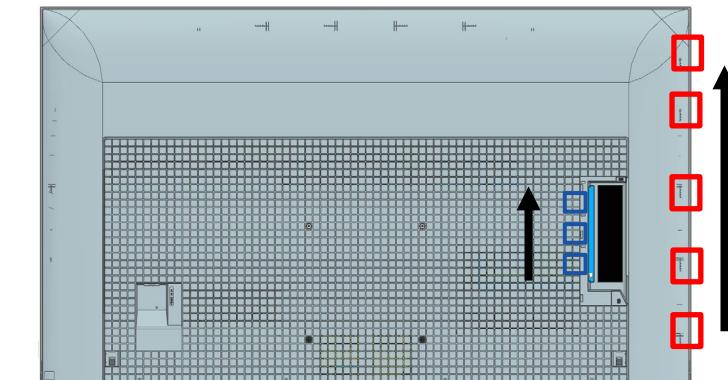

- ① When releasing hook, pull the rear cover and insert jig
- ② Flex the rear cover outwards to release outline hook
- ③ Pull rear cover below the side jack to release the side jack bottom hook.

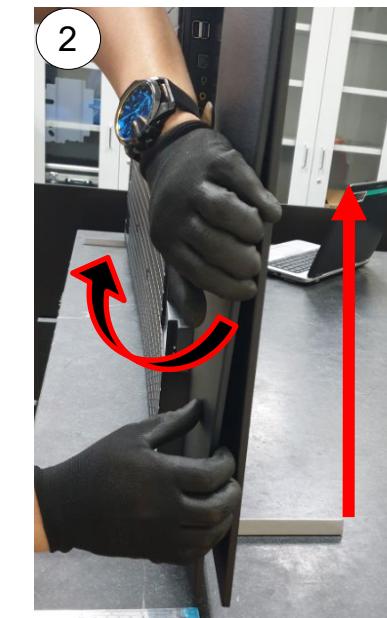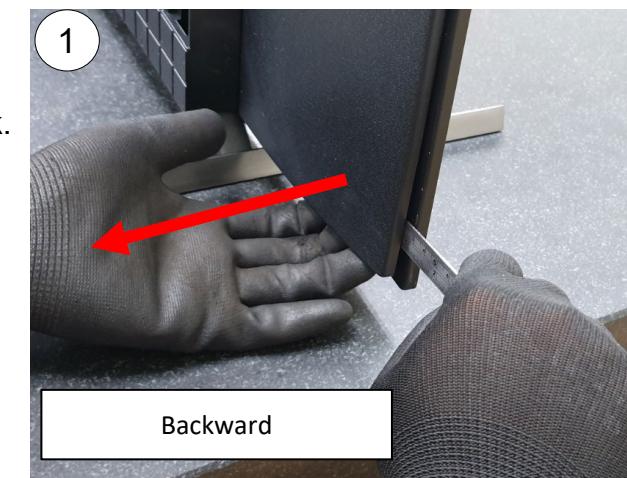

Ruler or jig to release corner hook


*Wrap ruler with tape to prevent scratch




SECTION 3: XR-77A80***3-1. DISASSEMBLY AND REMOVAL CAUTION****REAR COVER**

6. Unhook the top row hooks. (10 hooks)

Legend
□=outline hook

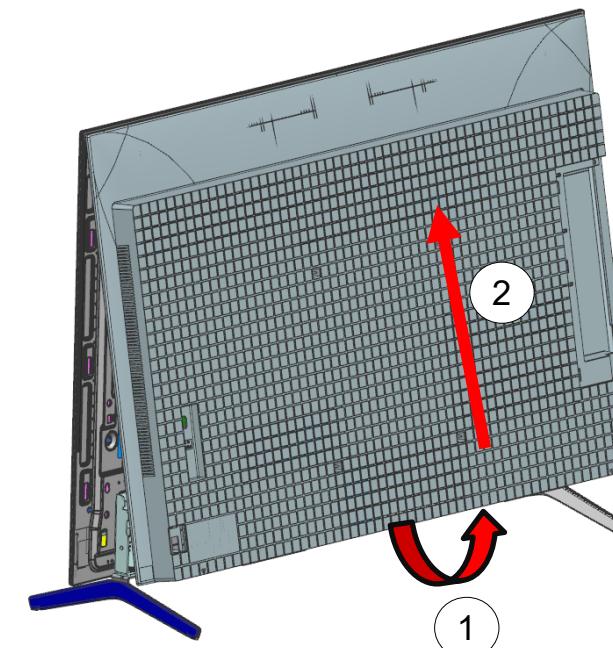



- ① Tilt the rear cover and push upwards on the left/right side.
- ② Lift the rear cover off from the center

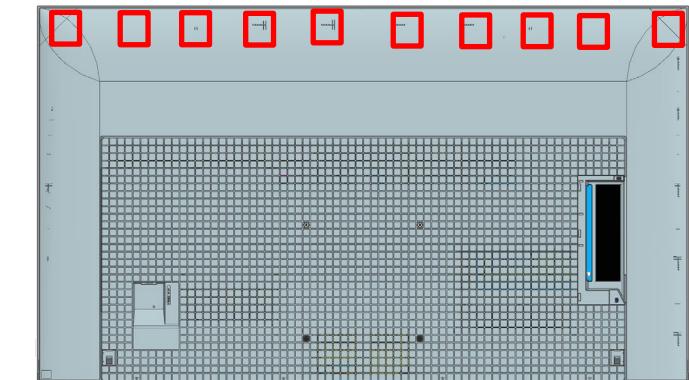

SECTION 3: XR-77A80***3-1. DISASSEMBLY AND REMOVAL CAUTION****REAR COVER**

Hook positioning.

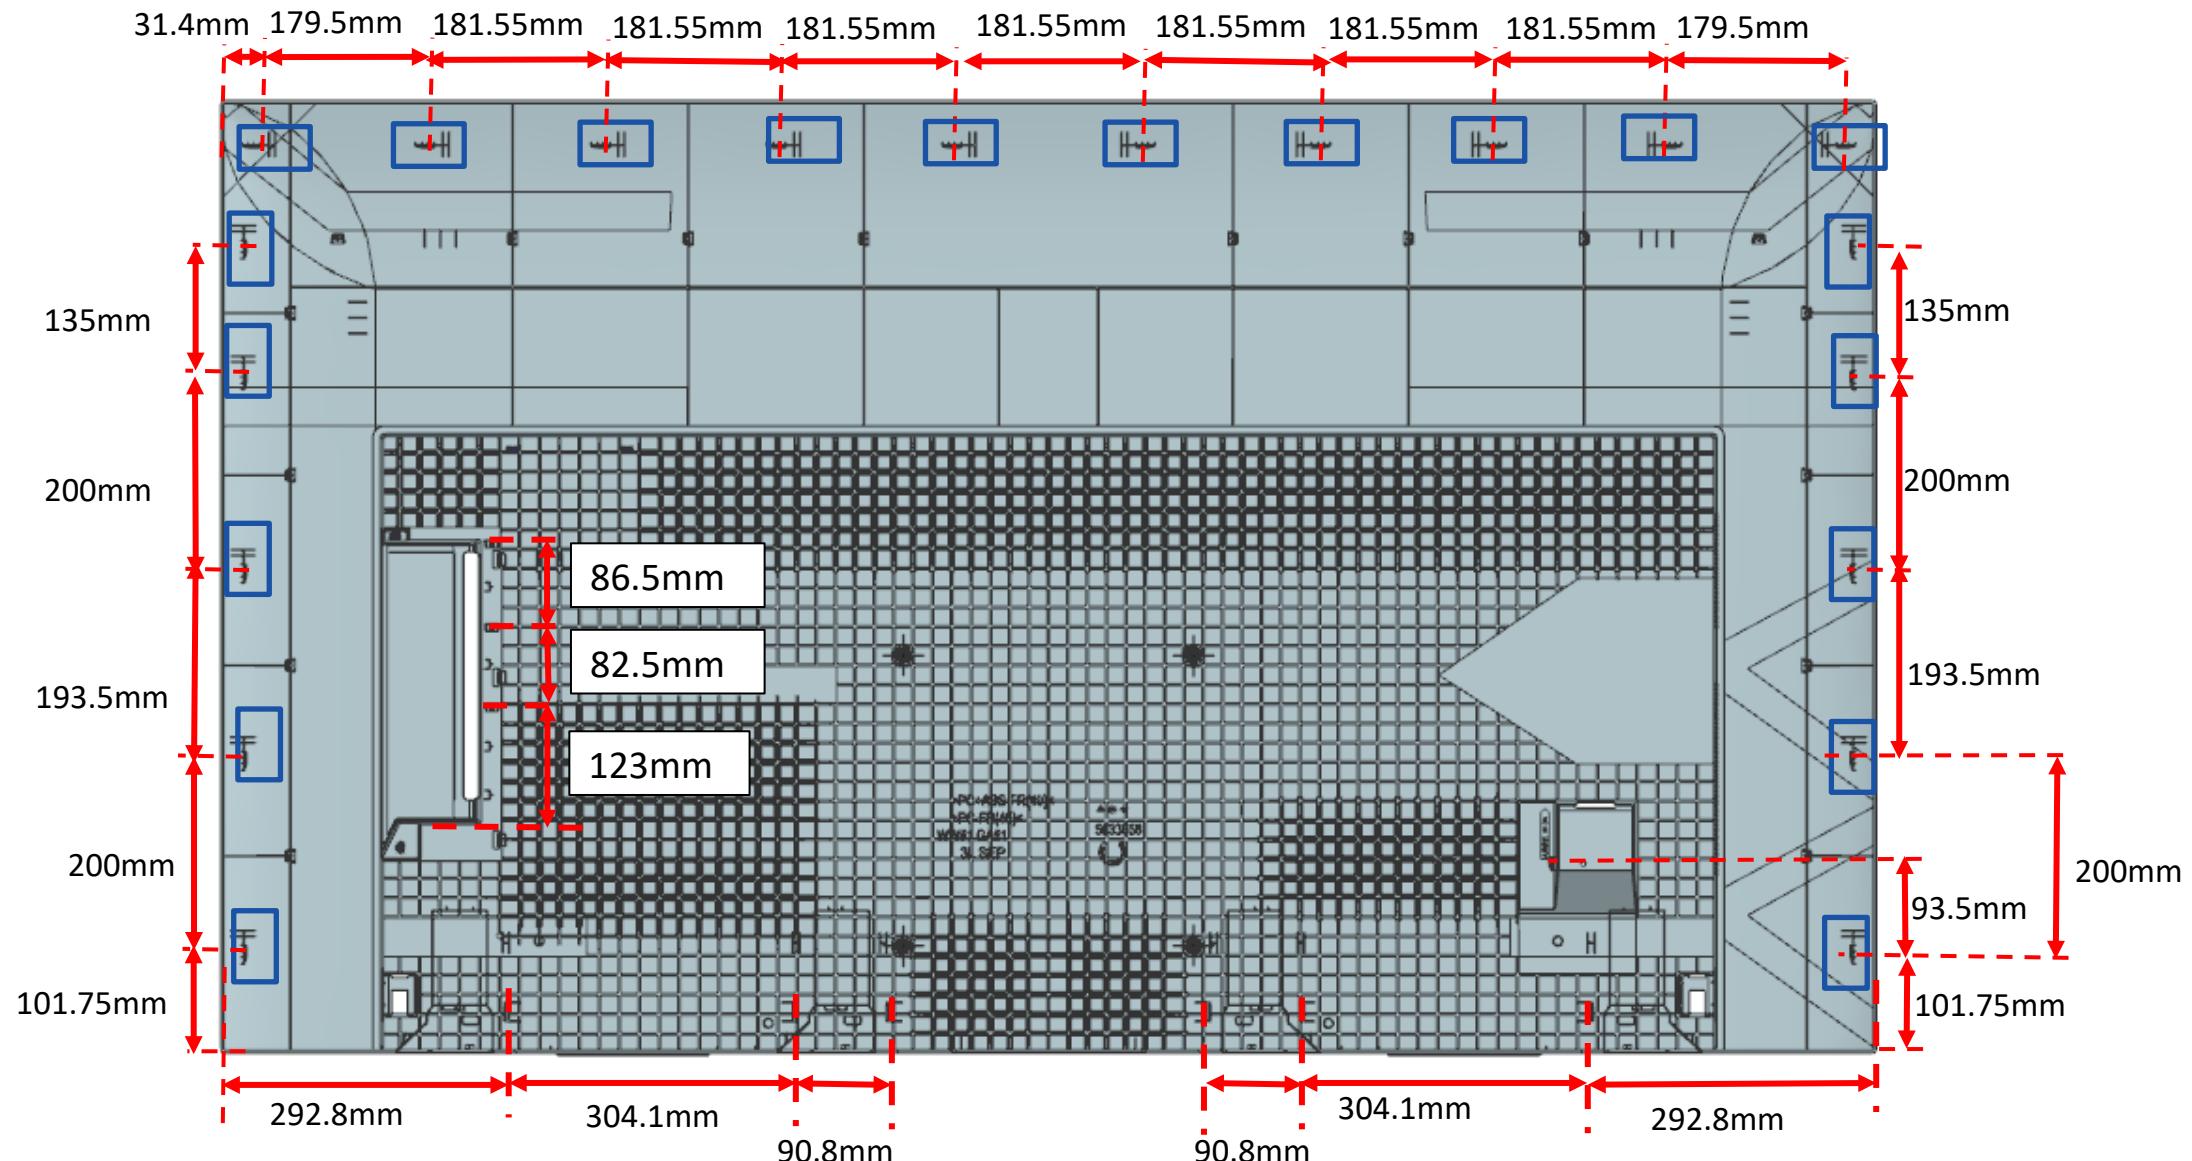


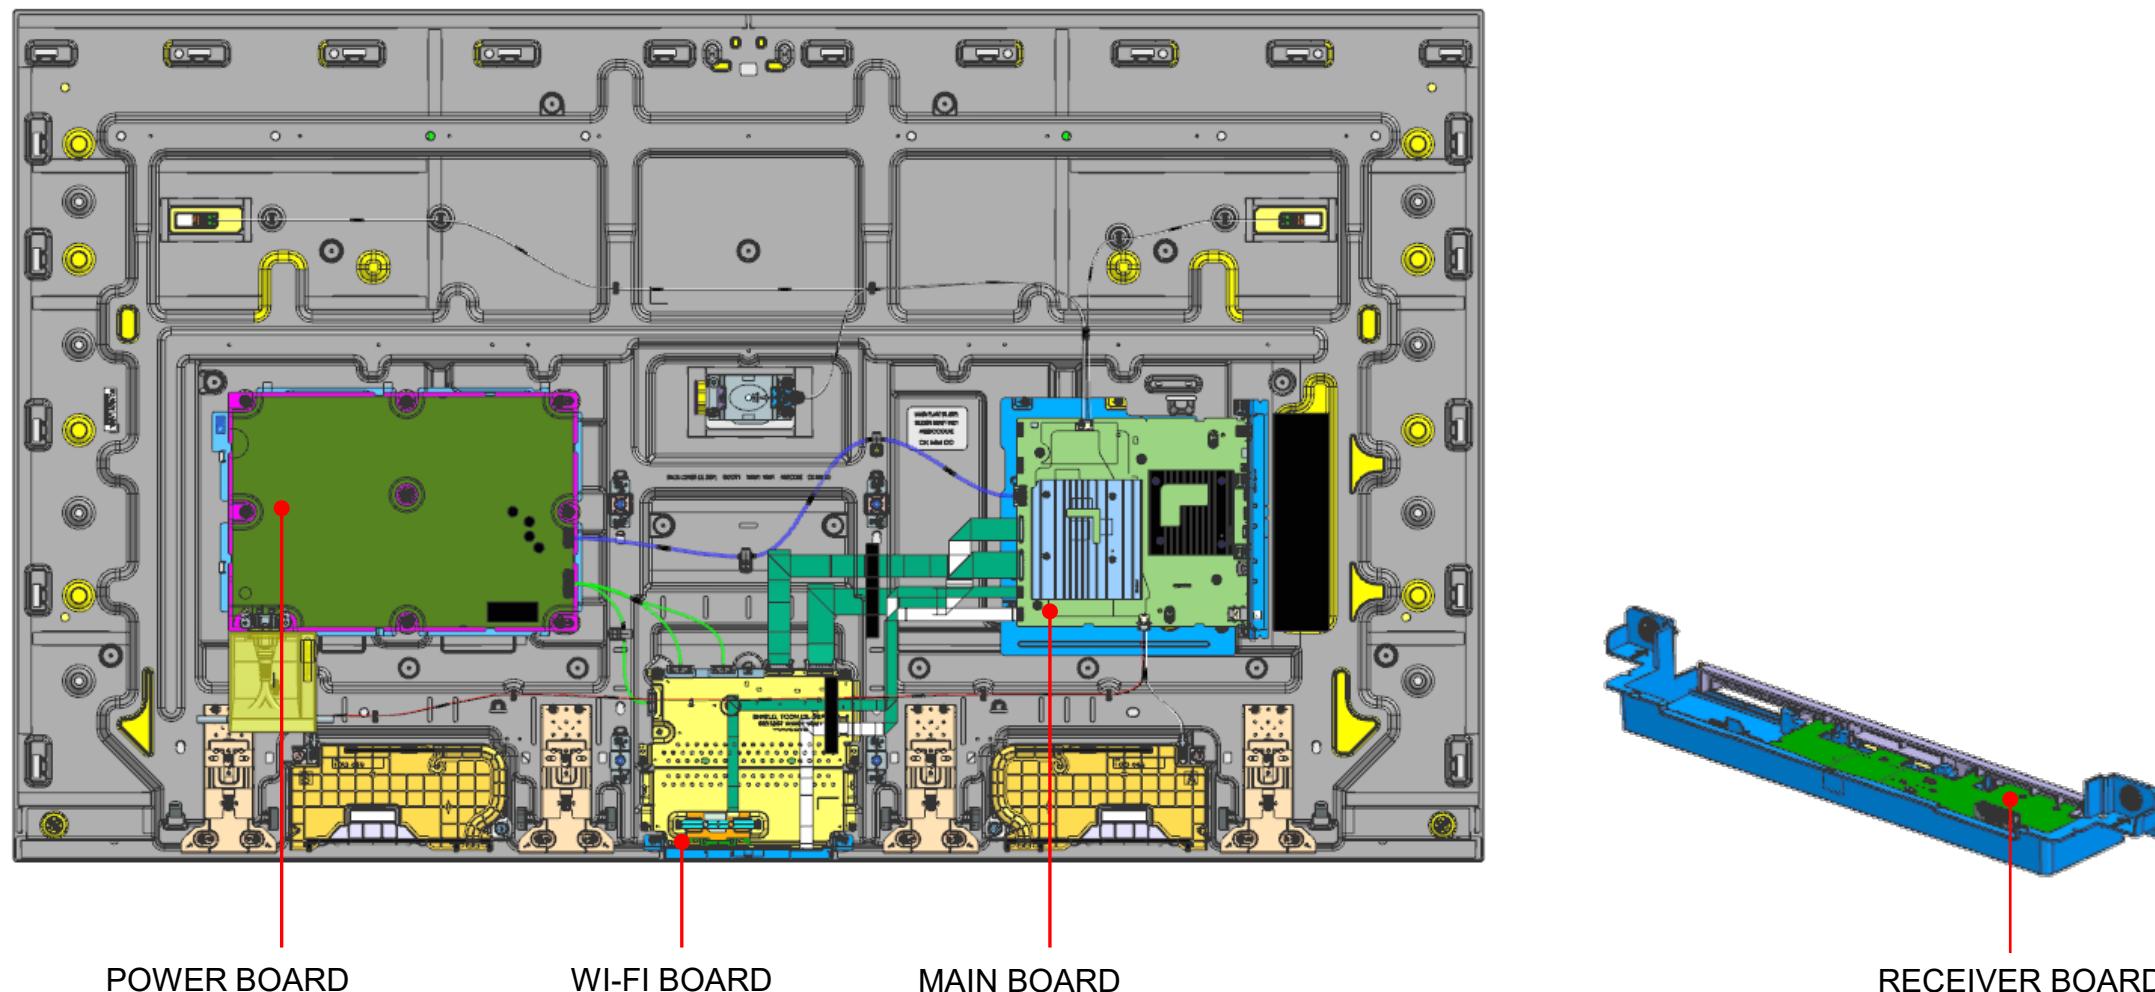SECTION 3: XR-77A80***3-2. BOARD LOCATION**


SECTION 3: XR-77A80***3-3. WIRE DRESSING****INFORMATION****Caution:**






1. Operator need to fix Smart Core on FLAT surface before FFC insertion to ensure **FFC STRAIGHT** insertion.
2. FFC side with blue supporting tape, must face **CONNECTOR WITH LOCKING** during FFC insertion.




After assemble Receiver board to Smart Core, operator need to insert Receiver board FFC in straight condition.





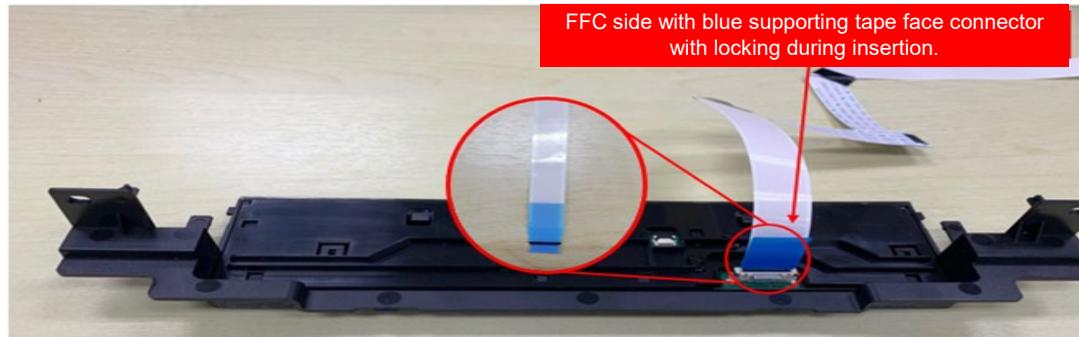







Smart Core is placed on FLAT surface during FFC insertion.

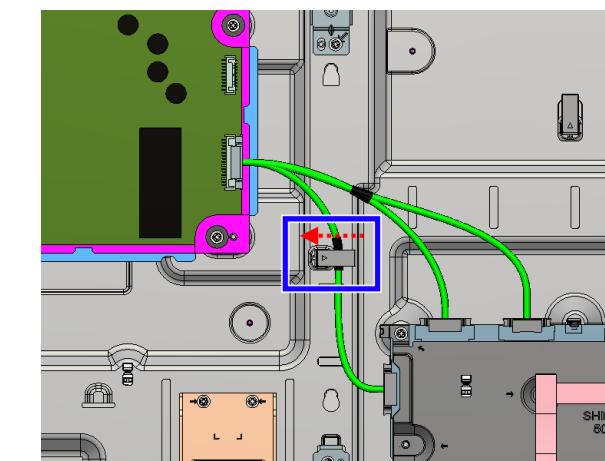WIRE DRESSING

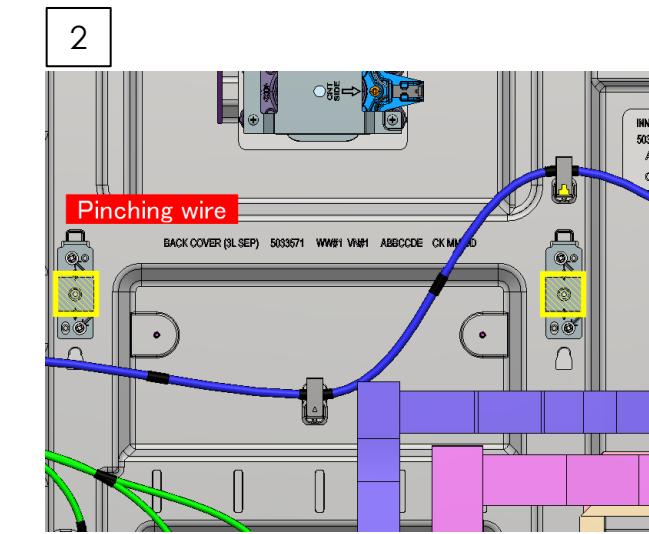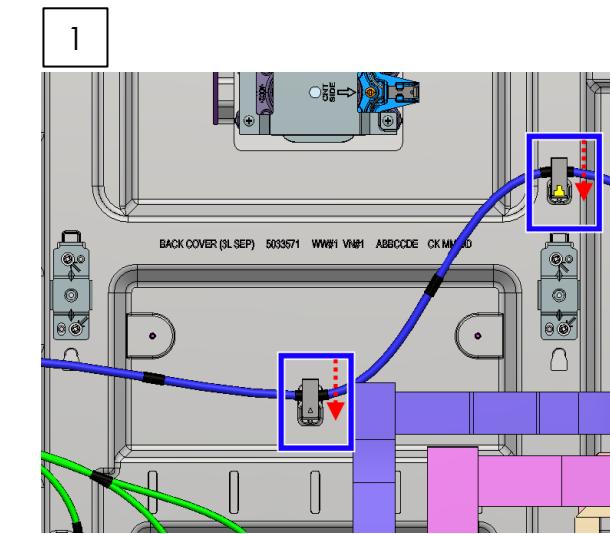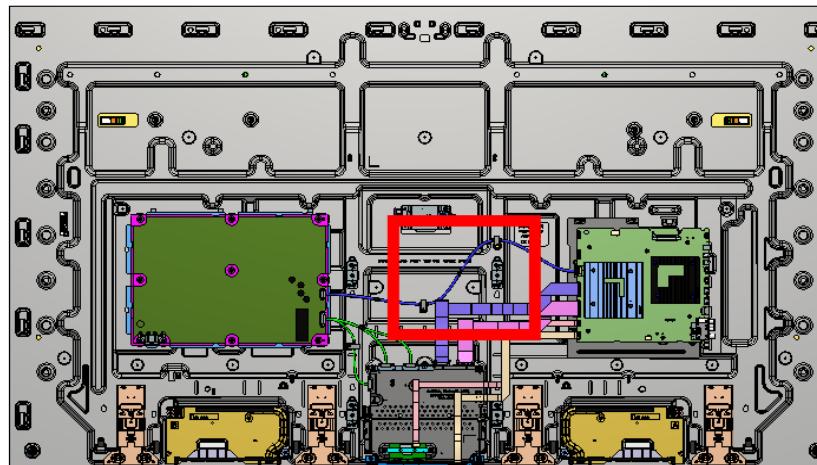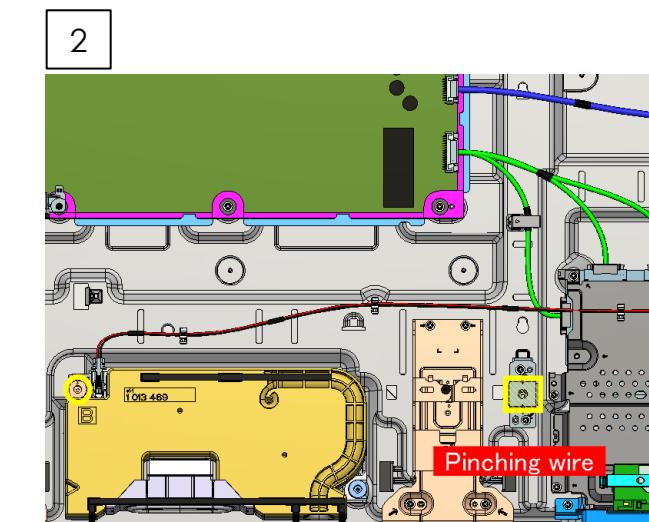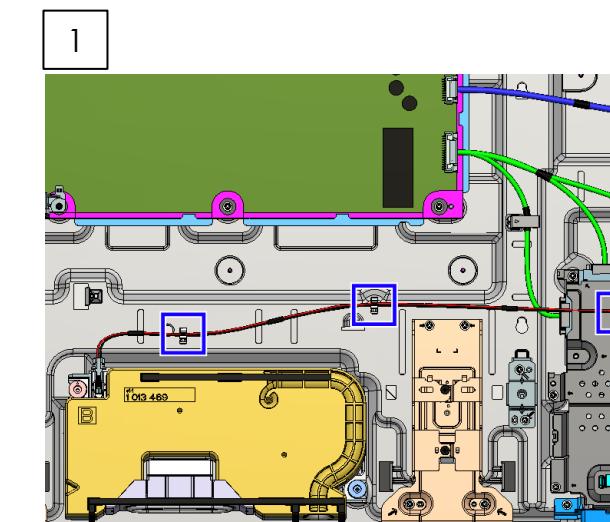SECTION 3: XR-77A80***3-3. WIRE DRESSING****WIRE DRESSING****WIRE DRESSING**

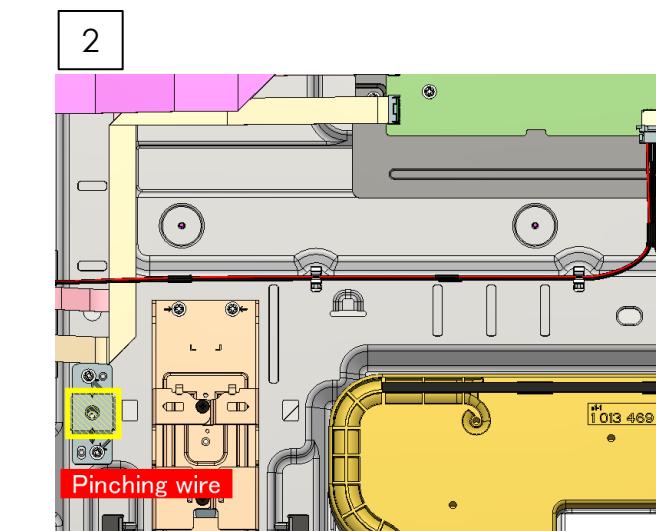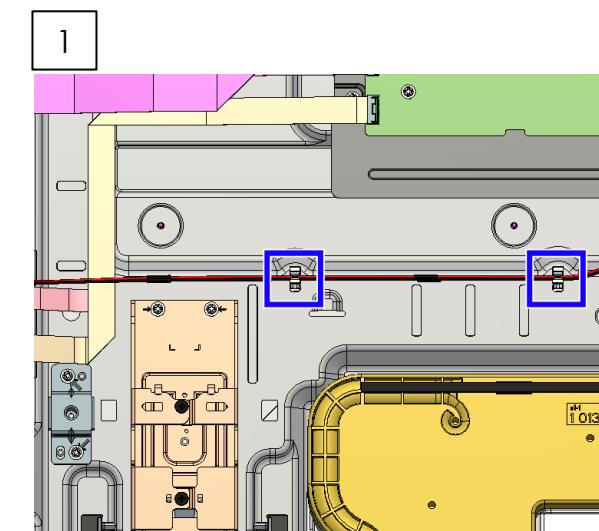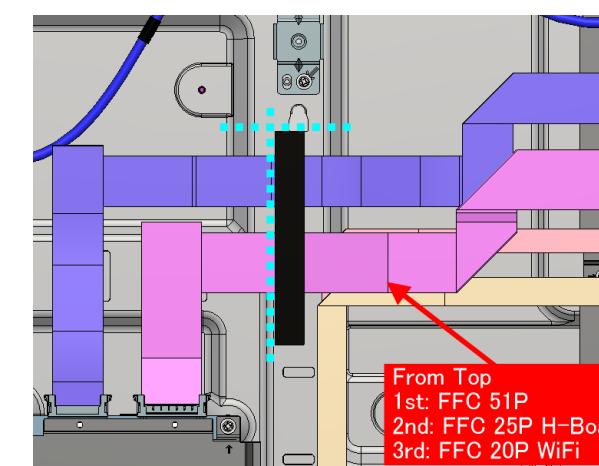
SECTION 3: XR-77A80***3-3. WIRE DRESSING**WIRE DRESSINGTAPE

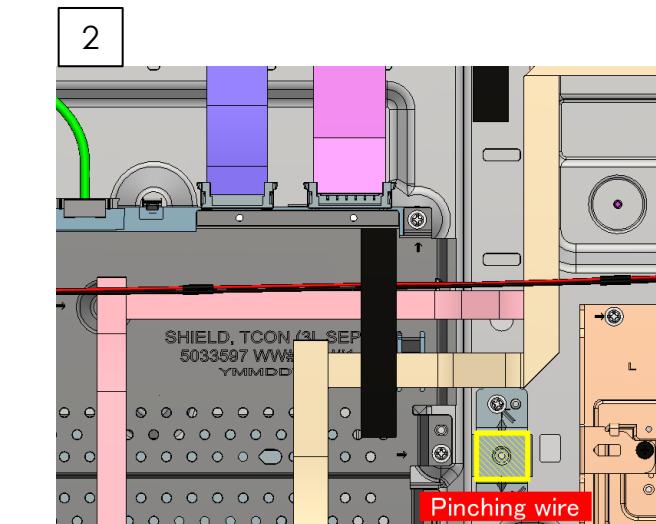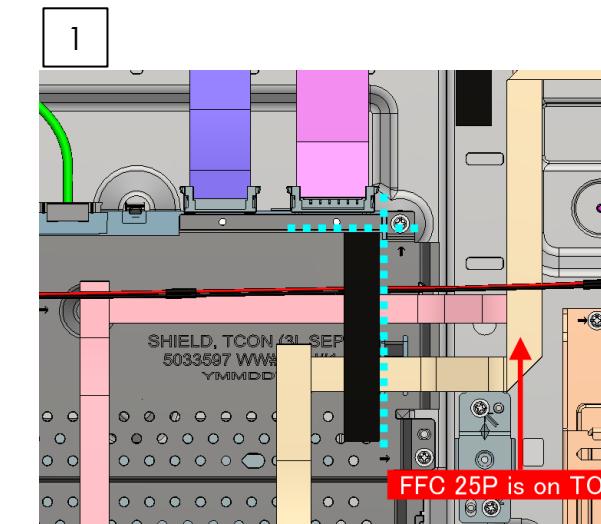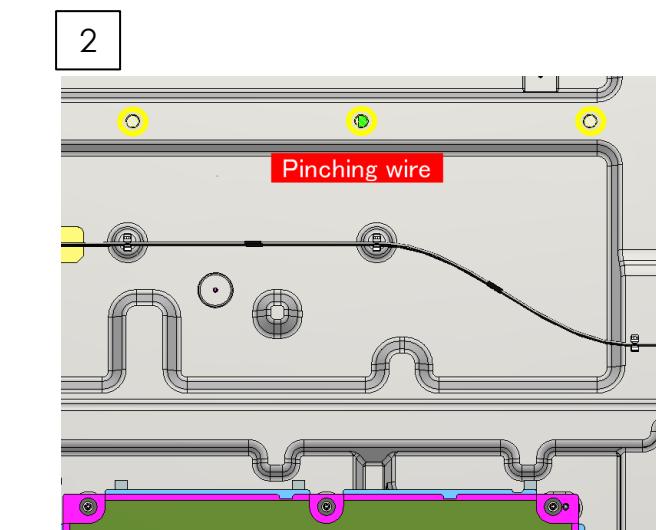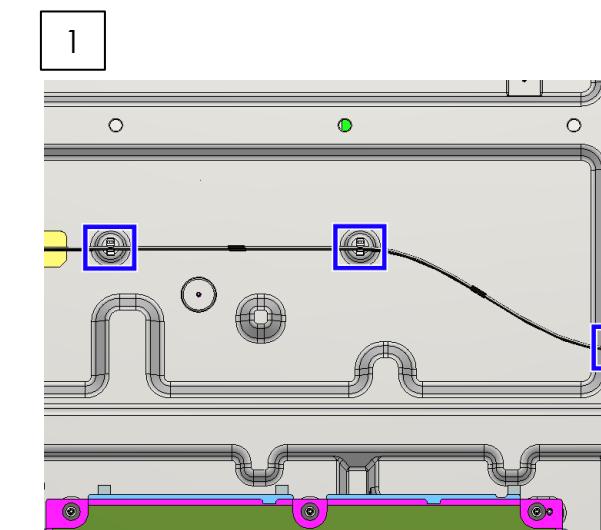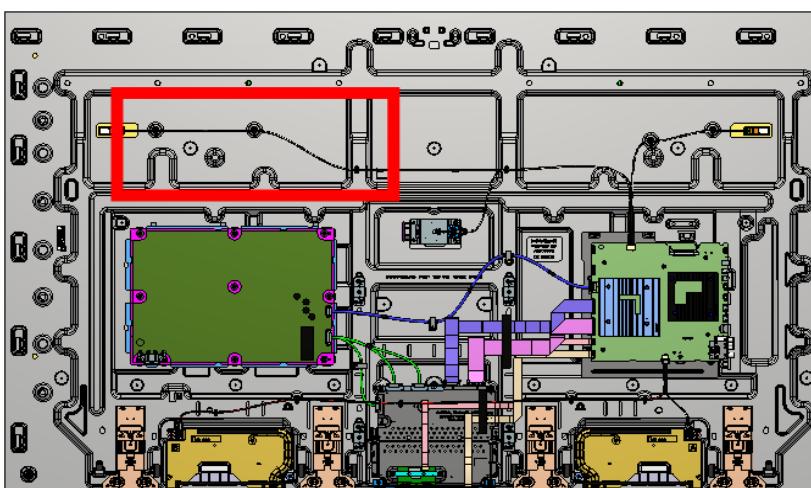SECTION 3: XR-77A80***3-3. WIRE DRESSING****TAPE****WIRE DRESSING**

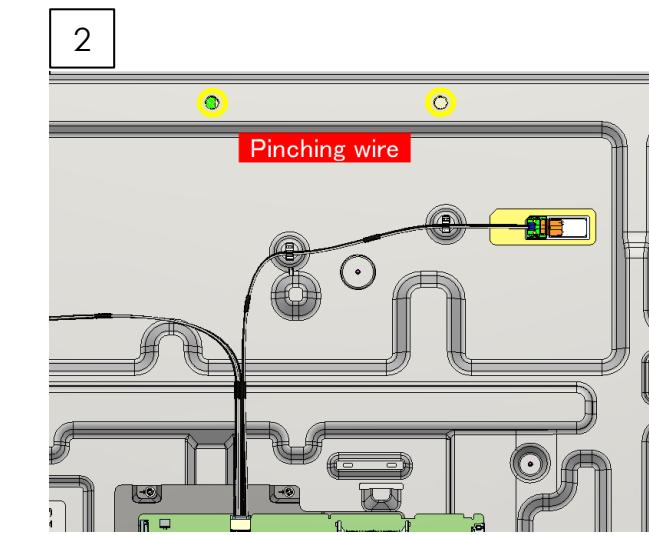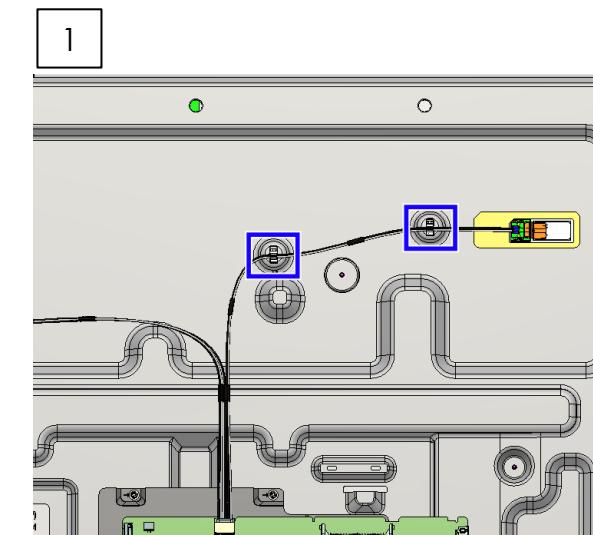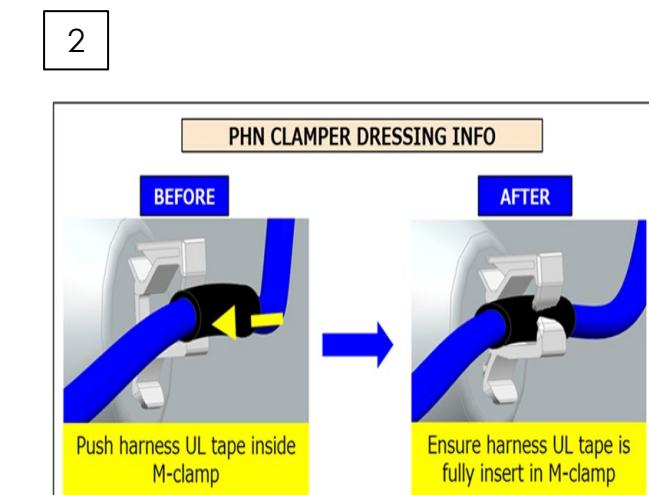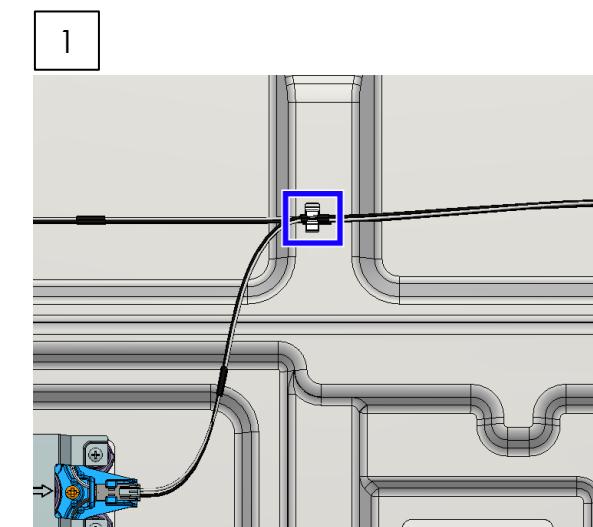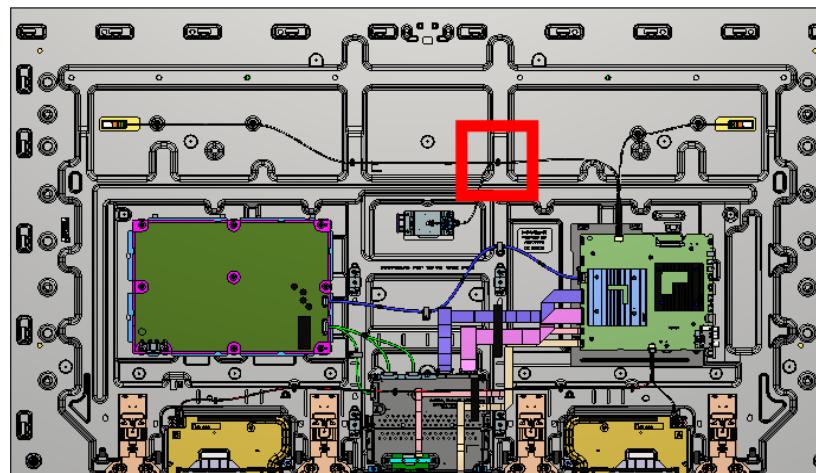SECTION 3: XR-77A80***3-3. WIRE DRESSING****WIRE CRESSING****WIRE DRESSING**

SECTION 3: XR-77A80***3-3. WIRE DRESSING**INFORMATION


Keep harness away from inhibit area.

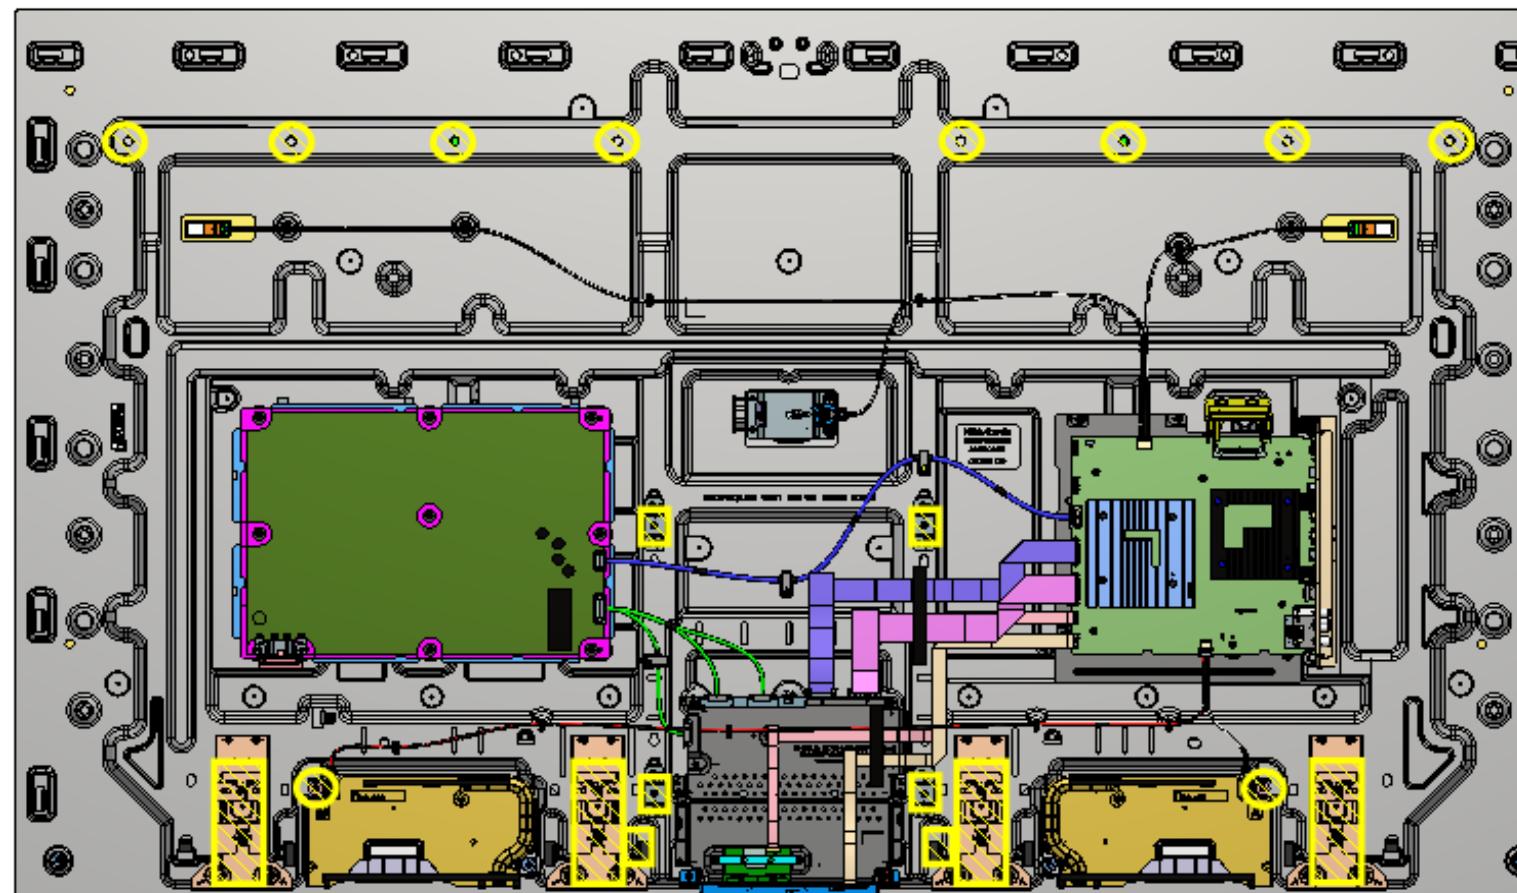

SECTION 3: XR-77A80***3-4. EXPLODED VIEW AND PART LIST**


- Place the TV set facing downwards on a stable, level surface before disassembly and assembly of parts.
-  and shaded parts are critical for safety. Replace only with part number specified.
-  Parts contain confidential information. Strictly follow the instruction whenever the components are repaired and/or replaced

- \\ (*) Parts are not stocked since they are seldom required for routine service. Some delays should be anticipated when ordering these components.
- \\ Picture provided in this section might have slight difference from the actual sets.
- \\ The reference number beside the part indicates the disassembly sequence.
- \\ Remove screws before disassembly. Unplug connectors before disassembly

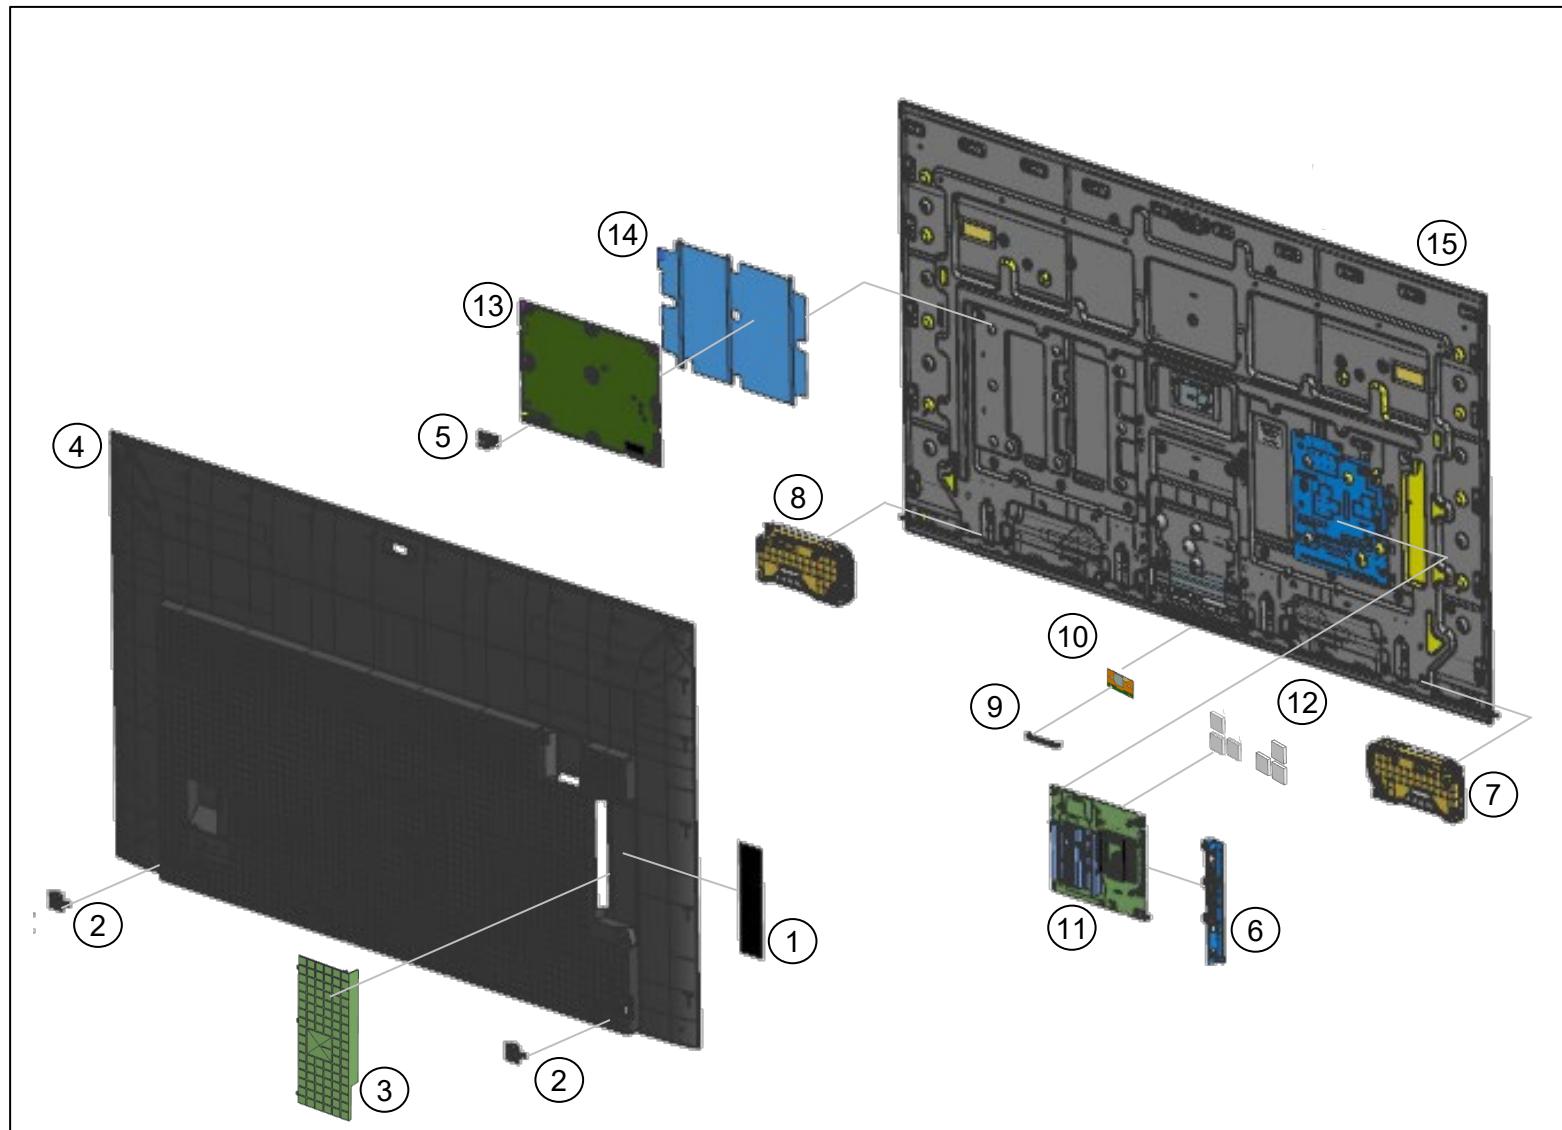

Stand



(16) (17)

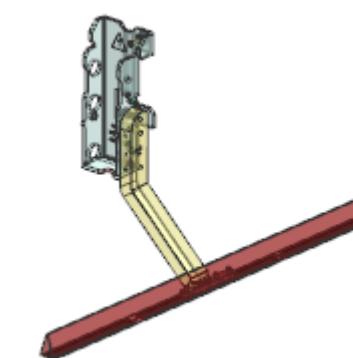


SECTION 3: XR-77A80***3-4. EXPLODED VIEW AND PART LIST****SET PART LIST**

REF. NO	PART NO.	DESCRIPTION	XR-77A80K	XR-77A80CK	XR-77A80L	XR-77A80CL
			UCM	UC2	UCM	UC2
1	5-039-876-01	LABEL, SIDE TERMINAL HP (TGR)	•	•	n/a	n/a
2	5-033-671-01	BTM COVER BARE (COM SEP)	•	•	•	•
3	5-033-669-01	TERMINAL COVER (COM SEP)	•	•	•	•
⚠ 4	5-036-379-04	REAR COVER (3L SEP) A	•	•	•	•
5	5-023-743-01	BRACKET, AC INLET (C18)	•	•	•	•
6	5-039-955-11	BRACKET SIDE (BNN) A	•	•	•	•
7	1-013-469-11	SP-BOX ASSY,FY22 W40L-A	•	•	•	•
8	1-013-469-21	SP-BOX ASSY,FY22 W40L-B	•	•	•	•
9	5-009-258-22	BRACKET, WIFI(BNN)	•	•	•	•
🔒 10	1-005-419-14	WLAN/BT MODULE(11AC)	•	•	•	•
🔒 11	A-5042-836-A	COMPL_SVC_BM5STY_UC_FS_77	•	•	n/a	n/a
🔒 11	A-5056-937-A	COMPL_SVC_BM5STY_FS2_77_UCM	n/a	n/a	•	•
12	4-457-451-12	SHEET, THERMAL (BAF)	•	•	•	•
⚠ 13	1-013-510-11	G26-STATIC CONVERTER (TV)	•	•	n/a	n/a
⚠ 13	1-013-510-21	G26C-STATIC CONVERTER (TV)	n/a	n/a	•	•
⚠ 14	5-035-921-11	SHEET, INSULATION (3L SEP) A	•	•	•	•
⚠ 15	A-5044-489-A	P-MOD (YDCM077UNG13)(SVC)	•	n/a	n/a	n/a
⚠ 15	A-5058-198-A	P-MOD (YDCM077UNG13)(SVC)	n/a	n/a	•	n/a
16	5-034-385-02	STAND L (3L SEP) A	•	•	•	•
17	5-034-386-02	STAND R (3L SEP) A	•	•	•	•

Caution : When replacing the power supply board, please reuse
BRACKET, AC INLET (C18).

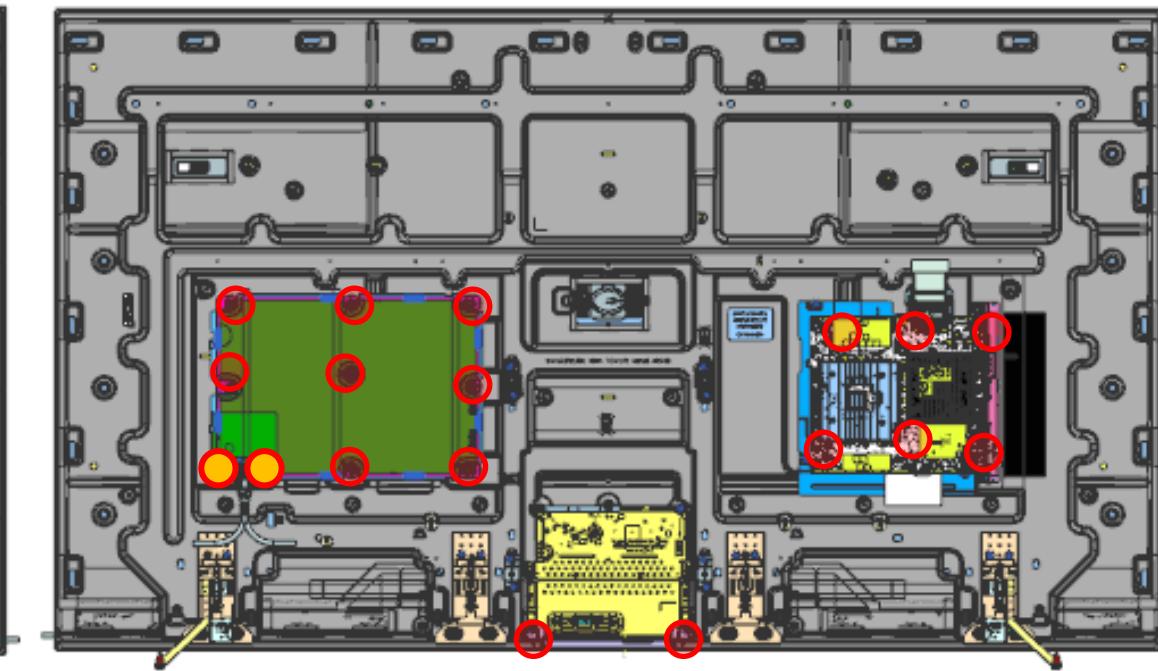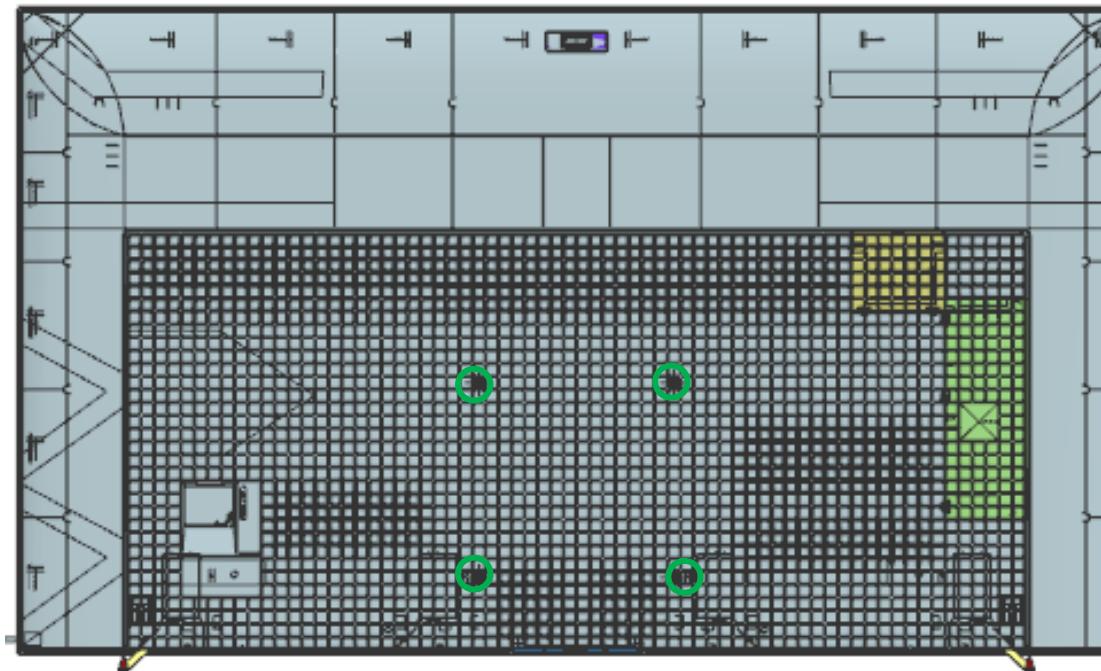SECTION 3: XR-77A80***3-4. EXPLODED VIEW AND PART LIST****SCREW**

REMARKS	P/N	DESCRIPTION	QTY	TORQUE (N.m)
○	4-472-518-11	SCREW, +PSW M3X6	16	0.4 ± 0.05
●	7-682-948-09	SCREW, +PSW 3X8	2	0.4 ± 0.05
○	5-015-521-01	+PSW M6*16 W14	4	1.2 ± 0.1

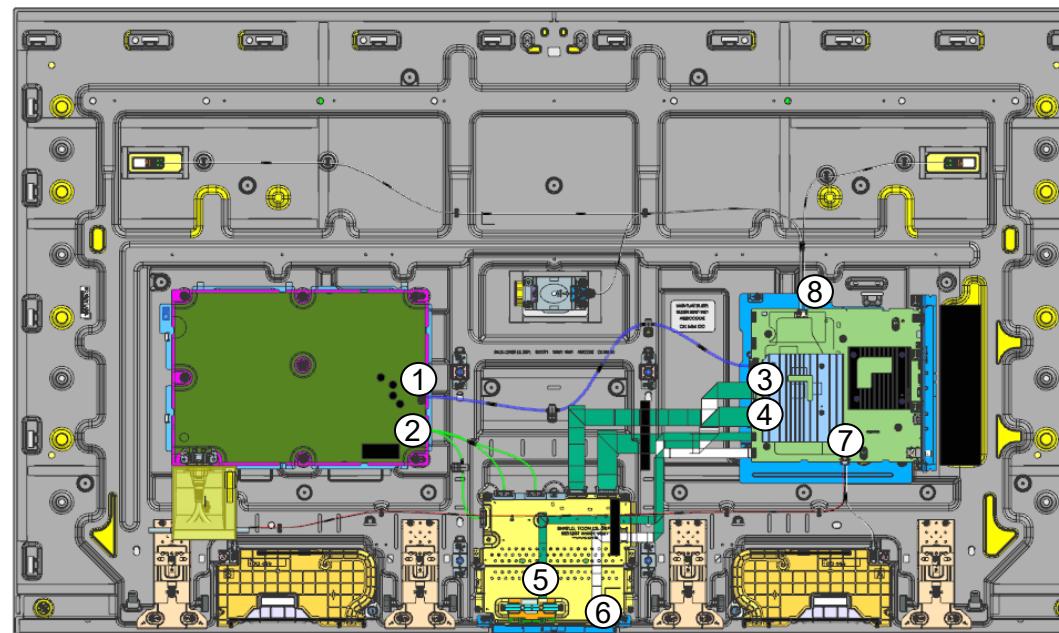SECTION 3: XR-77A80***CONNECTOR****3-4. EXPLODED VIEW AND PART LIST**

REF. NO	PART NO.	DESCRIPTION	REMARKS
1	1-014-674-11	CONNECTOR ASSY 20P	CN6401(G26)-CN1700(BM5STY)(1)
2	1-014-675-11	CONNECTOR ASSY 30P	CN6601(G26)-CN6(TCON)-CN8(TCON)-CN14(TCON)(1)
3	1-014-682-11	FLEXIBLE FLAT CABLE 41P	CN4201(BM5STY)-CN7(TCON)(1)
4	1-014-684-11	FLEXIBLE FLAT CABLE 51P	CN4200(BM5STY)-CN5(TCON)(1)
5	1-014-676-11	FLEXIBLE FLAT CABLE 20P	CN3801(BM5STY)-J1(WIFI/BT)(1)
6	1-014-678-11	FLEXIBLE FLAT CABLE 25P	CN1200(BM5STY)-CN102(HY1)(1)
7	1-014-672-11	CONNECTOR ASSY 4P (SP)	CN6600(BM5STY)-SP(1)
8	1-014-673-11	CONNECTOR ASSY 6P	CN6601(BM5STY)-PZ-EXCITER(1)

SECTION 3: XR-77A80***3-4. EXPLODED VIEW AND PART LIST****OTHER PARTS**

PART NO.	DESCRIPTION	XR-77A80K	XR-77A80CK	XR-77A80L	XR-77A80CL	REMARKS
		UCM	UC2	UCM	UC2	
4-535-064-62	ASSY,FALL LOCK,BELT LL	•	•	•	•	-
5-009-031-02	CLAMPER,CABLE S(BNN)	•	•	•	•	-
1-013-691-23	REMOTE COMMANDER (RMF-TX800U)	•	n/a	n/a	n/a	-
1-013-685-22	REMOTE COMMANDER (RMF-TX900U)	n/a	•	n/a	n/a	-
1-016-940-21	REMOTE COMMANDER (RMF-TX810U)	n/a	n/a	•	n/a	-
1-016-949-21	REMOTE COMMANDER (RMF-TX910U)	n/a	n/a	n/a	•	-
*5-037-357-11	REFERENCE GUIDE	•	•	n/a	n/a	-
*5-048-119-11	REFERENCE GUIDE	n/a	n/a	•	•	-
*5-048-122-11	SETUP GUIDE	n/a	n/a	•	•	-
*5-040-671-11	SETUP GUIDE	•	•	n/a	n/a	-
⚠ 1-836-883-13	POWER-SUPPLY CORD	•	•	•	•	-
7-600-031-97	TAPE (3M 1350FB-1)15MMX66M BLK	•	•	•	•	-
5-009-861-02	VESA SPACER A (COM)	•	•	•	•	Screw extension for Fall Lock Belt and Wall Mount, Qty 1, refer setup Guide for details.


SECTION 4: XR-83A80***4-1. DISASSEMBLY AND REMOVAL CAUTION****Rear Cover****1. Release Screw**

Take out screws below to open the rear cover :

- SCREW M3X3.0 STEP (11pcs)
- SCREW, ORNAMENTAL M6X12 (4pcs)

**2. Release Side Hook**


- Location of hook and the quantity is 6pcs
- Note : Using Metal Shaft is **NG** when open the side hook ! Example like screwdriver

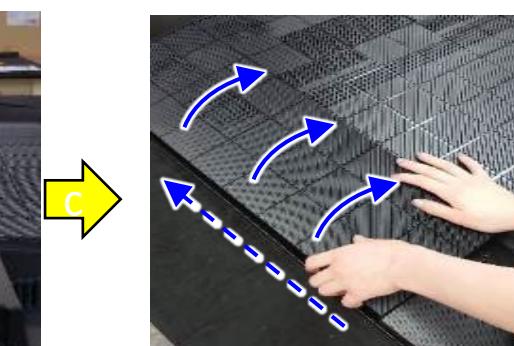

SECTION 4: XR-83A80***4-1. DISASSEMBLY AND REMOVAL CAUTION****Rear Cover****3. Release Bracket Hook**



Take out screws below to release the bracket hook:

- Location of hook and the quantity is 5pcs

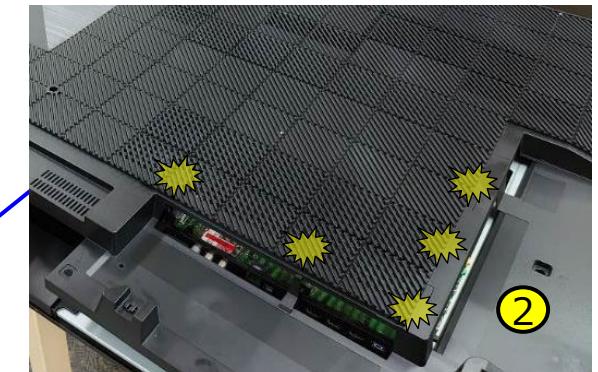**4. Release Top Hook**

When TV is in a rest condition

- Location of hook and the quantity is 10pcs

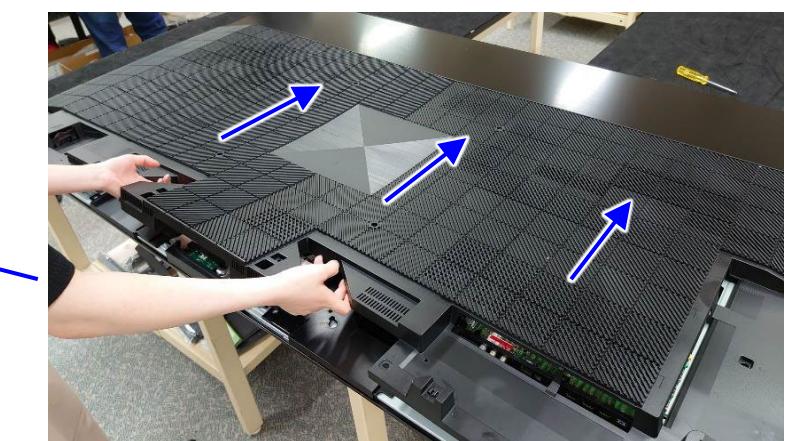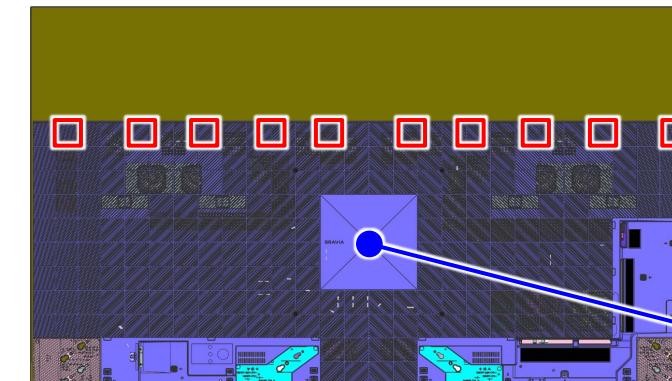

SECTION 4: XR-83A80***4-1. DISASSEMBLY AND REMOVAL CAUTION****Rear Cover****4. Release Top Hook**




When TV is standing



Location of hook and the quantity is 10pcs







- ✓ 1) Pull Rear Cover.
- ✓ 2) Push Rear Cover upwards to release top hooks.







✗ Pull Rear Cover to back side to remove.
(TOP HOOK will break)







Note : Support Panel by large size Cushion for front surface supporting (in order NOT to concentrate pushing force to display: Prevention of Front surface damage)



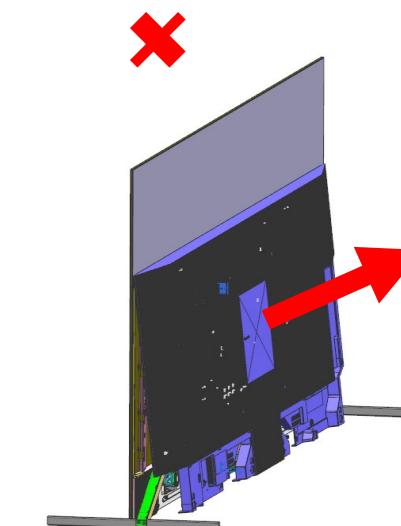
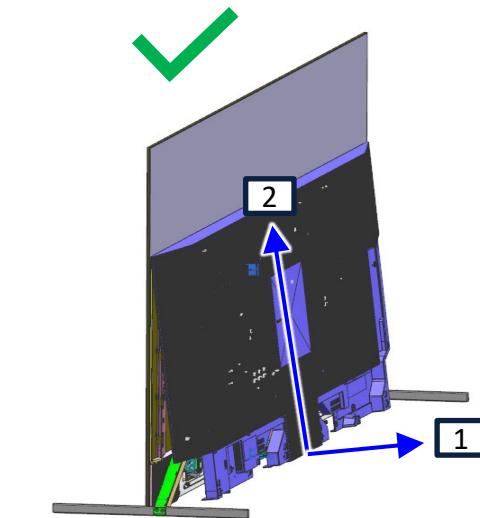
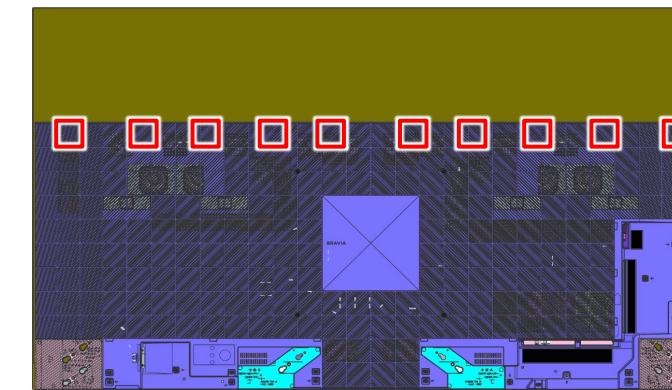


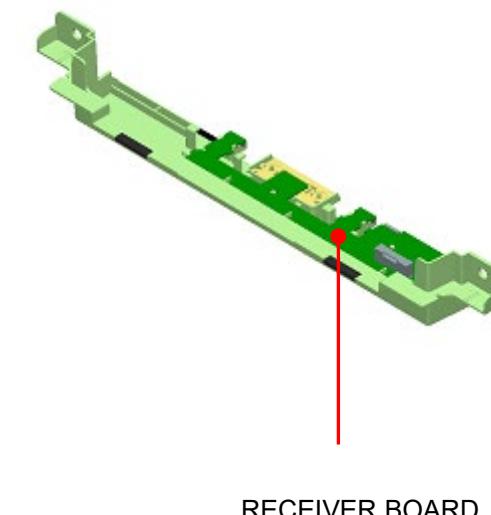
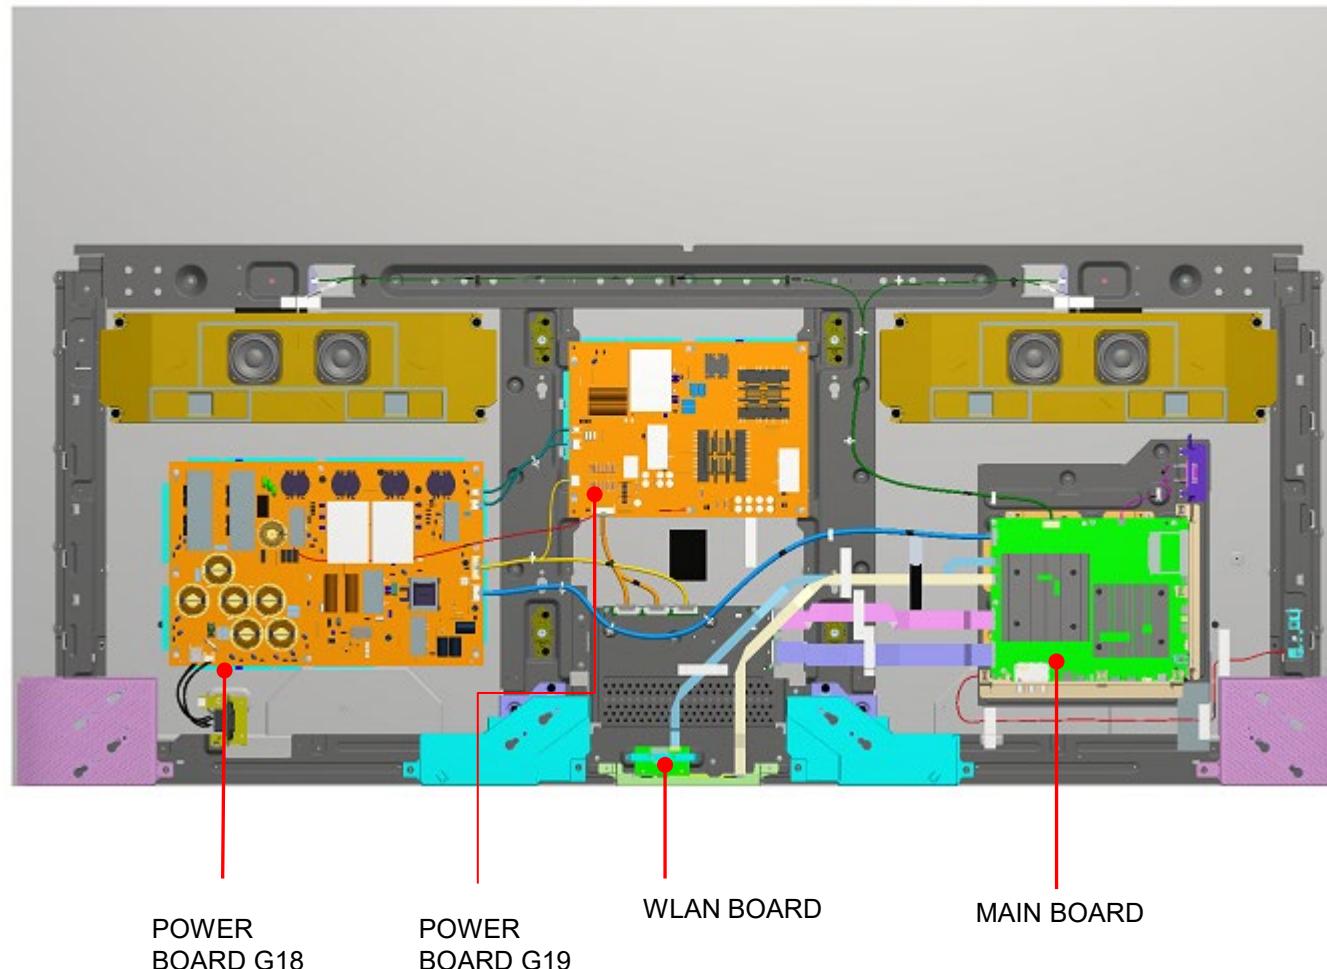
SECTION 4: XR-83A80***4-2. BOARD LOCATION**



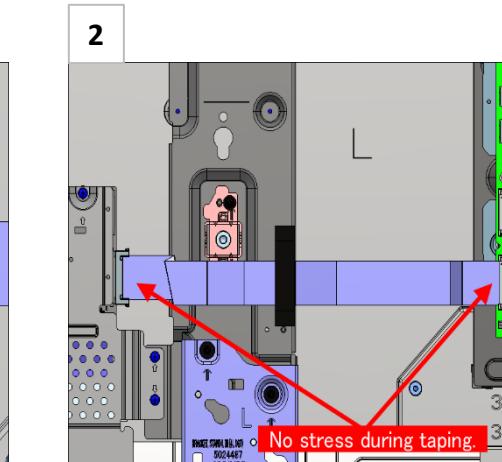
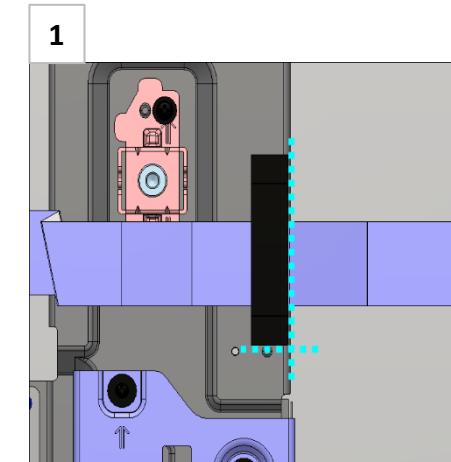
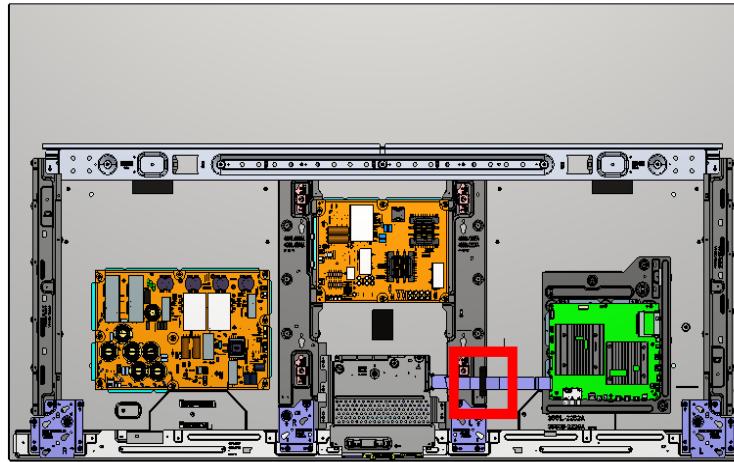
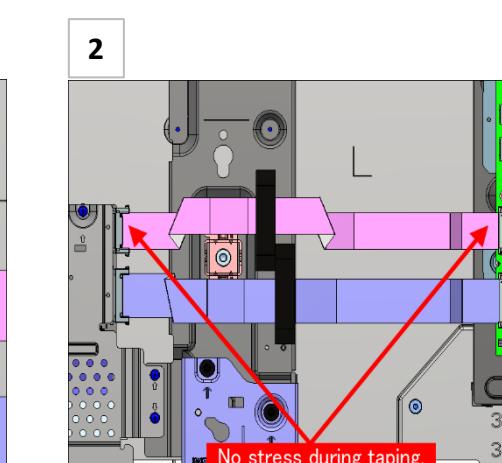
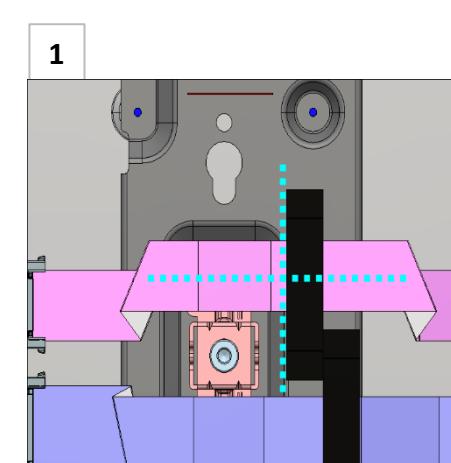
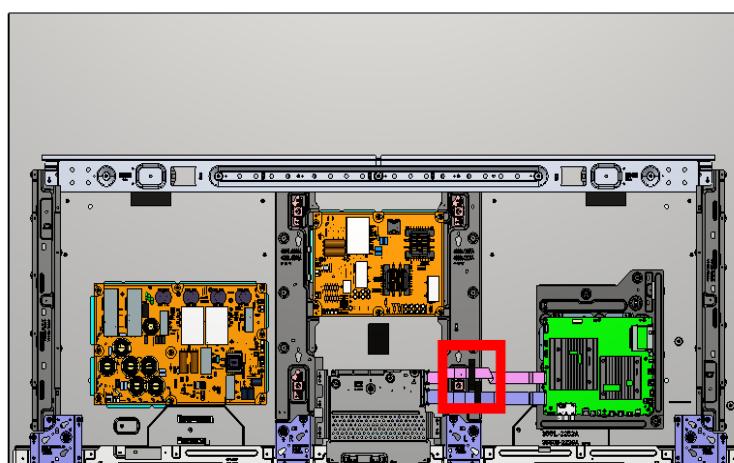
SECTION 4: XR-83A80***4-3. WIRE DRESSING**TapeTape

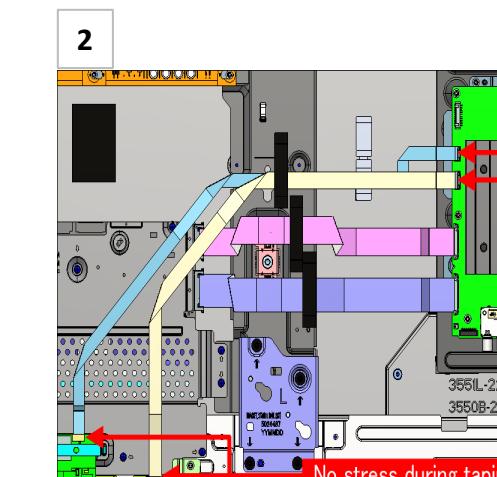
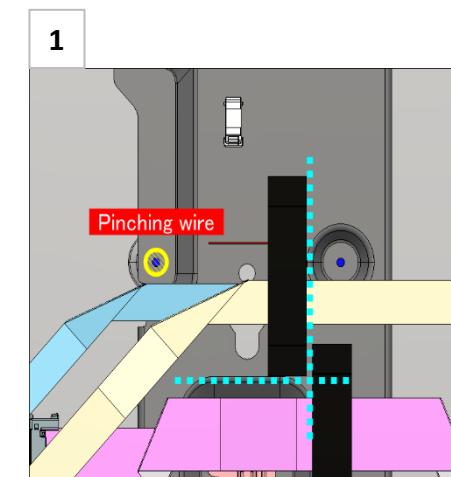
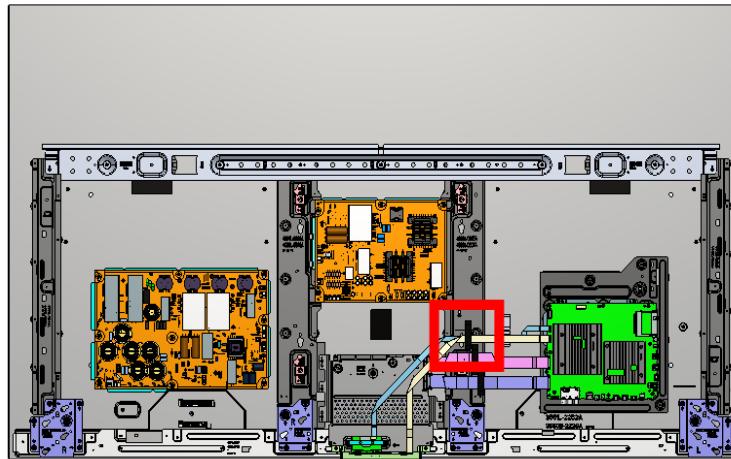
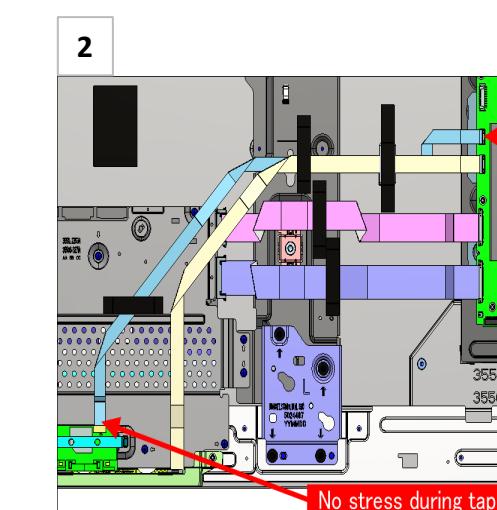
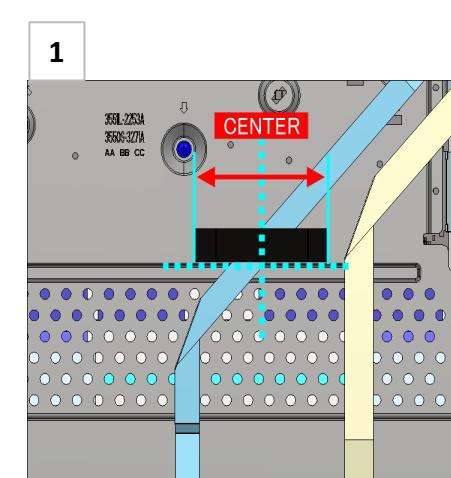
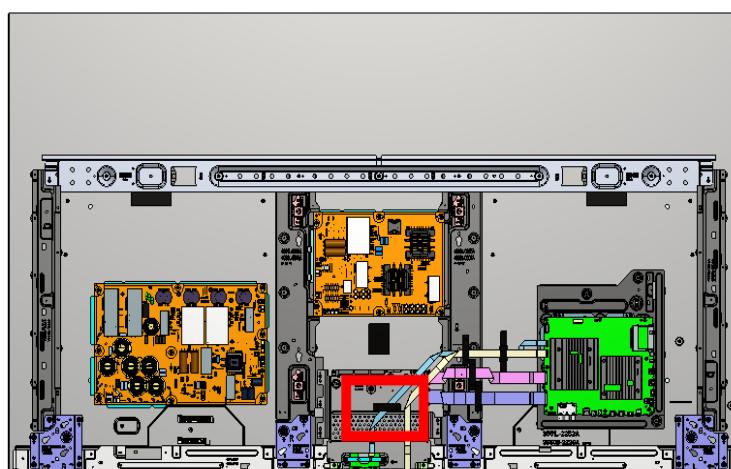
SECTION 4: XR-83A80***4-3. WIRE DRESSING**TapeTape


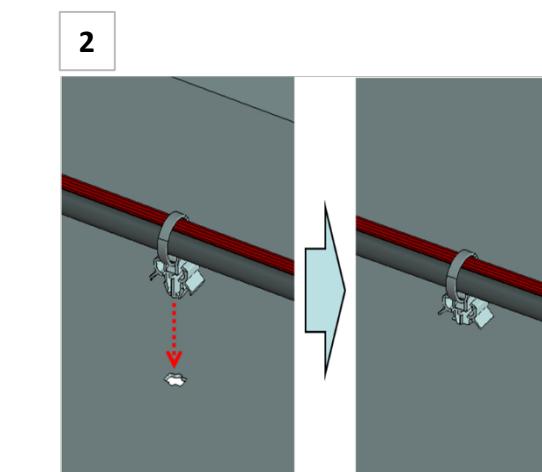
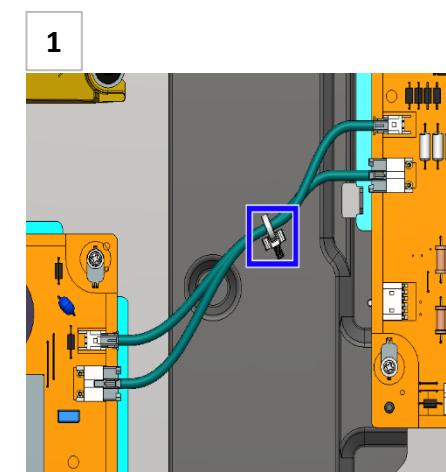
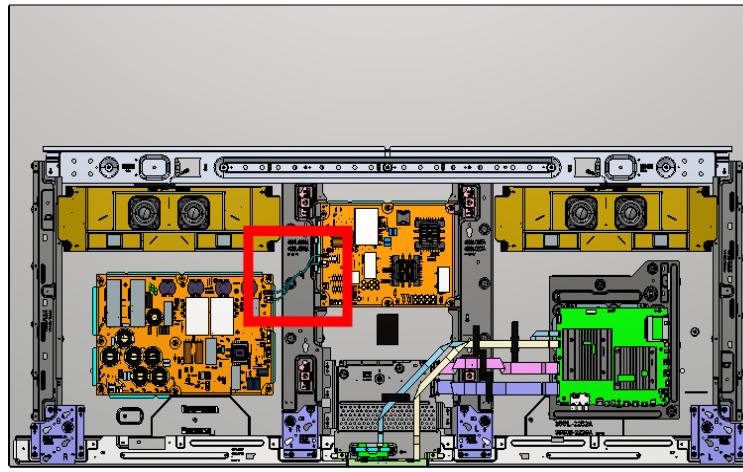
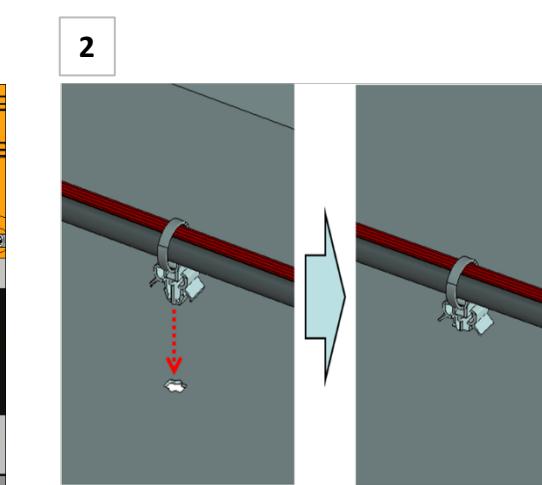
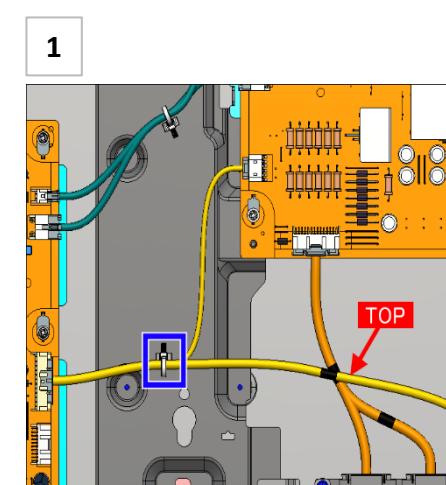
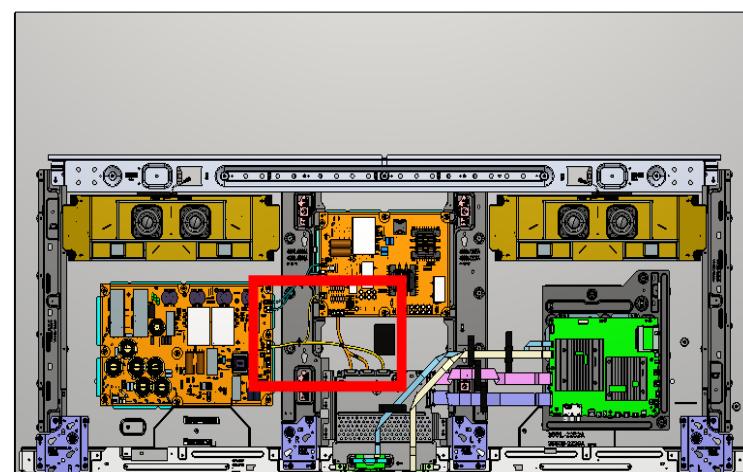
SECTION 4: XR-83A80***4-3. WIRE DRESSING**Wire DressingWire Dressing




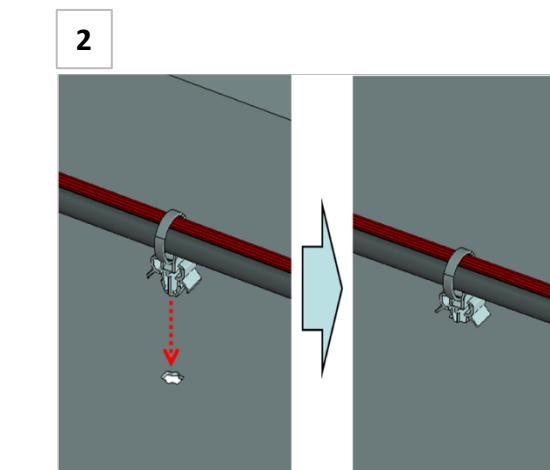
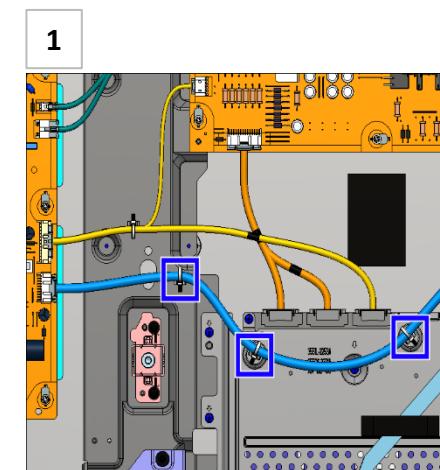
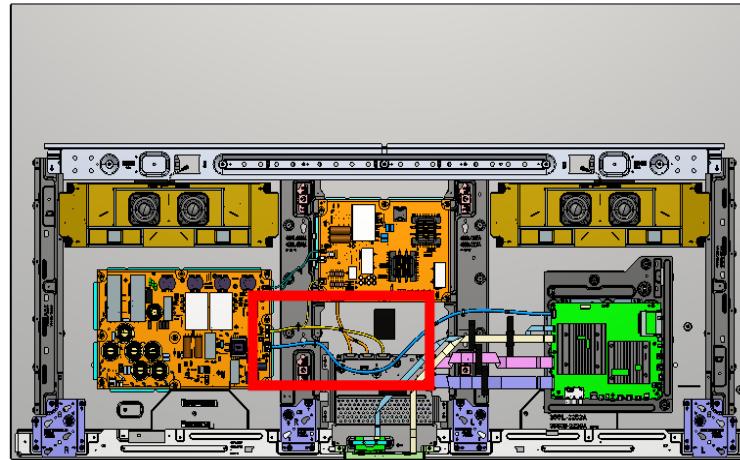
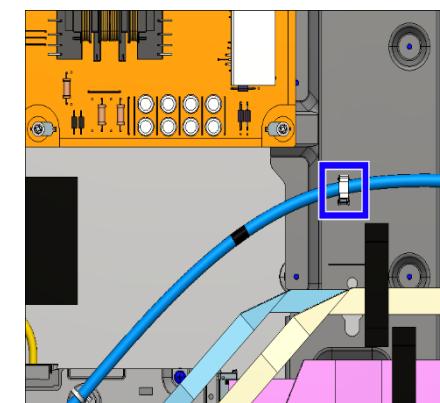
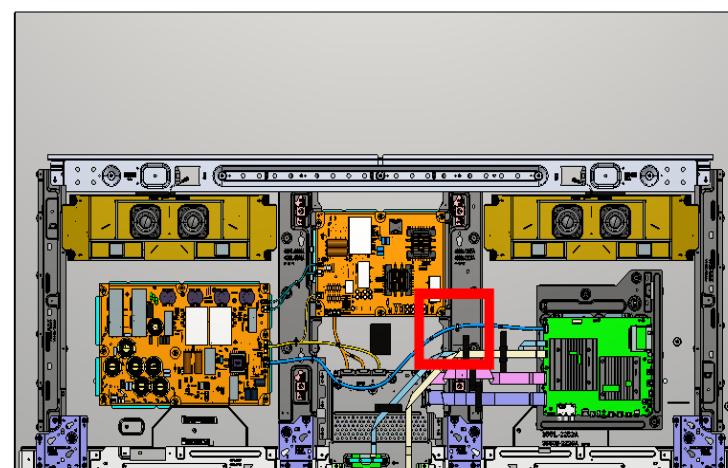
SECTION 4: XR-83A80***4-3. WIRE DRESSING**Wire DressingWire dressing



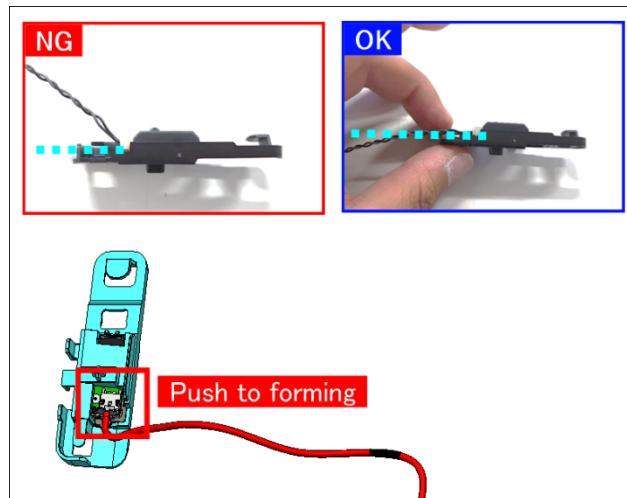
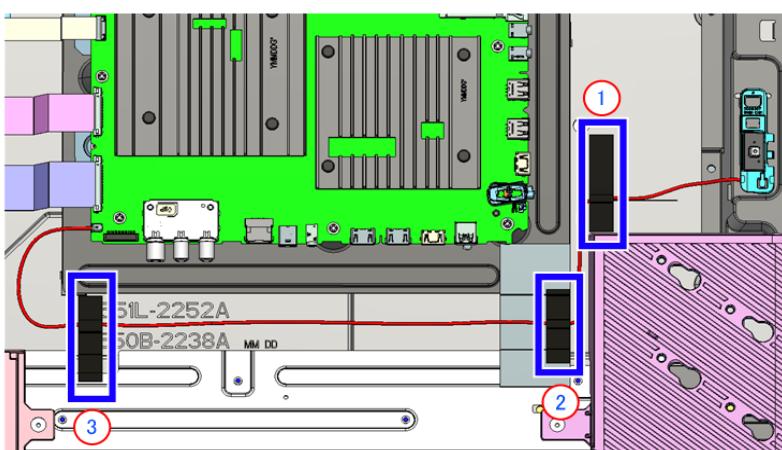
SECTION 4: XR-83A80***4-3. WIRE DRESSING**Wire DressingInformation**⟨Sequence Information⟩**

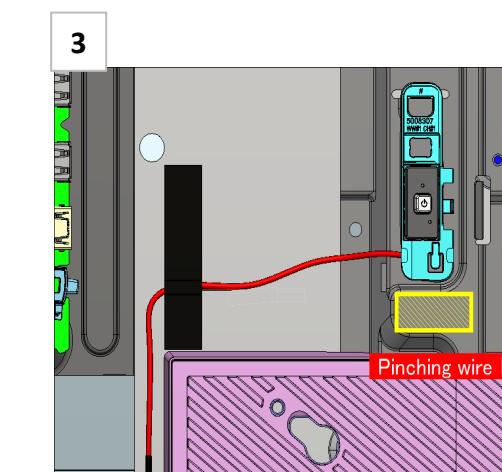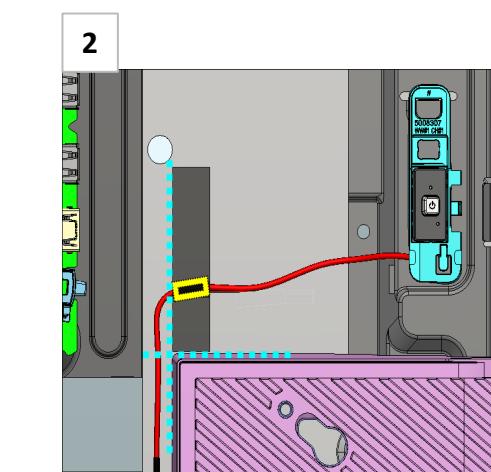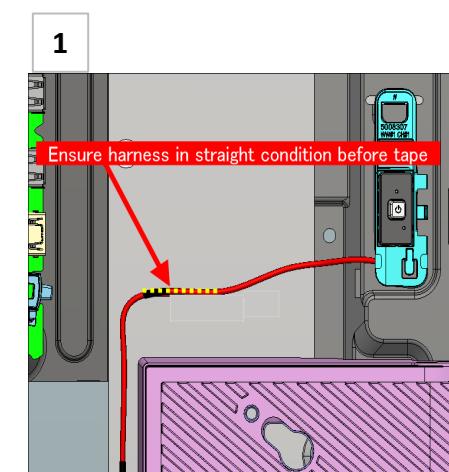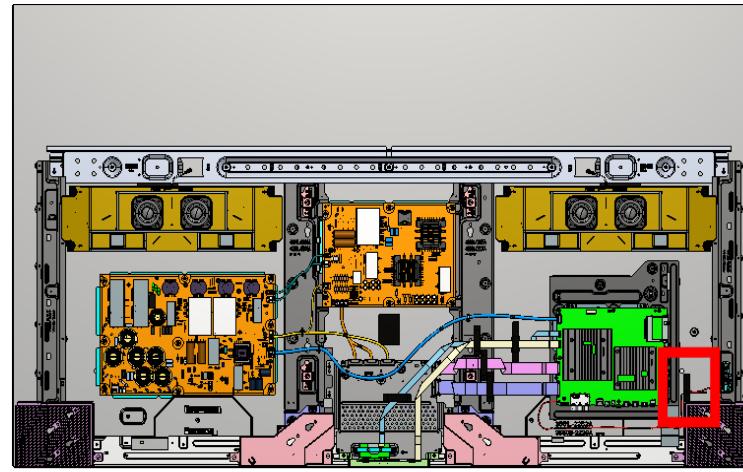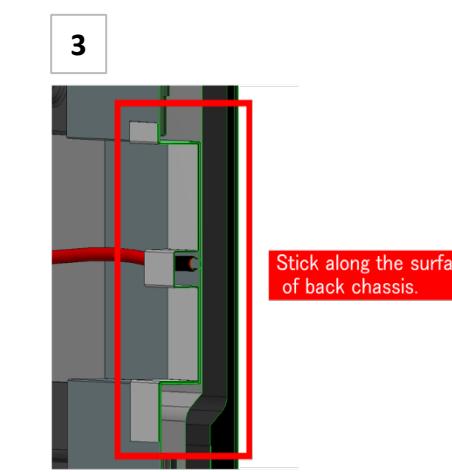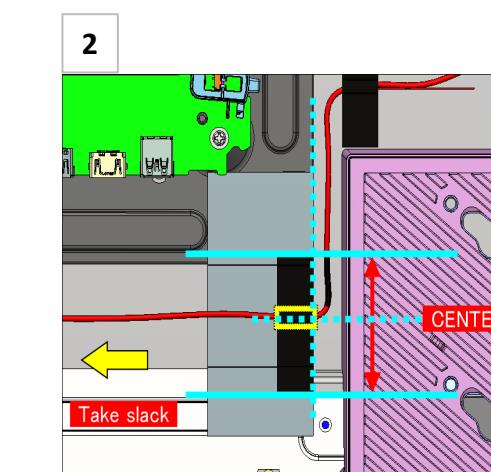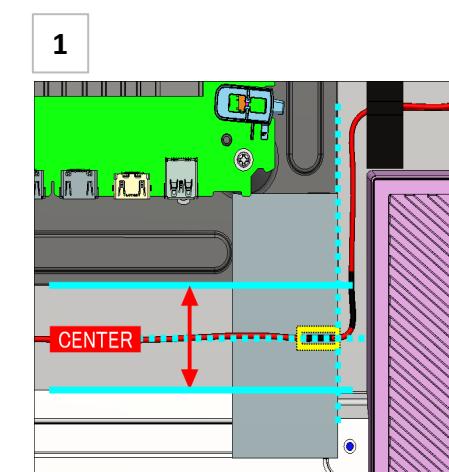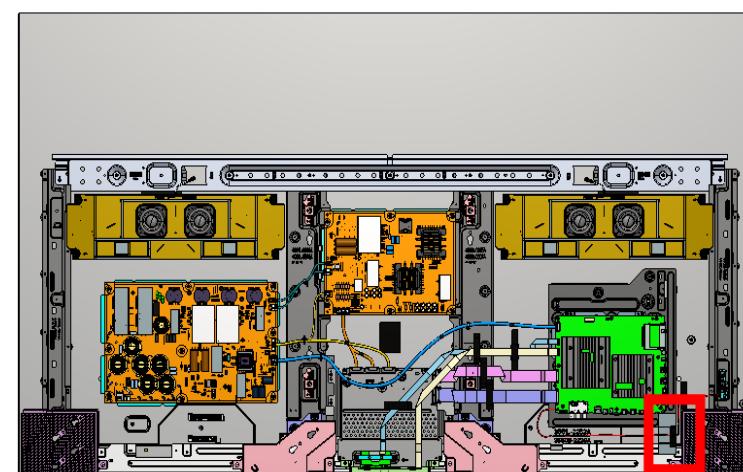SECTION 4: XR-83A80***4-3. WIRE DRESSING**TapeTape

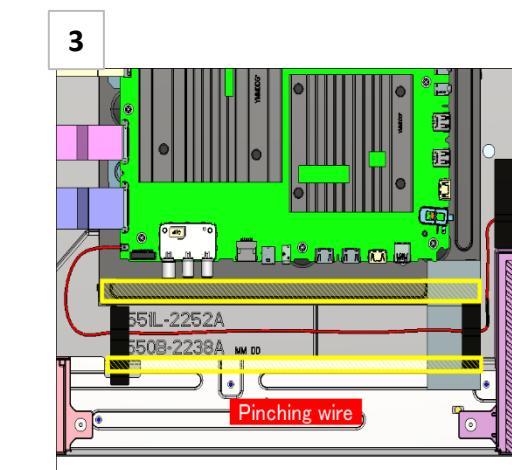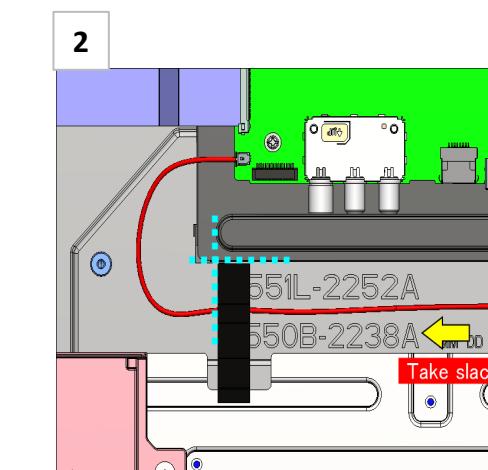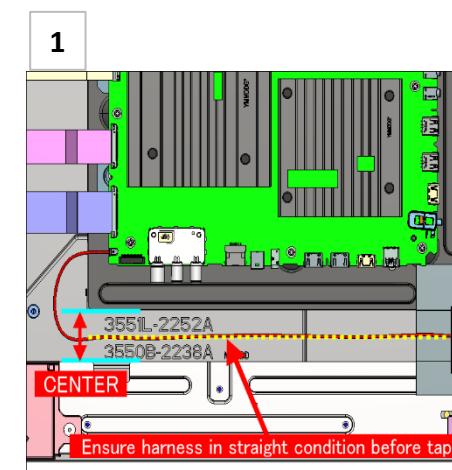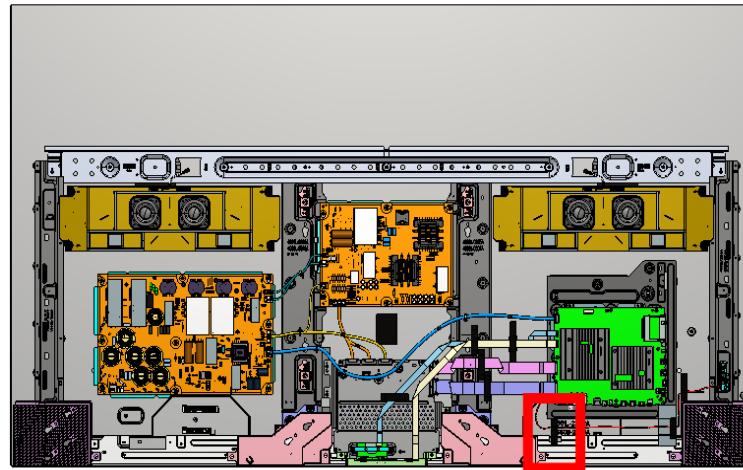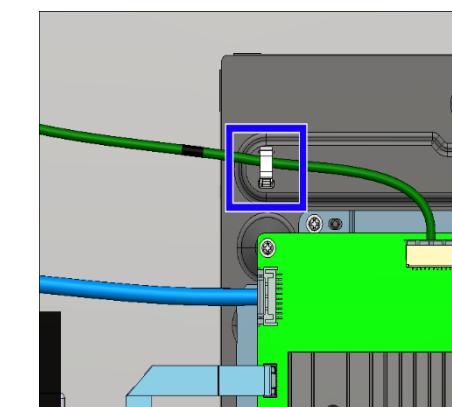
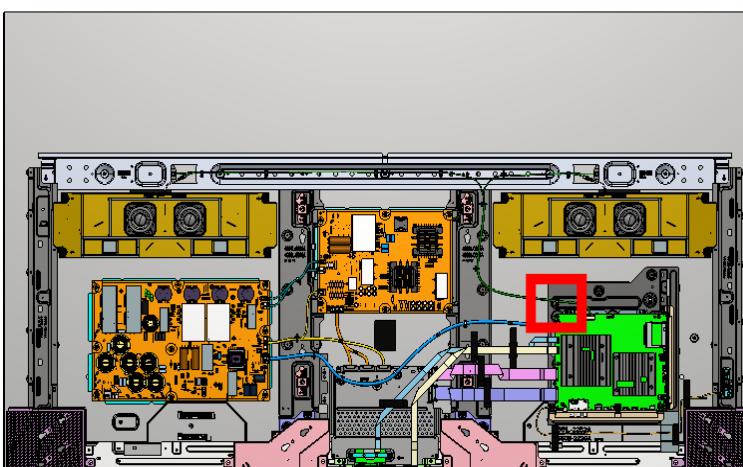
SECTION 4: XR-83A80***4-3. WIRE DRESSING**TapeWire Dressing

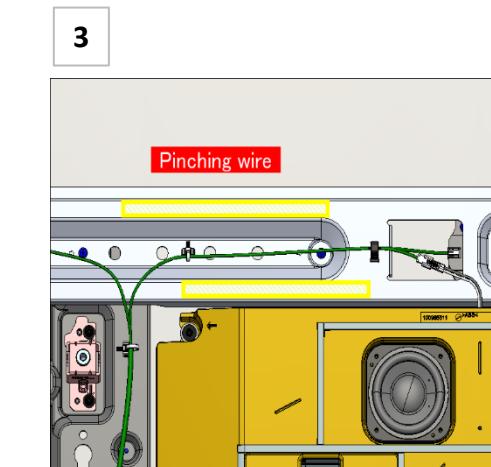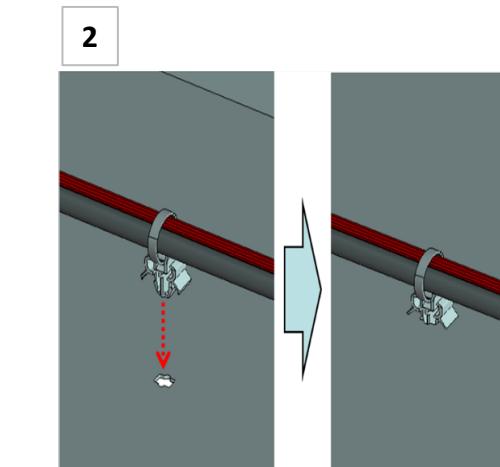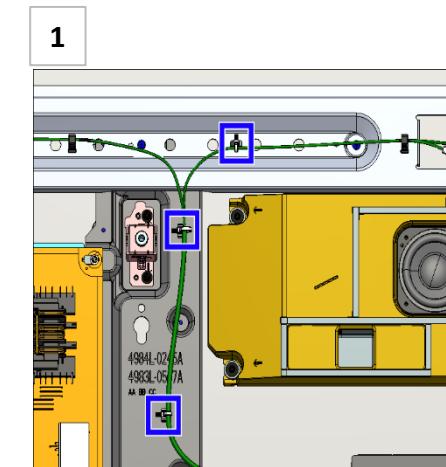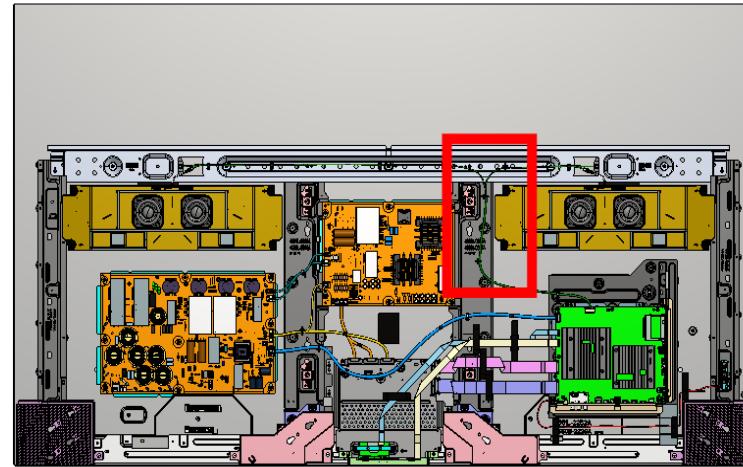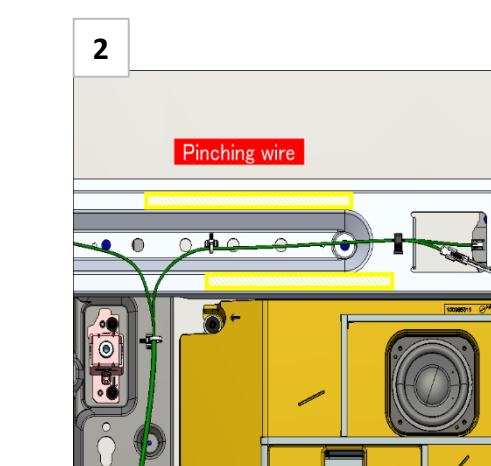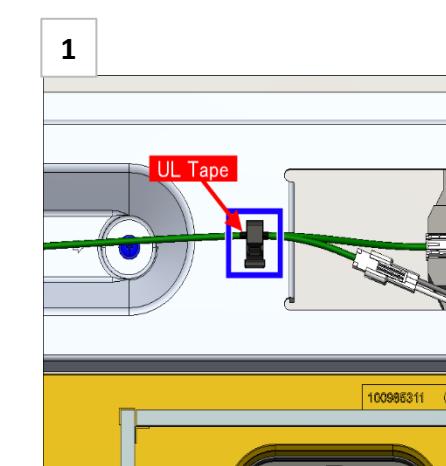
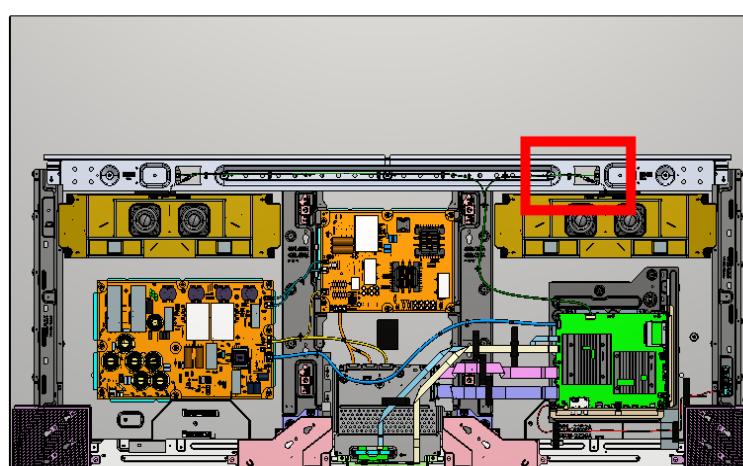
SECTION 4: XR-83A80***4-3. WIRE DRESSING**Wire DressingWire Dressing

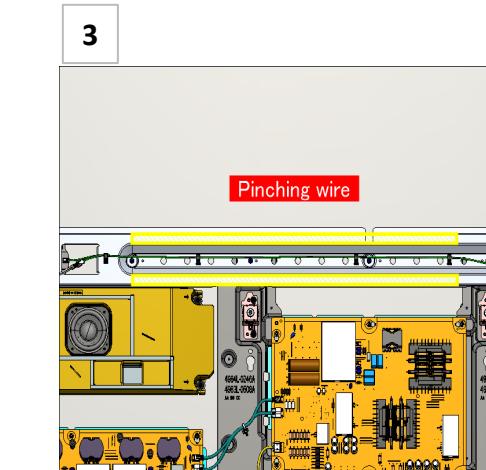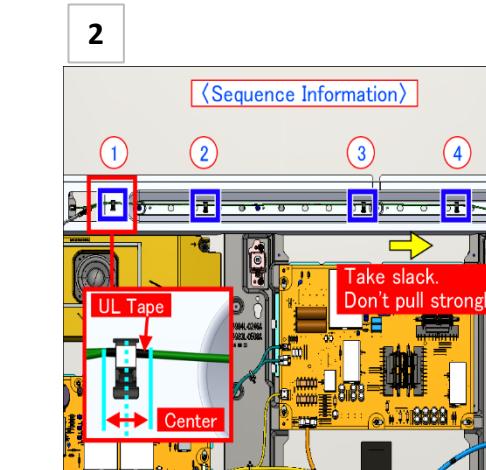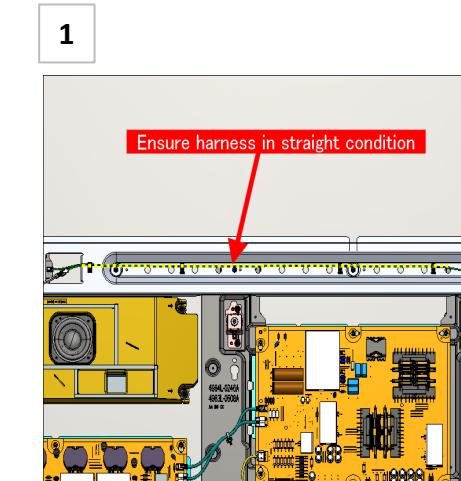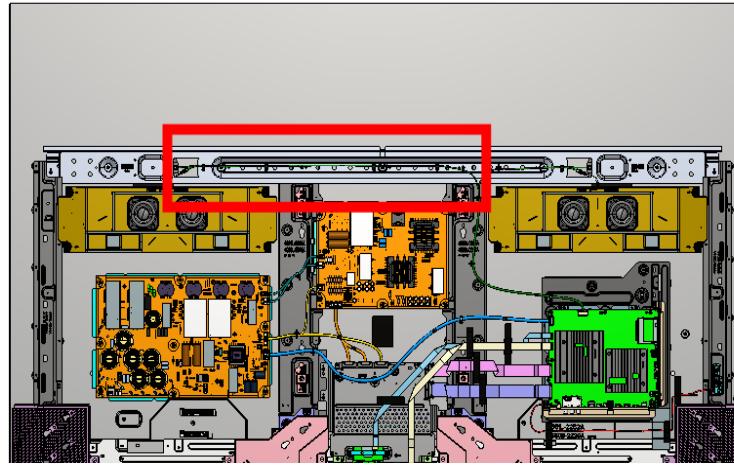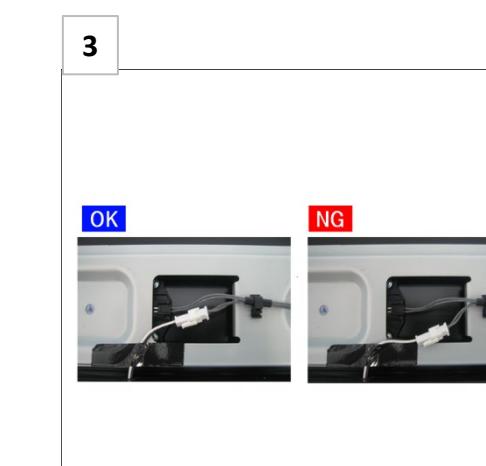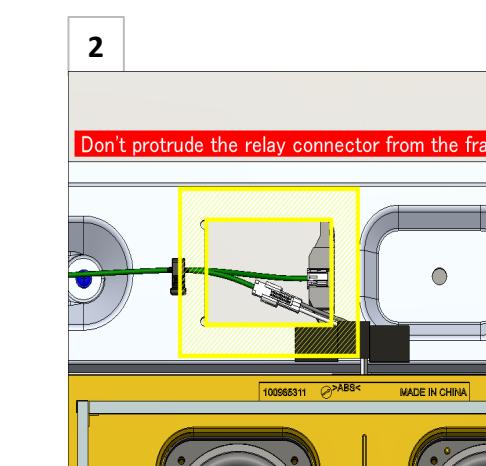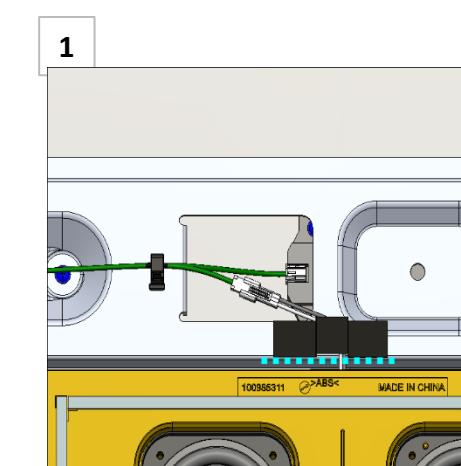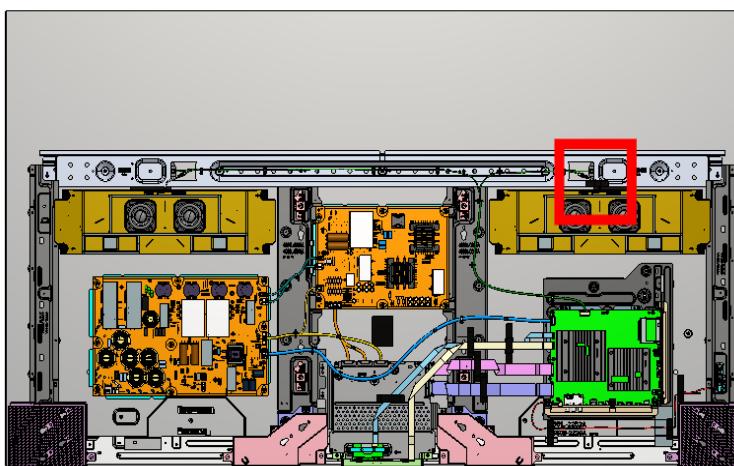SECTION 4: XR-83A80***4-3. WIRE DRESSING**Wire DressingTape

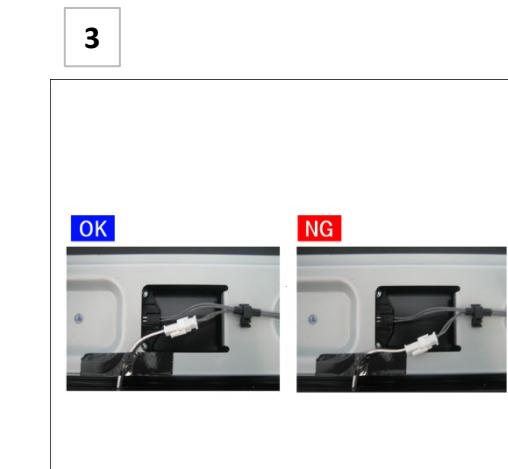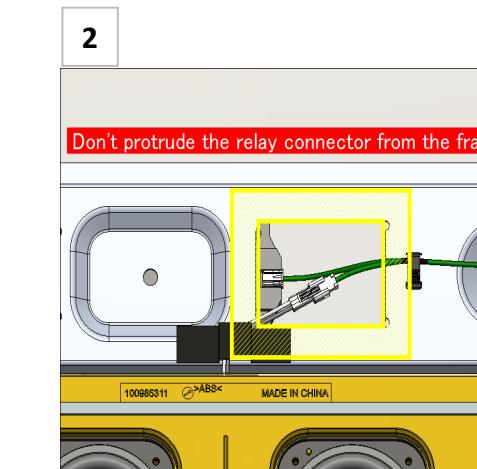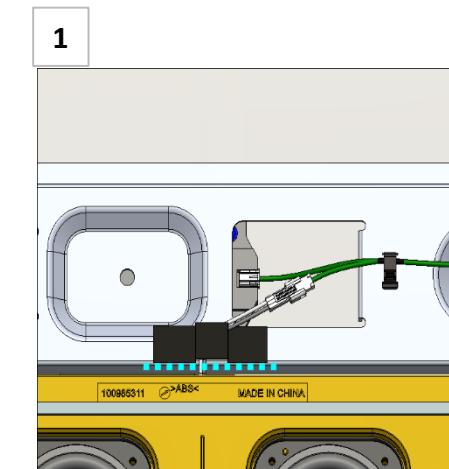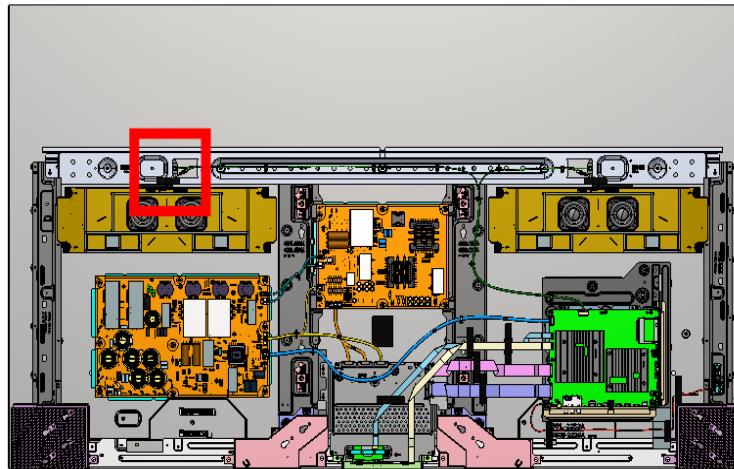SECTION 4: XR-83A80***4-3. WIRE DRESSING**Tape

Wire Dressing

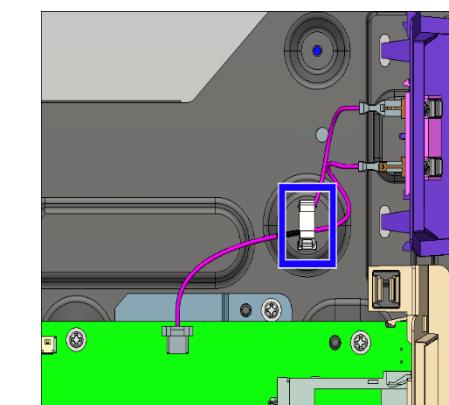
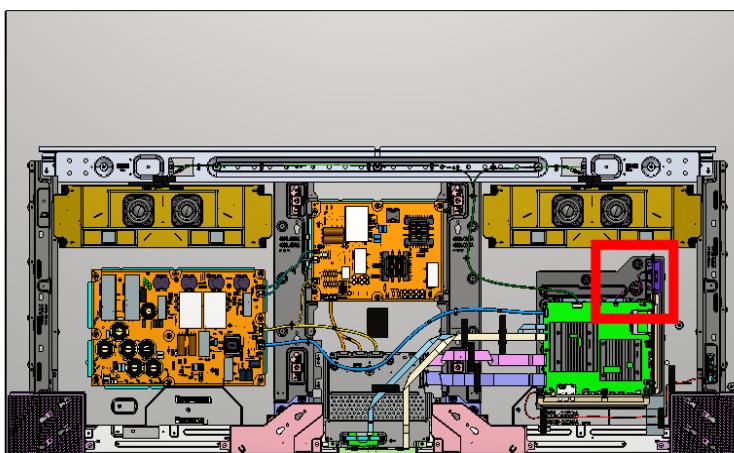


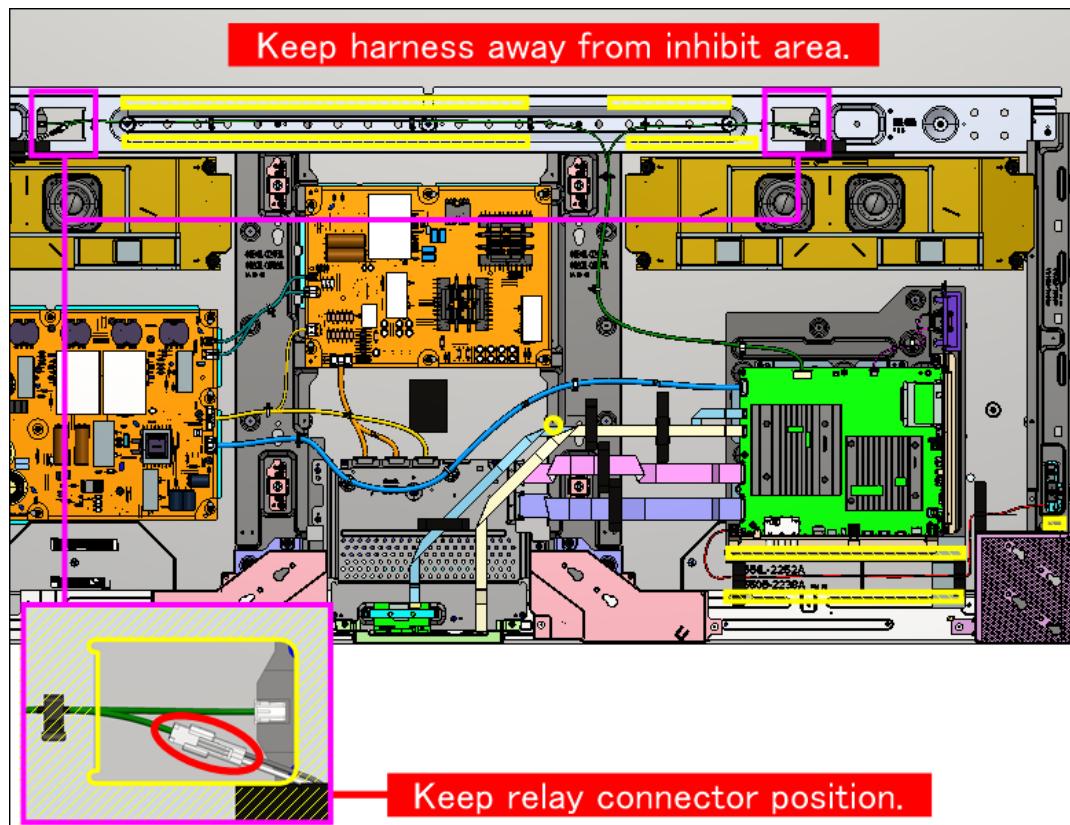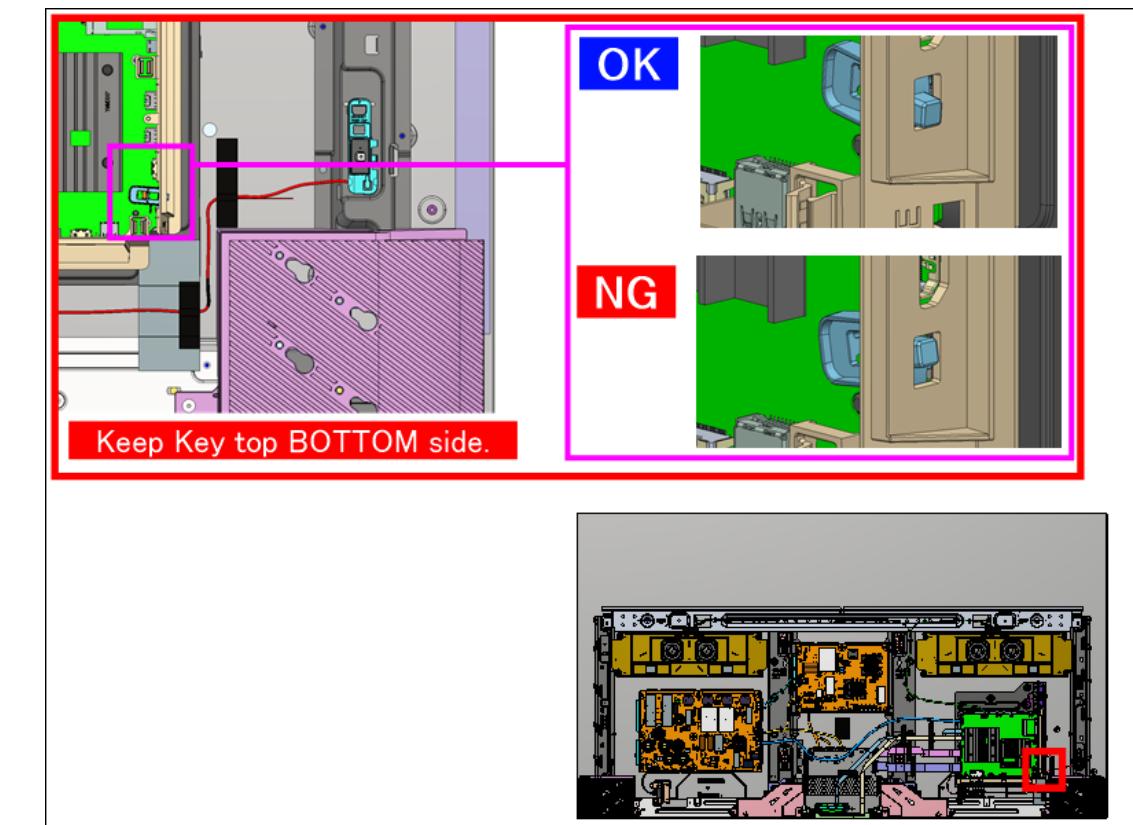SECTION 4: XR-83A80***4-3. WIRE DRESSING**InformationInformation

SECTION 4: XR-83A80***4-4. EXPLODED VIEW AND PART LIST**

- Place the TV set facing downwards on a stable, level surface before disassembly and assembly of parts.
-  and shaded parts are critical for safety. Replace only with part number specified
-  Parts contain confidential information. Strictly follow the instruction whenever the components are repaired and / or replaced

\ (*) Parts are not stocked since they are seldom required for routine service. Some delays should be anticipated when ordering these components.
\ Picture provided in this section might have slight difference from the actual sets.
\ The reference number beside the part indicates the disassembly sequence.
\ Remove screws before disassembly. Unplug connectors before disassembly

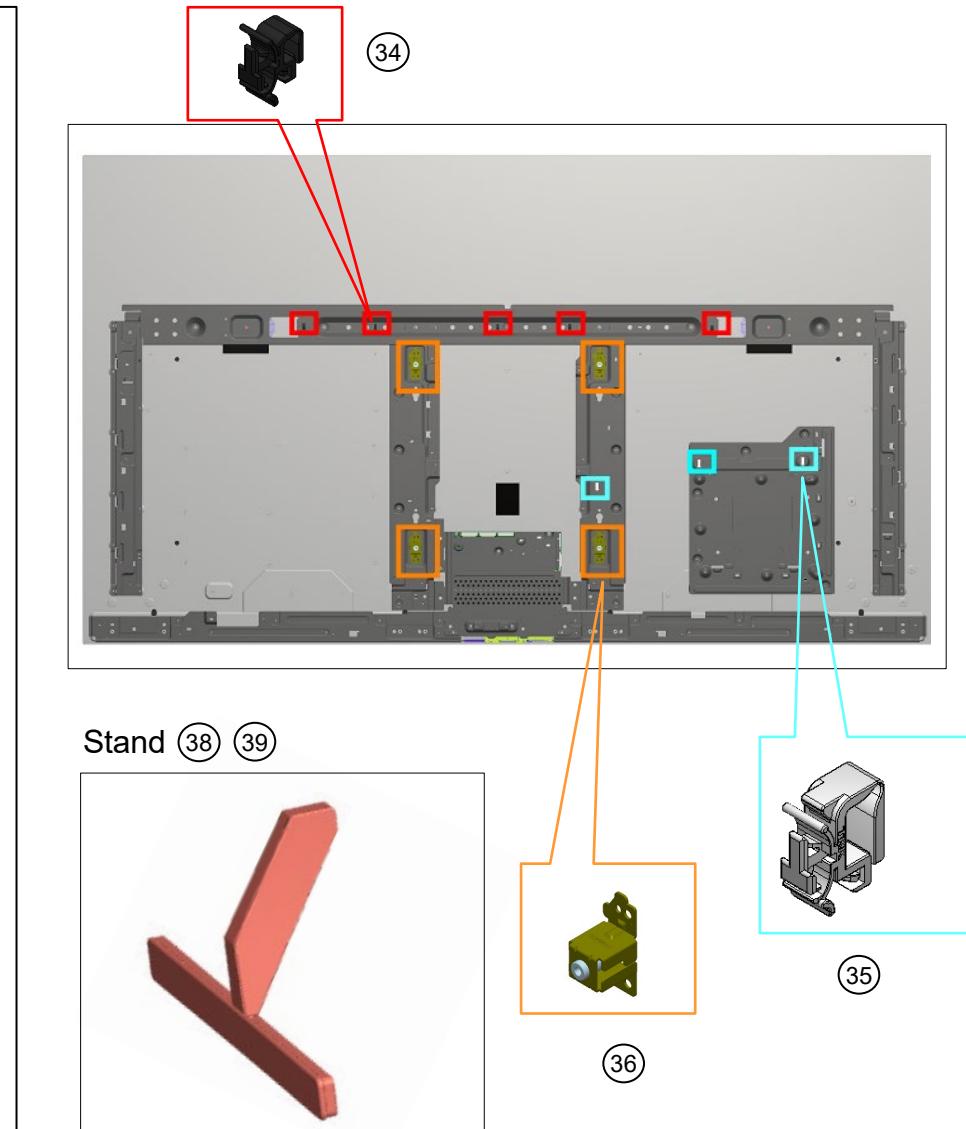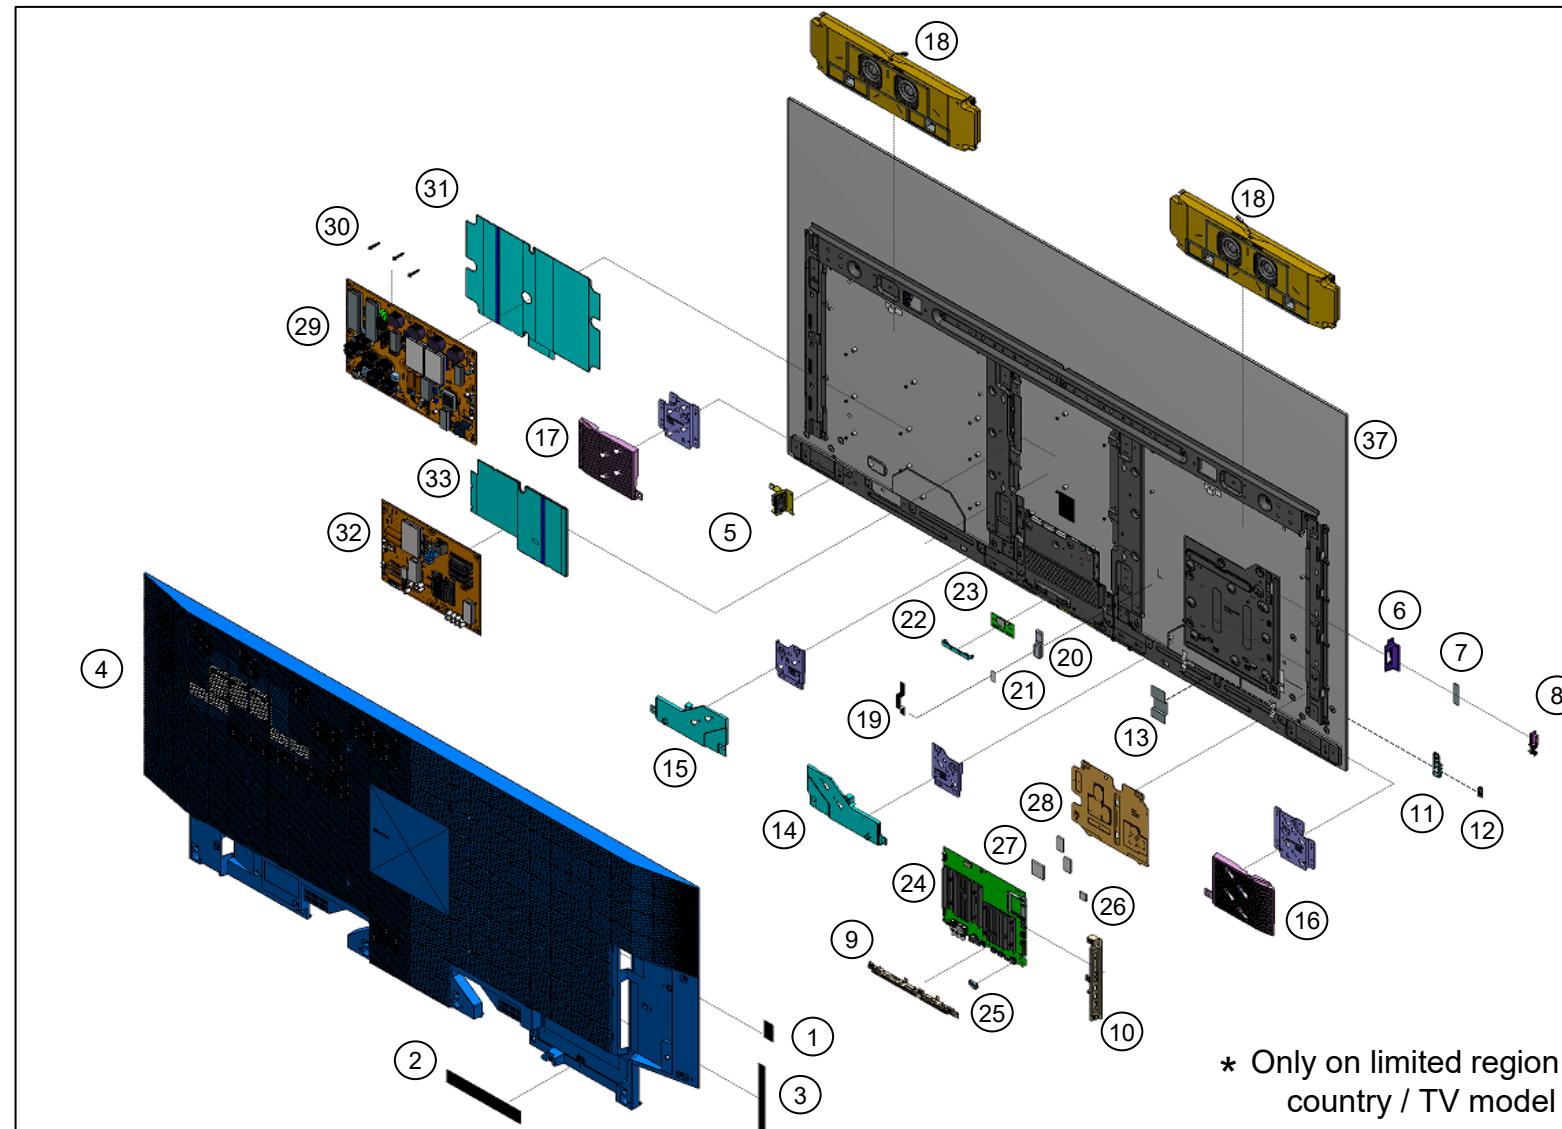

SECTION 4: XR-83A80***4-4. EXPLODED VIEW AND PART LIST****SET PART LIST**

REF. NO	PART NO.	DESCRIPTION	XR-83A80L	XR-83A80CL
			UCM	UC2
1	5-000-203-01	LABEL, CENTER SP (OCD)	•	•
2	5-049-098-01	LABEL, UNDER TERMINAL(BM5S,6S)	•	•
3	5-049-096-01	LABEL, SIDE TERMINAL(BM5S,6S)	•	•
⚠4	5-025-669-01	REAR COVER (4L SGT) A	•	•
⚠5	1-001-348-12	C24 AC INLET ASSY	•	•
6	4-743-315-01	BRACKET, CNT SP (OCD)	•	•
7	5-007-447-01	CUSHION, CNT SP BK (3L PAN)	•	•
8	1-001-686-11	PUSHTERMINAL	•	•
9	4-724-146-14	BRACKET, UNDER (BM2A)	•	•
10	5-036-017-71	BRACKET, SIDE(SGT)	•	•
11	5-008-307-01	HOLDER SIDE SW(LMN)	•	•
12	1-004-496-11	1 KEY SWITCH UNIT	•	•
13	5-031-024-01	AL TAPE(SGT 4L)	•	•
14	5-023-219-11	COVER, STAND L IN (4L SGT)	•	•
15	5-023-220-11	COVER, STAND R IN (4L SGT)	•	•
16	5-023-221-11	COVER, STAND L OUT (4L SGT)	•	•
17	5-023-222-11	COVER, STAND R OUT (4L SGT)	•	•



REF. NO	PART NO.	DESCRIPTION	XR-83A80L	XR-83A80CL
			UCM	UC2
18	1-009-853-11	SP BOX ASSY, FY21 D38 SWF	•	•
19	5-025-864-01	CUSHION 1525A	•	•
20	1-011-659-11	CORE, FERRITE	•	•
21	5-028-143-01	DOUBLE SIDE TAPE FOR FC S	•	•
22	5-009-258-22	BRACKET, WIFI(BNN)	•	•
🔒23	1-005-419-14	WLAN/BT MODULE(11AC)	•	•
🔒24	A-5055-870-A	COMPL SVC BM5S21_FS2_83_UCMX	•	•
25	5-023-281-02	KEY, TOP(SGT)	•	•
26	4-699-975-02	SHEET, THERMAL(5567H)	•	•
27	5-011-960-01	SHEET, THERMAL(LMN TCON)	•	•
28	5-023-557-01	SHEET THERMAL(BM5S21 DDR)	•	•
⚠29	1-010-553-11	G18 - STATIC CONVERTER(TV)	•	•
30	5-014-769-01	SPACER(26) WF +C	•	•
⚠31	5-023-772-01	SHT, INSULATION(SGT 4L)L A	•	•
⚠32	1-010-554-11	G19 - STATIC CONVERTER(TV)	•	•
⚠33	5-023-773-01	SHT, INSULATION(SGT 4L)M A	•	•

SECTION 4: XR-83A80***4-4. EXPLODED VIEW AND PART LIST****SET PART LIST**


REF. NO	PART NO.	DESCRIPTION	XR-83A80L	XR-83A80CL
			UCM	UC2
34	2-650-770-41	SLIDE, CLAMP (BLACK)	•	•
35	*2-650-770-21	SLIDE, CLAMP (SILVER)	•	•
36	*5-023-713-01	BRACKET, VESA (3L LMN)	•	•
⚠ 37	1-011-756-12	OLED PANEL(L83APB1)	•	n/a
38	5-024-903-11	STAND, L (4L SGT) A	•	•
39	5-024-904-11	STAND, R (4L SGT) A	•	•

Notes : When replacing Panel, please also replace the following parts at the same time.

- 13. 5-031-024-01 AL TAPE(SGT 4L)
- 19. 5-025-864-01 CUSHION 1525A
- 21. 5-028-143-01 DOUBLE SIDE TAPE FOR FC S
- 31. 5-023-243-01 SHT, INSULATION(SGT 4L)L (If it is damaged)
- 33. 5-023-244-01 SHT, INSULATION(SGT 4L)M (If it is damaged)

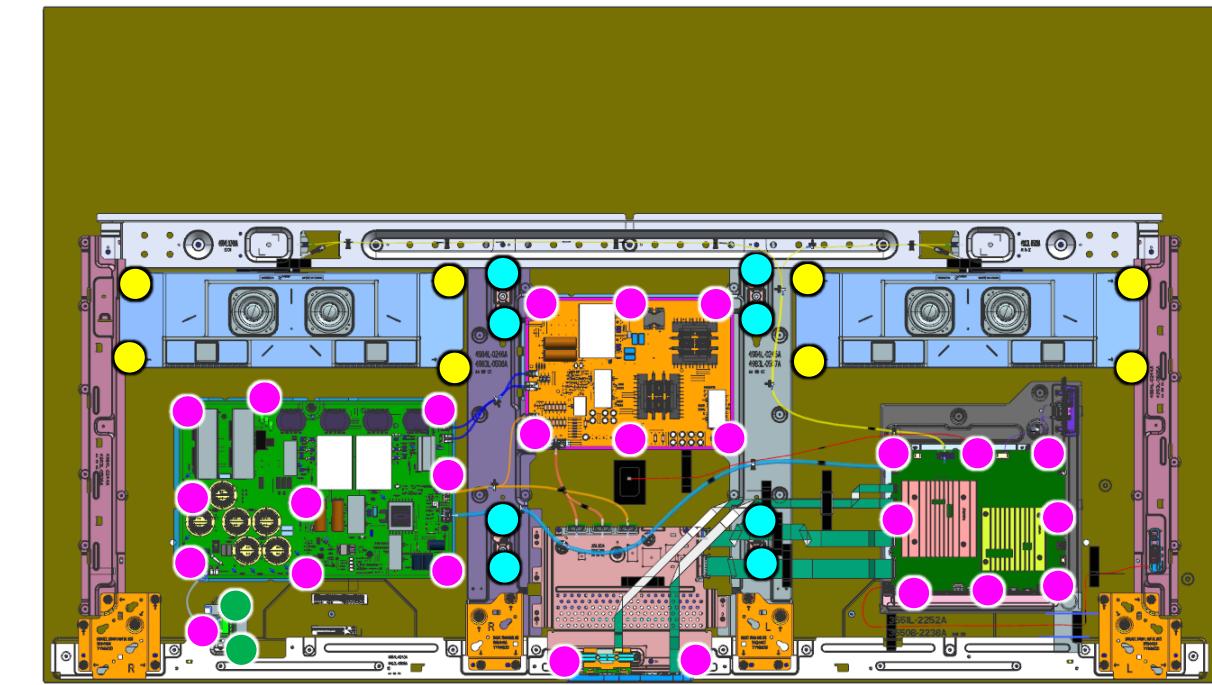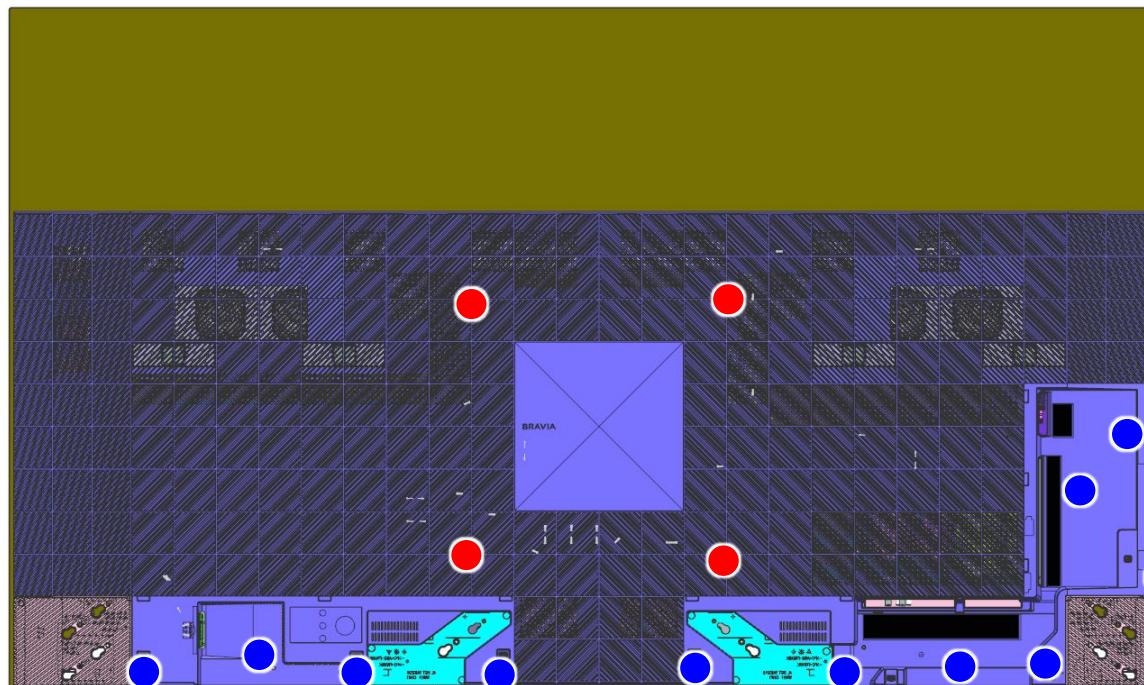SECTION 4: XR-83A80***4-4. EXPLODED VIEW AND PART LIST****SCREW**

REMARKS	PART NO.	DESCRIPTION	QUANTITY	TORQUE
●	4-167-019-22	SCREW +PSW, M3X8	8	0.4±0.05
●	4-579-926-01	SCREW M3X3.0 STEP	11	0.65±0.1
●	4-268-126-02	SCREW, ORNAMENTAL M6X12	4	1.2±0.1
●	4-472-518-11	SCREW, +PSW M3X6	26	0.4±0.05
●	4-159-298-01	SCREW, +PSW M4X10	8	0.65±0.1
●	2-580-592-01	SCREW, +PSW M3X8	2	0.4±0.05

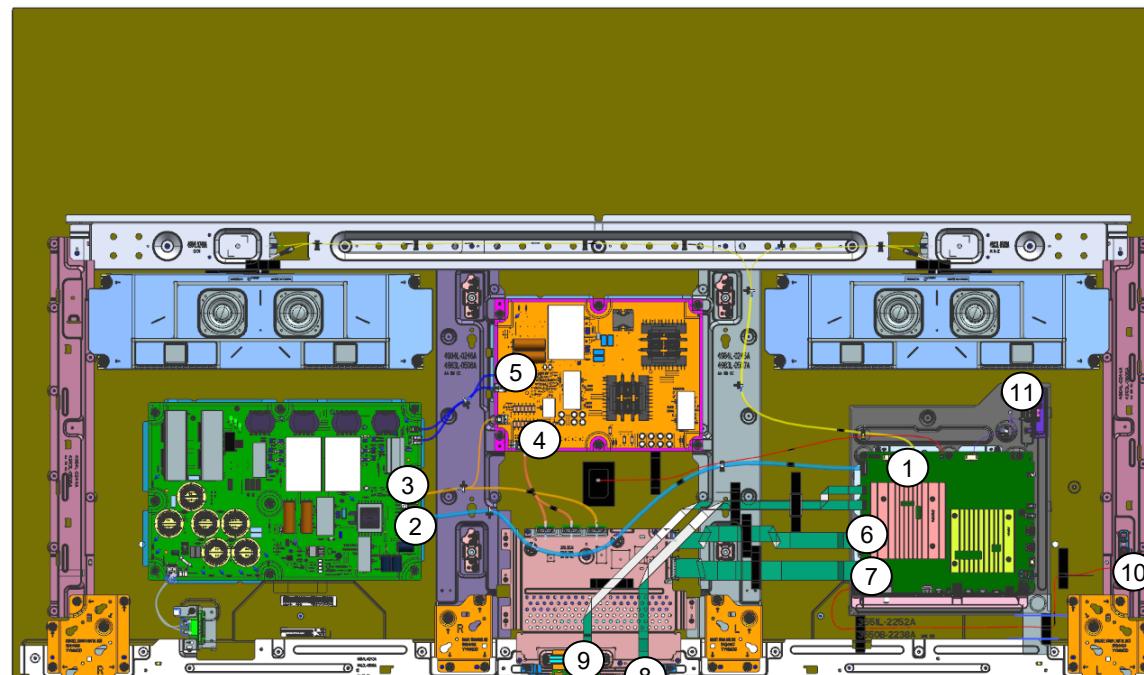SECTION 4: XR-83A80***CONNECTOR****4-4. EXPLODED VIEW AND PART LIST**

REF. NO	PART NO.	DESCRIPTION	REMARKS
1	1-010-574-11	CONNECTOR ASSY 10P	CN6603(B)-SP(1)
2	1-010-571-11	CONNECTOR ASSY 20P	CN6401(PSU)-CN1700(B)(1)
3	1-010-573-11	CONNECTOR ASSY 14P	CN6402(PSU)-CN6602(PSU)-CN8(TCON)(1)
4	1-010-572-11	CONNECTOR ASSY 28P	CN6601(PSU)-CN6(TCON)-CN14(TCON)(1)
5	1-010-576-11	CONNECTOR ASSY 2P	CN6501(PSU)-CN6503(PSU)-CN6502(PSU)-CN6504(PSU)(1)
6	1-010-625-11	FLEXIBLE FLAT CABLE 41P	CN6801(B)-CN7(TCON)(1)
7	1-010-626-11	FLEXIBLE FLAT CABLE 51P	CN6800(B)-CN5(TCON)(1)
8	1-010-623-11	FLEXIBLE FLAT CABLE 25P	CN1200(B)-CN102(H)(1)
9	1-010-621-11	FLEXIBLE FLAT CABLE 20P	CN3803(B)-BT(1)
10	1-010-570-11	CONNECTOR ASSY 3P	CN5402(B)-KEY(1)
11	1-972-625-11	CONNECTOR ASSY 4P	CN6605(B)-CIN(1)

SECTION 4: XR-83A80***4-4. EXPLODED VIEW AND PART LIST****OTHER PARTS**


PART NO.	DESCRIPTION	XR-83A80L	XR-83A80CL	REMARKS
		UCM	UC2	
4-535-064-62	ASSY,FALL LOCK,BELT LL	•	•	-
5-000-746-21	BAG, SCREW ASSY (M5L14)	•	•	Including SCREW, +PSW M5X14 (4pcs)
4-262-708-04	CLAMPER, CABLE	•	•	-
⚠ 1-001-346-11	C23 AC POWER CORD SETS (US)	•	•	-
5-023-209-11	COVER, SIDE (4L SGT)	•	•	Side Terminal Cover
5-023-210-11	COVER, UNDER (4L SGT)	•	•	Under Terminal Cover
5-023-211-11	COVER, AC (4L SGT)	•	•	AC Inlet Cover
5-024-918-11	NECK COVER B ASSY (4L SGT)	•	•	Including neck cover for stand L/R (2pcs)
1-016-940-21	REMOTE COMMANDER (RMF-TX810U)	•	n/a	-
1-016-949-21	REMOTE COMMANDER (RMF-TX910U)	n/a	•	-
7-600-031-97	TAPE (3M 1350FB-1)15MMX66M BLK	•	•	-
*5-048-119-11	REFERENCE GUIDE	•	•	-
*5-048-123-11	SETUP GUIDE	•	•	-

SMART CORE**DISASSEMBLY AND REMOVAL CAUTION**

1. Release FFC in red box.

2. Release screws in red circle.


3. Take out the smart core.

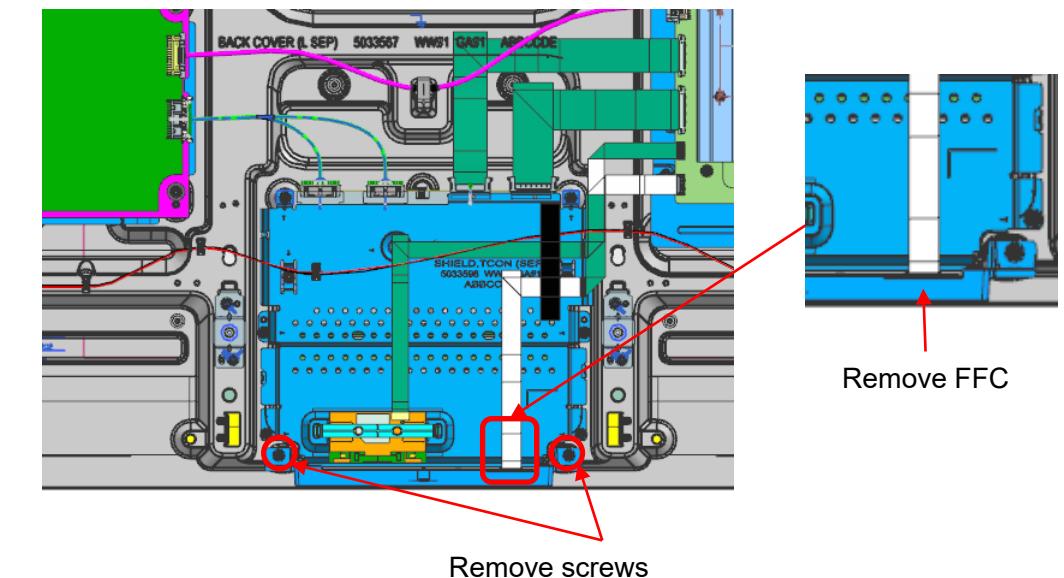
**DISASSEMBLE COVER TOP (55" / 65" / 77")**

Remove the hooks in the following order.


① Lift the hook in red circle and slide it.

② Hold the area in the red box and lift the receiver board.

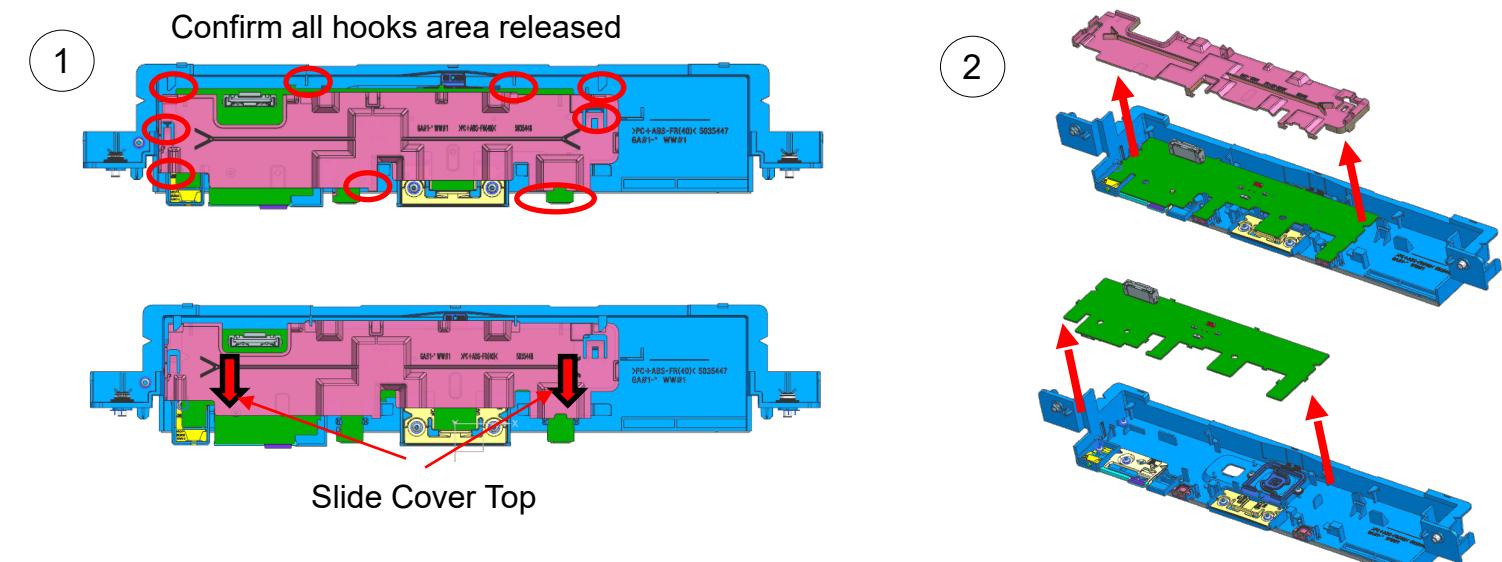

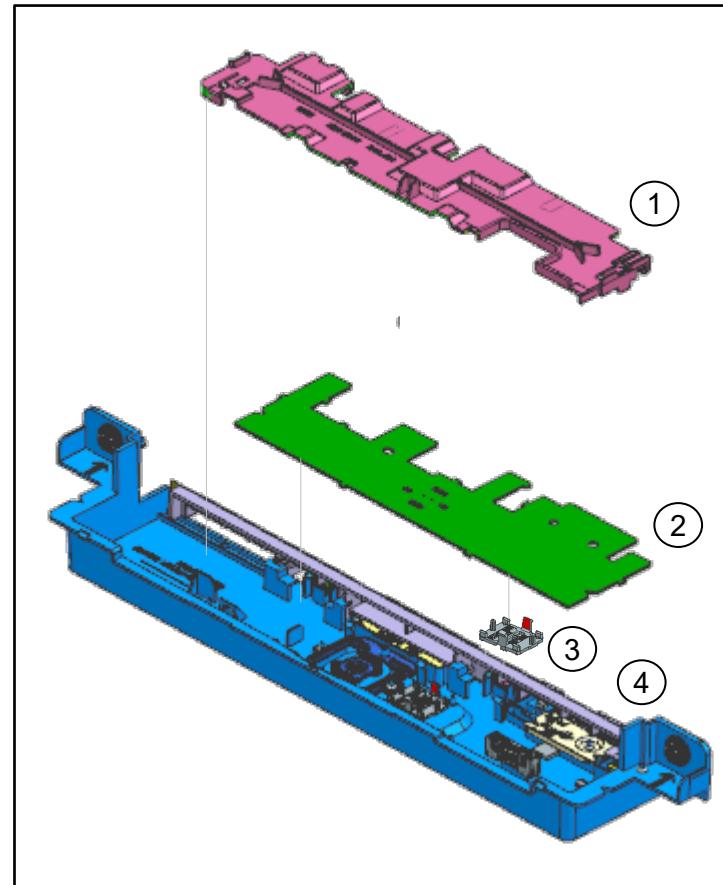SMART CORE**EXPLODED VIEW AND PART LIST****55" / 65" / 77"**




REF. NO	PART NO.	DESCRIPTION	REMARKS
1	*5-035-448-11	COVER, TOP (SEP)	-
2	A-5042-387-A	HY1_MIC_WW_EV_PR_OS MOUNT	80K / 80CK
2	A-5056-099-A	FY23_HY2_MIC_WW_EVSIOS MOUNT	80L / 80CL
2	A-5056-445-A	FY23_HY2_WW_EVSI MOUNT	75L
3	5-024-521-22	SLIDE, SW	80K / 80CK / 80L / 80CL
4	5-036-863-01	COVER,BTM (SEP) A	80K / 80CK / 80L / 80CL
4	5-036-863-21	COVER,BTM (SEP) A	75L

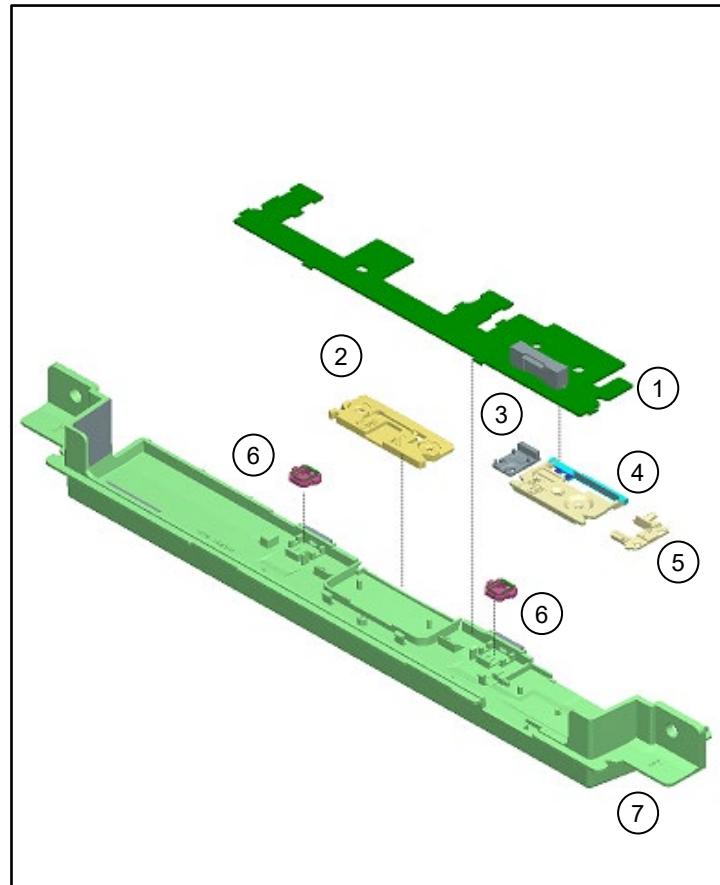SMART CORE**EXPLODED VIEW AND PART LIST****83"**


REF. NO	PART NO.	DESCRIPTION	REMARKS
1	A-5055-896-A	HL2B_RGB_MIC_WW MOUNT	-
2	5-023-066-21	LIGHT GUIDE ILM (COM)	-
3	5-023-349-21	LIGHT, GUIDE RGB(SGT)	-
4	5-023-065-22	LIGHT GUIDE OPT (COM)	-
5	5-023-067-21	LIGHT GUIDE LED (COM)	-
6	5-023-161-21	SILICON MIC(PHN)	-
7	5-023-809-11	COVER,BTM(TUR)	-

APPENDIX**SHARP EDGE**



- Please wear gloves when removing rear cover to avoid sharp edge at bottom side and hook area as shown in the next figure.

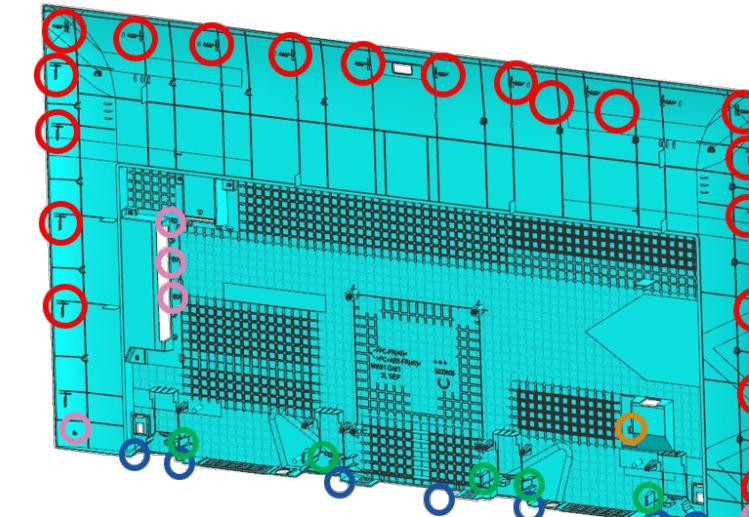
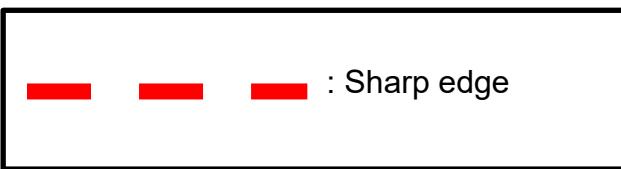
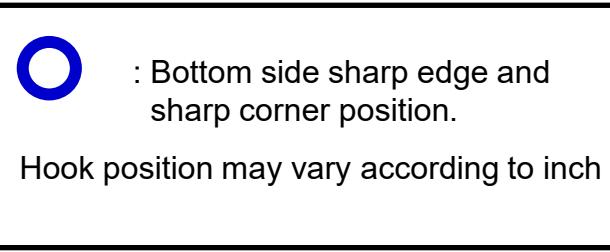


77"

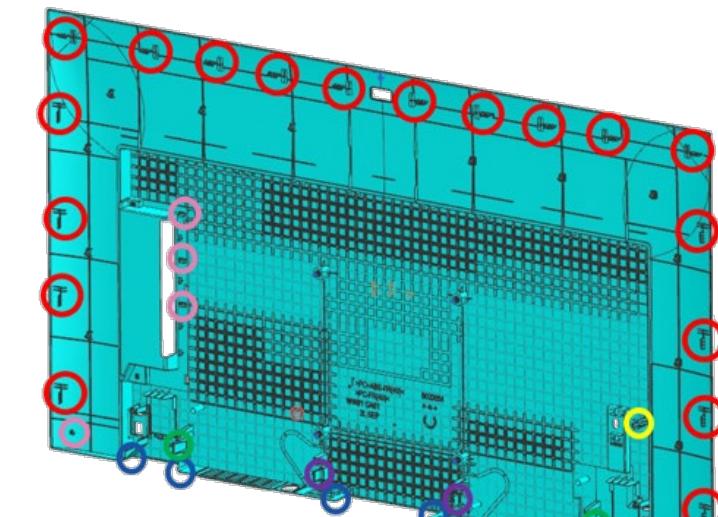

55"/65"


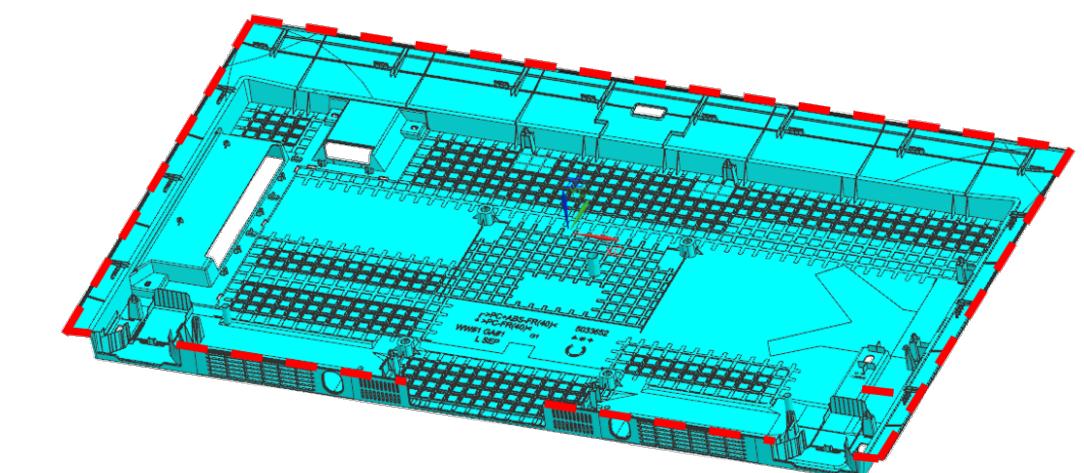
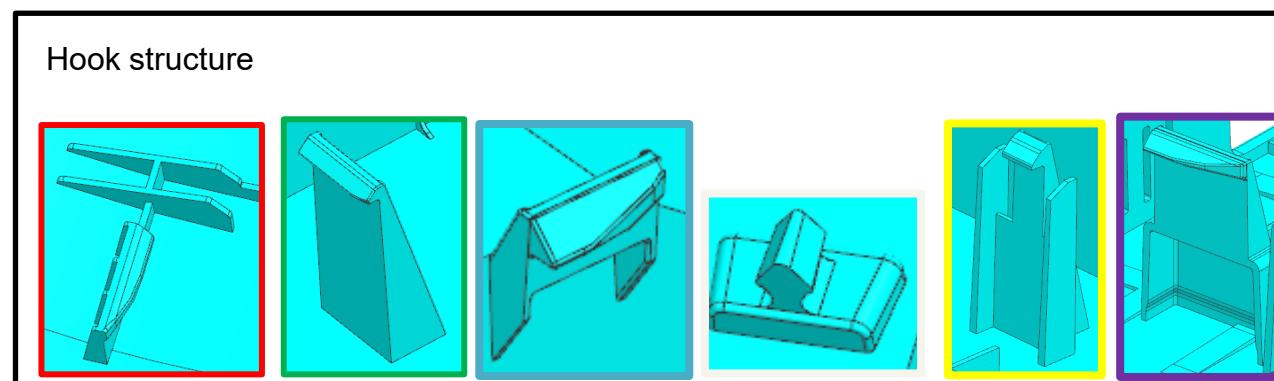


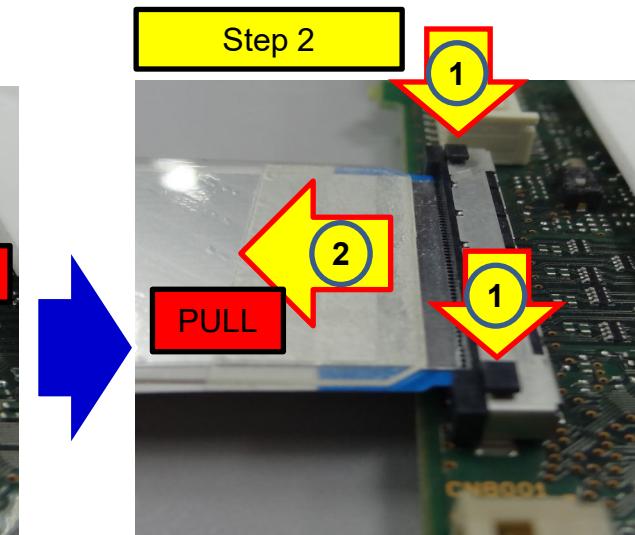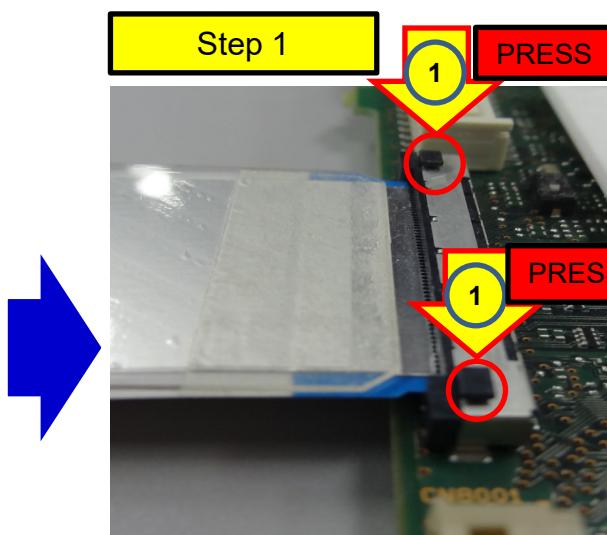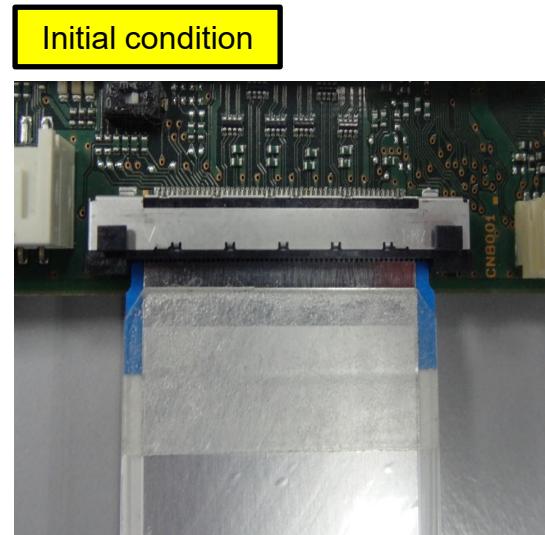APPENDIX**FFC REPLACEMENT CAUTIONS****WITHDRAWAL OF 41P / 51P FFC CONNECTOR (TYPE1)**

1 Press the release lock button downward at the same time (highlighted in red).

2 Pull FFC in straight direction while pressing both release lock button at the same time.

Note: FFC as in image is only for reference purpose. Actual FFC outlook may vary by each vendor.

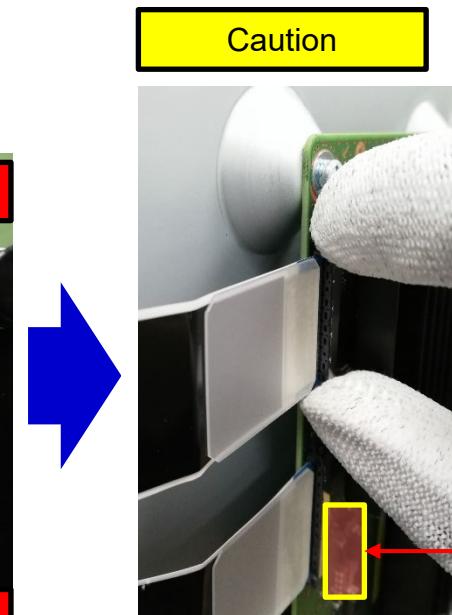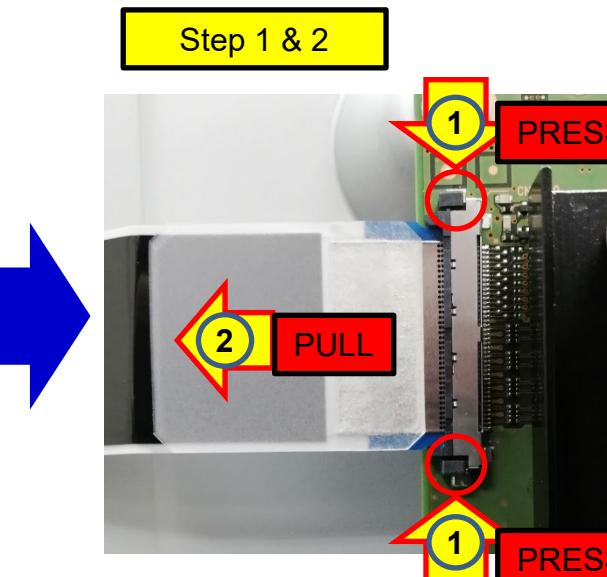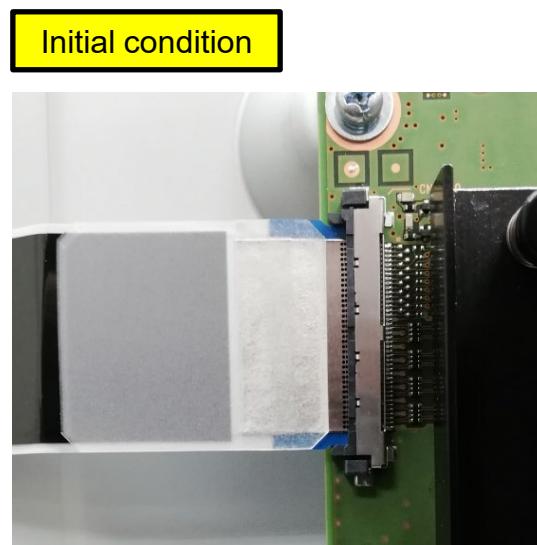WITHDRAWAL OF 41P / 51P FFC CONNECTOR (TYPE2)

1 Press the release lock button downward at the same time (highlighted in red).

2 Pull FFC in straight direction while pressing both release lock button at the same time.

Note: FFC as in image is only for reference purpose. Actual FFC outlook may vary by each vendor.


Ensure fingers does **NOT** touch parts on board and tuner connector when pushing the side locks.

APPENDIX

FFC REPLACEMENT CAUTIONS

Remark: Refer to Board Location and Connector Diagram

WITHDRAWAL OF 41P / 51P FFC CONNECTOR (TYPE3)

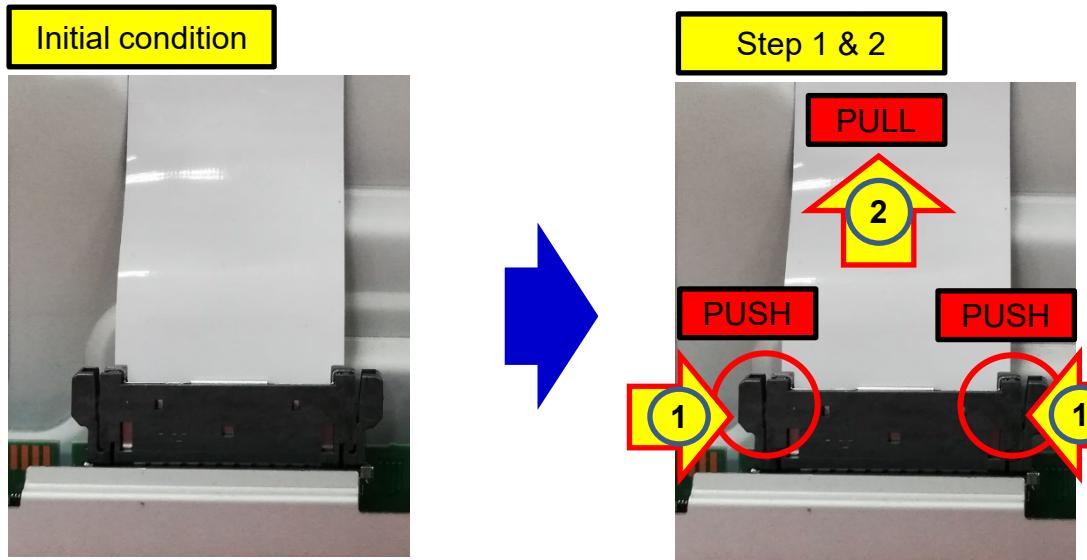


1 Push the side-release lock buttons inward (highlighted in red).

2 Pull-out FFC in straight direction while pushing side-release lock buttons at the same time.

Note: FFC as in image is only for reference purpose. Actual FFC outlook may vary by each vendor.

WITHDRAWAL OF 41P / 51P FFC CONNECTOR (TYPE4)

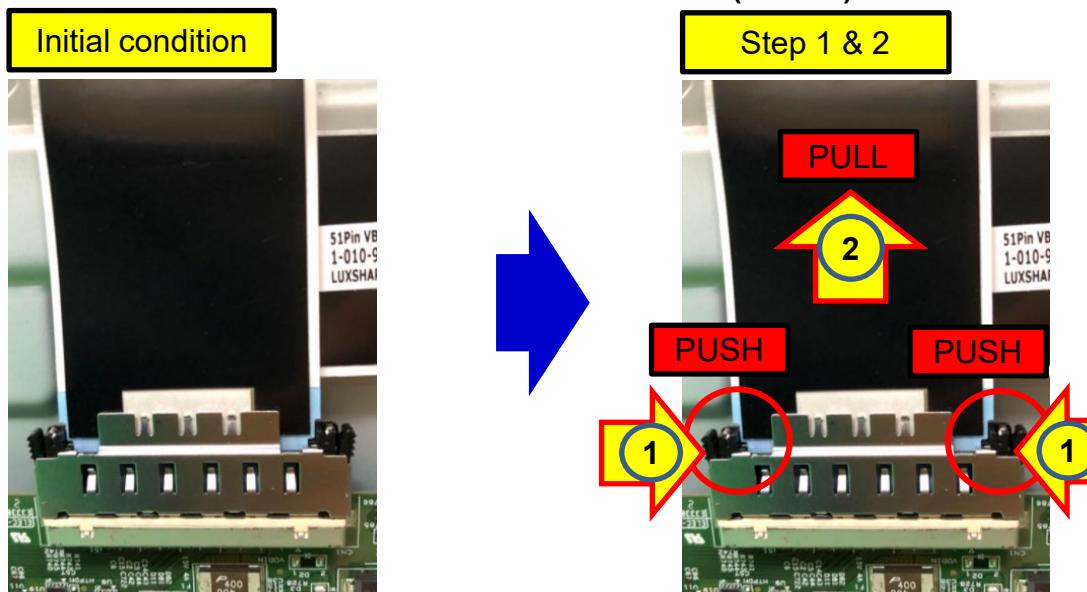

1 Push the side-release lock buttons inward (highlighted in red).



2 Pull-out FFC in straight direction while pushing side-release lock buttons at the same time.

Note: FFC as in image is only for reference purpose. Actual FFC outlook may vary by each vendor.

APPENDIX

FFC REPLACEMENT CAUTIONS


WITHDRAWAL OF 20P / 25P / 30P FFC CONNECTOR

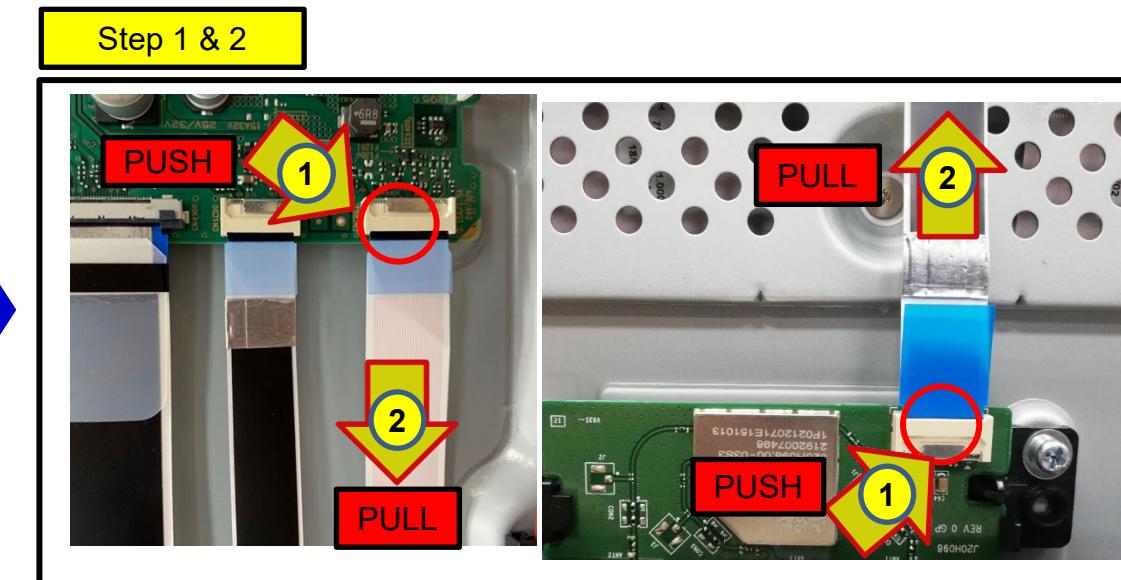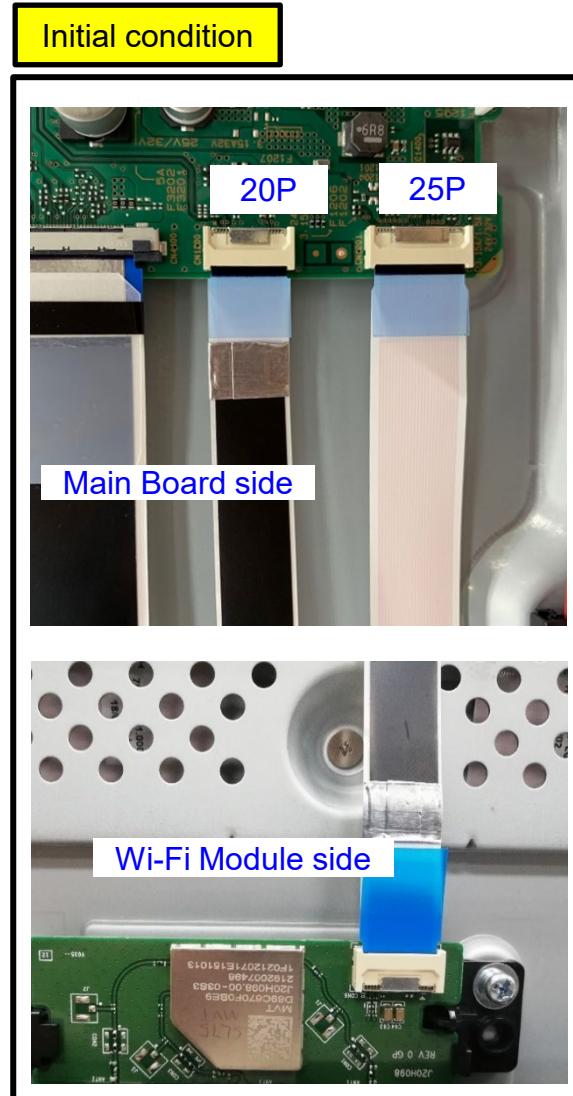

1 Push the side-release lock buttons inward (highlighted in red).

2 Pull-out FFC in straight direction while pushing side-release lock buttons at the same time.


Note: FFC as in image is only for reference purpose. Actual FFC outlook may vary by each vendor.

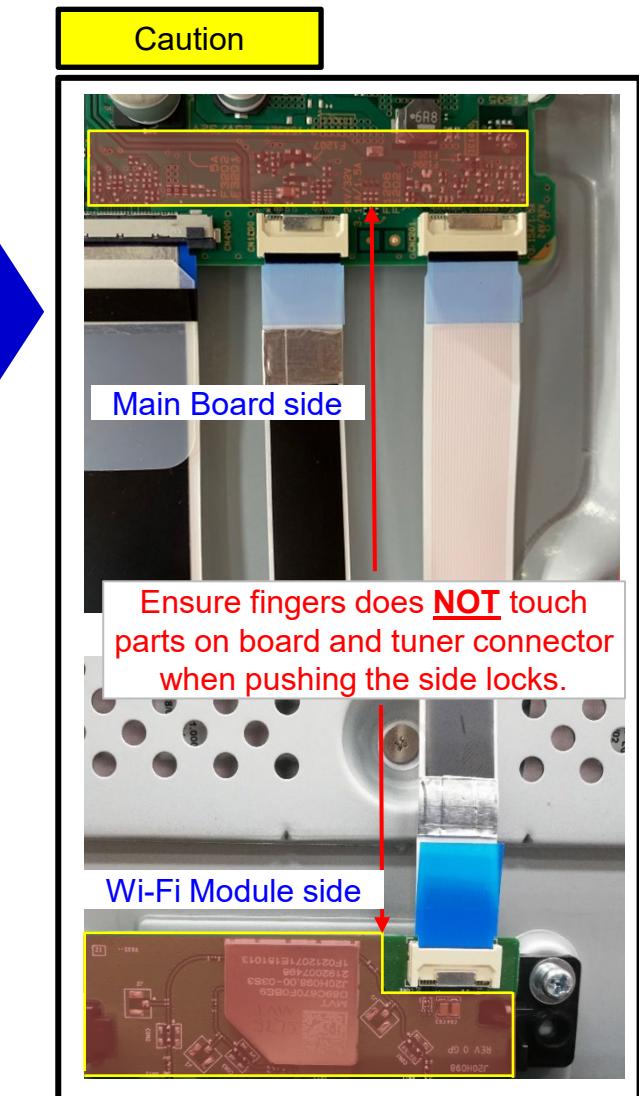

APPENDIX

FFC REPLACEMENT CAUTIONS

WITHDRAWAL OF 25P FFC CONNECTOR

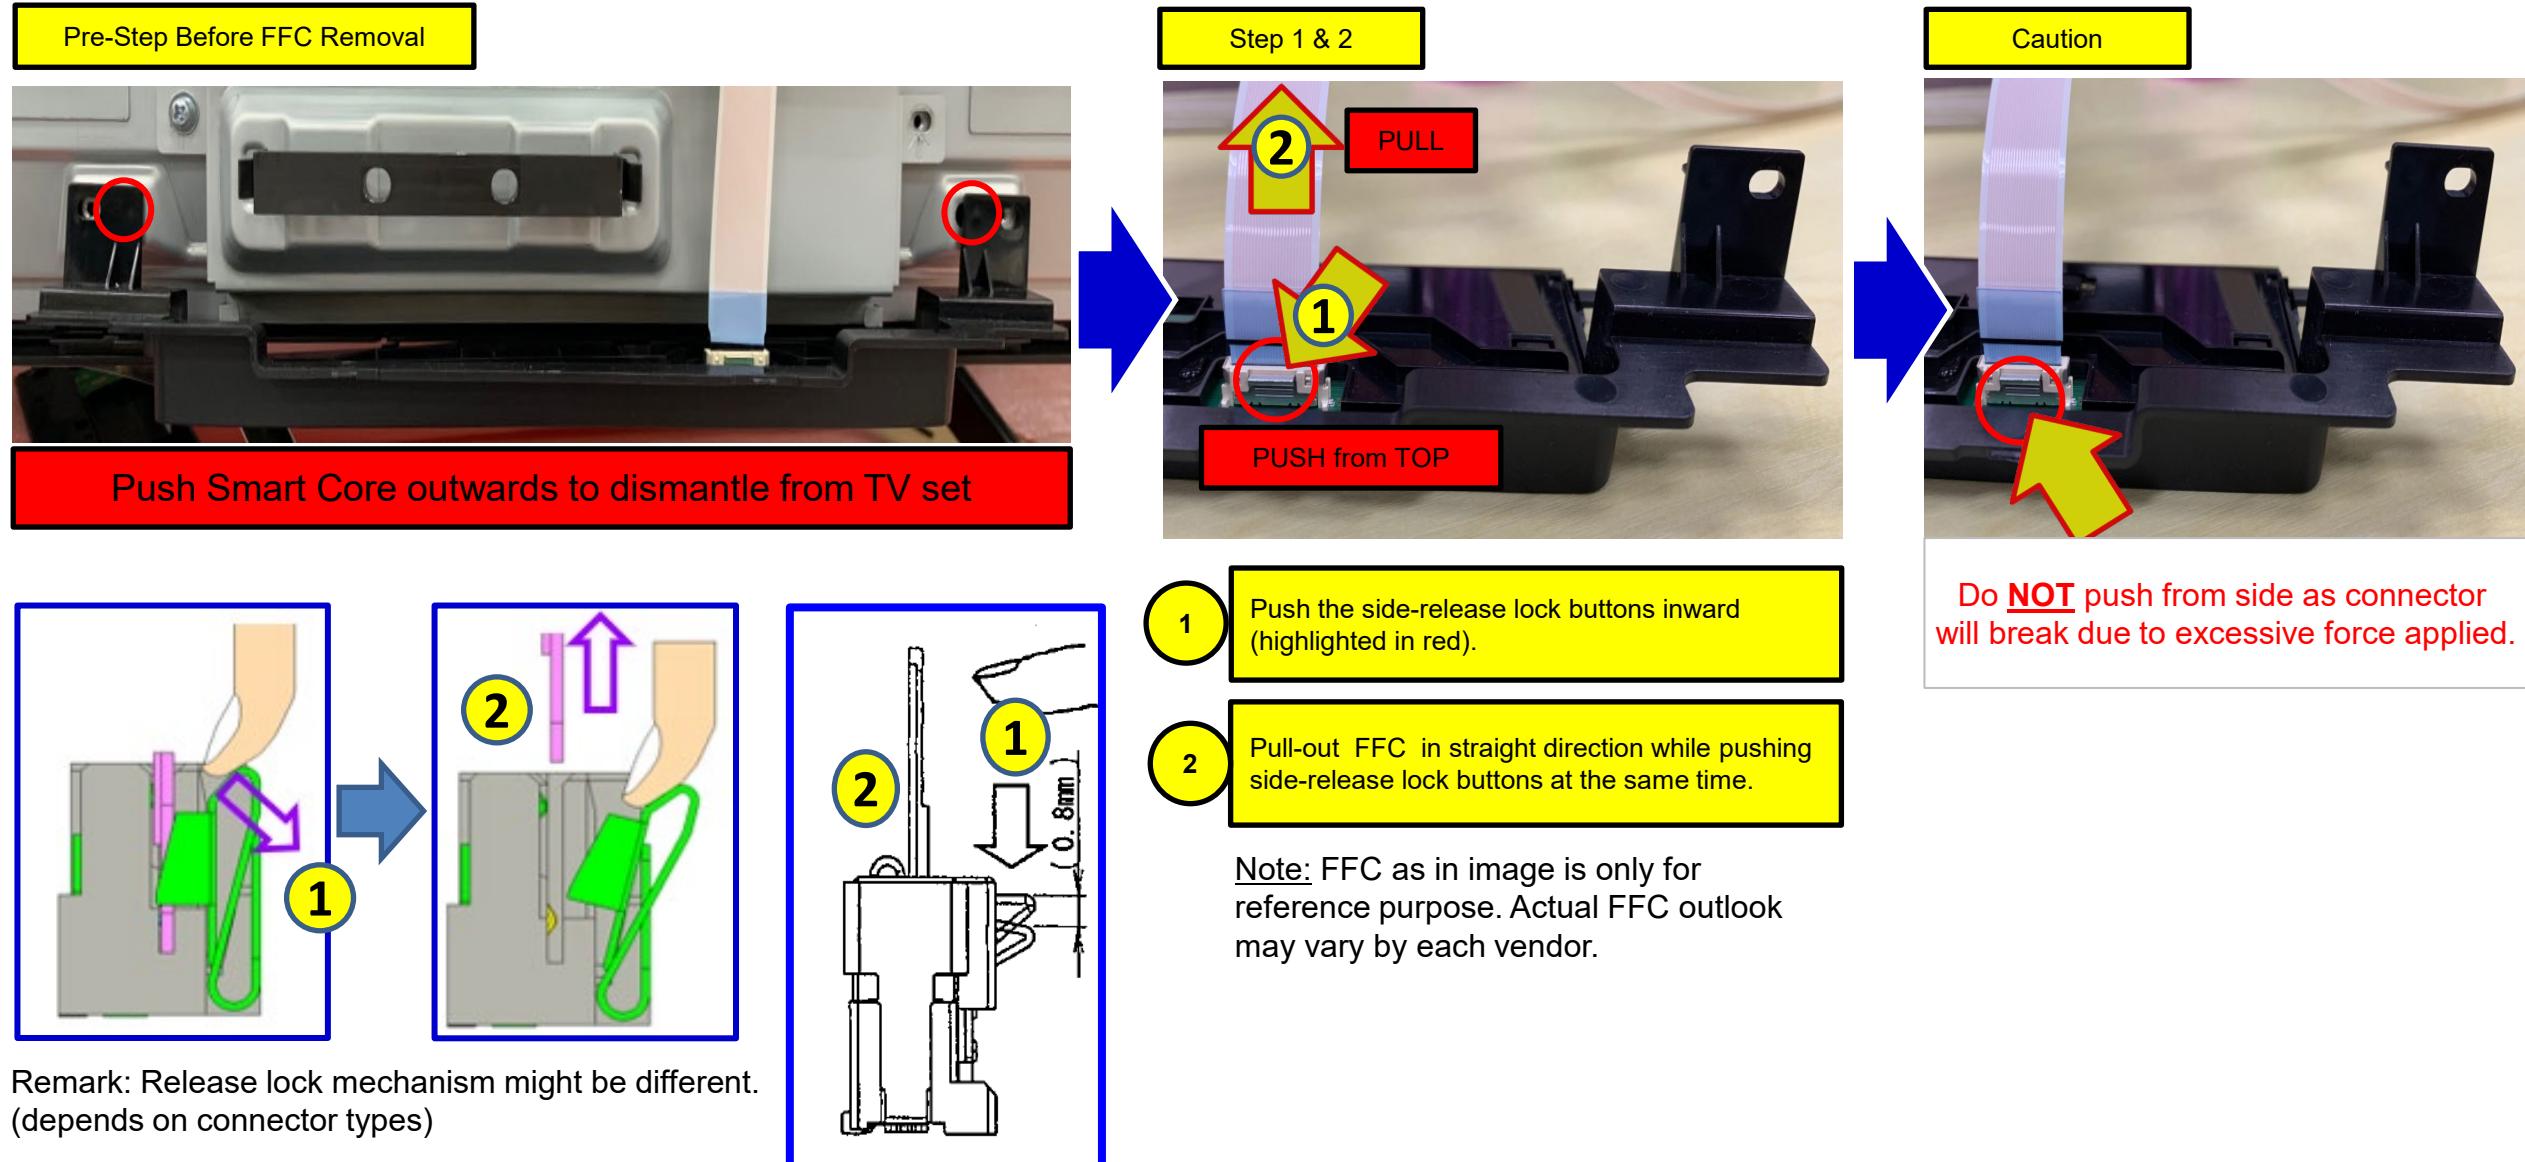


APPENDIX


FFC REPLACEMENT CAUTIONS

WITHDRAWAL OF PANEL MODULE FFC CONNECTOR (60P / 68P / 70P / 80P / 96P / 104P)

Step 1 & 2

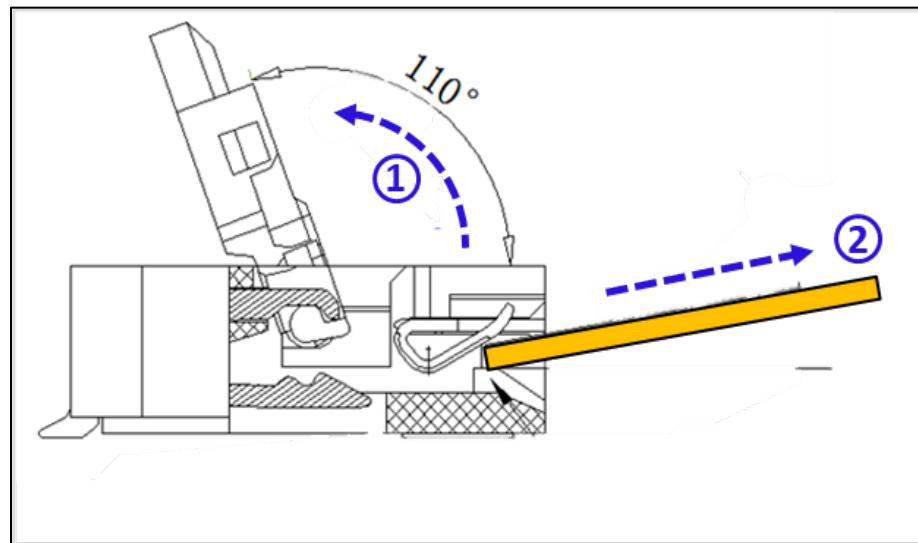

Caution

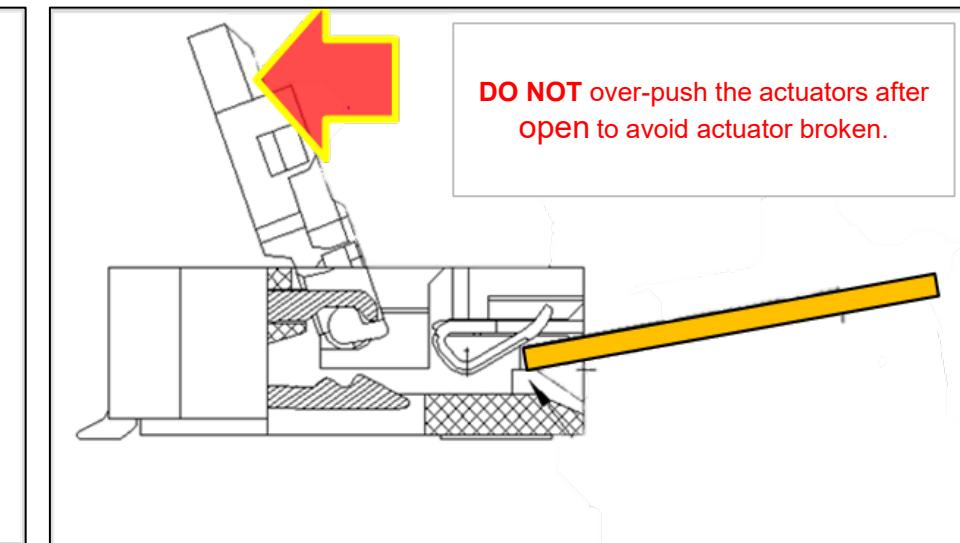

1 Open and flip actuator.

DO NOT over-push as it may cause actuator broken.

2 Pull-out FFC in straight direction.

DO NOT withdraw FFC in slanting direction (> 10°).

Note: FFC as in image is only for reference purpose. Actual FFC outlook may vary by each vendor.

