



Internal Use Only

Room Air Conditioner **SVC MANUAL(General)**

MODEL : General Wall Mounted-Inverter Type

CAUTION

Before Servicing the unit, read the safety precautions in General SVC manual.
Only for authorized service personnel.

CONTENTS

| | | |
|---------------|--|-----|
| Part 1 | General Information | |
| | 1. Safety Precautions..... | 4 |
| | 2. Nomenclature | 7 |
| Part 2 | Functions & Controls | |
| | 1. List of Functions & Controls..... | 9 |
| | 2. Basic Mode Controls | 10 |
| | 3. Special Mode Controls | 12 |
| | 4. Utility Functions | 13 |
| Part 3 | Test Run | |
| | 1. Check before Test Run | 17 |
| | 2. Test Run Flow chart | 18 |
| | 3. Test Run Detail | 19 |
| Part 4 | Trouble Shooting Guide | |
| | 1. 2-Way, 3-Way Valve | 21 |
| | 2. Pumping Down | 22 |
| | 3. Evacuation (All amount of refrigerant leaked) | 23 |
| | 4. Gas Charging (After Evacuation) | 24 |
| | 5. Error Message | 25 |
| | 6. Trouble Shooting Guide (Non-error Code) | 33 |
| | 7. Trouble Shooting Guide (Error Code) | 47 |
| | 8. Appendix | 79 |
| | • Appendix A (Installation Checking Guide) | 80 |
| | • Appendix B (LG SIMs)..... | 107 |
| | • Appendix C (Electrical Part Checking Method) | 129 |



Part 1 General Information

| | |
|-----------------------------|---|
| 1. Safety Precautions | 4 |
| 2. Nomenclature..... | 7 |




1. Safety Precautions

To prevent injury to the user or other people and property damage, the following instructions must be followed.









- Incorrect operation due to ignoring instruction will cause harm or damage. The seriousness is classified by the following indications.





| | |
|--|---|
|  WARNING | This symbol indicates the possibility of death or serious injury. |
|  CAUTION | This symbol indicates the possibility of injury or damage to properties only. |

- Meanings of symbols used in this manual are as shown below.







| | |
|---|---|
|  | Be sure not to do. |
|  | Be sure to follow the instruction. |
|  | Dangerous Voltage |

1.1 Cautions in Repair





|  WARNING | |
|--|--|
|  | Do not turn on the breaker or power under condition that front panel, cabinet, top cover, or control box cover is removed or opened. Otherwise, it may cause fire, electric shock, explosion or death. |
|  | Be sure to disconnect the power cable plug from the plug socket before disassembling the equipment for a repair. Internal components and circuit boards are at main potential when the equipment is connected to the power cables. This high voltage is extremely dangerous and may cause death or severe injury if come in contact with it. |
|  | Do not touch the discharging refrigerant gas during the repair work. The discharging refrigerant gas. The refrigerant gas can cause frostbite. |
|  | Release the refrigerant gas completely at a well-ventilated place first. Otherwise, when the pipe is disconnected, refrigerant gas or refrigerating machine oil discharges and it Can cause injury. |
|  | When the refrigerant gas leaks during work, perform ventilation. If the refrigerant gas comes in contact with a fire, poisonous gas generates. A case of leakage of the refrigerant and the closed room full with gas is dangerous because a shortage of oxygen occurs. Be sure to perform ventilation. |
|  | When removing the front panel or cabinet, execute short-circuit and discharge between high voltage capacitor terminals. If discharge is not executed, an electric shock is caused by high voltage resulting in a death or injury. |
|  | Do not turn the air-conditioner ON or OFF by plugging or unplugging the power plug. There is risk of fire or electrical shock. |






| | |
|---|---|
|  | Do not use a defective or underrated circuit breaker. Use the correctly rated breaker and fuse. Otherwise there is a risk of fire or electric shock. |
|  | Install the panel and the cover of control box securely. Otherwise there is risk of fire or electric shock due to dust, water etc. |
|  | Indoor/outdoor wiring connections must be secured tightly and the cable should be routed properly so that there is no force pulling the cable from the connection terminals. Improper or loose connections can cause heat generation or fire. |
|  | Do not touch, operate, or repair the product with wet hands. Holding the plug by hand when taking out. Otherwise there is risk of electric shock or fire. |

⚠ CAUTION

| | |
|---|---|
|  | Do not turn on the breaker when the front panel and cabinet are removed. |
|  | Be sure to ground the air conditioner with an earthing conductor connected to the earthing terminal. |
|  | Conduct repair works after checking that the refrigerating cycle section has cooled down sufficiently. Otherwise, working on the unit, the hot refrigerating cycle section can cause burns. |
|  | Do not tilt the unit while removing panels. Otherwise, the water inside the unit can spill and wet floor. |
|  | Do not use the welder in a well-ventilated place. Using the welder in an enclosed room can cause oxygen deficiency. |
|  | Be sure to turn off power switch before connecting or disconnecting connector, or parts damage may be occur. |

1.2 Inspections after Repair

| ⚠ WARNING | |
|---|--|
|  | Check to see if the power cable plug is not dirty or loose. If the plug is dusty or loose it can cause an electrical shock or fire. |
|  | Do not use a joined power cable or extension cable, or share the same power outlet with other electrical appliances. otherwise, it can cause an electrical shock, excessive heat generation or fire. |
|  | Do not insert hands or other objects through the air inlet or outlet while the product is operating. There are sharp and moving parts that could cause personal injury. |
|  | Do not block the inlet or outlet of air flow. It may cause product failure |

| ⚠ CAUTION | |
|---|--|
|  | Check to see if the parts are mounted correctly and wires are connected. Improper installation and connections can cause an electric shock or an injury. |
|  | Check whether the installation platform or frame has corroded. Corroded installation platform or frame can cause the unit to fall, resulting in injury. |
|  | Be sure to check whether the earth wire is correctly connected. |
|  | After the work has finished, be sure to do an insulation test to check whether the resistance is 2[Mohm] or more between the charge section and the non-charge metal section (Earth position). If the resistance value is low, a disaster such as a leak or electric shock is caused at user's side. |
|  | Check the drainage of the indoor unit after the repair. If drainage is faulty the water may enter the room and wet floor. |

2. Nomenclature

2.1 Global Model Name

| | | | | | | | | | | |
|----------|----------|----------|----------|----------|----------|----------|----------|----------|----------|----------|
| A | S | - | W | 1 | 2 | 6 | B | M | S | 0 |
| 1 | 2 | - | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 |

| Code | Type | Code of Model | Meaning | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|---|-----------------------------------|---------------|---|-------|---|------------|---|--|---|---------------------------------------|---|--|---|------------------------------------|---|---|---|------------------------------|---|-----------------------------------|---|----------------------------------|---|---|---|---|---|-----------------------|---|------------------------------------|---|----------------------------|---|---------------------|---|---------------------|---|-------------------|---|----------------------------|---|
| 1 | Production Center, Refrigerant | A~Z | L: Chang-won R22 A: Chang-won R410A | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 2 | Product Type | A~Z | S: Split Type Air Conditioner | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 3 | Cooling/Heating/Inverter | A~Z | C: Cooling Only H: Heat Pump X: C/O + E/Heater Z: H/P + E/Heater V: AC Inverter C/O N: AC Inverter H/P Q: DC Inverter C/O W: DC Inverter H/P | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 4, 5 | Capacity | 0~9 | Cooling/Heating Capacity Ex. "09" → 9,000 Btu/h | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 6 | Electric Range | 1~9 A~Z | 1: 115V/60Hz 2: 220V/60Hz 3: 208-230V/60Hz 5: 200-220V/50Hz 6: 220-240V/50Hz 7: 110V, 50/60Hz | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 7 | Chassis | A~Z | Name of Chassis | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 8 | Look | A~Z | Look, Color (Artcool Model) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 9 | Function | A~Z | <table border="1" style="width: 100%; border-collapse: collapse;"> <tbody> <tr><td>Basic</td><td style="text-align: center;">A</td></tr> <tr><td>Basic+4Way</td><td style="text-align: center;">B</td></tr> <tr><td>Basic+Deodorizing Filter (Carbon filter)</td><td style="text-align: center;">C</td></tr> <tr><td>Plasma+(A/changeove)+A/clean+2Way+Ion</td><td style="text-align: center;">E</td></tr> <tr><td>Plasma+(A/changeove)+A/clean+4way+Ion+Lamp</td><td style="text-align: center;">F</td></tr> <tr><td>Plasma+(A/changeove)+A/clean+Low A</td><td style="text-align: center;">G</td></tr> <tr><td>Plasma+(A/changeove)+A/clean+4way+Low A</td><td style="text-align: center;">H</td></tr> <tr><td>Plasma+(A/changeove)+A/clean</td><td style="text-align: center;">L</td></tr> <tr><td>Plasma+(A/changeove)+A/clean+4way</td><td style="text-align: center;">M</td></tr> <tr><td>Plasma+(A/changeove)+A/clean+PTC</td><td style="text-align: center;">N</td></tr> <tr><td>Plasma+(A/changeove)+Autoclean+4way+PTC</td><td style="text-align: center;">P</td></tr> <tr><td>Plasma+(A/changeove)+A/clean+4way+Low A+PTC</td><td style="text-align: center;">Q</td></tr> <tr><td>Smart(Robot) Cleaning</td><td style="text-align: center;">R</td></tr> <tr><td>Eco eye+Plasma+Allergy Filter+4way</td><td style="text-align: center;">S</td></tr> <tr><td>Plasma+Allergy Filter+4way</td><td style="text-align: center;">U</td></tr> <tr><td>Allergy Filter+4way</td><td style="text-align: center;">V</td></tr> <tr><td>Allergy Filter+2way</td><td style="text-align: center;">W</td></tr> <tr><td>Basic+Low Ambient</td><td style="text-align: center;">Y</td></tr> <tr><td>Basic+(A/clean)+4way+Low A</td><td style="text-align: center;">Z</td></tr> </tbody> </table> | Basic | A | Basic+4Way | B | Basic+Deodorizing Filter (Carbon filter) | C | Plasma+(A/changeove)+A/clean+2Way+Ion | E | Plasma+(A/changeove)+A/clean+4way+Ion+Lamp | F | Plasma+(A/changeove)+A/clean+Low A | G | Plasma+(A/changeove)+A/clean+4way+Low A | H | Plasma+(A/changeove)+A/clean | L | Plasma+(A/changeove)+A/clean+4way | M | Plasma+(A/changeove)+A/clean+PTC | N | Plasma+(A/changeove)+Autoclean+4way+PTC | P | Plasma+(A/changeove)+A/clean+4way+Low A+PTC | Q | Smart(Robot) Cleaning | R | Eco eye+Plasma+Allergy Filter+4way | S | Plasma+Allergy Filter+4way | U | Allergy Filter+4way | V | Allergy Filter+2way | W | Basic+Low Ambient | Y | Basic+(A/clean)+4way+Low A | Z |
| Basic | A | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Basic+4Way | B | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Basic+Deodorizing Filter (Carbon filter) | C | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Plasma+(A/changeove)+A/clean+2Way+Ion | E | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Plasma+(A/changeove)+A/clean+4way+Ion+Lamp | F | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Plasma+(A/changeove)+A/clean+Low A | G | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Plasma+(A/changeove)+A/clean+4way+Low A | H | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Plasma+(A/changeove)+A/clean | L | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Plasma+(A/changeove)+A/clean+4way | M | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Plasma+(A/changeove)+A/clean+PTC | N | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Plasma+(A/changeove)+Autoclean+4way+PTC | P | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Plasma+(A/changeove)+A/clean+4way+Low A+PTC | Q | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Smart(Robot) Cleaning | R | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Eco eye+Plasma+Allergy Filter+4way | S | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Plasma+Allergy Filter+4way | U | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Allergy Filter+4way | V | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Allergy Filter+2way | W | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Basic+Low Ambient | Y | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Basic+(A/clean)+4way+Low A | Z | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 10 | Serial No. | 1~9 | LG Model Development Serial No. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |

Part 2 Functions & Controls

| | |
|---------------------------------------|----|
| 1. List of Controls & Functions | 9 |
| 2. Basic Mode Controls..... | 10 |
| 3. Special Mode Controls..... | 12 |
| 4. Utility Functions | 13 |


1. List of Functions & Controls

| Category | Function | Description | Remark |
|-----------------------|--------------------------|--|--------|
| Basic mode controls | Cooling Mode | Cooling operation | |
| | Heating Mode | Heating operation | |
| | Healthy Dehumidification | Dry operation | |
| | Auto Changeover | Cooling mode is automatically changed to heating mode and vice versa | |
| Special Mode controls | Jet Cool | Powerful cooling mode | |
| | Jet Heat | Powerful heating mode | |
| | Energy saving | Air volume & set temp. are automatically selected for saving energy in cooling mode | |
| Utility Functions | Forced operation | Operation without remote controller | |
| | Auto Clean | After cooling operation, this function makes the evaporator dry | |
| | Air volume control | Indoor Fan speed Control | |
| | Natural Air control | Air volume control Program | |
| | Auto Swing | Vertical Airflow Direction control | |
| | Sleep mode Auto control | Air volume & set temp. are automatically changed for comfortable sleep | |
| | Auto Restart Function | When power returns after a power failure, Unit restarts in the previous operating mode | |

NOTE: The Exploded View SVC Manual has the particular Function table for each model.


2. Basic Mode Controls

2.1 Cooling Mode

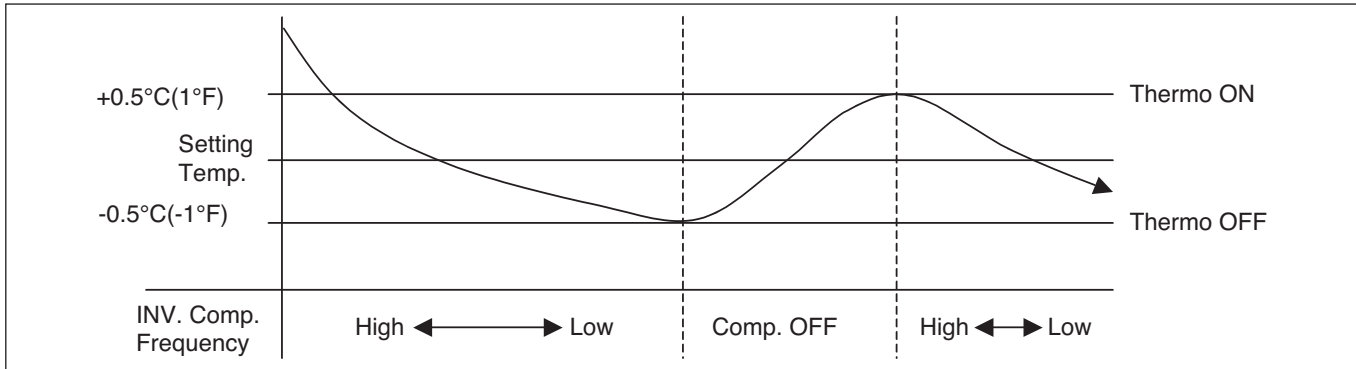

- Operating frequency of compressor depends on the load condition, like the difference between the room temp. and the set temp., frequency restrictions.
- If the compressor operates at some frequency, the operating frequency of compressor cannot be changed within 90 seconds. (not emergency conditions)
- Compressor turned off when
 - Intake air temperature reaches below 0.5°C(1°F) of the setting temperature for three minute continuously.
 - Intake air temperature reaches below 1.5°C(2.7°F) of the setting temperature
- Compressors 3 minute time delay.
 - After compressor off, the compressor can restart minimum 3 minute later.

2.2 Heating Mode

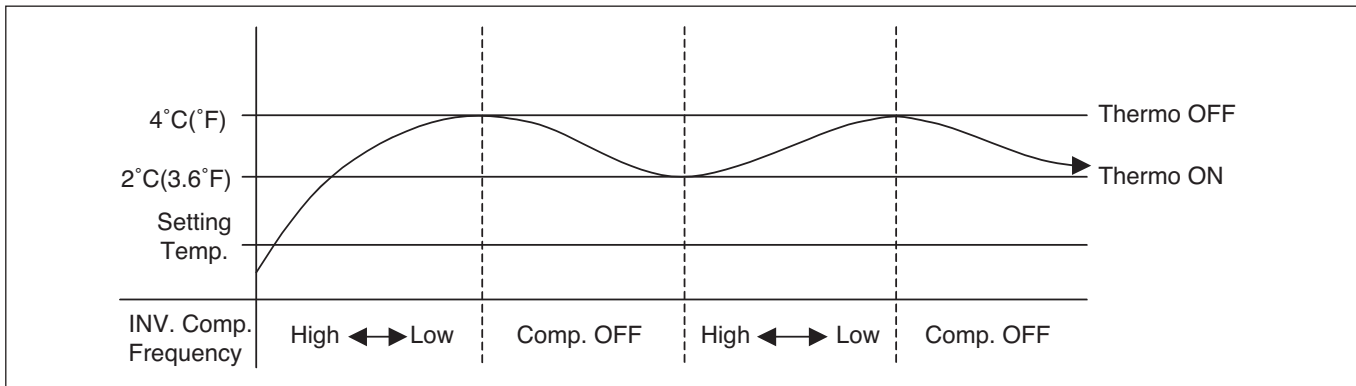

- Operating frequency of compressor depend on the load condition, The difference between the room temp. and set temp., frequency restrictions.
- If compressor operates at some frequency, the operating frequency of compressor cannot be changed within 90 seconds.
- Condition of compressor turned off
 - When intake air temperature reaches 4°C(7.2°F) above the setting temperature.
- Condition of compressor turned on
 - When intake air temperature reaches below 2°C(3.6°F) of above the setting temperature.
- Condition of indoor fan turned off
- While in defrost control, the indoor and outdoor fans are turned off.
- Compressor 3 minute delay
 - After compressor off, the compressor can restart minimum 3 minute later.

2.3 Healthy Dehumidification operation


- When the dehumidification operation is set by the remote controller, the intake air temperature is detected and the setting temp. is automatically set according to the intake air temperature.

| Intake air Temp. | Setting Temp. |
|--|---|
| $26^{\circ}\text{C}(78.8^{\circ}\text{F}) \leq \text{intake air temp.}$ | $25^{\circ}\text{C}(77^{\circ}\text{F})$ |
| $24^{\circ}\text{C}(75.2^{\circ}\text{F}) \leq \text{intake air temp.} < 26^{\circ}\text{C}(78.8^{\circ}\text{F})$ | intake air temp. $-1^{\circ}\text{C}(-2^{\circ}\text{F})$ |
| $22^{\circ}\text{C}(71.6^{\circ}\text{F}) \leq \text{intake air temp.} < 24^{\circ}\text{C}(75.2^{\circ}\text{F})$ | intake air temp. $-0.5^{\circ}\text{C}(-1^{\circ}\text{F})$ |
| $18^{\circ}\text{C}(64.4^{\circ}\text{F}) \leq \text{intake air temp.} < 22^{\circ}\text{C}(71.6^{\circ}\text{F})$ | intake air temp. |
| intake air temp. $< 18^{\circ}\text{C}(64.4^{\circ}\text{F})$ | $18^{\circ}\text{C}(64.4^{\circ}\text{F})$ |

- When intake air temp. is $1^{\circ}\text{C}(2^{\circ}\text{F})$ above the setting temp., condition of compressor is same as in cooling mode operation.
- When intake air temperature reaches $1^{\circ}\text{C}(2^{\circ}\text{F})$ below the setting temp., compressor operates in step1~step3 and the indoor fan speed again operates at low speed or comes to a stop.

2.4 Auto changeover operation

- The air conditioner changes the operation mode automatically to keep indoor temperature steady.
- When room temperature vary over $\pm 2^{\circ}\text{C}(\pm 4^{\circ}\text{F})$ with respect to setting temperature, air conditioner keeps the room temperature in $\pm 2^{\circ}\text{C}(\pm 4^{\circ}\text{F})$ with respect to setting temperature by changing the mode from cooling to heating and vice versa.

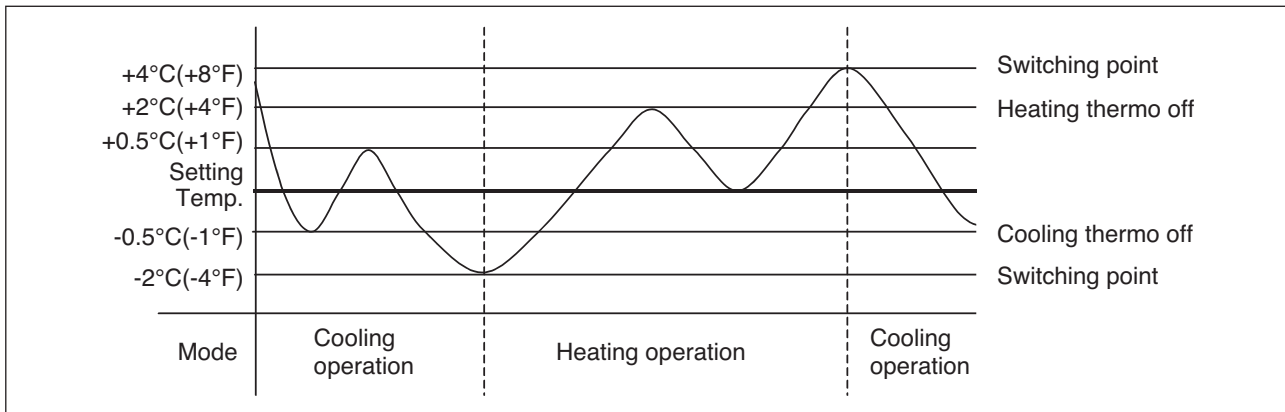

3. Special Mode Controls

3.1 Jet Cool operation

- In the heating mode or Auto Changeover operation, the Jet cool function does not work.
When it is input while in other mode of operation (cooling, dehumidification, Air purification, Air circulation), the Jet cool operation takes place.
- In the Jet cool mode, the indoor fan is operated at super-high speed for 30 min. at cooling mode operation.
- In the Jet cool mode, the room temperature is maintained at a setting temperature of 18°C(64.4°F).
- When the sleep timer mode is input during the Jet cool operation, the Jet cool mode has the priority.
- When the Jet cool button is pressed, the horizontal vane of the unit is reset to those of the initial cooling mode and then operate so that the air outflow could reach further.

3.2 Jet Heat operation

- While in cooling mode or Auto Changeover operation, the Jet Heat function does not work.
When it is input while in the Heating mode operation (dehumidification), the Jet Heat mode operation takes place
- In the Jet Heat mode, the indoor fan operated at super-high speed for 60 min. at Heating mode operation.
- In the Jet Heat mode, the room temperature is maintained at a temperature of 30°C(86°F).
- When the sleep timer mode is input during the Jet Heat mode operation, the Jet Heat mode has the priority.
- When the Jet Heat button is pressed, the horizontal vane of the unit is the unit reset to those of the initial Jet heating mode and then operates so that the air outflow could reach under flow.

3.3 Energy saving operation in cooling mode

- During cooling and dehumidification mode of operation, the Energy saving button can be input.
- In this operation, before we feel cold the set temperature and air volume is set automatically to save energy.

4. Utility Functions

4.1 Forced operation

- To operate the appliance manually in case when the remote control is lost, the forced operation selection switch is on the main unit of the appliance, and operate the appliance in the standard conditions.
- The operating condition is set according to the outdoor temp. and intake air temperature as follows.

| Indoor temp. | Operating Mode | Setting temp. | Setting speed of indoor fan |
|----------------------|--------------------------|---------------|-----------------------------|
| over 24°C(75.2°F) | Cooling | 22°C(71.6°F) | High speed |
| 21~24°C(69.8~75.2°F) | Healthy Dehumidification | 23°C(73.4°F) | |
| below 21°C(69.8°F) | Heating | 24°C(75.2°F) | |

- Operating procedures when the remote control can't be used is as follows :
 - The operation will be started if the ON/OFF button is pressed.
 - If you want to stop operation, re-press the button.
 - The ON/OFF switch is on the display PCB or side of indoor unit

4.2 Auto cleaning operation

- Function used to perform Self Cleaning to prevent the Unit from Fungus and bad odor.
- Used after the Cooling Operation before turning the unit off, clean the Evaporator and keep it dry for the next operation.
- The function is easy to operate as it is accessed through the Remote controller.

| | ON | OFF |
|------------|---------------|---------------|
| | Cooling CYCLE | Fan |
| Comp. | ON | 30 Min OFF |
| Indoor Fan | Setting Step | Super Low |

4.3 Air volume control

- Indoor Air fan motor control have 6 steps or 8 steps.
- Indoor Air volume is controlled "SH", "H", "MH", "M", "ML", "L" by the remote controller.
- "SL" step is selected in "Sleep Mode" operation.

| Step | Description |
|------|--------------|
| SL | Super Low |
| L | Low |
| ML | Medium-Low |
| M | Medium |
| MH | Medium-High |
| H | High |
| SH | Super High |
| Auto | Natural Wind |

4.4 Natural Air Control(Natural Wind)

- When the Auto Step is selected and then operated, the high, medium, or low speed of the airflow mode is operated for 2~15 sec. randomly by the Chaos Simulation.

4.5 Auto Swing


- By the Auto swing key input, the horizontal vane automatically operates with the Auto swing or it is fixed to the desired direction.

4.6 Sleep mode Auto control

- When the set sleep time is reached set time of [1,2,3,4,5,6,7hour] input by the remote control during the operation, the operation of the appliance stops.
- When the appliance is on pause, the sleep timer mode cannot be input.

4.6.1 Sleep timer operation for cooling cycle


- While in cooling mode , 30 min. after the start of the sleep timer, the setting temperature increases by 1°C(2°F) . After another 30minutes lapse, it increases again by 1°C(2°F) .

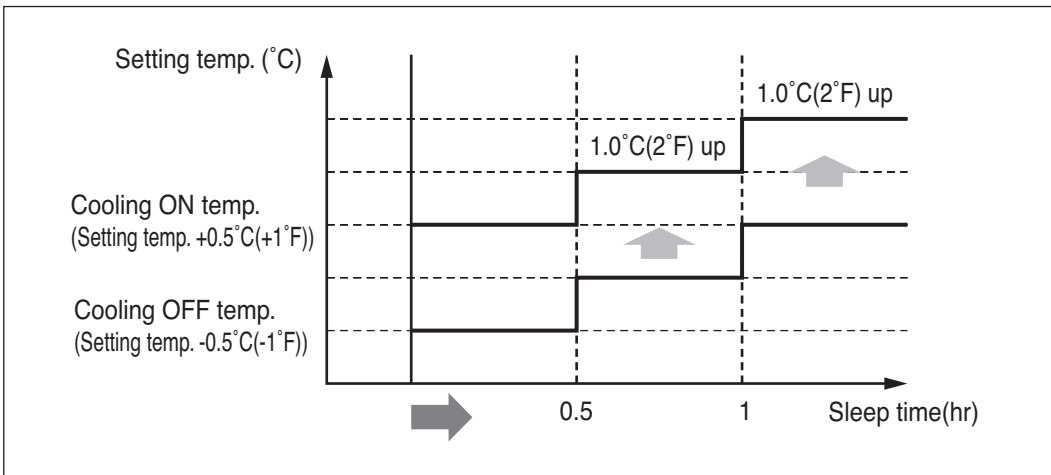

NOTE: Some Models are different by swing width and swing pattern.

4.6.2 Sleep timer operation for heating cycle

- While in heating mode, 60 min. after the start of the sleep timer, the setting temperature decreases by 1°C(2°F). After another 60minutes lapse, it decreases again by 1°C(2°F).

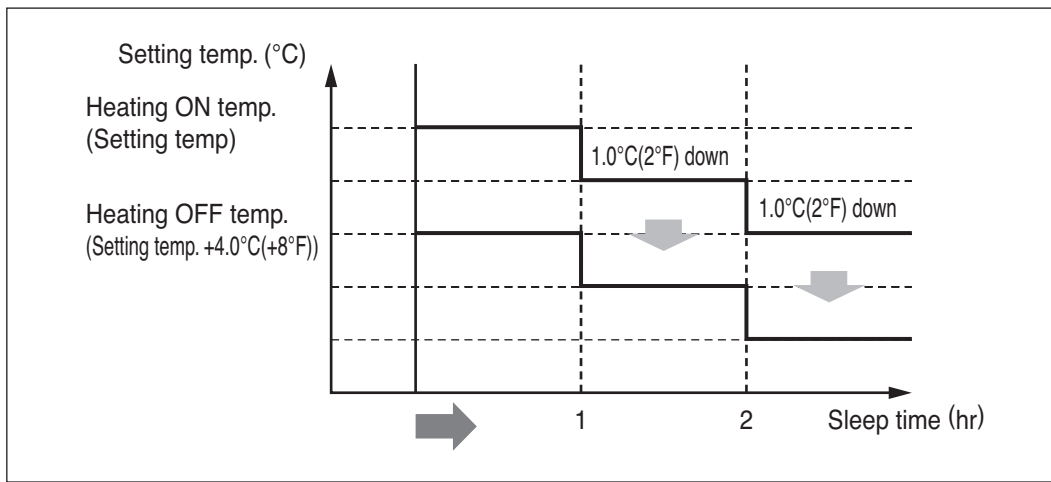

4.7 Auto restart

- When the power comes back after a sudden power failure during operation, the mode before the power failure is kept on the memory of the appliance and it automatically operates in the saved mode on the memory.
- Operation mode that is kept on the memory
 - State of operation ON/OFF
 - Operation mode/setting temp./selected airflow speed
 - Sleep timer mode/remaining time of sleep timer
 - Auto Swing


Part 3 Test Run

| | |
|-------------------------------|----|
| 1. Check before Test Run..... | 17 |
| 2. Test Run Flow chart | 18 |
| 3. Test Run Detail..... | 19 |

1. Check before Test Run

| | |
|----------|---|
| 1 | <p>Check to see whether there is any refrigerant leakage, and check whether the power or transmission cable is connected properly.</p> <p>NOTE: Check that there should be no disconnection when all pins and wires are pulled by hands.</p> |
| 2 | <p>Check whether the liquid pipe and gas pipe valves are fully opened.</p> <p>NOTE: Be sure to tighten caps.</p> |
| 3 | <p>Confirm that 500 V megger shows 2.0 MΩ or more between power supply terminal block and ground. Do not operate in the case of 2.0 MΩ or less.</p> <p>NOTE: Never carry out mega ohm check over terminal control board. Otherwise the control board may break.</p> <p>Immediately after mounting the unit or after leaving it turned off for an extended length of time, the resistance of the insulation between the power supply terminal board and the ground may decrease to approx. 2.0 MΩ as a result of refrigerant accumulation in the internal compressor.</p> <p>If the insulation resistance is less than 2.0 MΩ, turn on the main power supply.</p> |

2. Test Run Flow chart

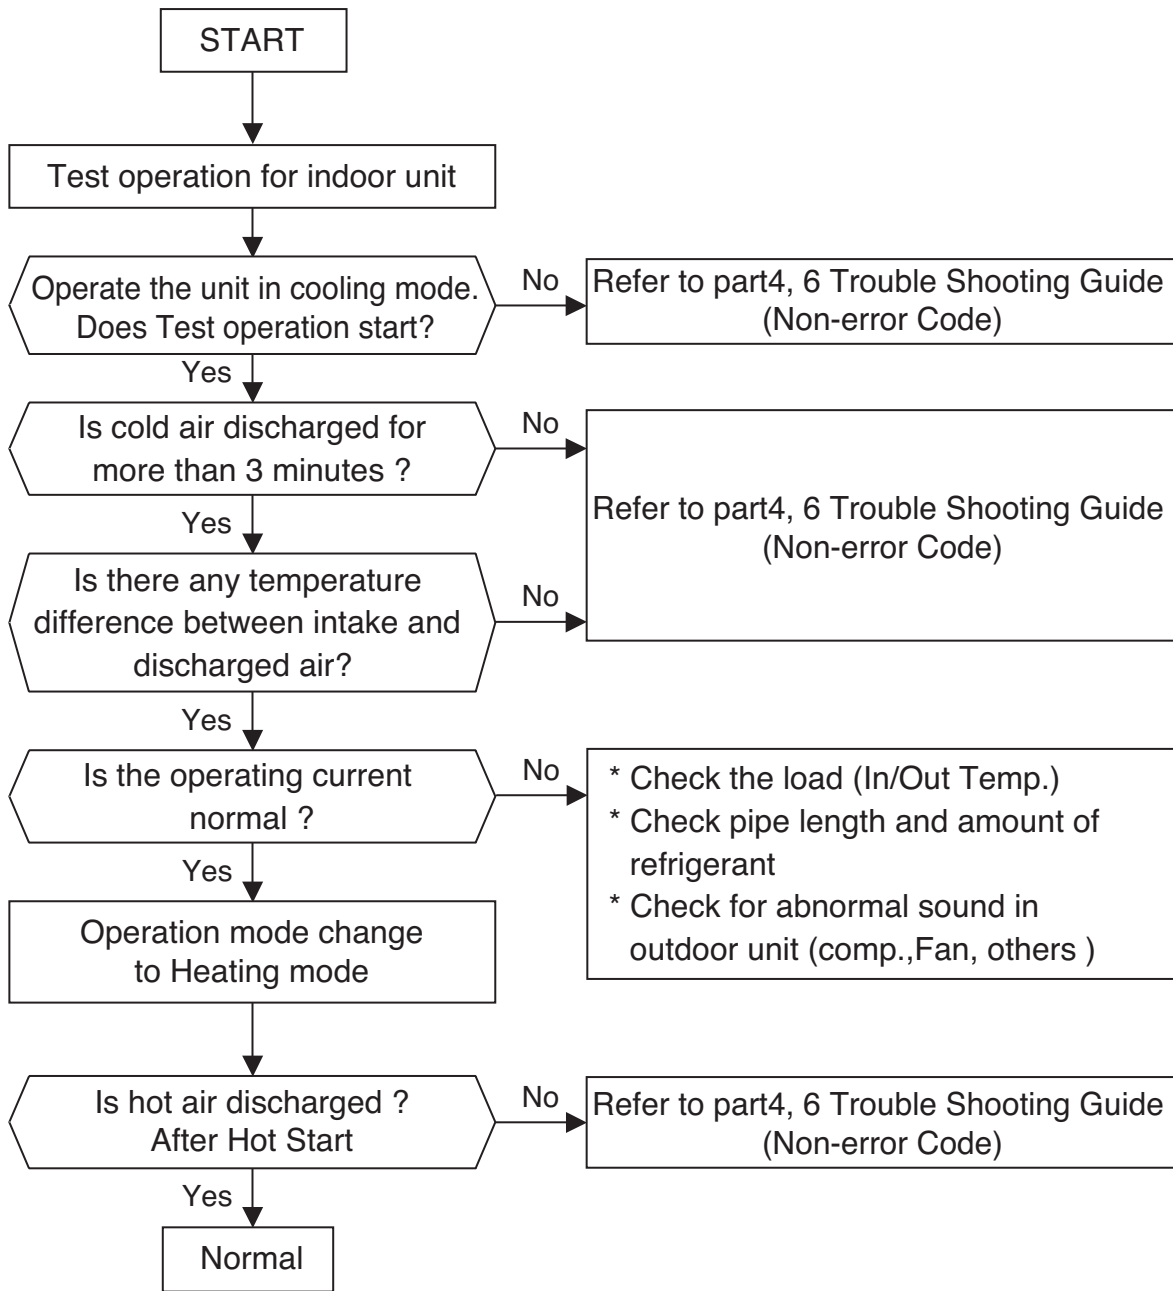


NOTE: When outdoor temperature is low, the unit is operated to Heating mode

3. Test Run Detail

1. Check that all tubing and wiring have been properly connected.
2. Check that the gas and liquid side service valves are fully open.
3. Check that all pins and wires have been connected thoroughly by pulling with hands.

Settlement of outdoor unit


- Anchor the outdoor unit with a bolt and nut($\phi 10\text{mm}$) tightly and horizontally on a concrete or rigid mount.
- When installing on the wall, roof or rooftop, anchor the mounting base securely with a nail or wire assuming the influence of wind and earthquake.
- In the case when the vibration of the unit is conveyed to the hose, secure the unit with an anti-vibration bushing.

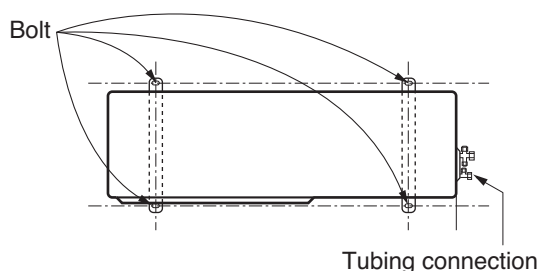

Evaluation of the performance

Operate unit for 15~20 minutes, then check the system refrigerant charge:

1. Measure the pressure of the gas side service valve.
2. Measure the temperature of the intake and discharge air.
3. Ensure the difference between the intake temperature and the discharge is more than 8°C (46°F) (Cooling) or (Heating).

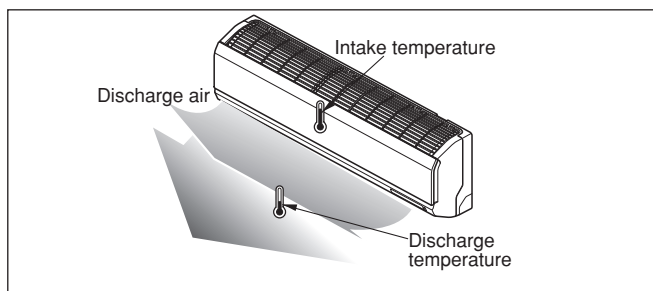

4. For reference; the gas side pressure of optimum condition is as below.(Cooling)

| Refrigerant | Outside ambient TEMP. | The pressure of the gas side service valve. |
|-------------|---|--|
| R22 | 35°C (95°F) | $4\sim 5\text{kg}/\text{cm}^2\text{G}$ ($56.8\sim 71.0$ P.S.I.G.) |
| R410A | 35°C (95°F) | $6.5\sim 12.5\text{kg}/\text{cm}^2\text{G}$ ($92\sim 178$ P.S.I.G.) |

NOTE: If the actual pressure is higher than shown, the system is most likely over-charged, and charge should be removed.

If the actual pressure are lower than shown, the system is most likely undercharged, and charge should be added.

The air conditioner is now ready for use.

PUMP DOWN

This is performed when the unit is to be relocated or the refrigerant circuit is serviced.

Pump Down means collecting all refrigerant in the outdoor unit without loss in refrigerant gas.

CAUTION:

Be sure to perform Pump Down procedure with the unit in cooling mode.

Pump Down Procedure

1. Connect a low-pressure gauge manifold hose to the charge port on the gas side service valve.
2. Open the gas side service valve halfway and purge the air from the manifold hose using the refrigerant gas.
3. Close the liquid side service valve(all the way in).
4. Turn on the unit's operating switch and start the cooling operation.
5. When the low-pressure gauge reading becomes 1 to $0.5\text{kg}/\text{cm}^2$ G(14.2 to 7.1 P.S.I.G.), fully close the gas side valve stem and then quickly turn off the unit. At that time, Pump Down has been completed and all refrigerant gas will have been collected in the outdoor unit.
5. Check operating current.
6. Change operation mode and check.


Part 4 Troubleshooting

| | |
|--|-----|
| 1. 2-Way, 3-Way Valve | 21 |
| 2. Pumping Down | 22 |
| 3. Evacuation (All amount of refrigerant leaked) | 23 |
| 4. Gas Charging (After Evacuation) | 24 |
| 5. Error Message | 25 |
| 6. Trouble Shooting Guide (Non Error Code) | 33 |
| 7. Trouble Shooting Guide (with Error Code) | 47 |
| 8. Appendix | 79 |
| • Appendix A (Installation Checking Guide) | 80 |
| • Appendix B (LG SIMs) | 107 |
| • Appendix C (Electrical Part Checking Method)..... | 129 |

1. 2-Way, 3-Way Valve

| | | 2-way Valve (Liquid Side) | 3-way Valve (Gas Side) | |
|-----------|-----------------------------|---------------------------|--------------------------|-------------------------------------|
| | | | | |
| Works | | Shaft position | Shaft position | Service port |
| Shipping | | Closed (with valve cap) | Closed (with valve cap) | Closed (with cap) |
| 1. | Air purging (Installation) | Open (counter-clockwise) | Closed (clockwise) | Open (push-pin or with vacuum pump) |
| Operation | | Open (with valve cap) | Open (with valve cap) | Closed (with cap) |
| 2. | Pumping down (Transferring) | Closed (clockwise) | Open (counter-clockwise) | Open (connected manifold gauge) |
| 3. | Evacuation (Servicing) | Open | Open | Open (with charging cylinder) |
| 4. | Gas charging (Servicing) | Open | Open | Open (with charging cylinder) |
| 5. | Pressure check (Servicing) | Open | Open | Open (with charging cylinder) |
| 6. | Gas releasing (Servicing) | Open | Open | Open (with charging cylinder) |


2. Pumping Down

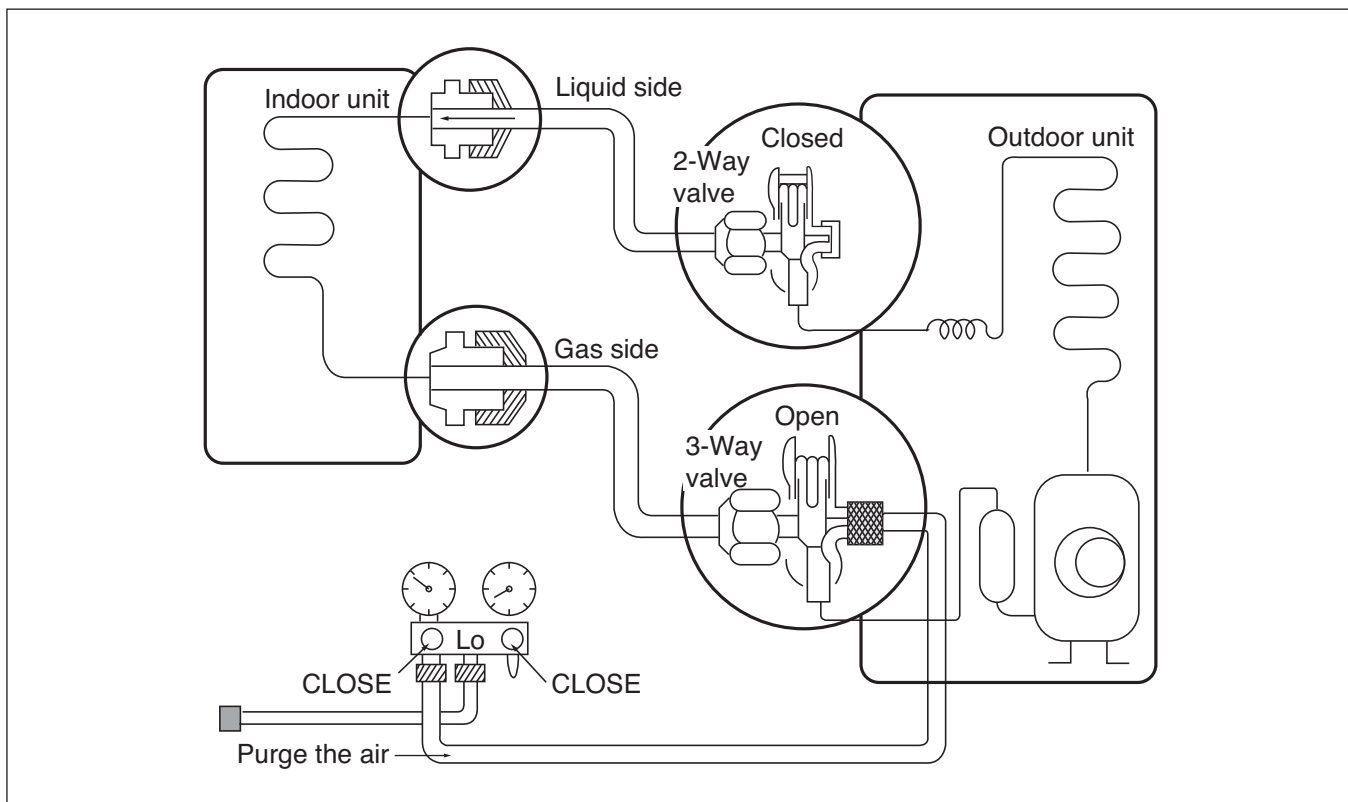

• Procedure

- (1) **Confirm that both the 2-way and 3-way valves are set to the open position.**
 - Remove the valve stem caps and confirm that the valve stems are in the raised position.
 - Be sure to use a hexagonal wrench to operate the valve stems.
- (2) **Operate the unit for 10 to 15 minutes.**
- (3) **Stop operation and wait for 3 minutes, then connect the charge set to the service port of the 3-way valve.**
 - Connect the charge hose with the push pin to the service port.
- (4) **Air purging of the charge hose.**
 - Open the low-pressure valve on the charge set slightly to air purge from the charge hose.
- (5) **Set the 2-way valve to the closed position.**
- (6) **Operate the air conditioner at the cooling cycle and stop it when the gauge indicates $1\text{kg/cm}^2\text{-g}$.**
- (7) **Immediately set the 3-way valve to the closed position.**
 - Do this quickly so that the gauge ends up indicating 3 to $5\text{kg/cm}^2\text{-g}$.
- (8) **Disconnect the charge set, and mount the 2-way and 3-way valve's stem nuts and the service port nut.**
 - Use torque wrench to tighten the service port nut to a torque of $1.8\text{ kg}\cdot\text{m}$.
 - Be sure to check for gas leakage.


3. Evacuation (All amount of refrigerant leaked)

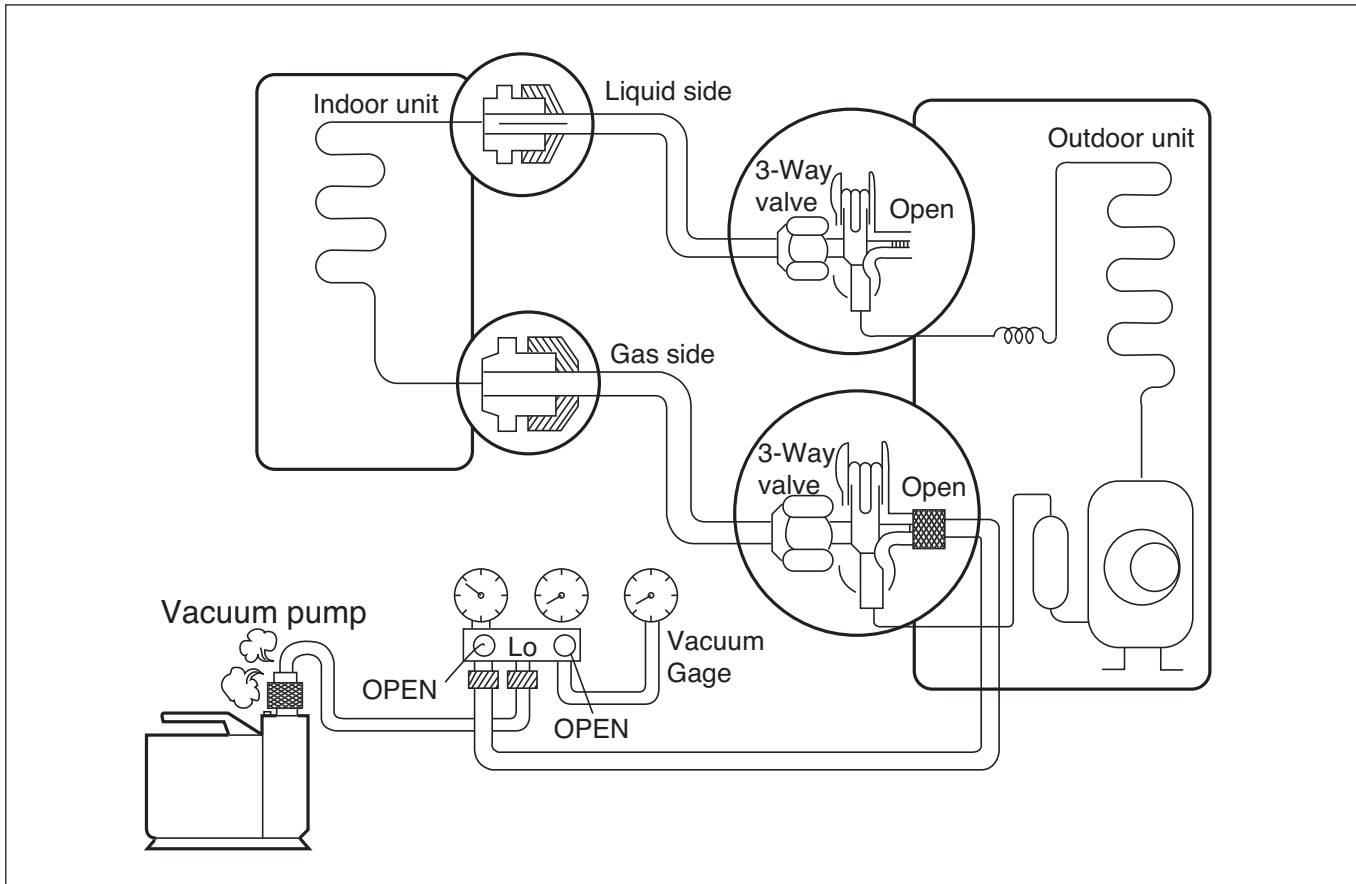

• Procedure

- (1) Connect the vacuum pump to the center hose of charge set center hose
- (2) Evacuation for approximately one hour.
 - Confirm that the gauge needle has moved toward 0.8 Torr.
- (3) Close the valve (Lo side) on the charge set, turn off the vacuum pump, and confirm that the gauge needle does not move (approximately 5 minutes after turning off the vacuum pump).
- (4) Disconnect the charge hose from the vacuum pump.
 - Vacuum pump oil.
 - If the vacuum pump oil becomes dirty or depleted, replenish as needed.

4. Gas Charging (After Evacuation)

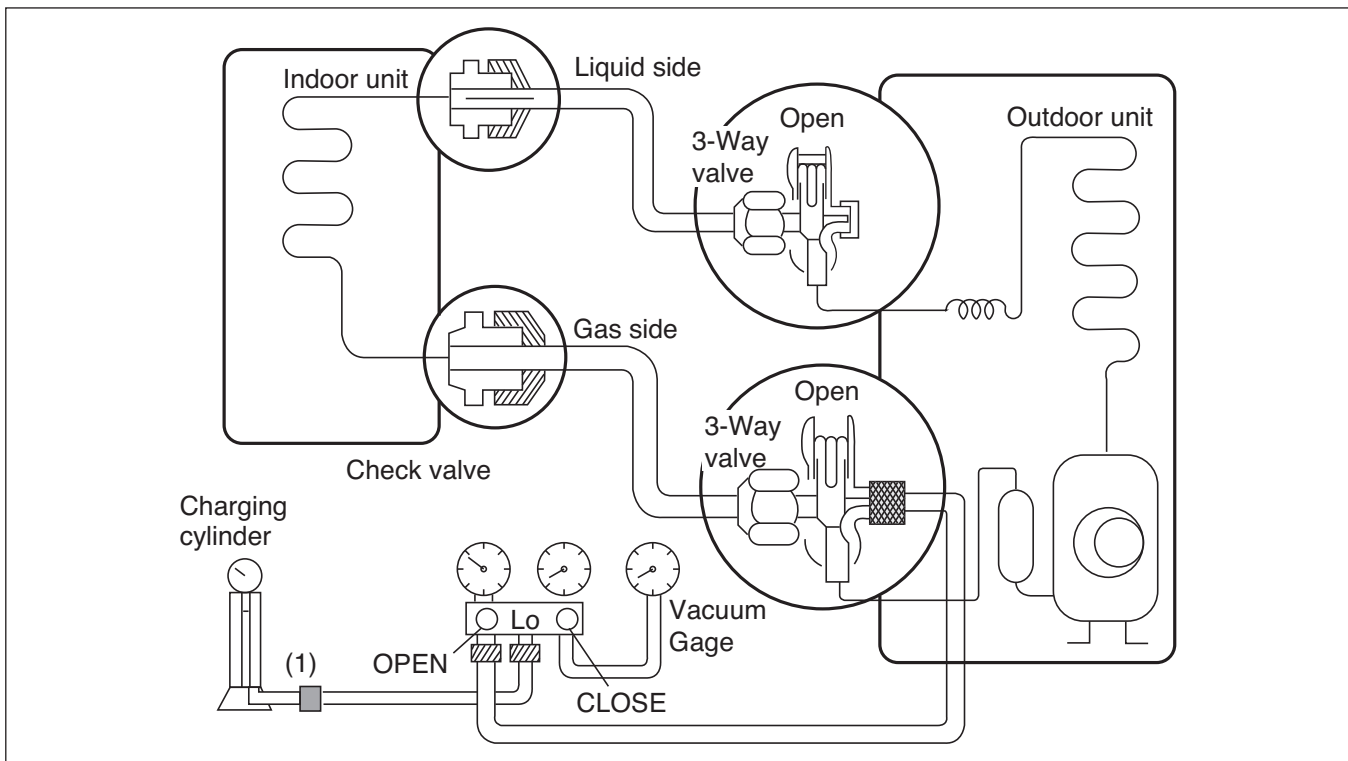

• Procedure

(1) Connect the charge hose to the charging cylinder.

- Connect the charge hose which you disconnected from the vacuum pump to the valve at the bottom of the cylinder.
- If you are using a gas cylinder, also use a scale and reverse the cylinder so that the system can be charged with liquid.

(2) Purge the air from the charge hose.

- Open the valve at the bottom of the cylinder and press the check valve on the charge set to purge the air. (Be careful of the liquid refrigerant). The procedure is the same if using a gas cylinder.

(3) Open the valve (Lo side on the charge set and charge the system with liquid refrigerant.

- If the system can not be charged with the specified amount of refrigerant, it can be charged with a little at a time (approximately 150g each time) while operating the air conditioner in the cooling cycle; however, one time is not sufficient, wait approximately 1 minute and then repeat the procedure (pumping down-pin).

This is different from previous procedures.

Because you are charging with liquid refrigerant from the gas side, absolutely do not attempt to charge with larger amounts of liquid refrigerant while operating the air conditioner.

(4) Immediately disconnect the charge hose from the 3-way valve's service port.

- Stopping partway will allow the gas to be discharged.
- If the system has been charged with liquid refrigerant while operating the air conditioner turn off the air conditioner before disconnecting the hose.

(5) Mount the valve stem nuts and the service port nut.

- Use torque wrench to tighten the service port nut to a torque of 1.8 kg.m.
- Be sure to check for gas leakage.

5. Error Message

■ Error Indicator

- The function is to self-diagnosis air conditioner and express the troubles identically if there is any trouble.
- If more than two troubles occur simultaneously, primarily the highest trouble of error code is expressed.
- After error occurrence, if error is released, error LED is also released simultaneously.
- To operate again on the occurrence of error code, be sure to turn off the power and then turn on.
- Having or not of error code is different from Model.


■ Caution

- CH01~12 are related to the indoor unit problems , and CH21~73 are related to the outdoor unit problems except CH05/53. Do not replace the indoor unit parts based on CH21~73 errors except CH53, or replace the outdoor unit parts based on CH01~12 errors except CH05.
- Main errors among the outdoor unit errors will display in the indoor unit only when they are detected 10 times per hour. Therefore the type of errors can be identified from LED on the outdoor unit PCBA even before it is displayed in the indoor unit. Check for the LED on the outdoor unit PCBA.
- After removing the cause of CH error, turn power off and on after 3 minutes, and then Display indicator will disappear from the outdoor unit PCBA or indoor unit. It requires 3 minutes to fully discharge the outdoor unit PCBA.


Indoor Unit Error

| Error Code | Descriptions | Number of flashes | |
|------------|--|-------------------|--------|
| | | Indoor unit | |
| | | LED 1 | LED 2 |
| 1 | Indoor unit room temperature sensor error | 1 time | - |
| 2 | Indoor unit inlet pipe sensor error | 2 times | - |
| 3 | Wired remote control error | 3 times | - |
| 4 | Float switch error(optional) | 4 times | - |
| 5 | Communication error between indoor and outdoor units | 5 times | - |
| 6 | Indoor unit outlet pipe sensor error | 6 times | - |
| 9 | Indoor unit EEPROM error | 9 times | - |
| 10 | Indoor unit BLDC motor fan lock | - | 1 time |
| 12 | Indoor unit middle pipe sensor error | 2 times | 1 time |

1) Type 1 (2 LED) - SW, SB, SC Chassis

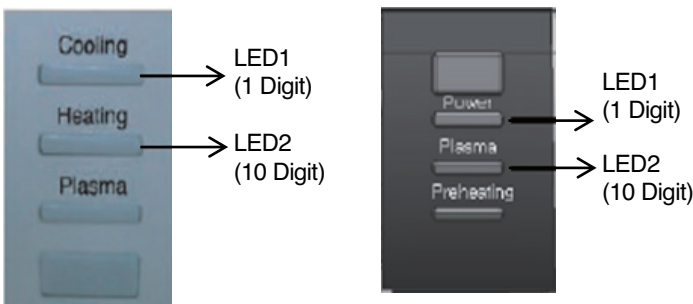


2) Type 2 (Horizontal 4 LED) - S4, S5 Chassis

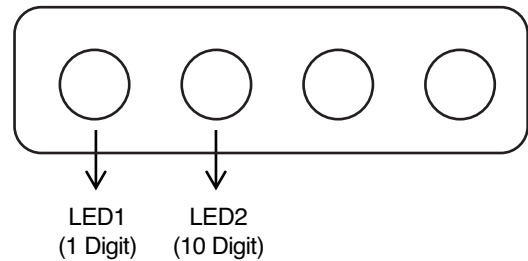

3) Type 3 - SH Chassis



4) Type 4 (vertical 3 or 4 LED) - SA, SJ, SK Chassis

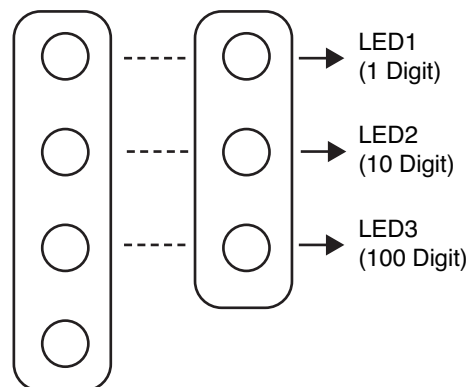



5) Type 5 (Number Display Model)




Ex) Error Code CH05

6) Type 6 (1 LED)




Ex) Error Code CH02

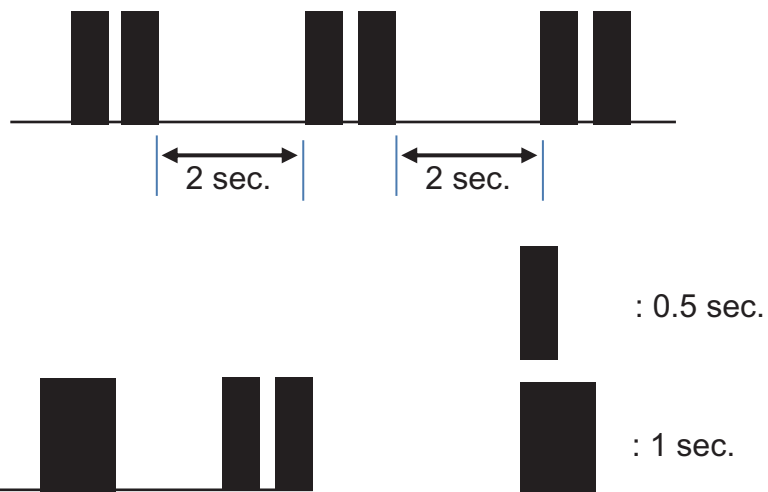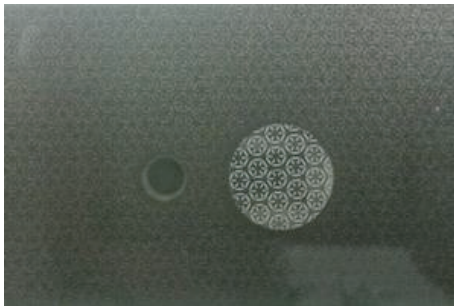

Ex) Error Code CH12

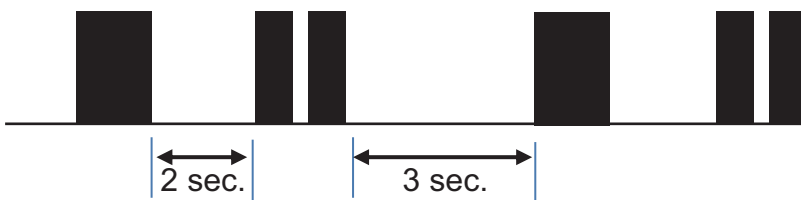

7) Type 7 (Gallery)

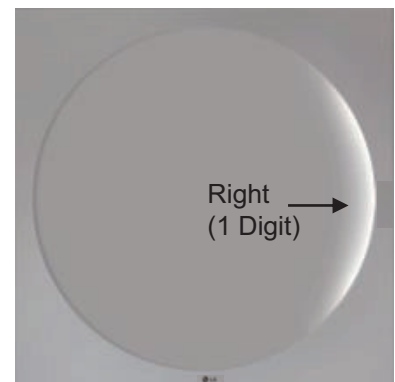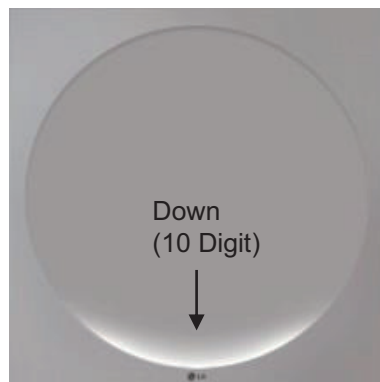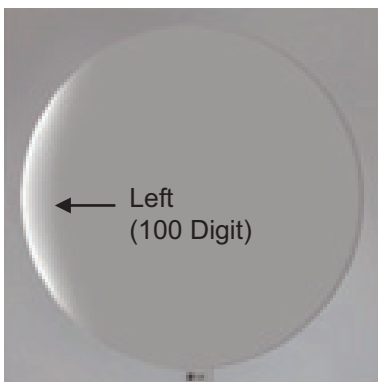

■ Outdoor Unit Error


1) 2 LED Type

| Error Code | Descriptions | Error Indication | |
|------------|---|------------------|-------------|
| | | In/Outdoor | |
| | | LED 2 | LED 1 |
| 21 | DC Peak (IPM Fault) | 2 Times | 1 Time |
| 22 | CT 2 (Max CT) | 2 Times | 2 Times |
| 23 | DC Link Low Volt | 2 Times | 3 Times |
| 26 | DC Comp Position Error | 2 Times | 6 Times |
| 27 | PSC Fault | 2 Times | 7 Times |
| 29 | Comp Phase Over-Current | 2 Times | 9 Times |
| 32 | Inverter Compressor D-Pipe Overheat | 3 Times | 2 Times |
| 34 | High Pressure Sensor High | 3 Times | 4 Times |
| 35 | Low Pressure Sensor Low | 3 Times | 5 Times |
| 36 (38) | Refrigerant Leakage Detection | 3 Times | 6 (8) Times |
| 37 | Exceed the Compression Ratio Limit | 3 Times | 7 Times |
| 40 | CT Sensor Error | 4 Times | - |
| 41 | D-Pipe Sensor Error | 4 Times | 1 Times |
| 42 | Low Pressure sensor Error | 4 Times | 2 Times |
| 43 | High Pressure sensor Error | 4 Times | 3 Times |
| 44 | Outdoor Air Sensor Error | 4 Times | 4 Times |
| 45 | Cond. Middle Pipe Sensor Error | 4 Times | 5 Times |
| 46 | S-Pipe Sensor Error | 4 Times | 6 Times |
| 51 | Excess Capacity (Mismatching between In/Outdoor unit) | 5 Times | 1 Times |
| 53 | Communication Error (IN-OUT) | 5 Times | 3 Times |
| 61 | Cond. Pipe High | 6 Times | 1 Times |
| 62 | Heat Sink Sensor Temp. High | 6 Times | 2 Times |
| 67 | BLDC Motor Fan Lock | 6 Times | 7 Times |
| 72 | Detect 4 Way Valve Transfer Failure | 7 Times | 2 Times |


2) 1 LED Type

| Error Code | Descriptions | Error Indication | | | |
|------------|---|------------------|-------------|-------------|-------------|
| | | Outdoor Unit | | Indoor Unit | |
| | | Red | Red | LED 2 | LED 1 |
| 21 | DC Peak (IPM Fault) | 2 Times | 1 Time | 2 Times | 1 Time |
| 22 | CT 2 (Max CT) | 2 Times | 2 Times | 2 Times | 2 Times |
| 23 | DC Link Low Volt | 2 Times | 3 Times | 2 Times | 3 Times |
| 26 | DC Comp Position Error | 2 Times | 6 Times | 2 Times | 6 Times |
| 27 | PSC Fault | 2 Times | 7 Times | 2 Times | 7 Times |
| 29 | Comp Phase Over-Current | 2 Times | 9 Times | 2 Times | 9 Times |
| 32 | Inverter Compressor D-Pipe Overheat | 3 Times | 2 Times | 3 Times | 2 Times |
| 34 | High Pressure Sensor High | 3 Times | 4 Times | 3 Times | 4 Times |
| 35 | Low Pressure Sensor Low | 3 Times | 5 Times | 3 Times | 5 Times |
| 36 (38) | Refrigerant Leakage Detection | 3 Times | 6 (8) Times | 3 Times | 6 (8) Times |
| 37 | Exceed the Compression Ratio Limit | 3 Times | 7 Times | 3 Times | 7 Times |
| 40 | CT Sensor Error | 4 Times | - | 4 Times | - |
| 41 | D-Pipe Sensor Error | 4 Times | 1 Times | 4 Times | 1 Times |
| 42 | Low Pressure sensor Error | 4 Times | 2 Times | 4 Times | 2 Times |
| 43 | High Pressure sensor Error | 4 Times | 3 Times | 4 Times | 3 Times |
| 44 | Outdoor Air Sensor Error | 4 Times | 4 Times | 4 Times | 4 Times |
| 45 | Cond. Middle Pipe Sensor Error | 4 Times | 5 Times | 4 Times | 5 Times |
| 46 | S-Pipe Sensor Error | 4 Times | 6 Times | 4 Times | 6 Times |
| 51 | Excess Capacity (Mismatching between In/Outdoor unit) | 5 Times | 1 Times | 5 Times | 1 Times |
| 53 | Communication Error (IN-OUT) | 5 Times | 3 Times | 5 Times | 3 Times |
| 61 | Cond. Pipe High | 6 Times | 1 Times | 6 Times | 1 Times |
| 62 | Heat Sink Sensor Temp. High | 6 Times | 2 Times | 6 Times | 2 Times |
| 67 | BLDC Motor Fan Lock | 6 Times | 7 Times | 6 Times | 7 Times |
| 72 | Detect 4 Way Valve Transfer Failure | 7 Times | 2 Times | 7 Times | 2 Times |


3) How they display in the outdoor unit PCBA, 2 LED Model

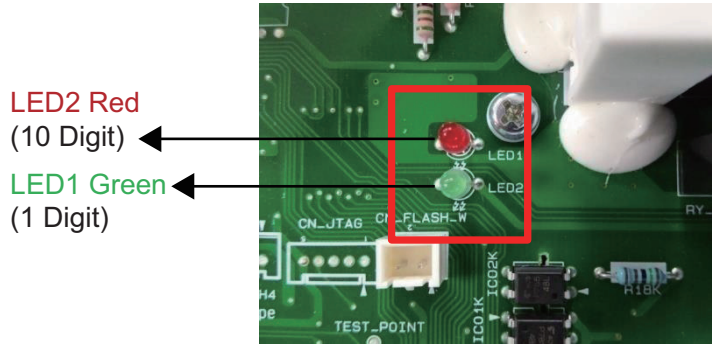


Ex) Error Code CH21

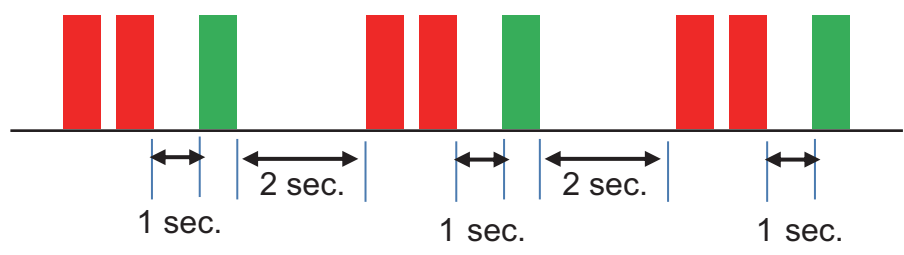

4) How they display in the outdoor unit PCBA, 1 LED Model

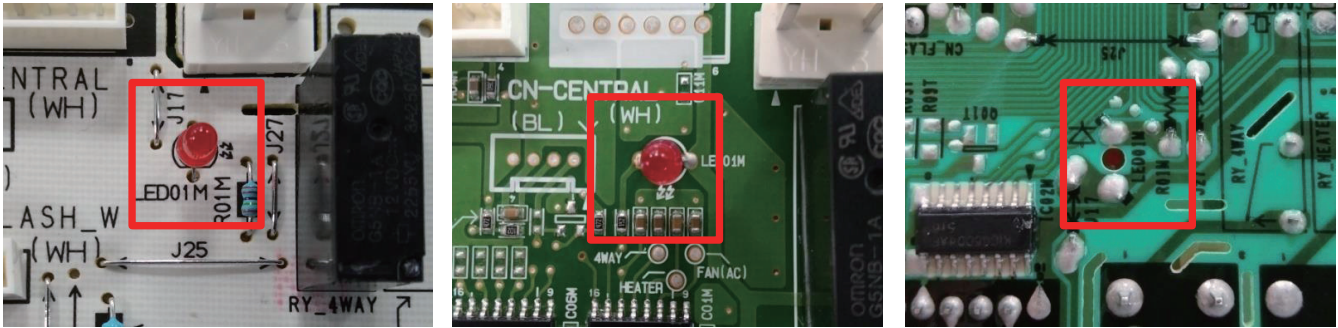


Ex) Error Code CH21

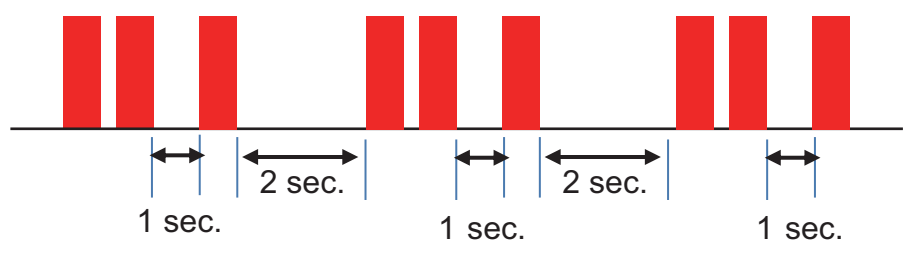


■ Descriptions of main symbols



- **It means execution :**
- Executes orders in the square box.

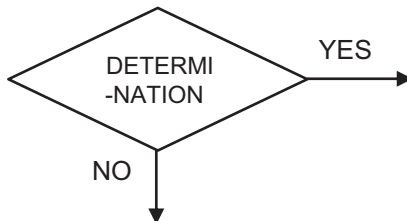

- **It means determination :**
- Selects YES if correct, NO if incorrect.



- **It means solution :**
- Executes orders in the square box.



- **It means PCBA check :**
- It is stage to check PCBA fault when replacing PCBA
- Check when the judgment of PCBA fault is not sure



- **It means SIMs module utilization is available:**
- Utilize SIMs module to save the test time and convenience
- Easy to collect information for Cycle / Enables judgment for the faulty



- **It means Simple Checking Guide**



- **This symbol indicates the possibility of death or serious injury!**



- **Dangerous Voltage! Be careful!**





- **Additional Information**

■ Introduction of Guide Form

| Error Code | Error Detection | Cause of Error | Check Point |
|-------------------------------------|---|---|--|
| CH 00 It displays an error code. | It displays the description for the error code. | • It describes the cause of error code. | • It describes the details to be confirmed when error code occurs. |

⚠ WARNING It describes the specific considerations before the service for the product.
Be sure to perform the service after confirming the warning.

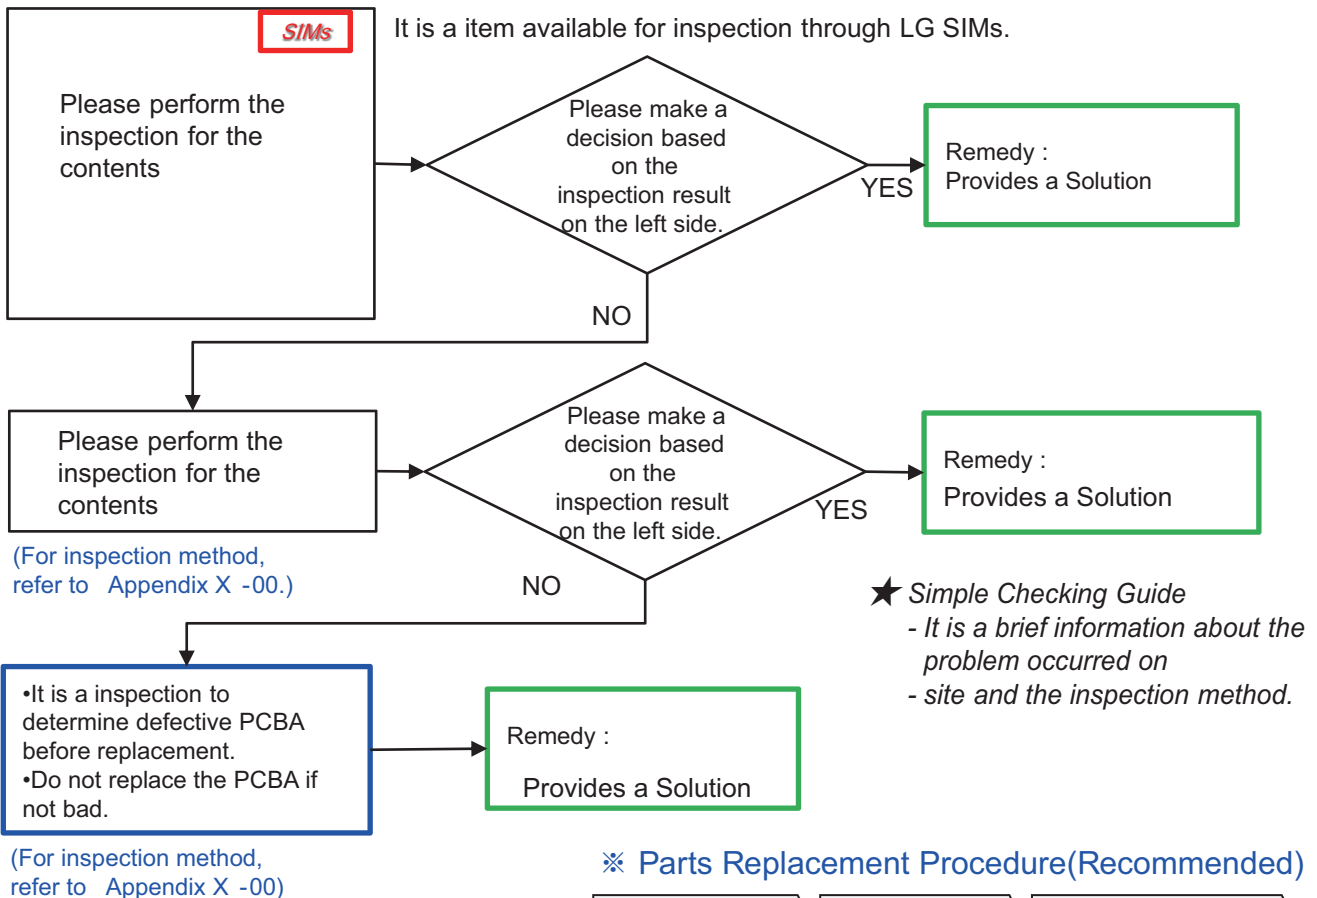


.It is a order to recommend when replacement of the components is need during service

6. Trouble Shooting Guide (Non Error Code)

| Symptoms | Cause of symptoms | Check Point |
|--|---|---|
| <ul style="list-style-type: none"> Leakage of indoor unit | <ul style="list-style-type: none"> Drain hose installation defects Clogged with debris inside of the drain hose Bad horizontal installation of the product Bad wiring clean-up Heat exchanger contamination Damaged drain pan | <ul style="list-style-type: none"> Check the status of Drain hose Installation Check debris in the Drain hose Check horizontal status of the Indoor unit Check inner wiring of the Indoor unit Check status of the Indoor unit heat exchanger Check status of the Indoor unit Drain pan |


WARNING

Be sure to prevent condensate from flowing into the electronic units when perform leak test.
 Be sure to cut off the main power when performing leak test.
 After completing leak test, confirm the status of inflow of the condensate to the electronic units, and apply power after drying the electronic units perfectly by dryer, etc.

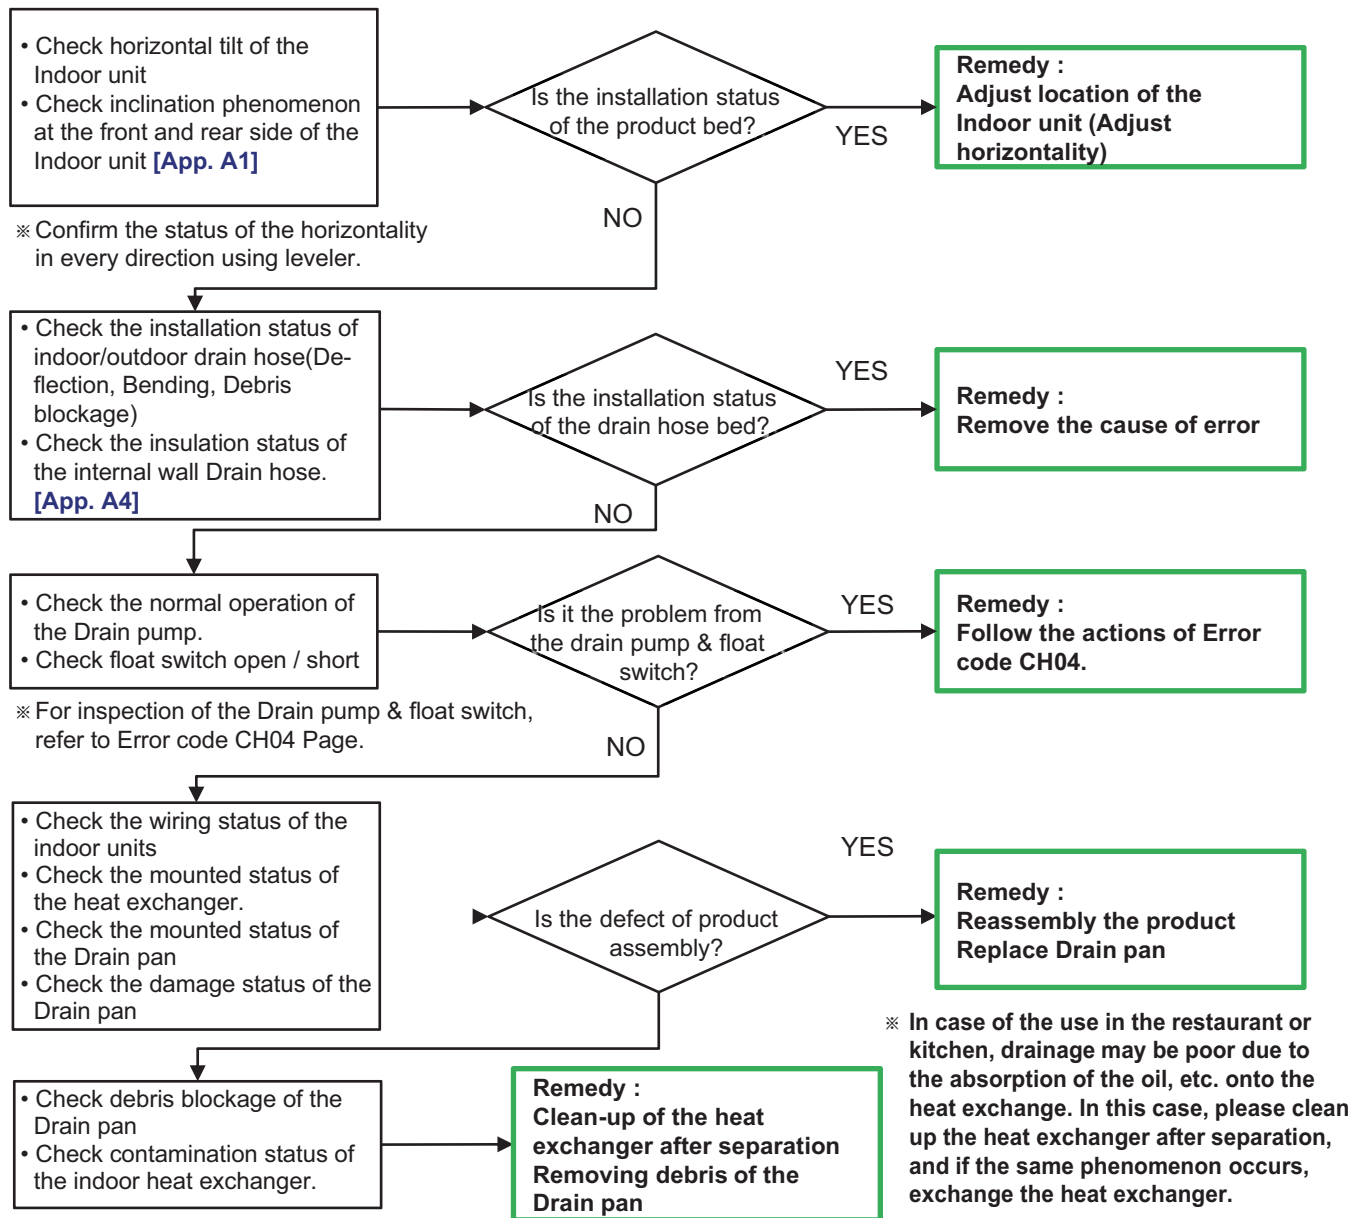


Field failure examples


- Bad installation status of the Indoor unit (tilted)

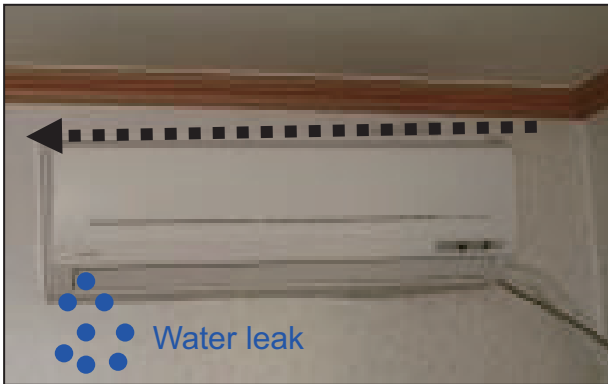


- Bad insulation status of the Drain hose

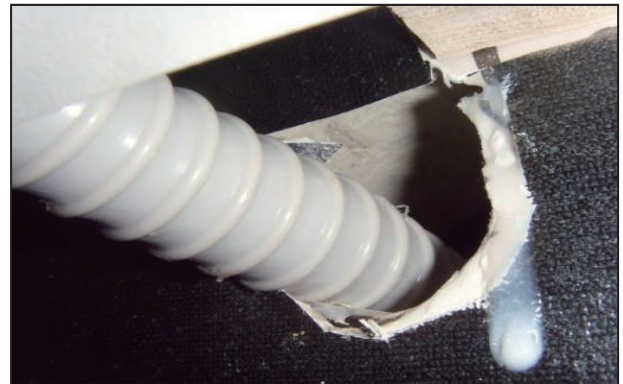

- Oil stain absorption of the Heat exchanger

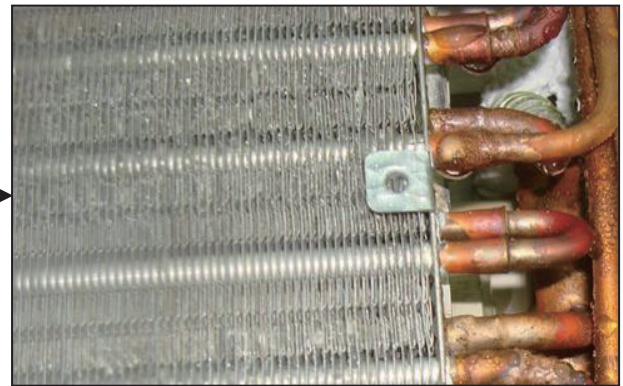

- Leakage at the outlet of the Indoor unit

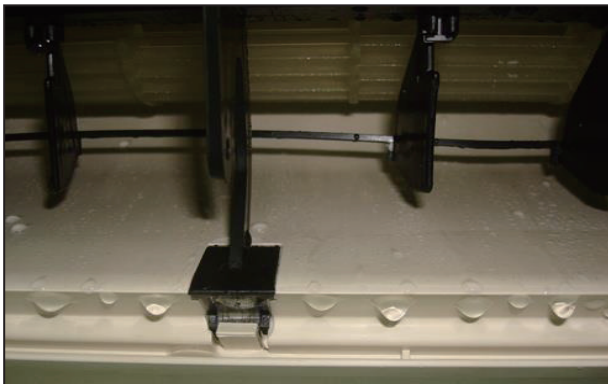

- Shield of Heat exchanger by debris blockage




- Bad wiring status of the Indoor unit



| Symptoms | Cause of symptoms | Check Point |
|--|--|---|
| No operation of the indoor unit(Power insensitive) | <ul style="list-style-type: none"> No power applied on the wall Power strip(multi plug outlet) used Bad Main power line Bad connecting wire Outdoor terminal block fuse open Indoor unit PCBA burn-out | <ul style="list-style-type: none"> Check whether Power strip was used Check wiring connection / main power line open short Check outdoor terminal block fuse Check Indoor unit PCBA burnout |

⚠ WARNING


Before checking PCBA or each outdoor/indoor electric parts, wait for 3 minutes after the power is off.
When measuring at standby state of power supply, after checking the measurement mode of the meter, be careful of the short-circuits with other parts.

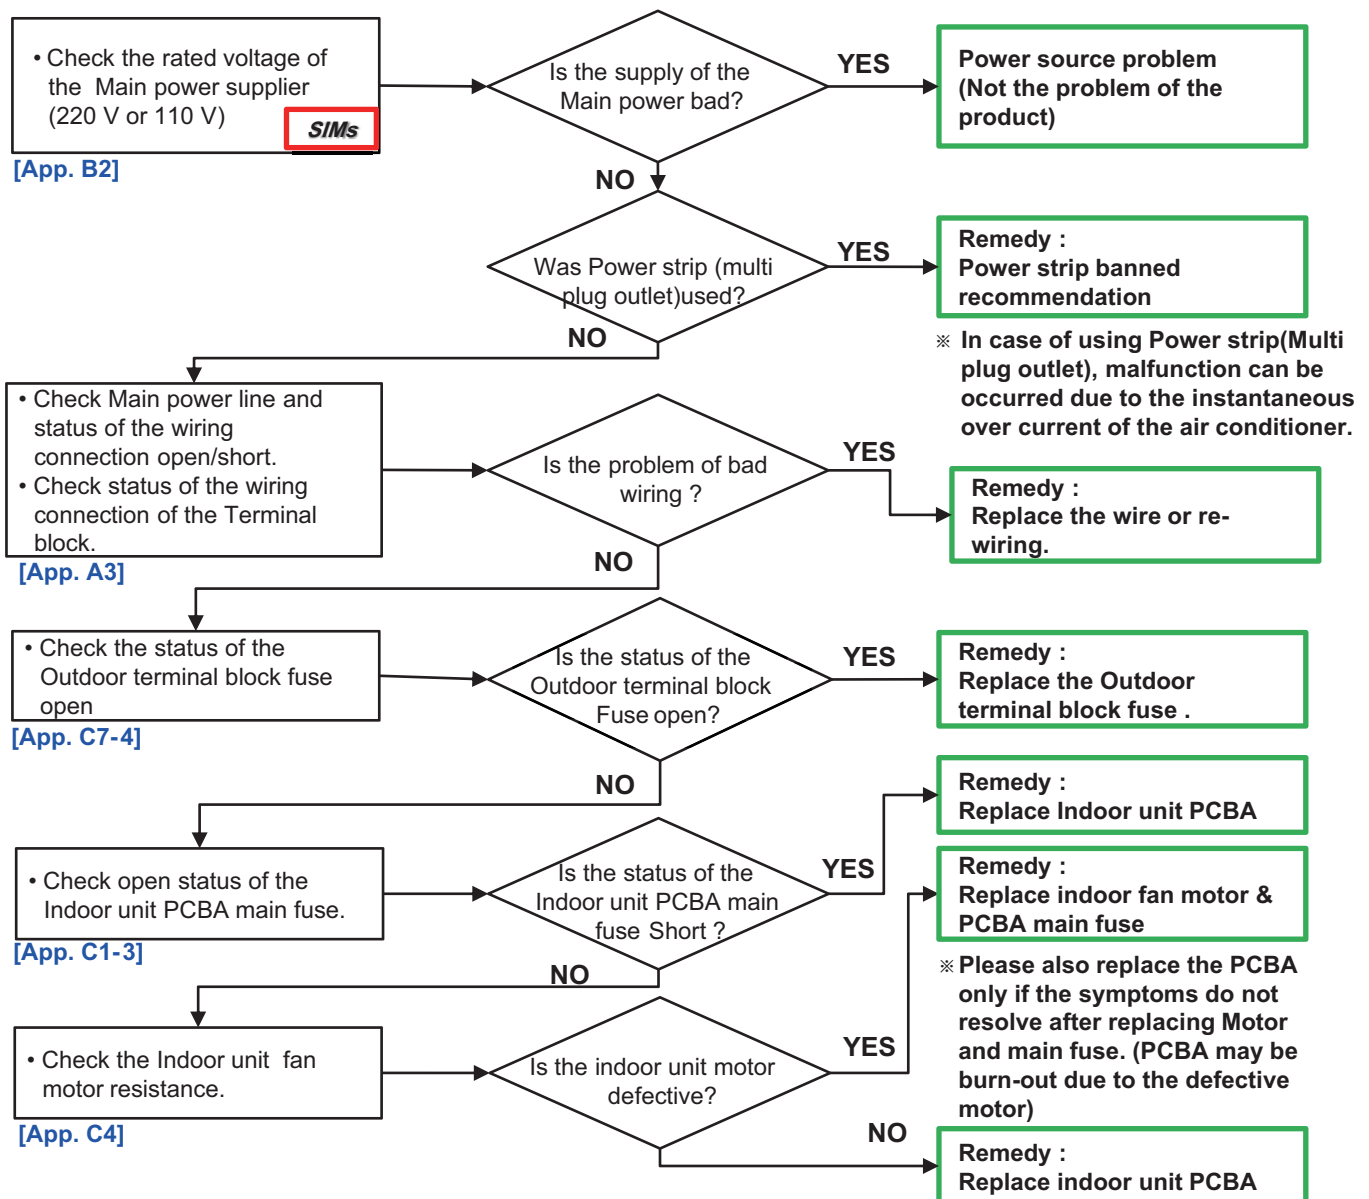


| Symptoms | Cause of symptoms | Check Point |
|---|--|---|
| Bad reception of the wireless remote control and no operation | <ul style="list-style-type: none"> • Low battery voltage of the remote control • Bad Remote control • Interference of three-wavelength lamp • Bad Display PCBA • Bad PCBA wiring • Bad Knob switch • Bad PCBA | <ul style="list-style-type: none"> • Replace the battery of the remote control • Check the defect of the remote control • Check Display PCBA wiring • Check the defect of the Display PCBA • Check wiring of the Knob switch • Check the defect of the Knob switch • Check the defect of the PCBA. |


⚠ WARNING

Before checking PCBA or each outdoor/indoor electric parts, wait for 3 minutes after the power is off.
 When measuring at standby state of power supply, after checking the measurement mode of the meter, be careful of the short-circuits with other parts.

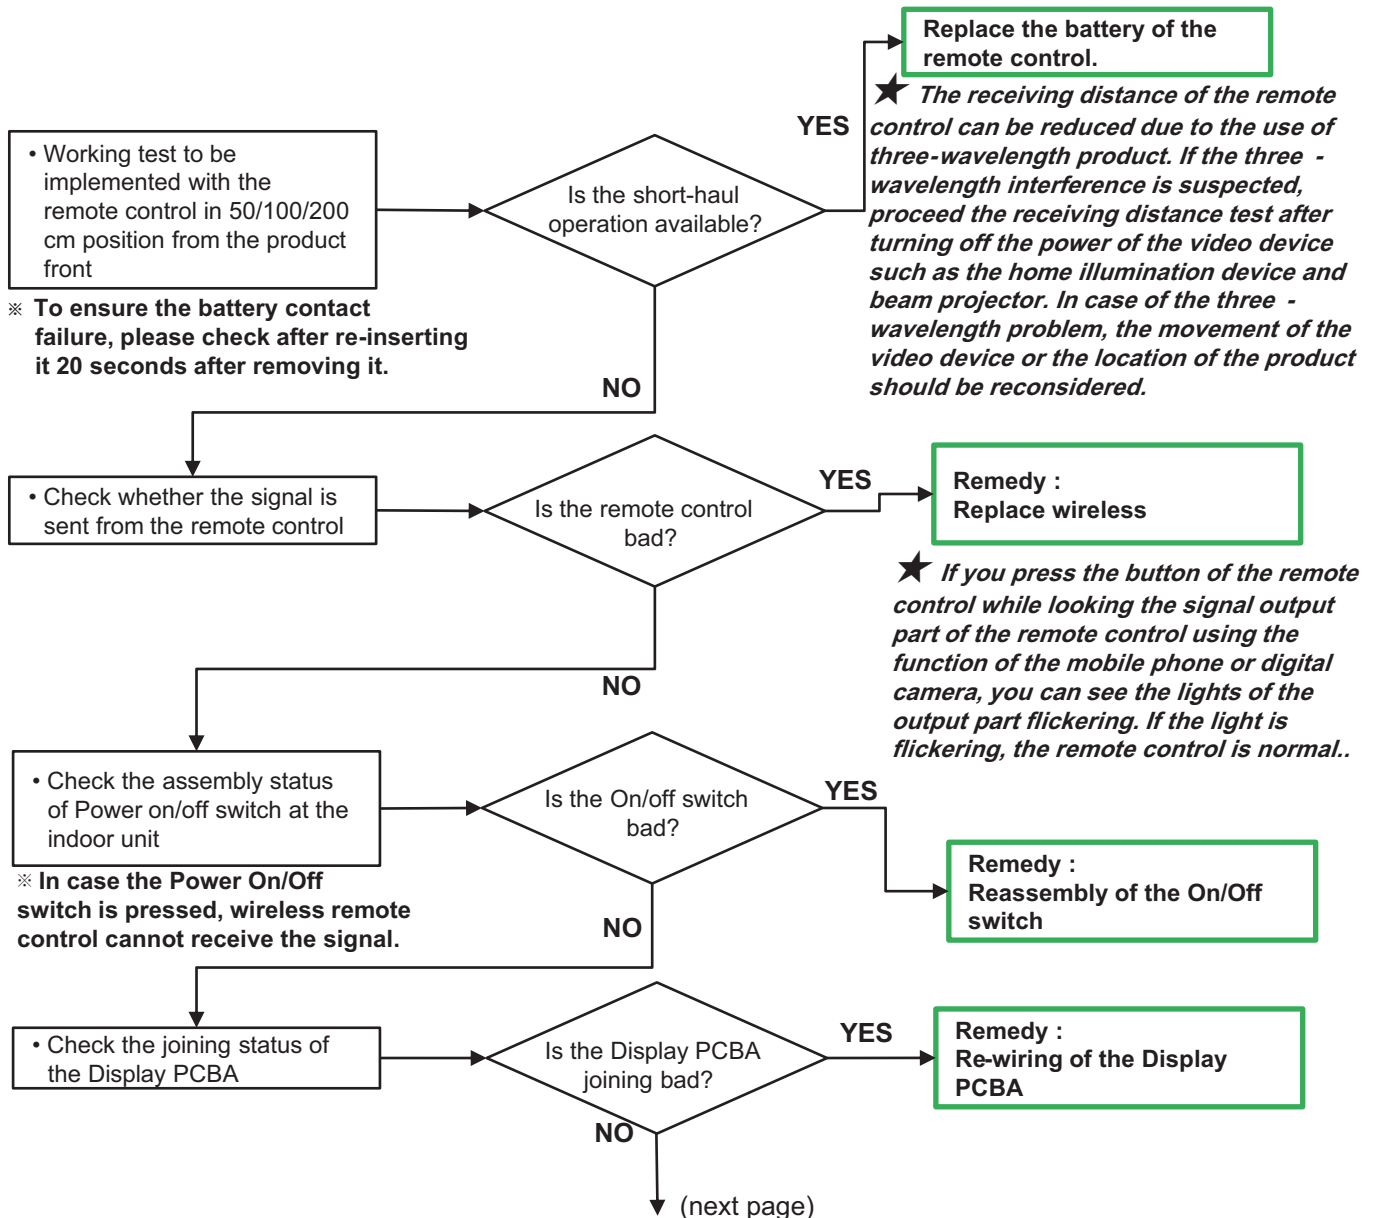

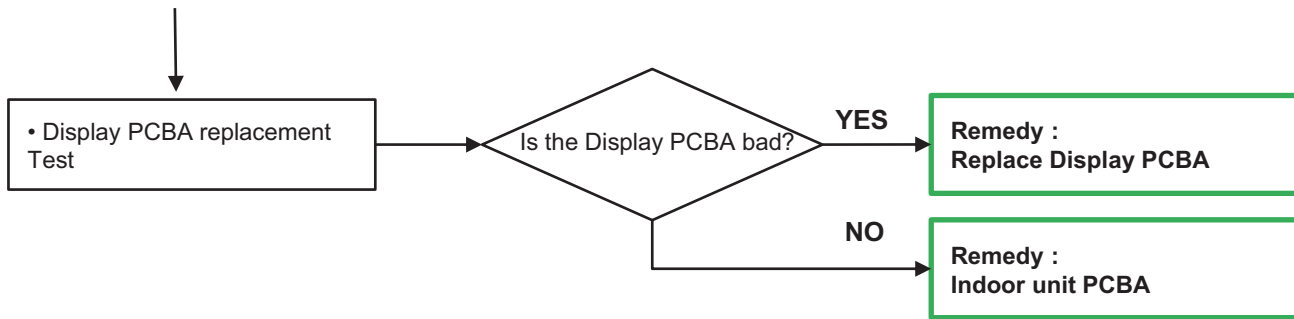

Simple Wireless remote control test

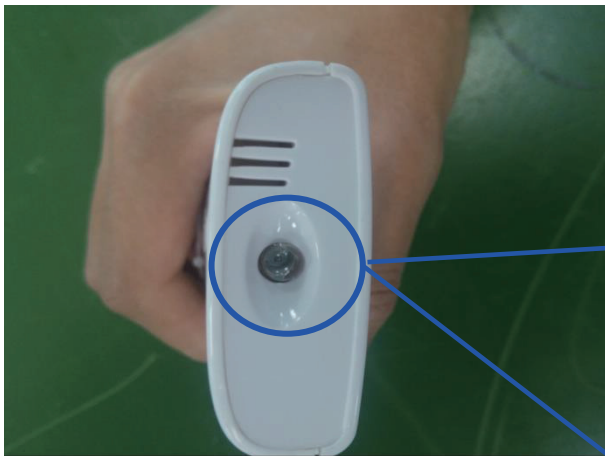

★ *In case of the normal product, if you press the button while taking a photograph using the camera function of the mobile phone or digital camera, you can confirm the light of the output part.*




| Symptoms | Cause of symptoms | Check Point |
|-------------------------------|---|--|
| Weak Air-conditioning/Heating | <ul style="list-style-type: none"> • Bad installation status • Bad characteristics of the Indoor / outdoor unit temperature sensor • Refrigerant leakage • EEV insert defect / Blockage • Refrigerant shortage | <ul style="list-style-type: none"> • Check the status of the product installation • Check the resistance of the Indoor / outdoor unit temperature sensor • Check symptom of the refrigerant leakage • Check the status of the EEV • Check the quantity of the refrigerant |


⚠ WARNING

Before checking PCBA or each outdoor/indoor electric parts, wait for 3 minutes after the power is off.

When measuring at standby state of power supply, after checking the measurement mode of the meter, be careful of the short-circuits with other parts.

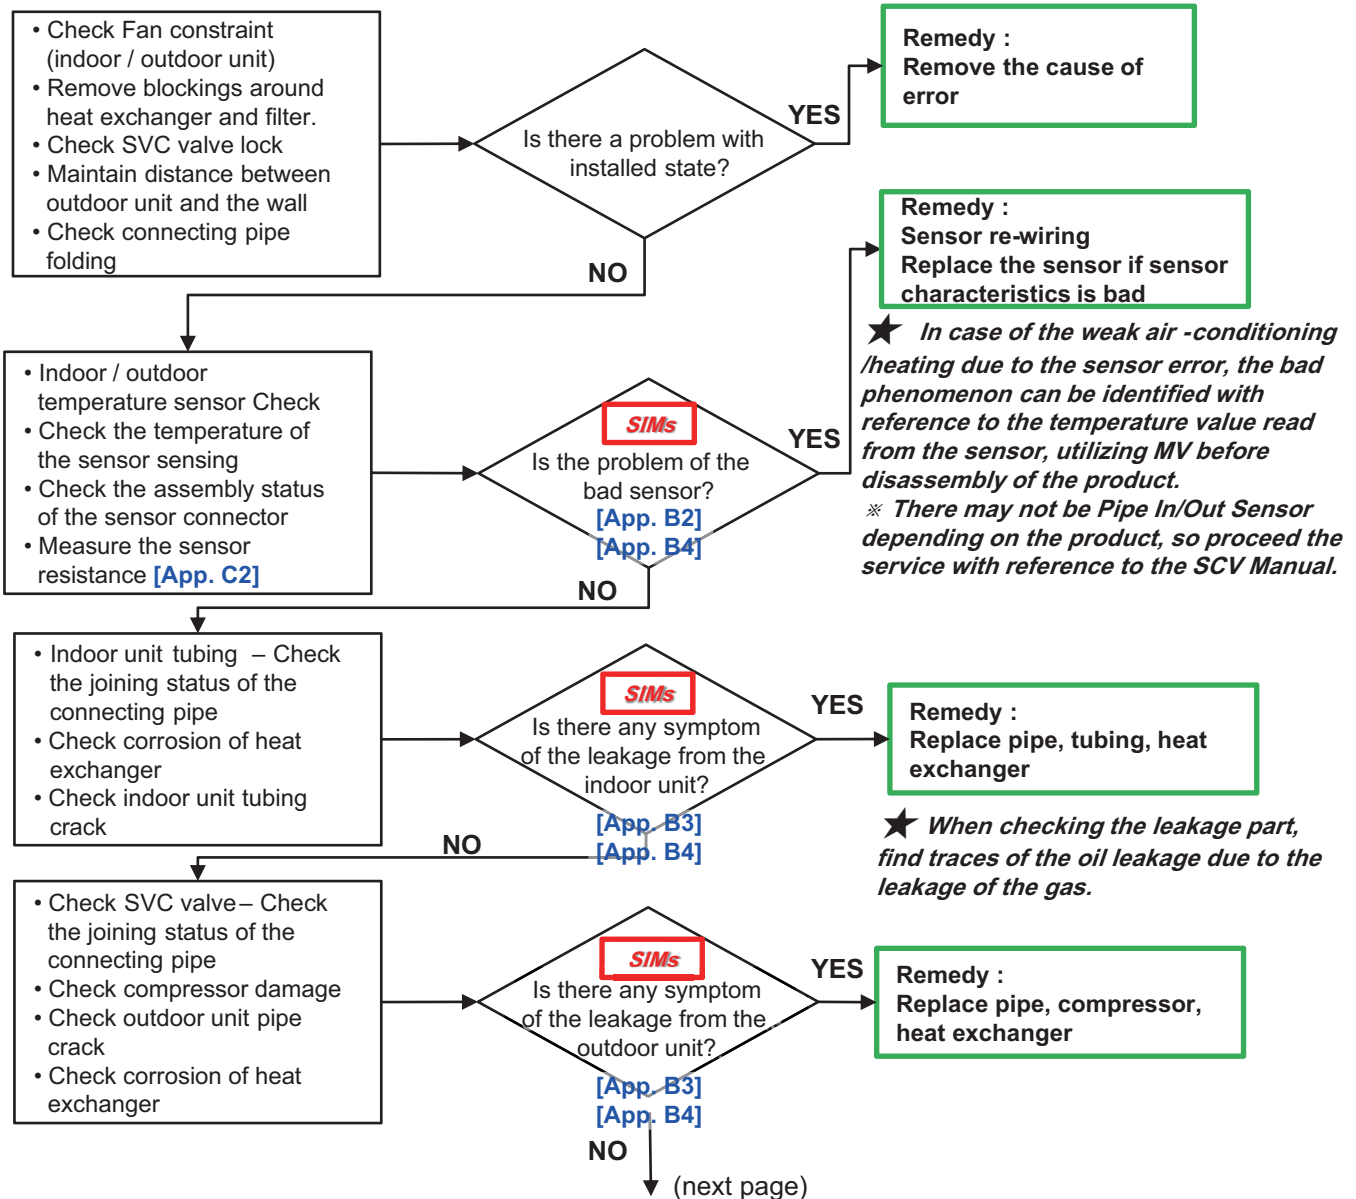

Field failure examples

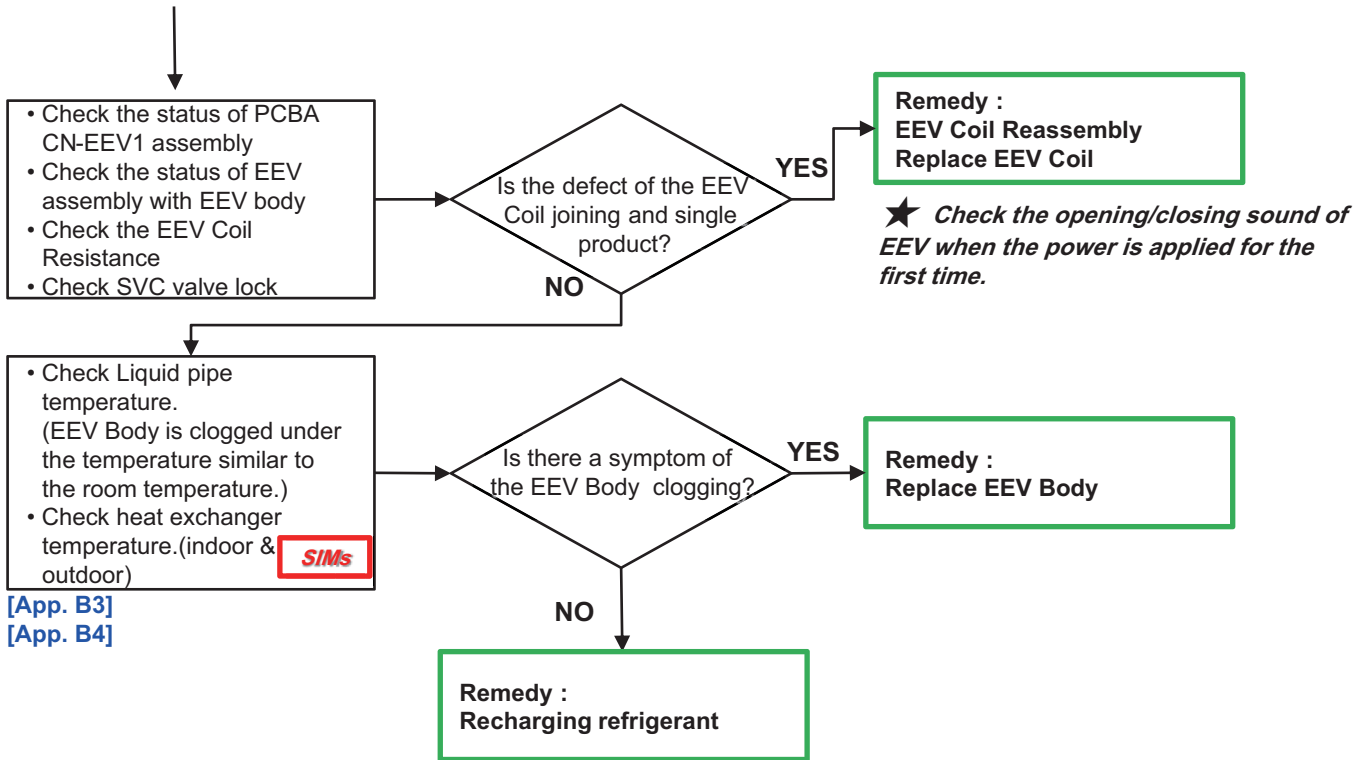

- Airflow is blocked




- Service valve closed



- Interference of the discharge air



- Pipe break

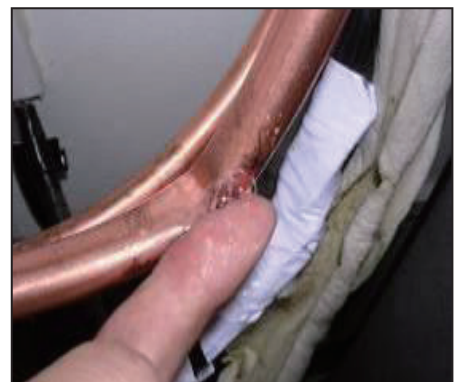


| Symptoms | Cause of symptoms | Check Point |
|--------------------------------------|---|---|
| Indoor unit vibration/Resonant noise | <ul style="list-style-type: none"> • Bad assembly • Non-fastening of bolt • Parts interference of the exterior movement • Pipe bending • Non-compliance of the minimum pipe length • Refrigerant overcharge | <ul style="list-style-type: none"> • Check the assembly status of the indoor unit. • Check bolt fastening status. • Check interference during operation of the exterior items (Louver/Vane) • Check pipe break. • Check pipe length. • Check Refrigerant quantity |

⚠ WARNING


Before checking PCBA or each outdoor/indoor electric parts, wait for 3 minutes after the power is off.

When measuring at standby state of power supply, after checking the measurement mode of the meter, be careful of the short-circuits with other parts.

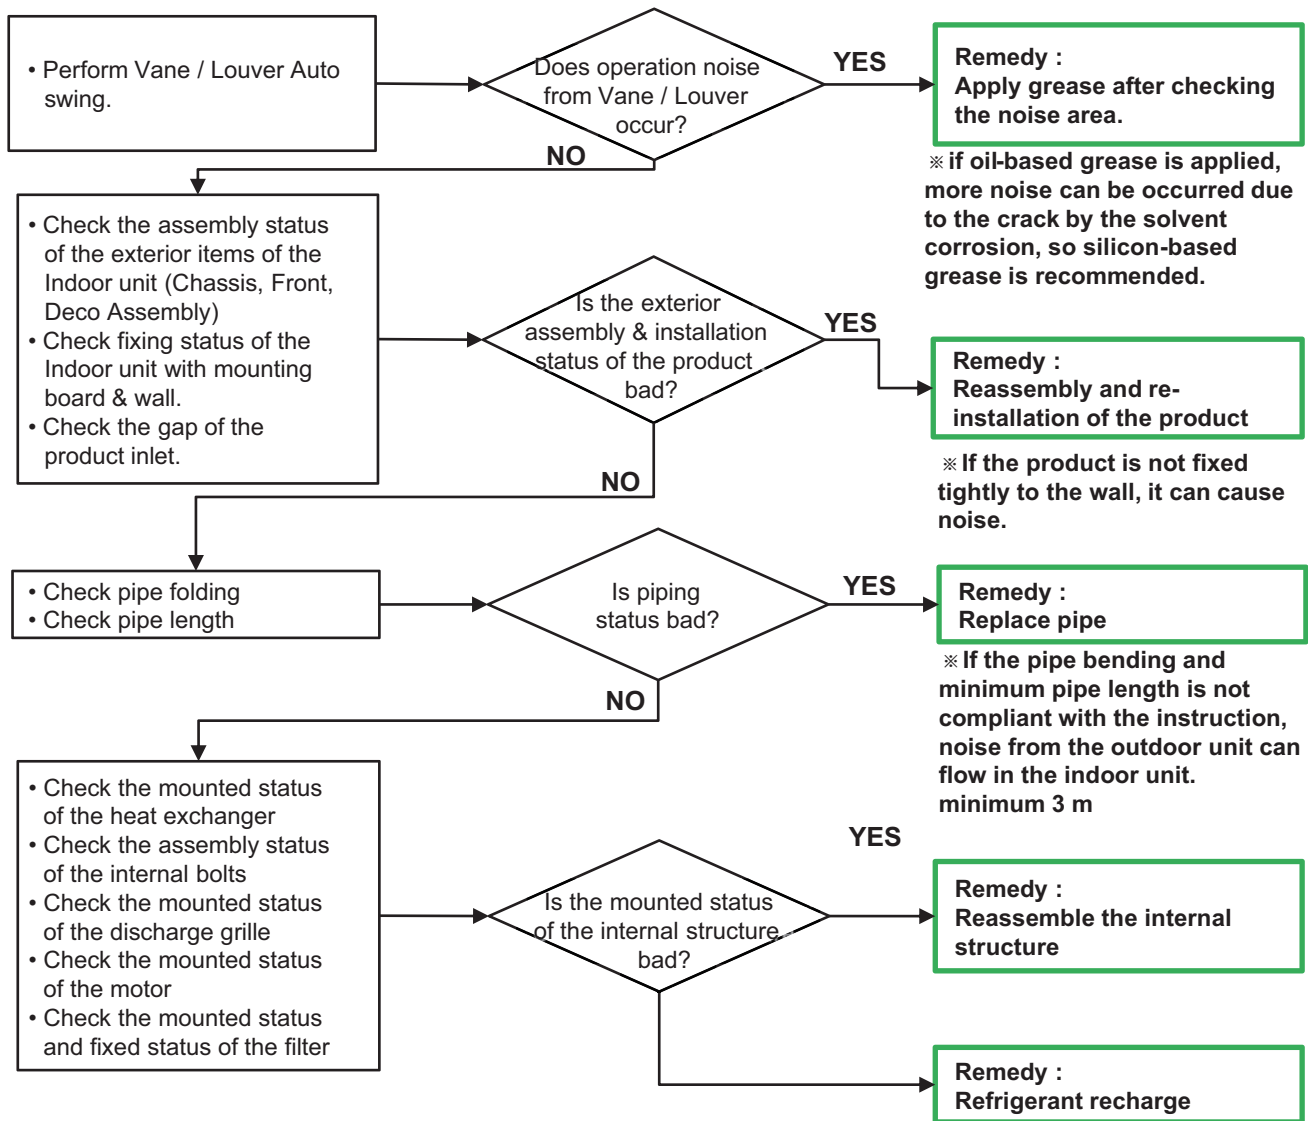


Field failure examples

- Noise occurrence due to the pipe break

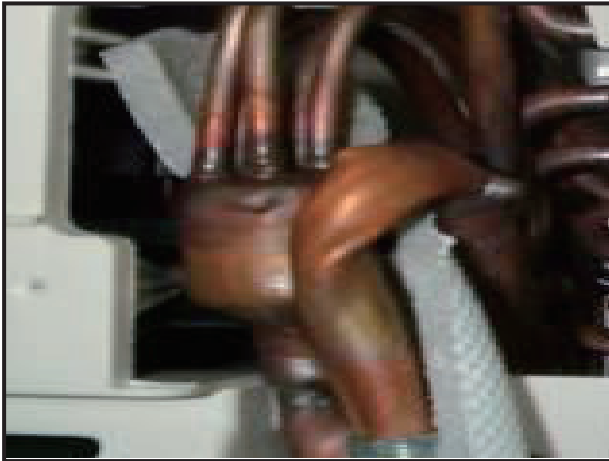

- Noise occurrence due to the inlet shield

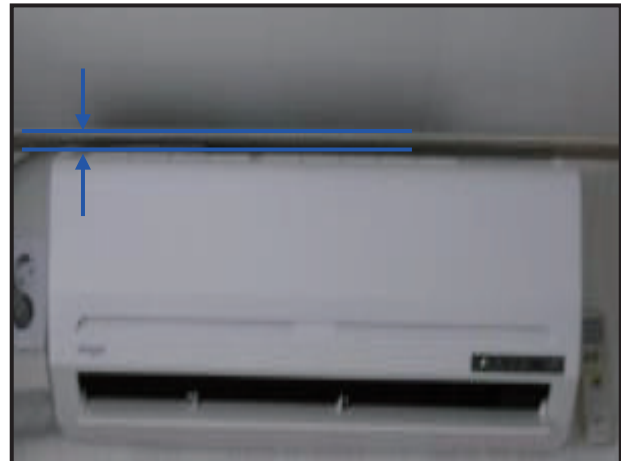


- Noise inflow of the outdoor unit due to the bad pipe length



| Symptoms | Cause of symptoms | Check Point |
|-------------------------------------|---|--|
| Outdoor unit touch noise(vibration) | <ul style="list-style-type: none"> • Bad bolt fastening • Interference between Pipe and Front/Side panel • Touch interference between pipes • Debris flow in the inside of the machine room of the outdoor unit | <ul style="list-style-type: none"> • Check bolt assembly status • Check interference status of the pipe and the exterior items. • Check the separation distance between the pipes • Check the existence of foreign objects inside the machine room |

⚠ WARNING


Before checking PCBA or each outdoor/indoor electric parts, wait for 3 minutes after the power is off.
 When measuring at standby state of power supply, after checking the measurement mode of the meter, be careful of the short-circuits with other parts.

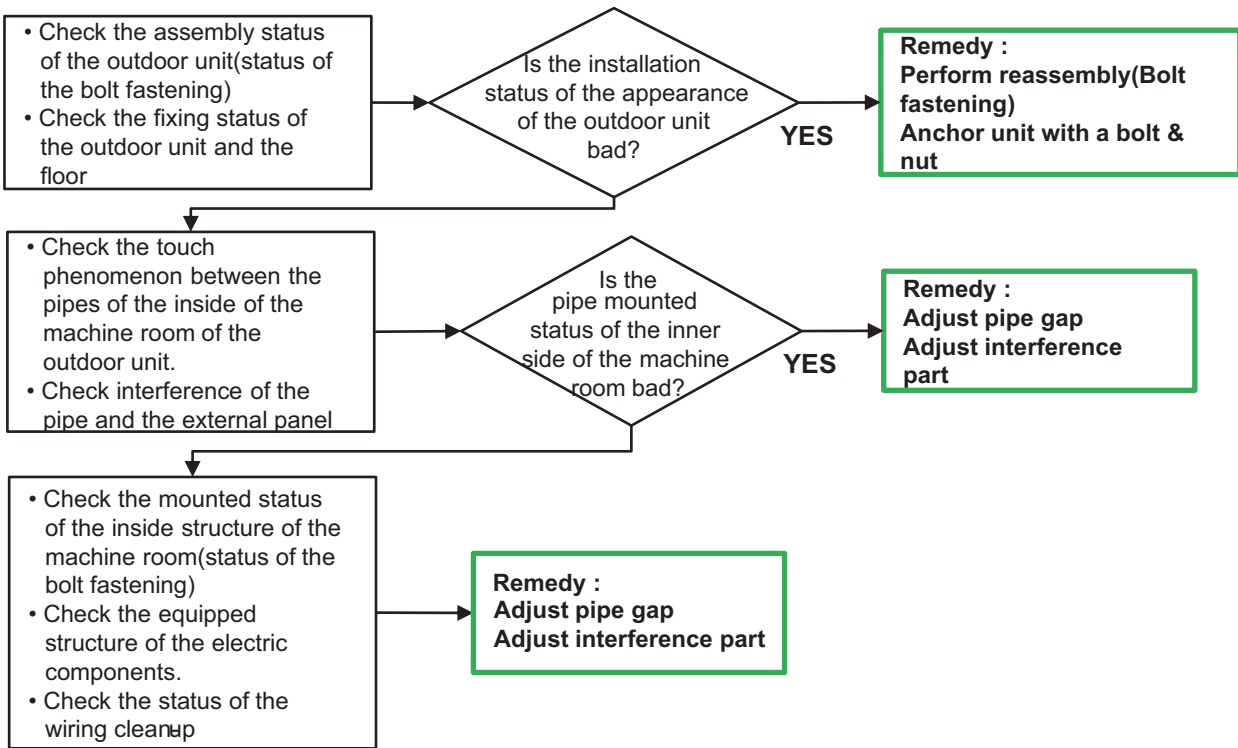

Field failure examples



- Occurrence of the vibration noise caused by the interference of the front panel and the pipe

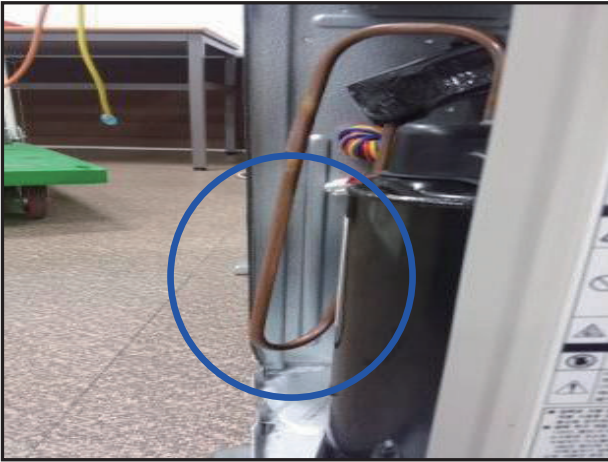


- Occurrence of the vibration noise caused by the bad fixing of the outdoor unit




| Symptoms | Cause of symptoms | Check Point |
|---|---|--|
| Working of the circuit breaker during operation | <ul style="list-style-type: none"> Using multi plug outlet Shortage of the circuit breaker capacity Bad sensor Bad Fan motor Current leakage of the compressor | <ul style="list-style-type: none"> Main power check Circuit breaker capacity check Electric parts leakage current check |

⚠ WARNING

Before checking PCBA or each outdoor/indoor electric parts, wait for 3 minutes after the power is off.
 When measuring at standby state of power supply, after checking the measurement mode of the meter, be careful of the short-circuits with other parts.

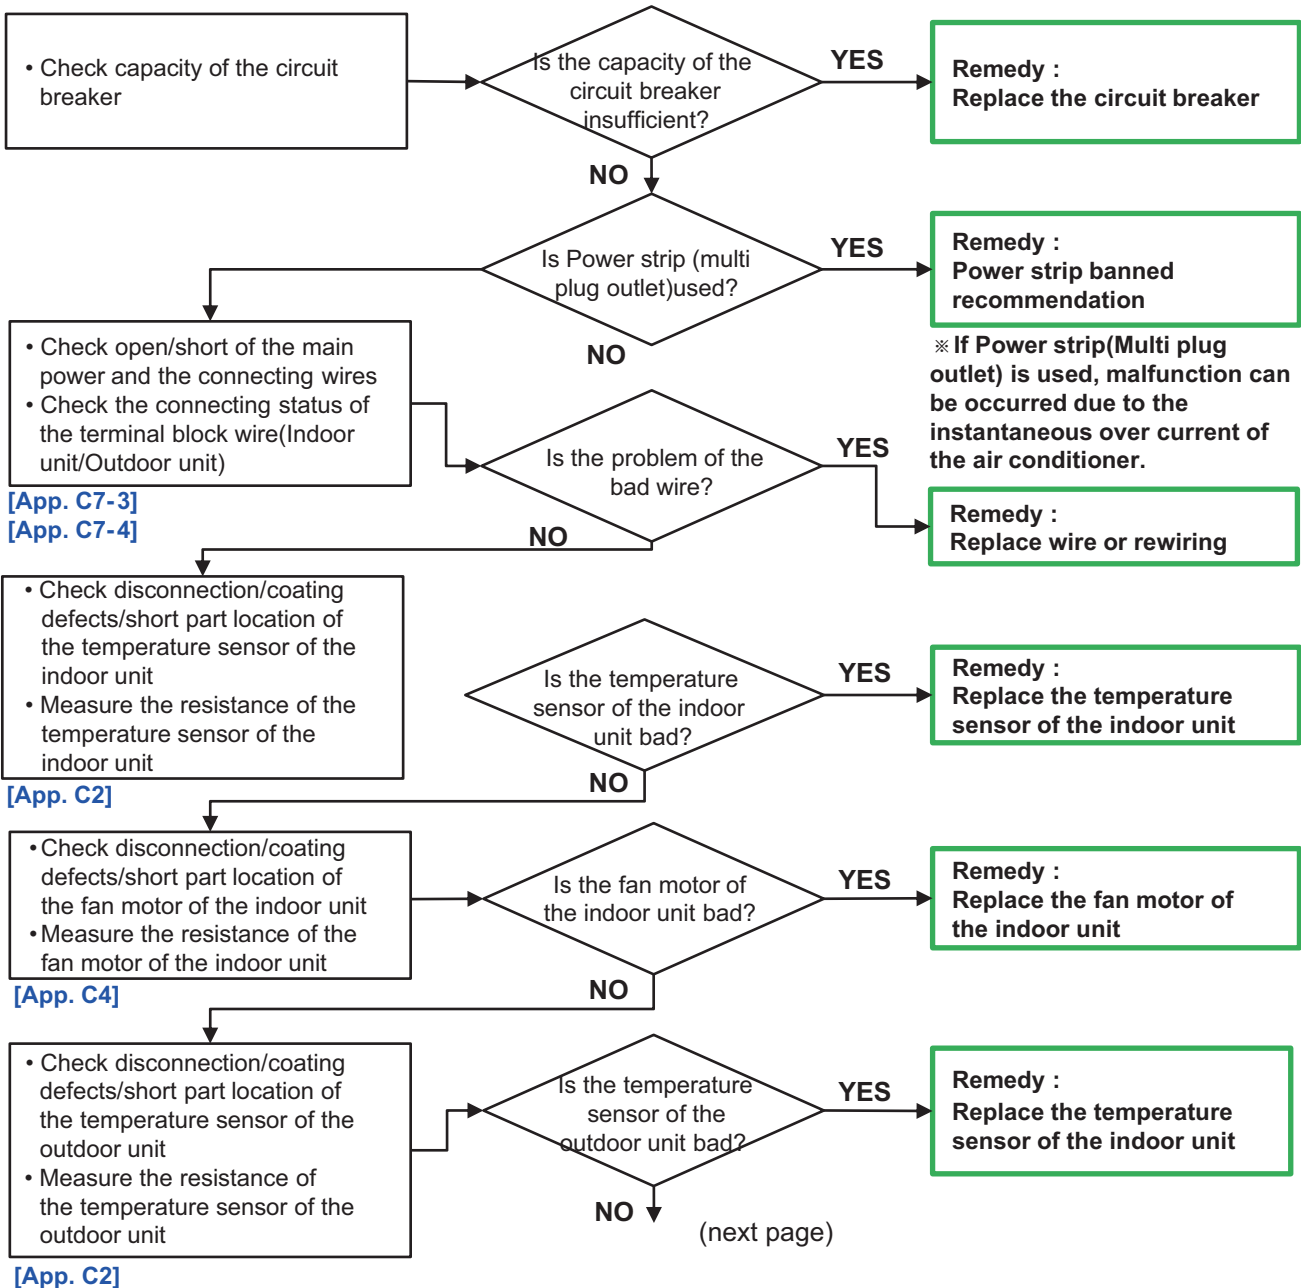

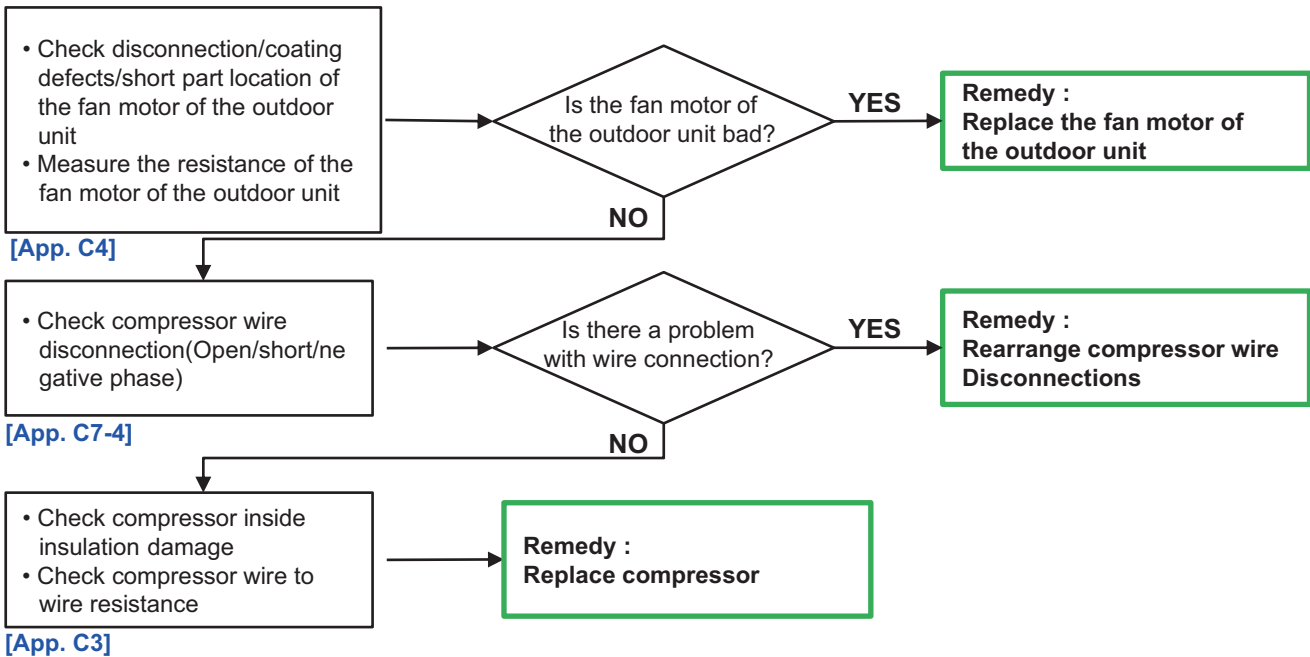

※ Parts Replacement Procedure(Recommended)




Field failure examples

- Disuse of the ground cord




- Mis-wiring of the compressor wire

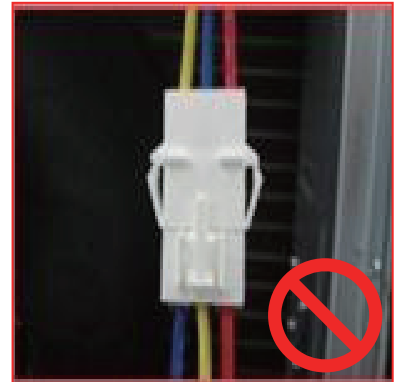

| Symptoms | Cause of symptoms | Check Point |
|--|--|---|
| Bad operation of the AC FAN (Indoor AC fan applied model) | <ul style="list-style-type: none"> • Fan constraint • Bad wiring of the AC motor • Bad AC motor capacitor • Decline of the applied voltage(over 20%) • Bad PCBA | <ul style="list-style-type: none"> • Check the status of Fan constraint • Check the wiring status of the motor • Check the capacitor • Check the applied voltage • Check whether the PCBA is bad |

⚠ WARNING

Before checking PCBA or each outdoor/indoor electric parts, wait for 3 minutes after the power is off.
When measuring at standby state of power supply, after checking the measurement mode of the meter, be careful of the short-circuits with other parts.

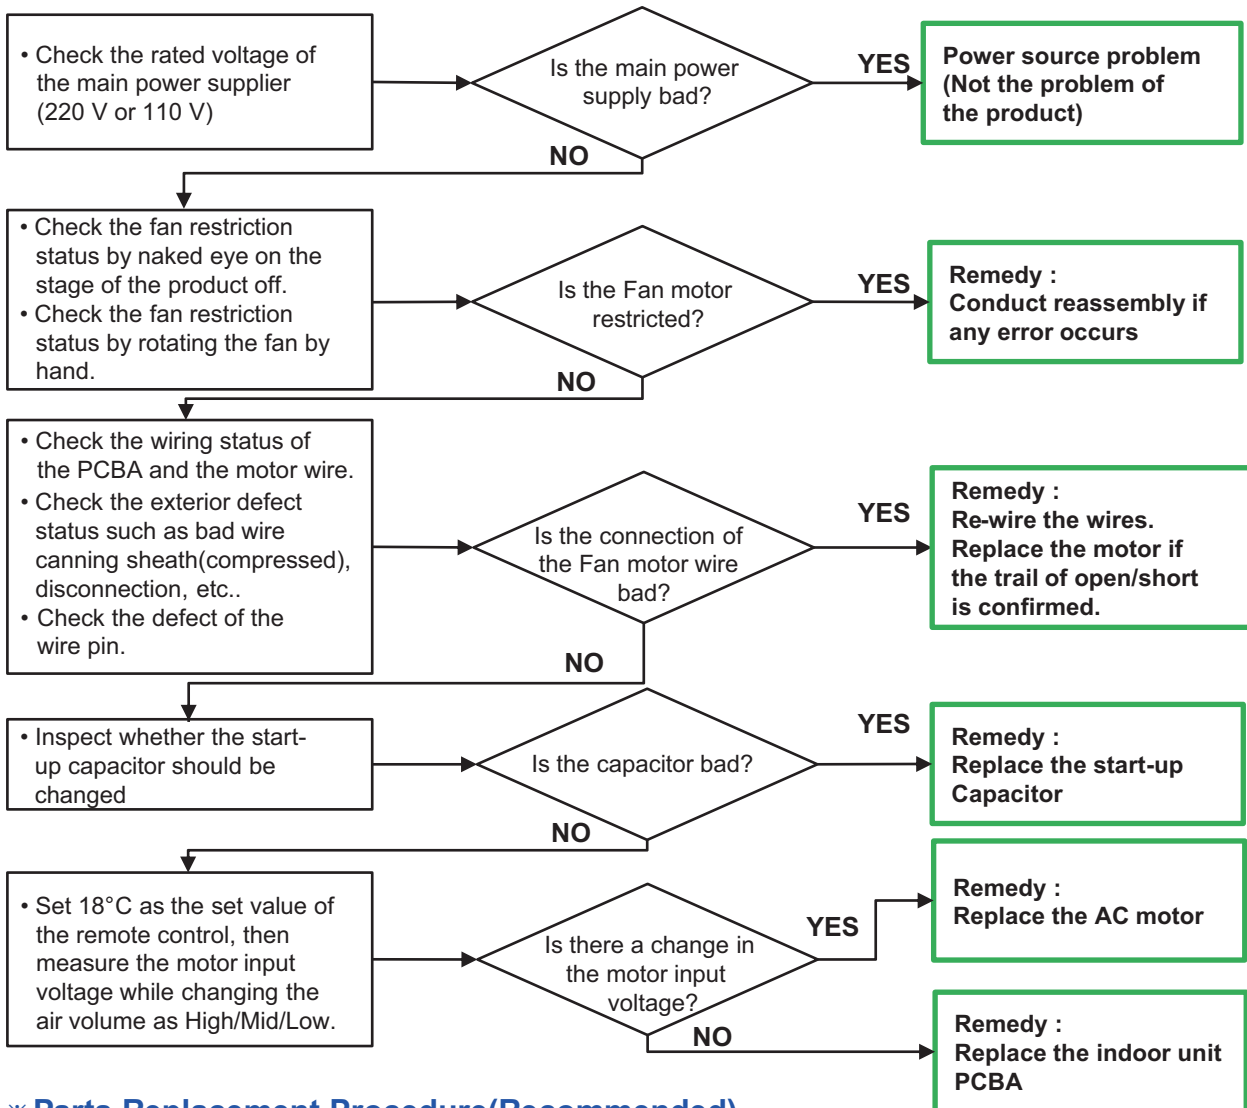

※ **Parts Replacement Procedure(Recommended)**



※ Replace the PCBA if there is no change of the motor input voltage upon change of the air volume of the indoor unit under the condition of operation of the outdoor unit.

7. Trouble Shooting Guide (with Error Code)

| Error Code | Error Detection | Cause of Error | Check Point |
|------------|--|--|--|
| CH01 | Open/Short of the indoor room temperature sensor | <ul style="list-style-type: none"> • Sensor mis-wiring/short • Penetration of moisture to the sensor • Bad canning sheath • Sensor housing removed | <ul style="list-style-type: none"> • Check mis-wiring of the sensor connector • Check the part of the bad sensor wire canning sheath/short • Check whether the sensor single product is bad |
| CH02 | Open/Short of the indoor heat exchanger inlet pipe sensor | | |
| CH06 | Open/Short of the indoor heat exchanger outlet pipe sensor | | |
| CH12 | Open/Short of the indoor heat exchanger mid-pipe sensor | | |


⚠

WARNING

Before checking PCBA or each outdoor/indoor electric parts, wait for 3 minutes after the power is off.

When measuring at standby state of power supply, after checking the measurement mode of the meter, be careful of the short-circuits with other parts.

※ **Check the connector side of the indoor unit PCBA when Error Code occurs. If Short key or Float Switch(Drain Pump) is connected to the corresponding sensor connector, follow the Flow Chart of the Error Code 04.**

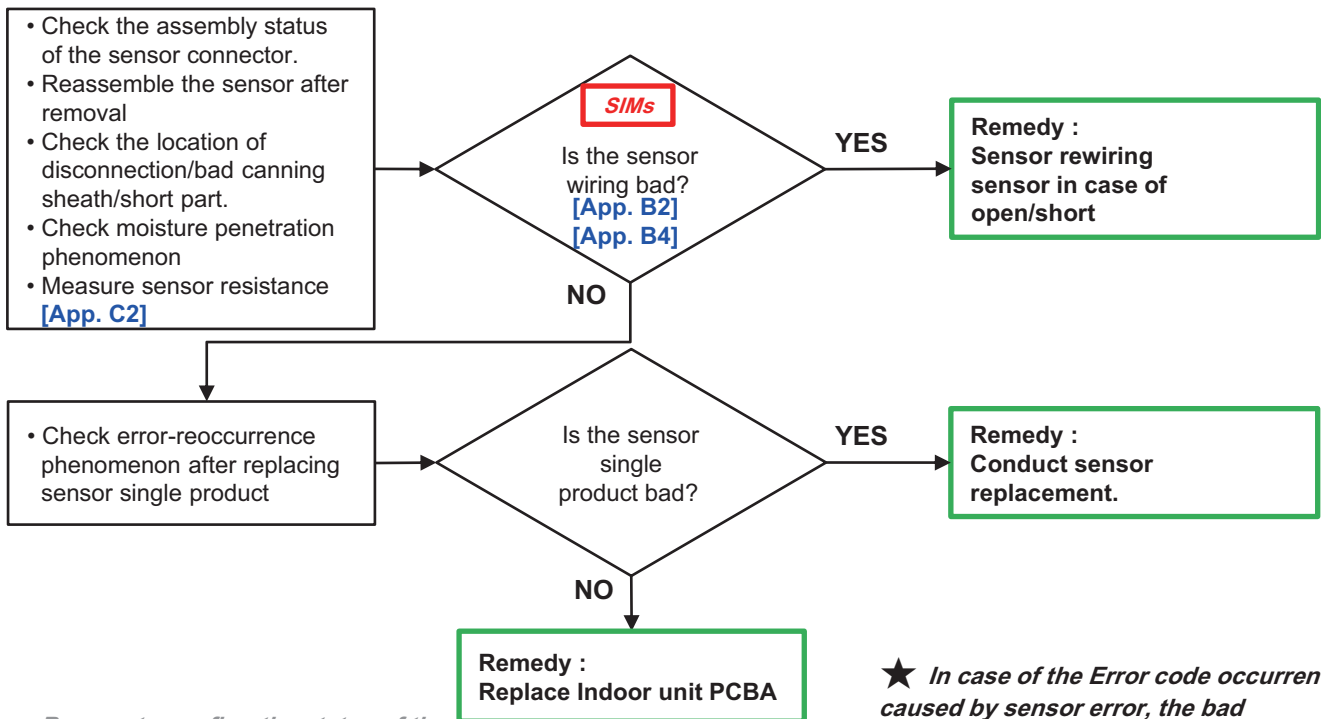

※ *Be sure to confirm the status of the installation environment and the sensor as the corresponding error is less likely to have PCBA problem.*

★ *In case of the Error code occurrence caused by sensor error, the bad phenomenon can be figured out with reference to the temperature value read from the sensor by utilizing MV before decomposition.*

※ **Parts Replacement Procedure(Recommended)**



※ Pipe In/Out sensor may not exist depending on the product, so proceed the service referring to SVC Manual.

| Error Code | Error Detection | Cause of Error | Check Point |
|------------|---|--|---|
| CH03 | Bad communication of the wired remote control | <ul style="list-style-type: none"> • Interference (Twisted/Non Separation)of AC Line and wired remote control line • Poor contact/Disconnection of wired remote control(DC Line) and PCBA harness • PCBA harness Flooding/corrosion • Remote control fault • Indoor unit PCBA fault | <ul style="list-style-type: none"> • Check the molding status of the wired remote control wire. • Check the interference status with DC line(Twisted/Mixed/Non-separation) • Check communication cable problem • Check harness Flooding/corrosion • Check Remote control fault • Check Indoor unit PCBA fault |


⚠ WARNING


Before checking PCBA or each outdoor/indoor electric parts, wait for 3 minutes after the power is off.

When measuring at standby state of power supply, after checking the measurement mode of the meter, be careful of the short-circuits with other parts.

★ *CH03 Error arising from the product which does not use wired remote control may be caused by short or corrosion due to the insufficient clean-up of the PCBA wired remote control connector line.*

- *In case of the wired remote control disuse model, it can be occurred when product reset after commissioning(after using wired remote control when installing) is not performed.*

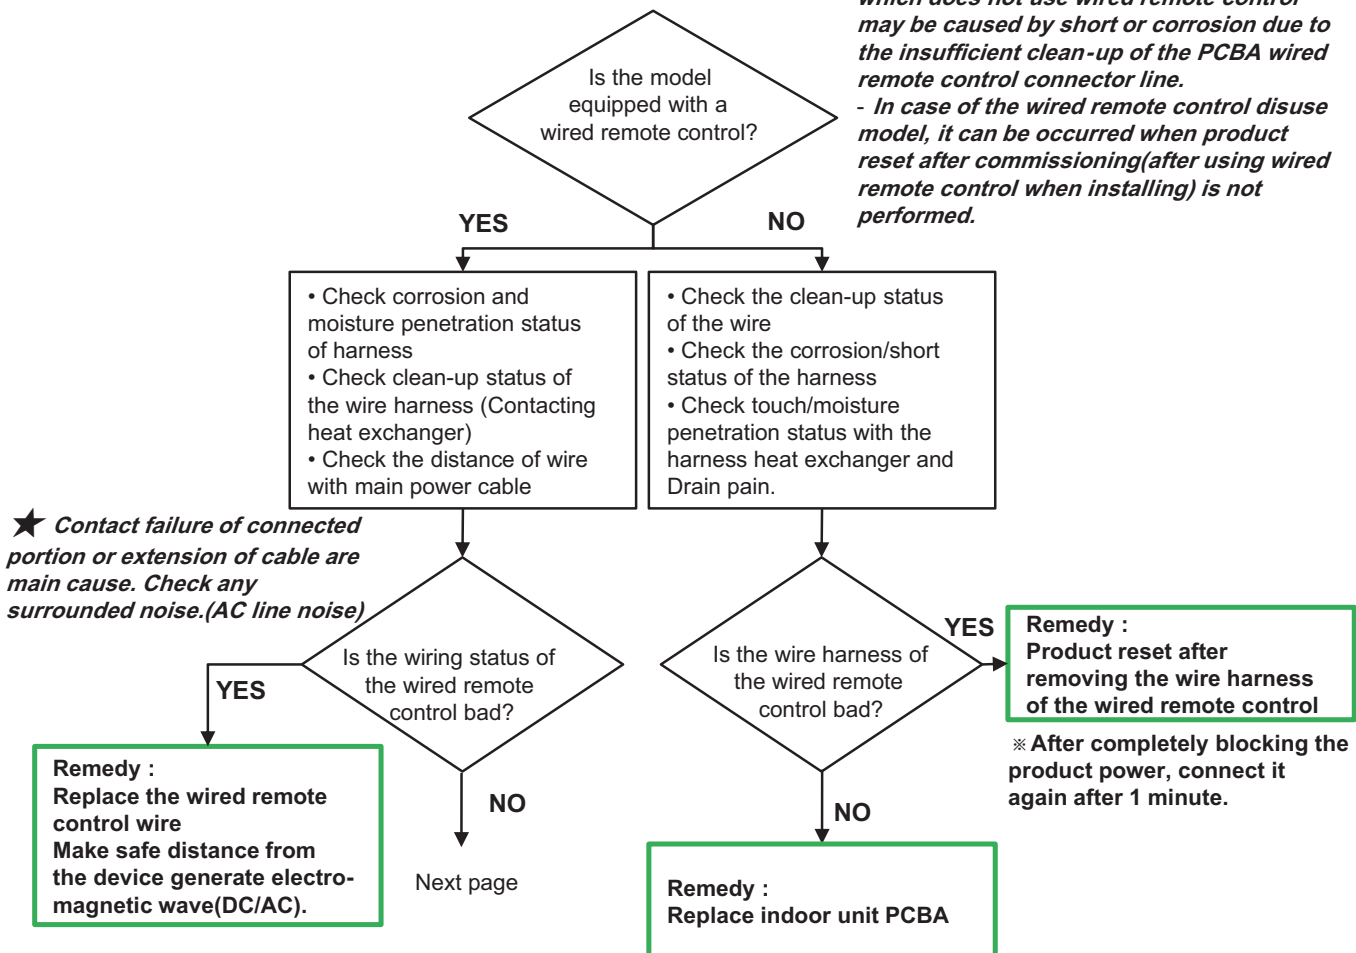

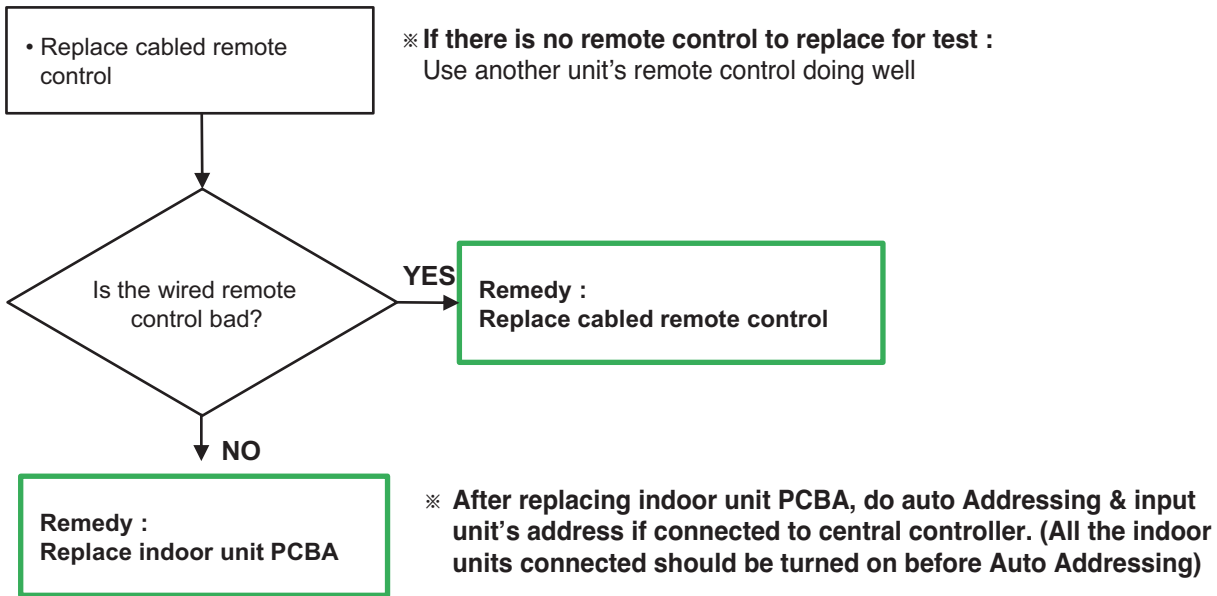

※ **Parts Replacement Procedure(Recommended)**




Field failure examples


- Molding with external power supplier (Non-separation))



- Wire of the wired remote control touched the heat exchanger

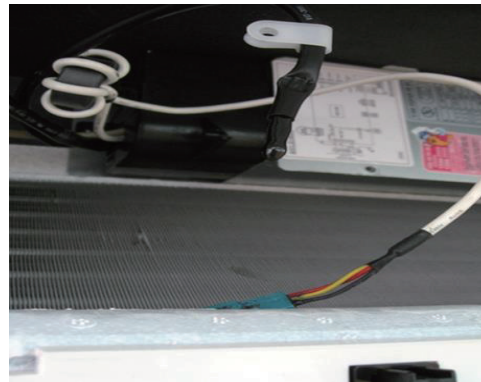

- Short by the moisture penetration to the wire of the wired remote control

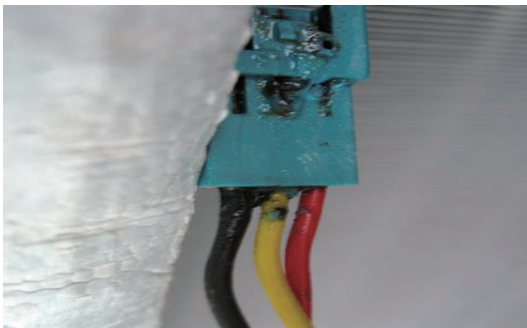


| Error Code | Error Detection | Cause of Error | Check Point |
|------------|--------------------|---|---|
| CH04 | Float switch error | <ul style="list-style-type: none"> • Drain pump fault • Drain hose clogging • Float switch fault | <ul style="list-style-type: none"> • Check drain pump / float switch • Check drain pipe location • Check clogging of drain pipe • Check short key in the indoor unit PCBA |

⚠ WARNING

Before checking PCBA or each outdoor/indoor electric parts, wait for 3 minutes after the power is off.

When measuring at standby state of power supply, after checking the measurement mode of the meter, be careful of the short-circuits with other parts.


※ Proceed with SVC after distinguishing the model which uses/does not use Float switch.

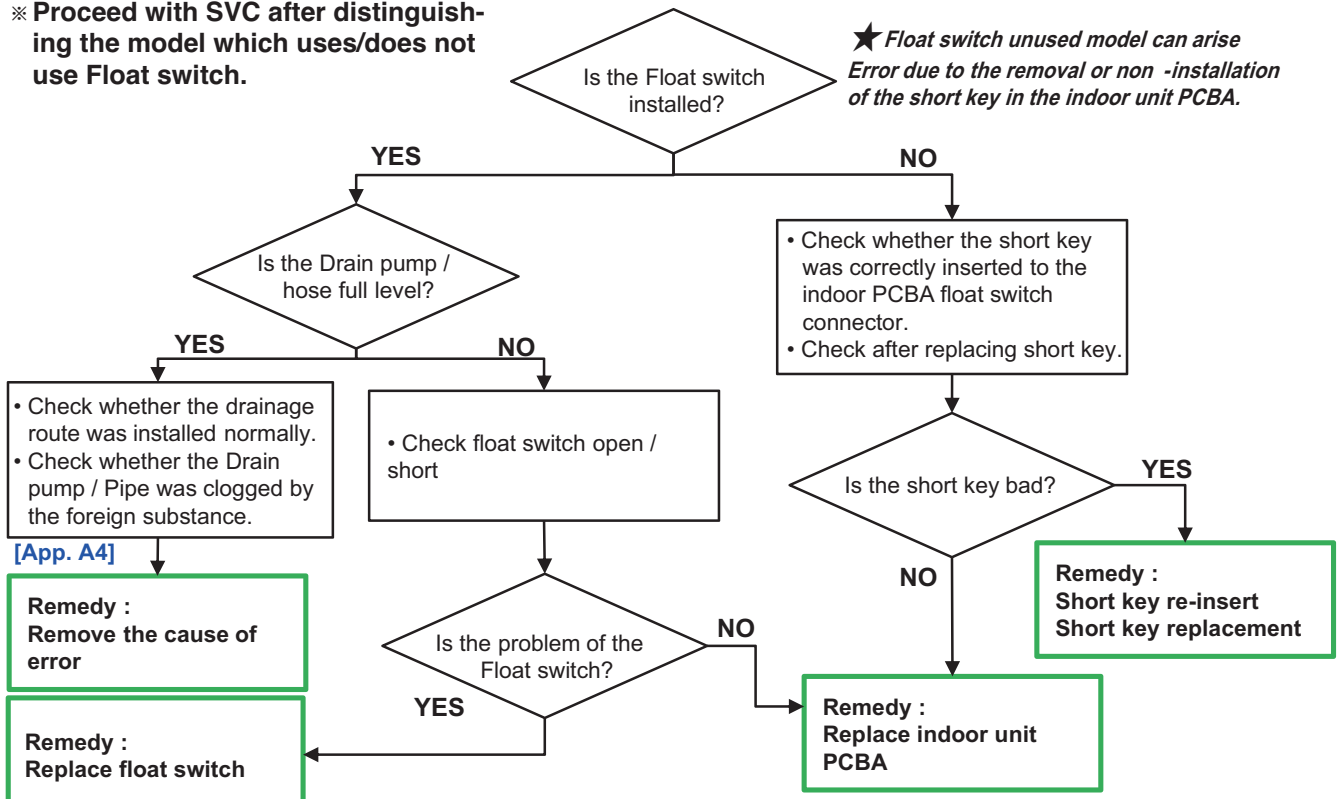

★ In case of the model using Float switch, if CH04 occurs even when inserting short key to the PCBA Connector side, judge it as PCBA fault and replace it. Otherwise, do not replace the PCBA.

※ Be sure to confirm the status of the installation environment and the sensor as the corresponding error is less likely to have PCBA problem.

Field failure examples

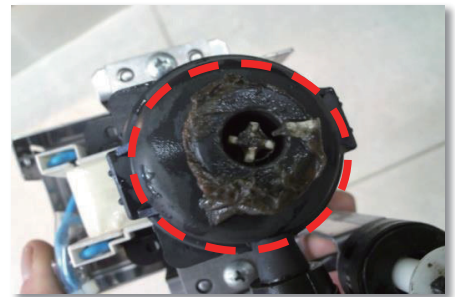

※ Parts Replacement Procedure(Recommended)





| Error Code | Error Detection | Cause of Error | Check Point |
|----------------------|---|--|--|
| CH05 CH53 CH93 | Indoor / outdoor unit communication error | <ul style="list-style-type: none"> No power on indoor unit Indoor/outdoor unit power connection error / communication line not installed Communication error caused by external noise Indoor/outdoor unit communication circuit parts burned | <ul style="list-style-type: none"> Disconnection of the transmission connection Improper connection of terminal block communication wire Improper wiring of communication L-N wire(indoor /outdoor unit communication wire) No power supply due to indoor/outdoor unit PCBA burn |

⚠ WARNING

Before checking PCBA or each outdoor/indoor electric parts, wait for 3 minutes after the power is off.

When measuring at standby state of power supply, after checking the measurement mode of the meter, be careful of the short-circuits with other parts.


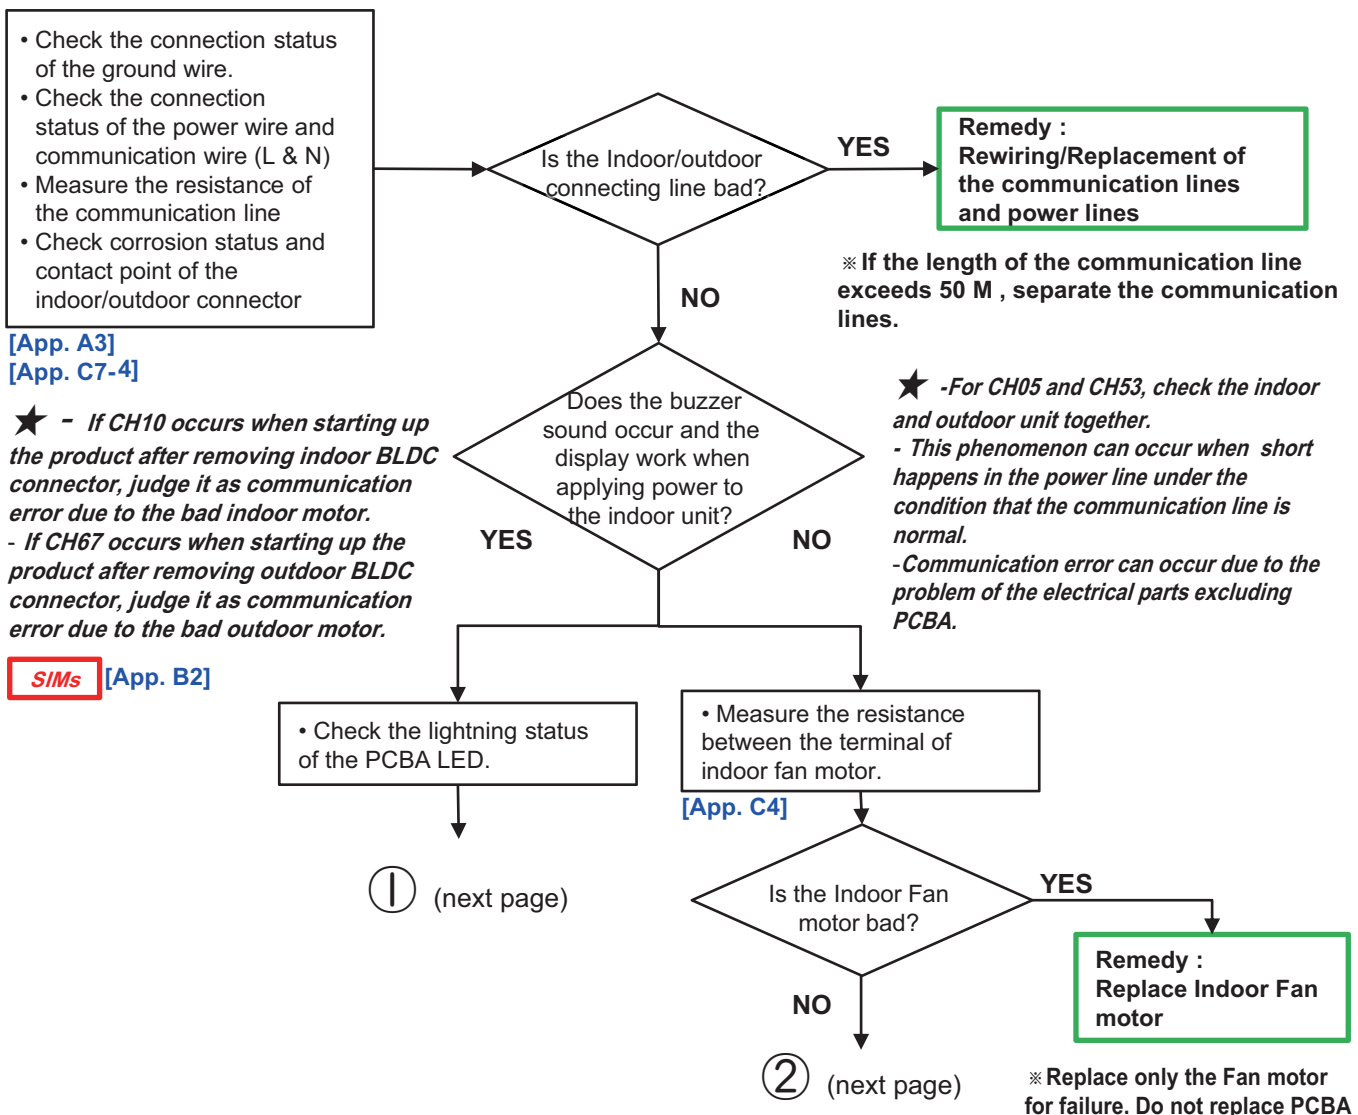


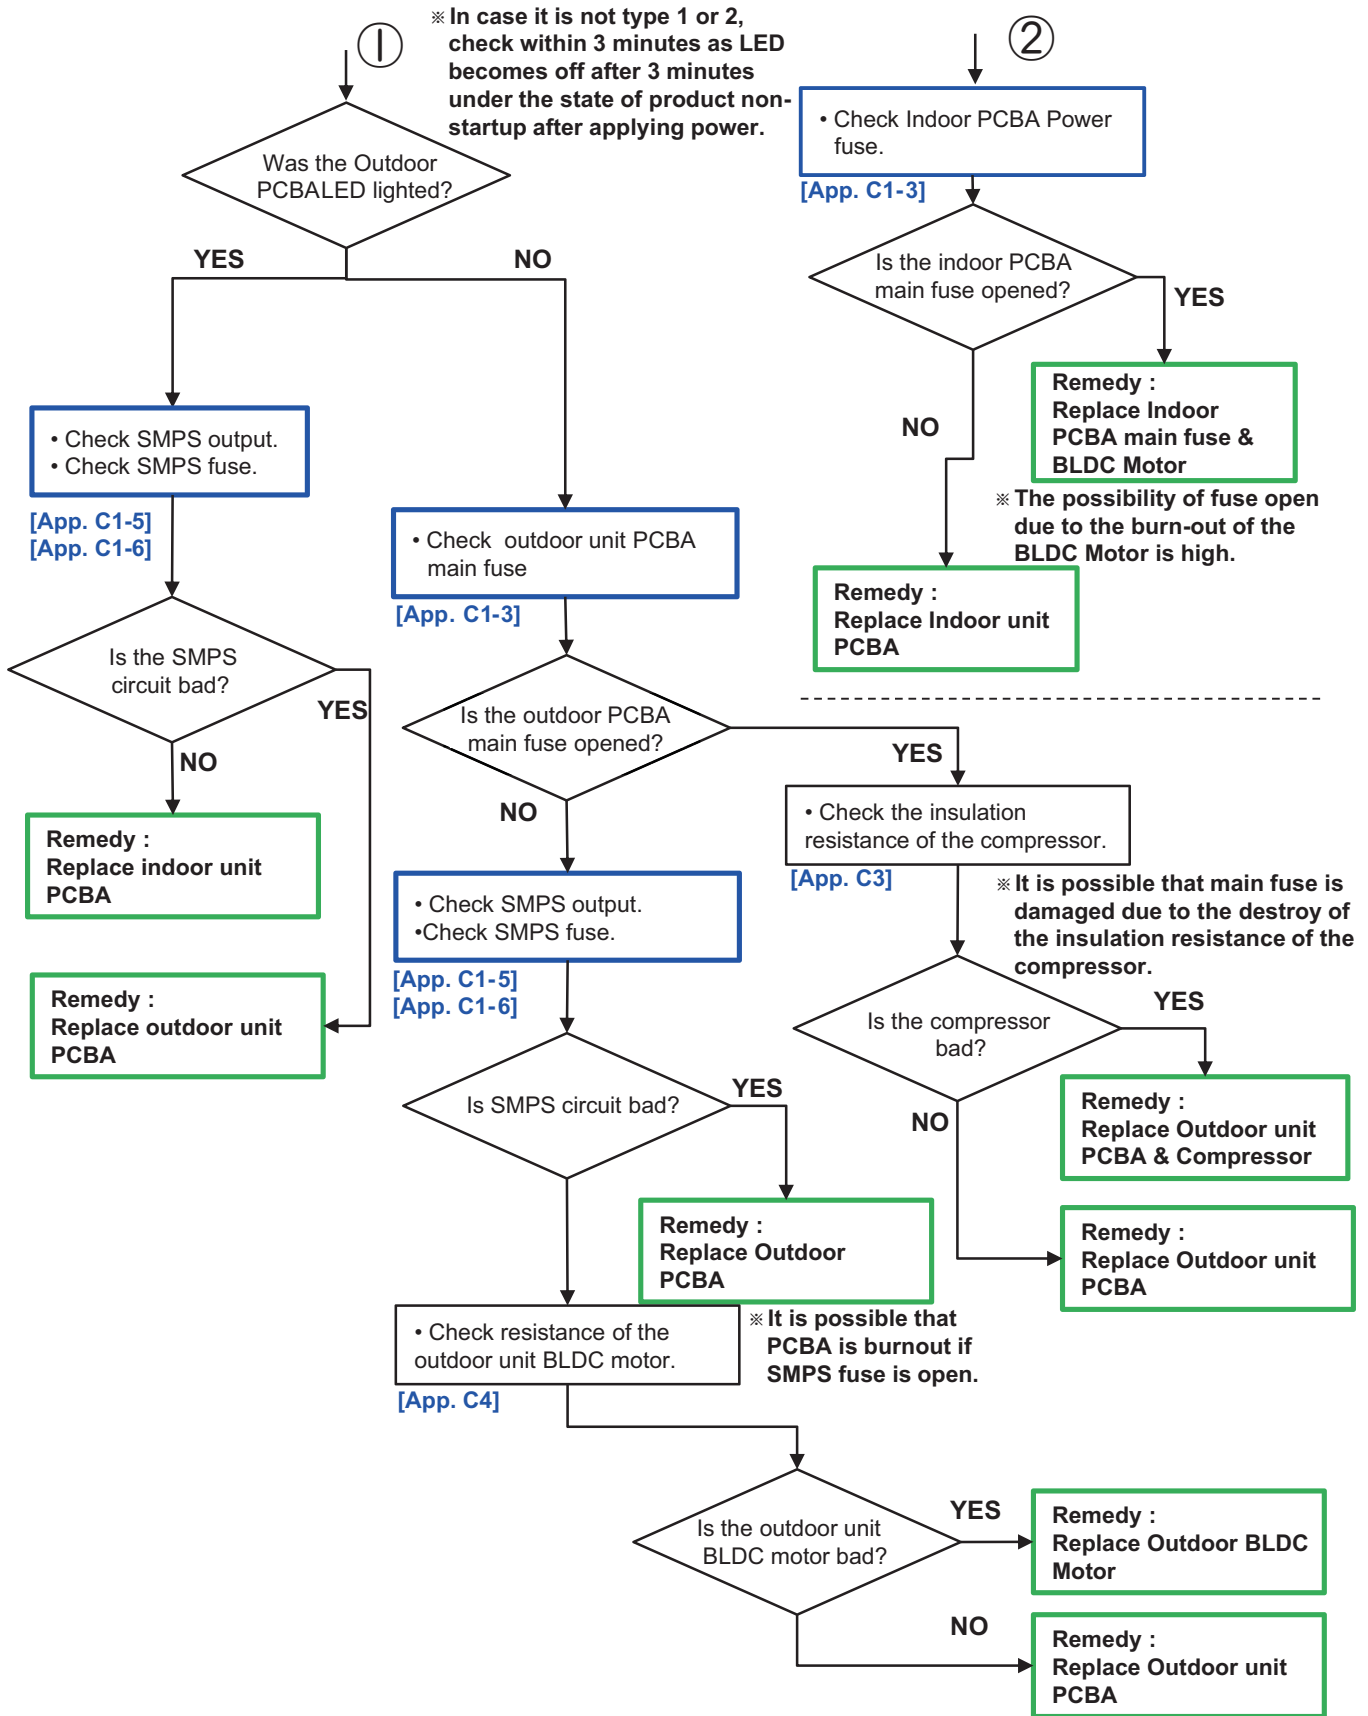


※ Parts Replacement Procedure(Recommended)



Field failure examples

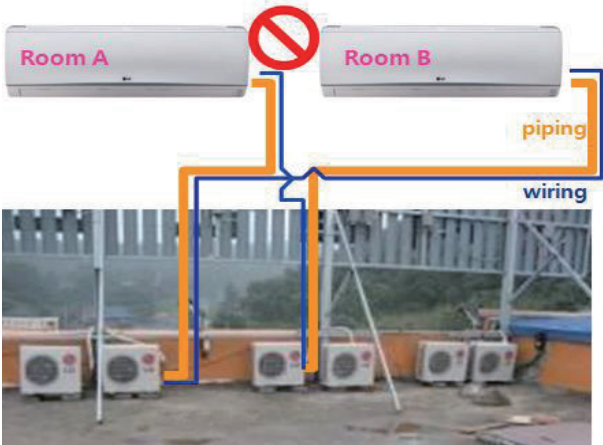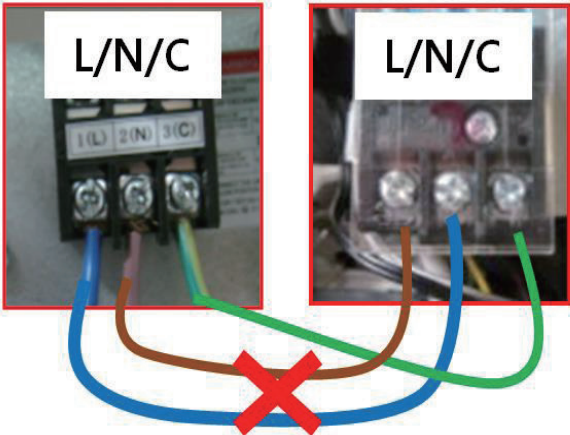

| Error Code | Error Detection | Cause of Error | Check Point |
|------------|-----------------------------------|--|---|
| CH09 | Indoor EEPROM error (Option PCBA) | <ul style="list-style-type: none"> • Poor connection of option PCBA | Check the connection status of the option PCBA(verify with hands) |

| | |
|--|--|
|  WARNING | <p>Before checking PCBA or each outdoor/indoor electric parts, wait for 3 minutes after the power is off.</p> <p>When measuring at standby state of power supply, after checking the measurement mode of the meter, be careful of the short-circuits with other parts.</p> |
|--|--|

Check if the Option PCBA is properly connected.

※ **Parts Replacement Procedure(Recommended)**




| Error Code | Error Detection | Cause of Error | Check Point |
|------------|--|--|--|
| CH10 | Indoor BLDC fan locking (faulty motor operation) | <ul style="list-style-type: none"> • Fan lock by physical force (foreign structure stuck in the motor) • Poor connection of motor connector • Motor failure • PCBA failure | <ul style="list-style-type: none"> • Structural locking of fan • Poor connection of the motor connector • Check Motor failure • Check PCBA failure |



⚠ WARNING

Before checking PCBA or each outdoor/indoor electric parts, wait for 3 minutes after the power is off.

When measuring at standby state of power supply, after checking the measurement mode of the meter, be careful of the short-circuits with other parts.

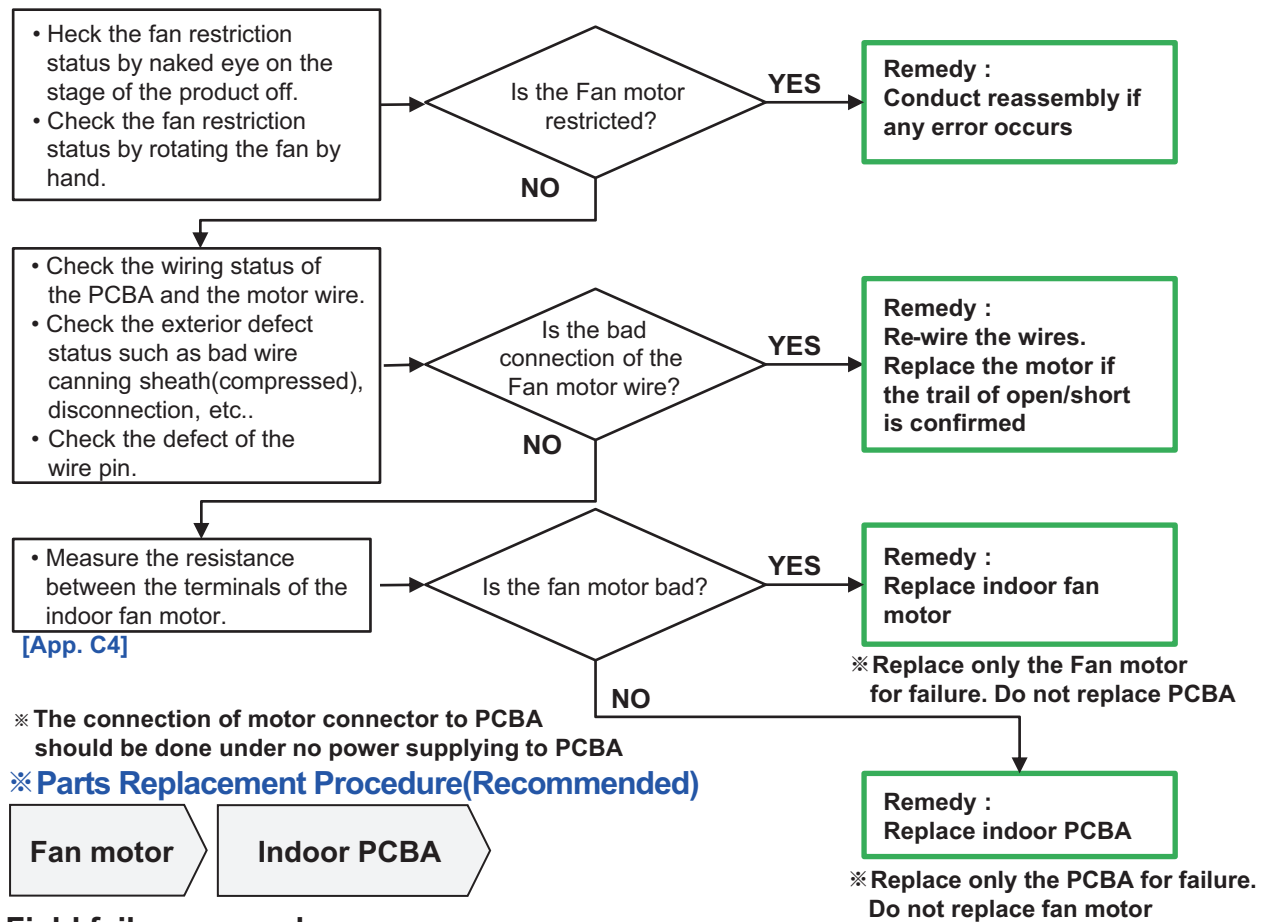

Field failure examples

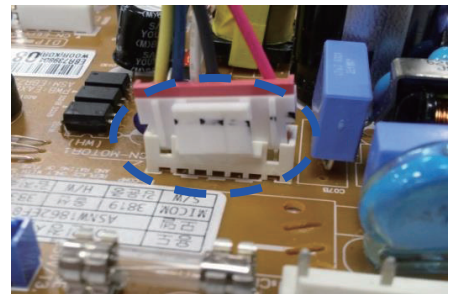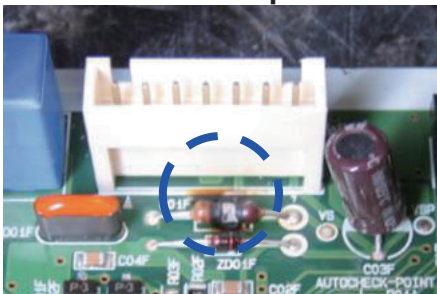



| Error Code | Error Detection | Cause of Error | Check Point |
|------------|---|---|--|
| CH21 | High current into the compressor(DC Peak) | <ul style="list-style-type: none"> Over load operation (Indoor/outdoor fan constraint, screened, blocked, cycle issue) | <ul style="list-style-type: none"> Check Indoor/outdoor fan constraint, screened/flow structure |
| CH29 | Compressor input phase current is high | <ul style="list-style-type: none"> Refrigerant leak Disconnection/shot-circuit inside compressor Compressor failure Burned parts inside PCBA(IPM failure) | <ul style="list-style-type: none"> Check refrigerant leakage Check compressor wire open/short Check compressor insulation damage Check if IPM burned |

⚠ WARNING

Before checking PCBA or each outdoor/indoor electric parts, wait for 3 minutes after the power is off.

When measuring at standby state of power supply, after checking the measurement mode of the meter, be careful of the short-circuits with other parts.

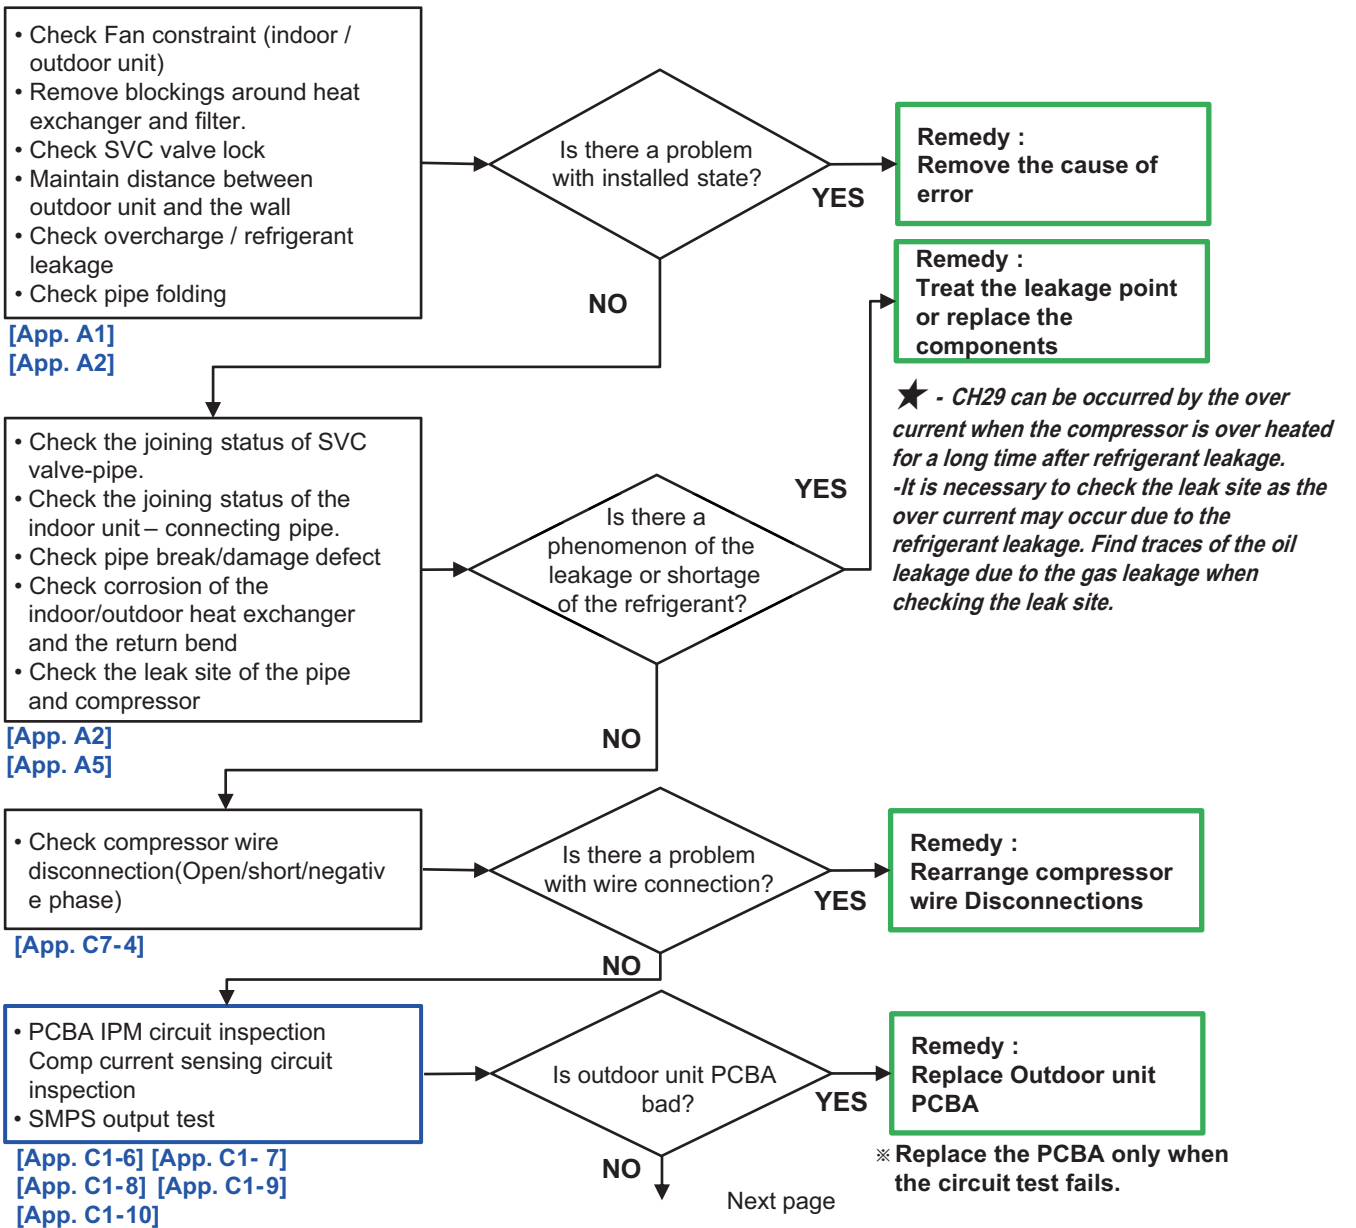

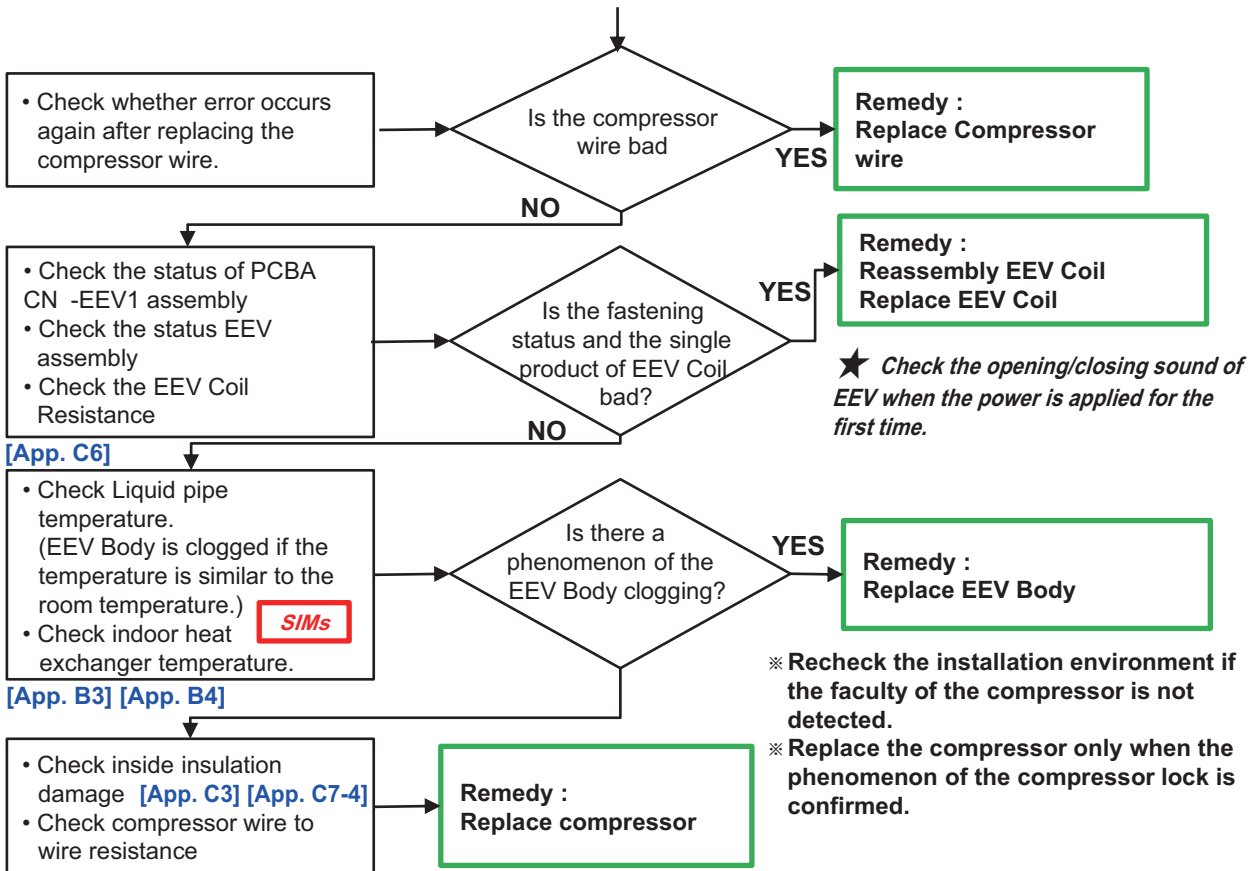

Field failure examples

- Compressor crack




★ -When CH21 occurs, it can be determined as the faculty of the PCBA if CH21 occurs in the same way when starting up the product after removing the compressor wire connector.

-When CH21 occurs, it can be determined as the faculty of the compressor if CH26 occurs in the same way when starting up the product after removing the compressor wire connector. **SIMs** [App. B2]


※ **Parts Replacement Procedure(Recommended)**



- Mis-connected the compressor wire

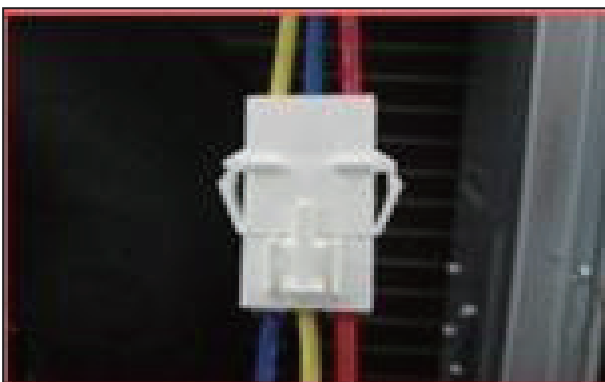

- Compressor wire short

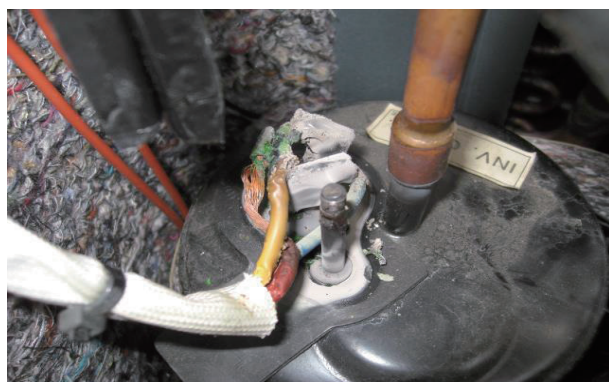


| Error Code | Error Detection | Cause of Error | Check Point |
|------------|--|--|---|
| CH22 | Ac input current is higher than the limit. | <ul style="list-style-type: none"> Over load operation (outdoor fan constraint, screened, blocked) Input voltage error (low voltage) Burned parts inside PCBA | <ul style="list-style-type: none"> Check input voltage Check outdoor fan constraint / screened/ flow structure Check PCBA current sensor parts |

⚠ WARNING

Before checking PCBA or each outdoor/indoor electric parts, wait for 3 minutes after the power is off.

When measuring at standby state of power supply, after checking the measurement mode of the meter, be careful of the short-circuits with other parts.

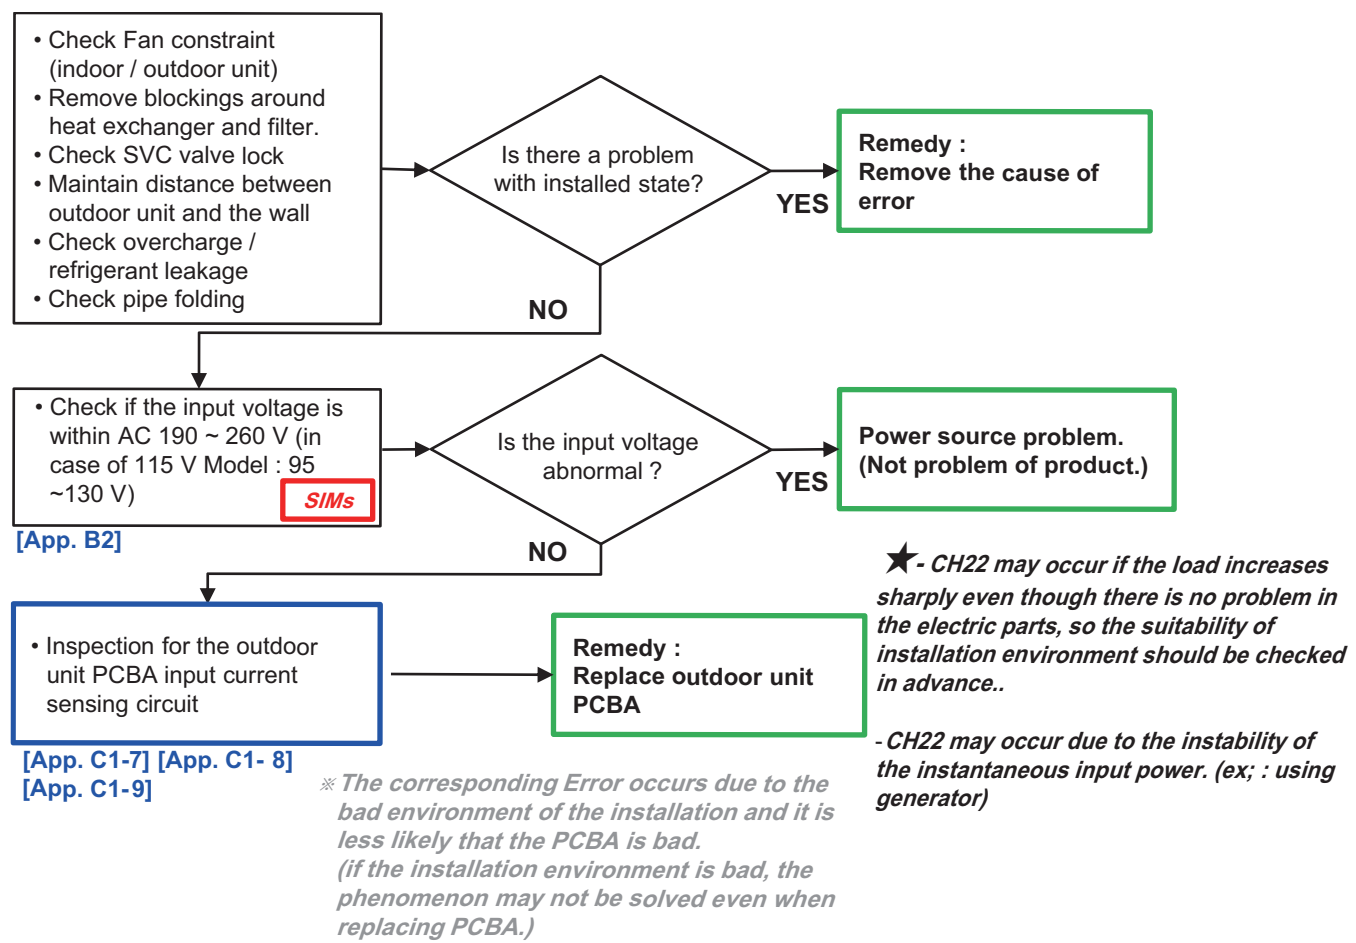


Field failure examples


- Airflow to condenser is blocked(1)



- Airflow to condenser is blocked(2)

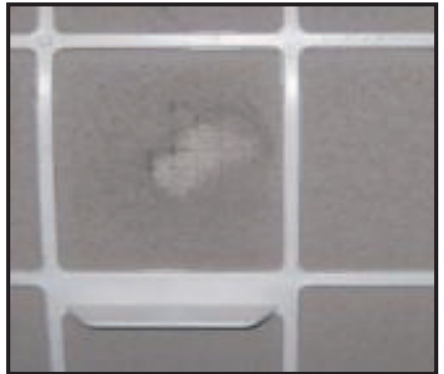

- Service valve closed

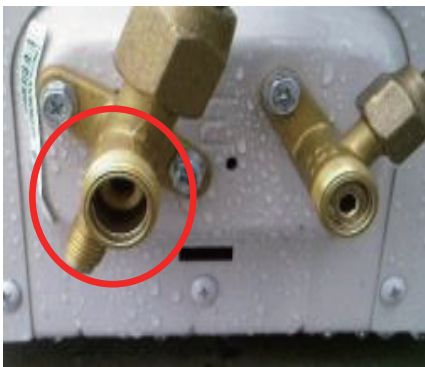


| Error Code | Error Detection | Cause of Error | Check Point |
|------------|--------------------------|---|---|
| CH23 | DC Link Voltage Low/High | <ul style="list-style-type: none"> • Input voltage error(low voltage) • Reactor disconnection / Bad fastening • PCBA failure | <ul style="list-style-type: none"> • Check input voltage • Reactor wire abnormal/open • Check PCBA DC Link voltage sensor part |

⚠ WARNING

Before checking PCBA or each outdoor/indoor electric parts, wait for 3 minutes after the power is off.

When measuring at standby state of power supply, after checking the measurement mode of the meter, be careful of the short-circuits with other parts.

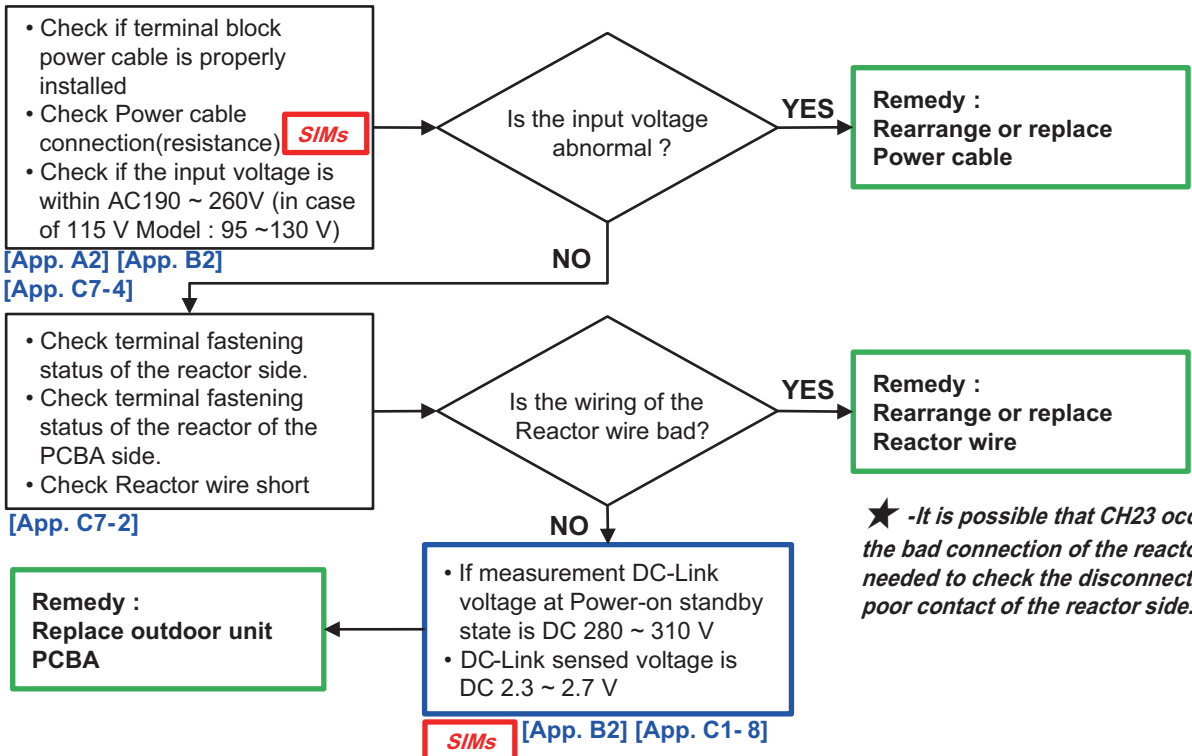



★ -It is possible that CH23 occurs due to the bad connection of the reactor, so it is needed to check the disconnection and the poor contact of the reactor side.

※ Parts Replacement Procedure(Recommended)



Field failure examples

- Reactor wire short

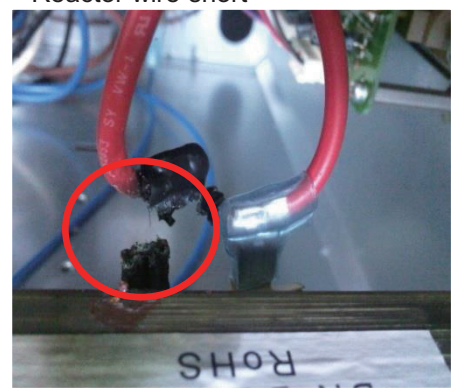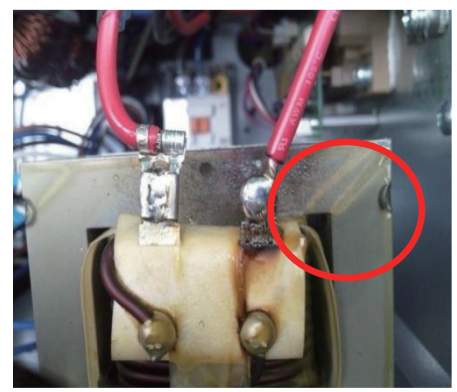


| Error Code | Error Detection | Cause of Error | Check Point |
|------------|------------------------|---|--|
| CH26 | DC Comp Position Error | <ul style="list-style-type: none"> • Poor connection of compressor connector • Compressor failure • PCBA failure | <ul style="list-style-type: none"> • Check compressor wire open/short • Check compressor insulation damage |

⚠ WARNING

Before checking PCBA or each outdoor/indoor electric parts, wait for 3 minutes after the power is off.

When measuring at standby state of power supply, after checking the measurement mode of the meter, be careful of the short-circuits with other parts.

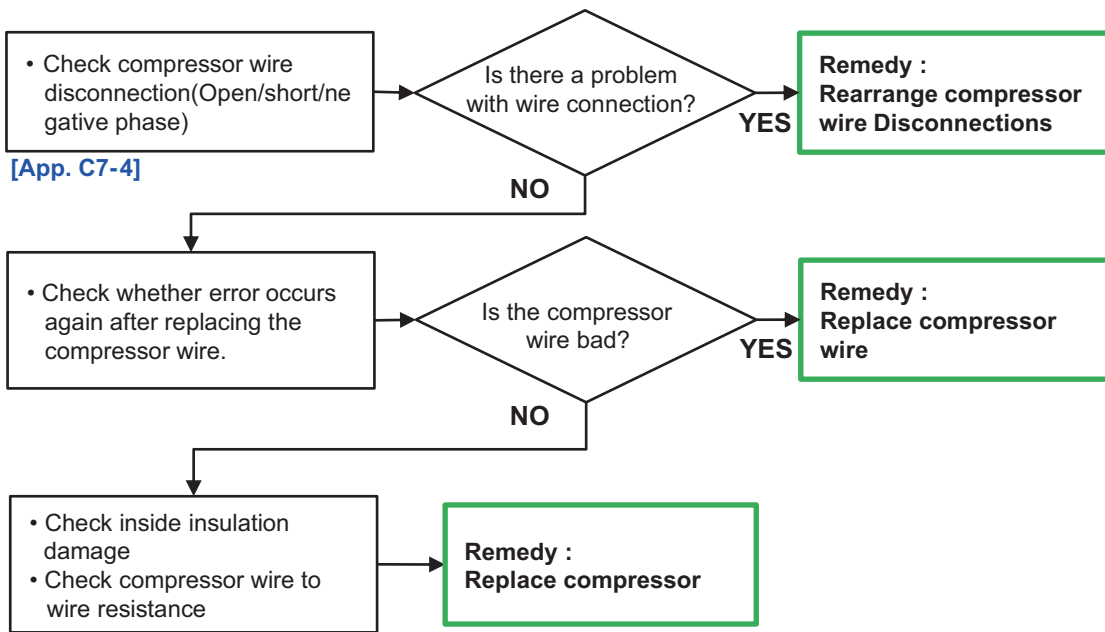

※ As it is highly possible that the corresponding error may occur due to the wiring problem of the compressor wire, be sure to check the wiring status of the wire.

※ Parts Replacement Procedure(Recommended)




| Error Code | Error Detection | Cause of Error | Check Point |
|------------|--|---|---|
| CH27 | PSC Fault error Over-current on AC → DC converter circuit | <ul style="list-style-type: none"> • Overload outdoor fan constraint, screened, blocked) • Bad Reactor fastening • Burned PCBA internal parts (PSC module) | <ul style="list-style-type: none"> • Check outdoor fan constraint / screened / flow structure • Check whether the reactor fastening is bad • Check for PCBA internal part burn |

⚠ WARNING

Before checking PCBA or each outdoor/indoor electric parts, wait for 3 minutes after the power is off.

When measuring at standby state of power supply, after checking the measurement mode of the meter, be careful of the short-circuits with other parts.

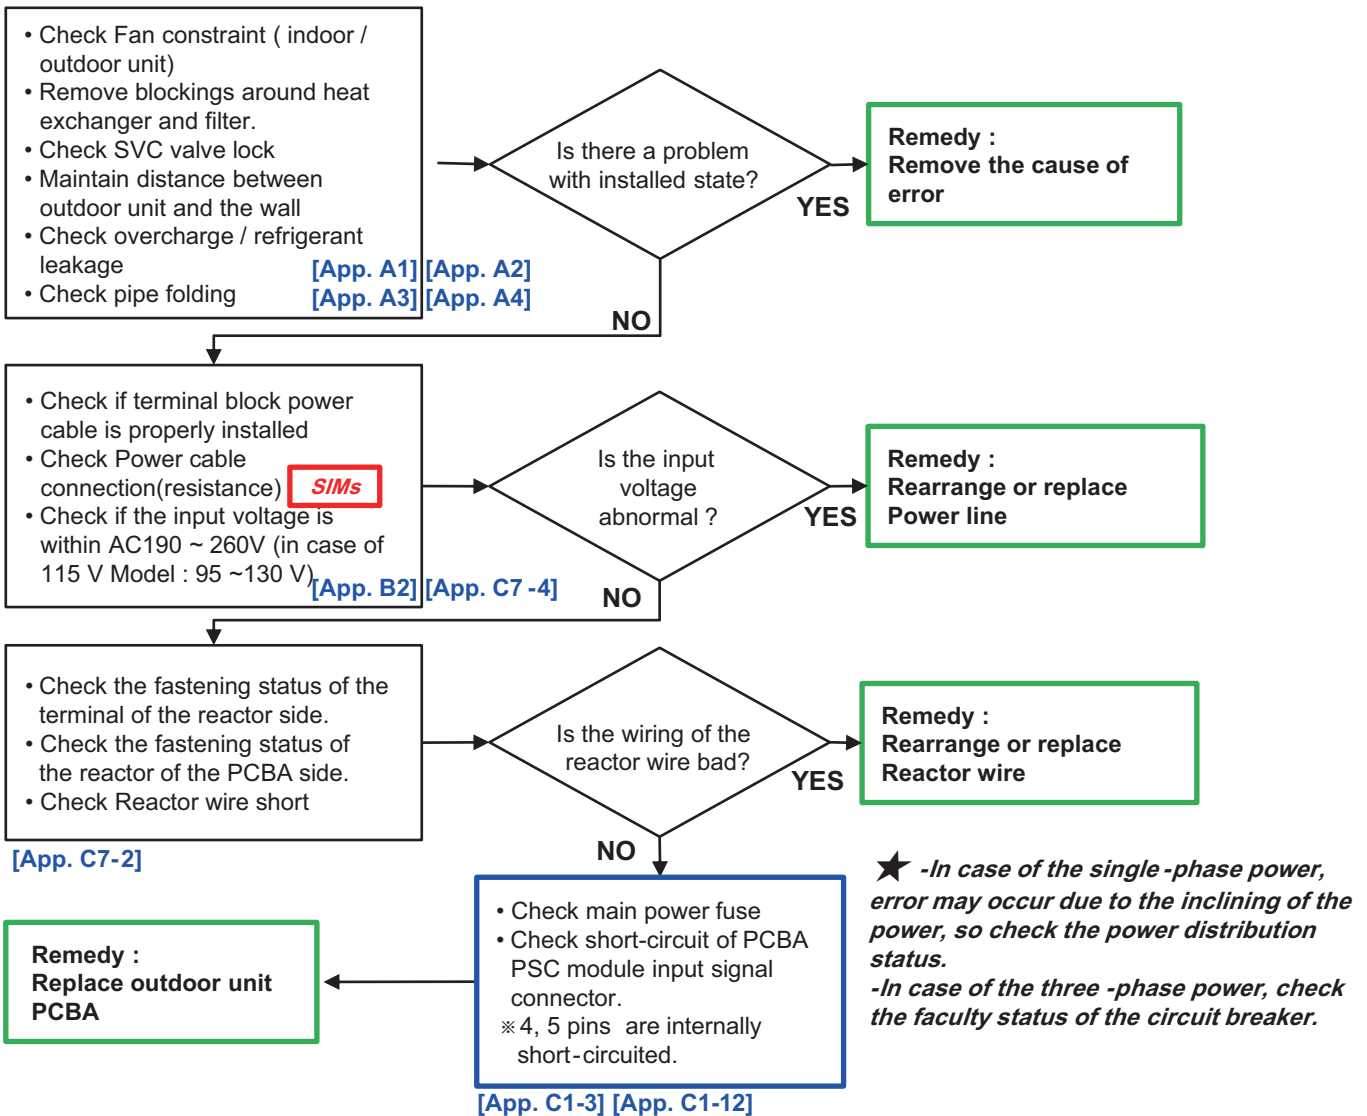

※ Parts Replacement Procedure(Recommended)





| Error Code | Error Detection | Cause of Error | Check Point |
|------------|---|---|--|
| CH32 | High temperature in Discharge pipe of the inverter compressor | <ul style="list-style-type: none"> • Overload operation (outdoor fan constraint, screened, blocked) • Poor INV Comp Discharge sensor • Refrigerant leakage (insufficient) • EEV connector displaced / poor EEV assembly | <ul style="list-style-type: none"> • Check outdoor fan constraint / screened / flow structure • Check refrigerant leakage • Check if the sensor is normal • Check the status of EEV assembly |

⚠ WARNING

Before checking PCBA or each outdoor/indoor electric parts, wait for 3 minutes after the power is off.

When measuring at standby state of power supply, after checking the measurement mode of the meter, be careful of the short-circuits with other parts.

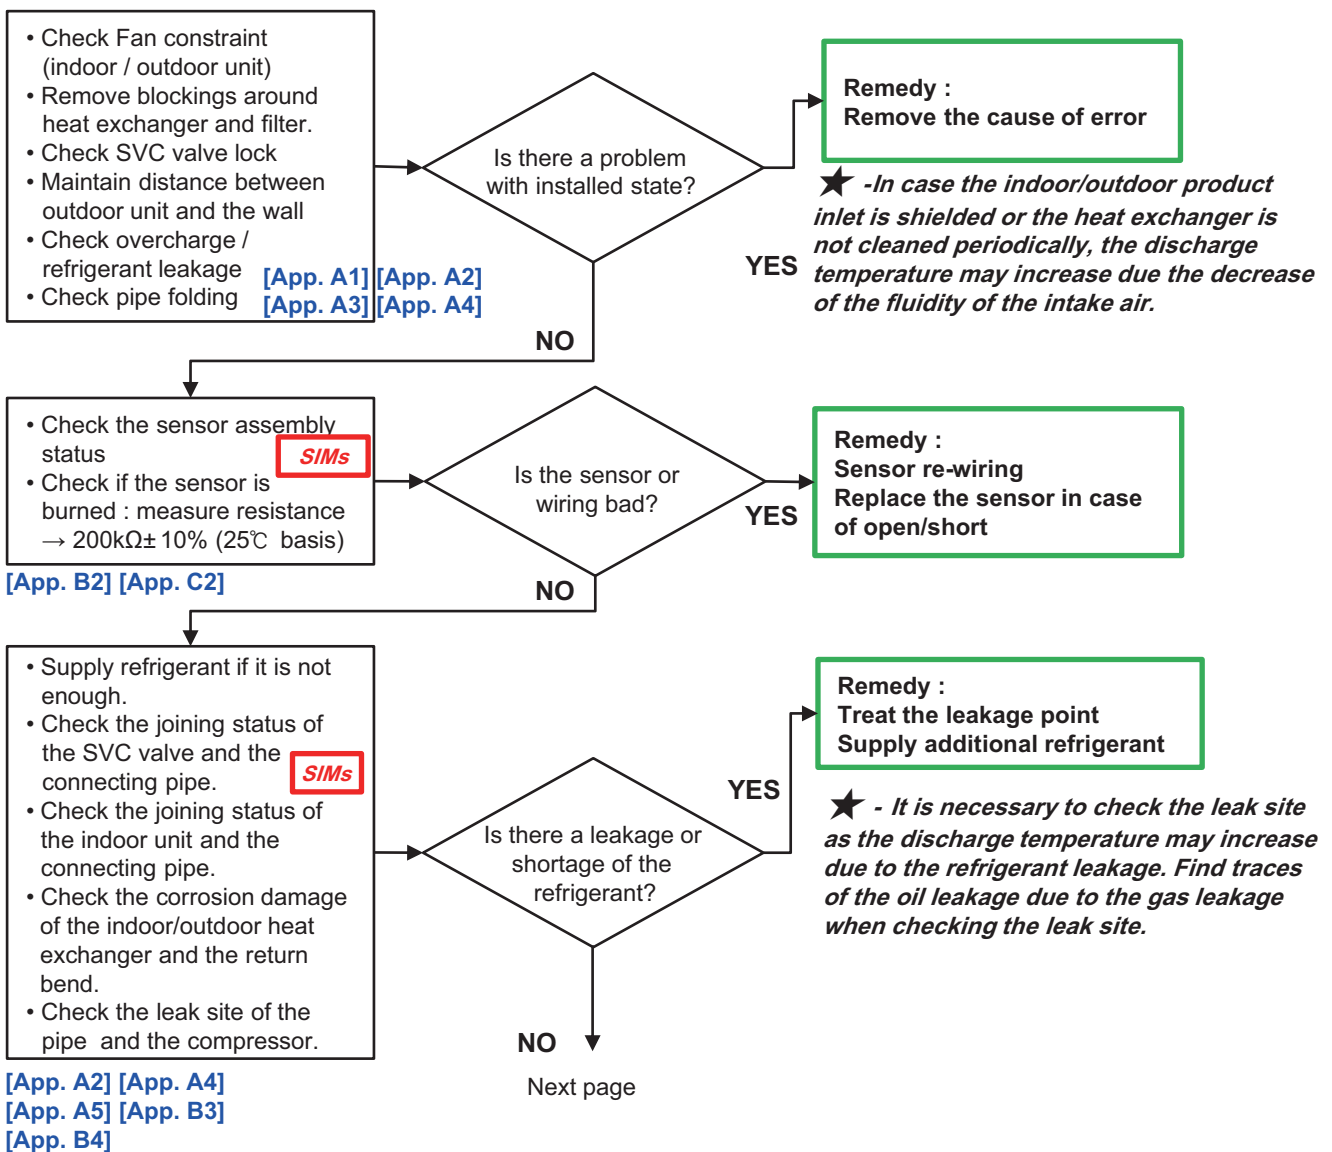

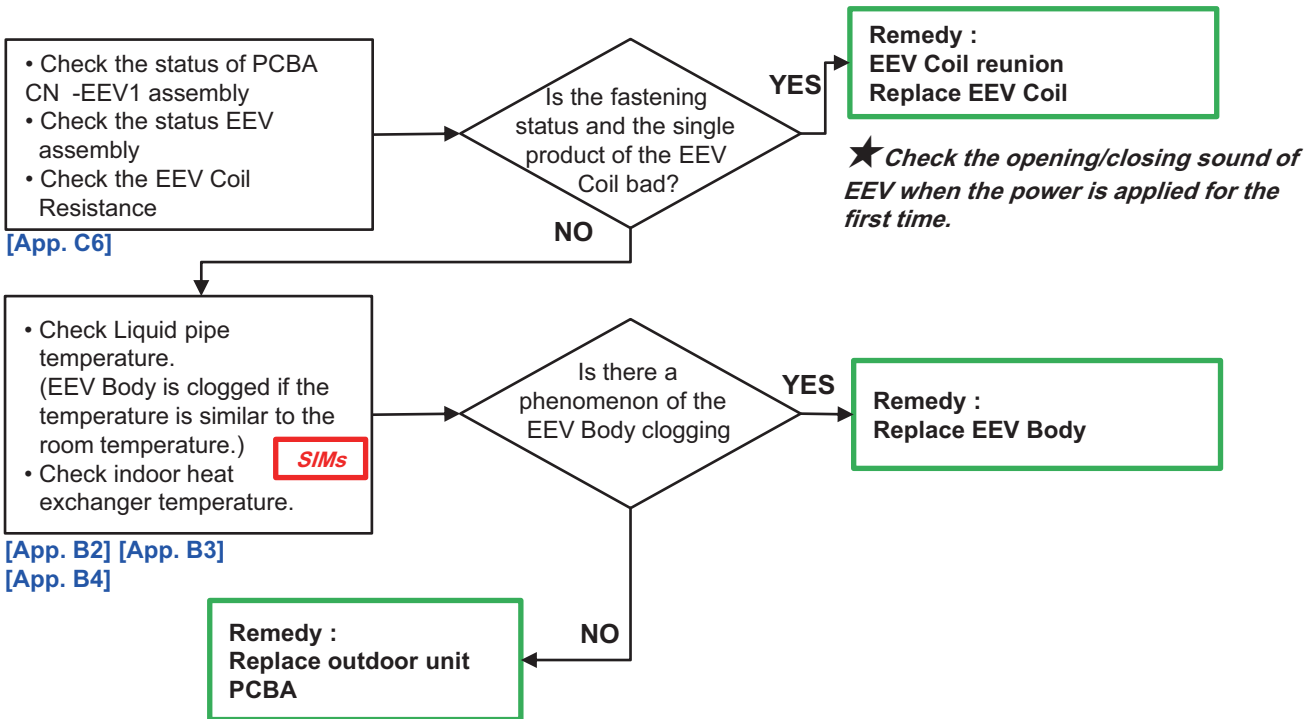


※ Parts Replacement Procedure(Recommended)



Field failure examples

- Airflow to condenser is blocked

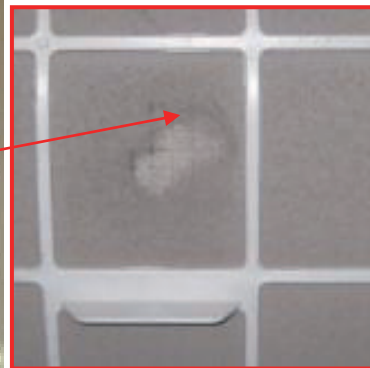



| Error Code | Error Detection | Cause of Error | Check Point |
|------------|-----------------------------------|--|---|
| CH34 | High pressure sensor error (high) | <ul style="list-style-type: none"> • Overload operation (outdoor fan constraint, screened, blocked) • Refrigerant leakage (insufficient) | <ul style="list-style-type: none"> • Check outdoor fan constraint / screened / flow structure • Check refrigerant leakage |
| CH35 | Low pressure sensor error (low) | <ul style="list-style-type: none"> • Bad connection of the pressure sensor • Bad compressor sensor • Bad PCBA | <ul style="list-style-type: none"> • Check the connection status of the compressor sensor • Check resistance of the pressure sensor |

⚠ WARNING

Before checking PCBA or each outdoor/indoor electric parts, wait for 3 minutes after the power is off.

When measuring at standby state of power supply, after checking the measurement mode of the meter, be careful of the short-circuits with other parts.

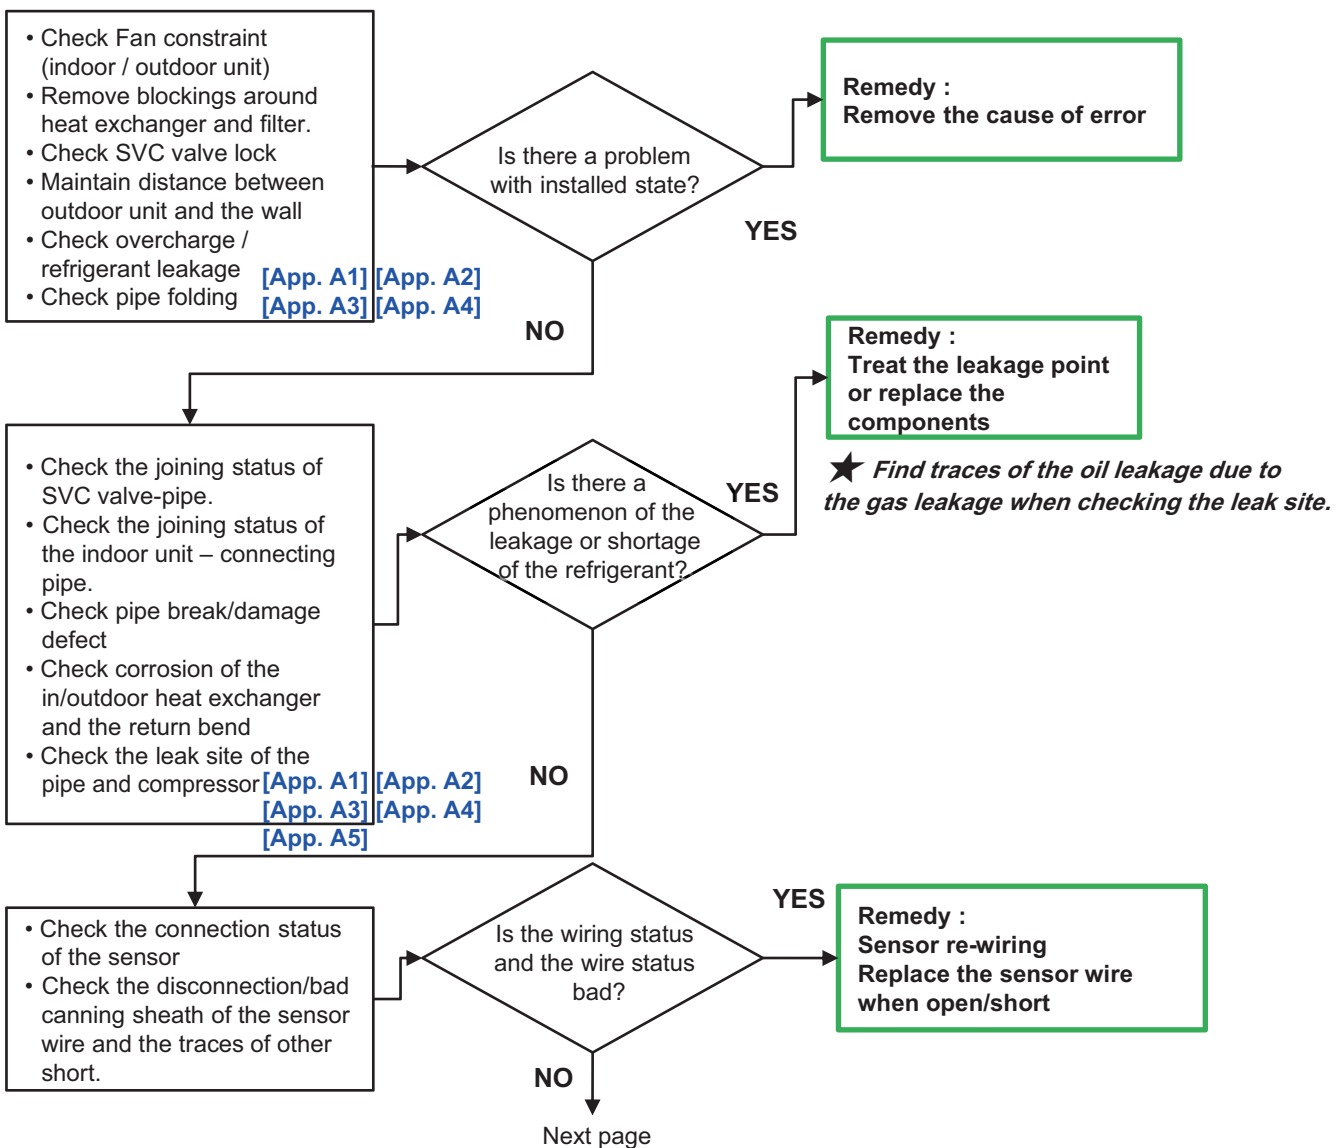

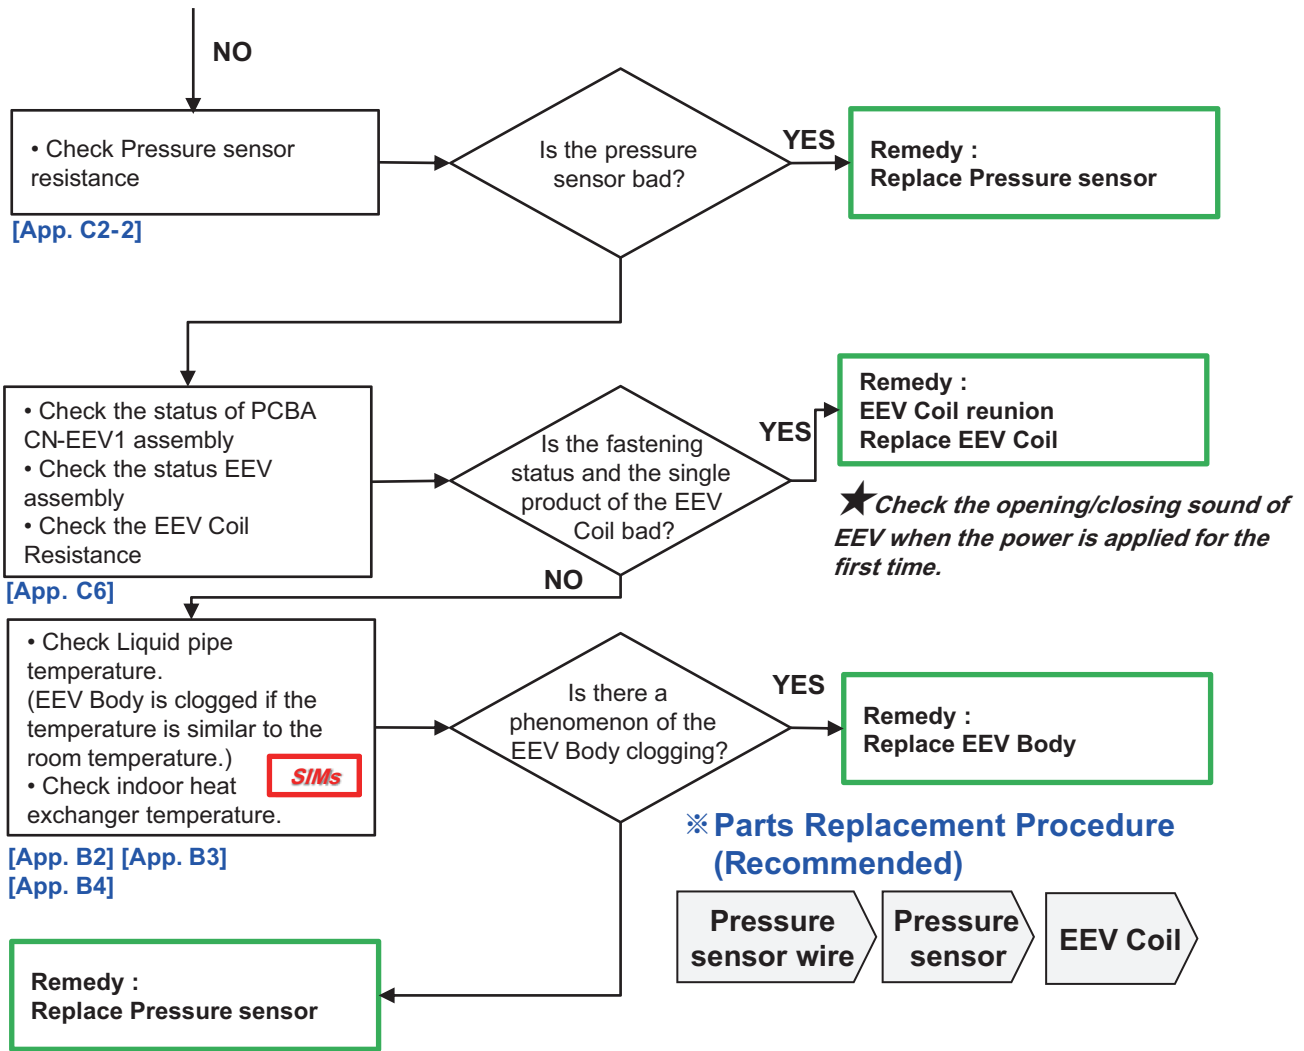


※ Be sure to confirm the status of the installation environment and the sensor as the corresponding error is less likely to have PCBA problem.

| Error Code | Error Detection | Cause of Error | Check Point |
|--------------|-------------------------------|--|---|
| CH36 CH38 | Refrigerant leakage detection | <ul style="list-style-type: none"> • Pipe break damage • Bad connection of the pipe • Pipe damage due to the corrosion • Corrosion damage of the heat exchanger • Compressor damage(crack) • EEV body clogging • Refrigerant shortage | <ul style="list-style-type: none"> • Check the connection status of the pipe. • Check the pipe break/damage faulty status • Check the status of the indoor/outdoor heat exchangers • Check the compressor leakage • Check EEV body clogging • Check proper refrigerant quantity • Check the quantity of the refrigerant additionally charged |

⚠ WARNING

Before checking PCBA or each outdoor/indoor electric parts, wait for 3 minutes after the power is off.

When measuring at standby state of power supply, after checking the measurement mode of the meter, be careful of the short-circuits with other parts.

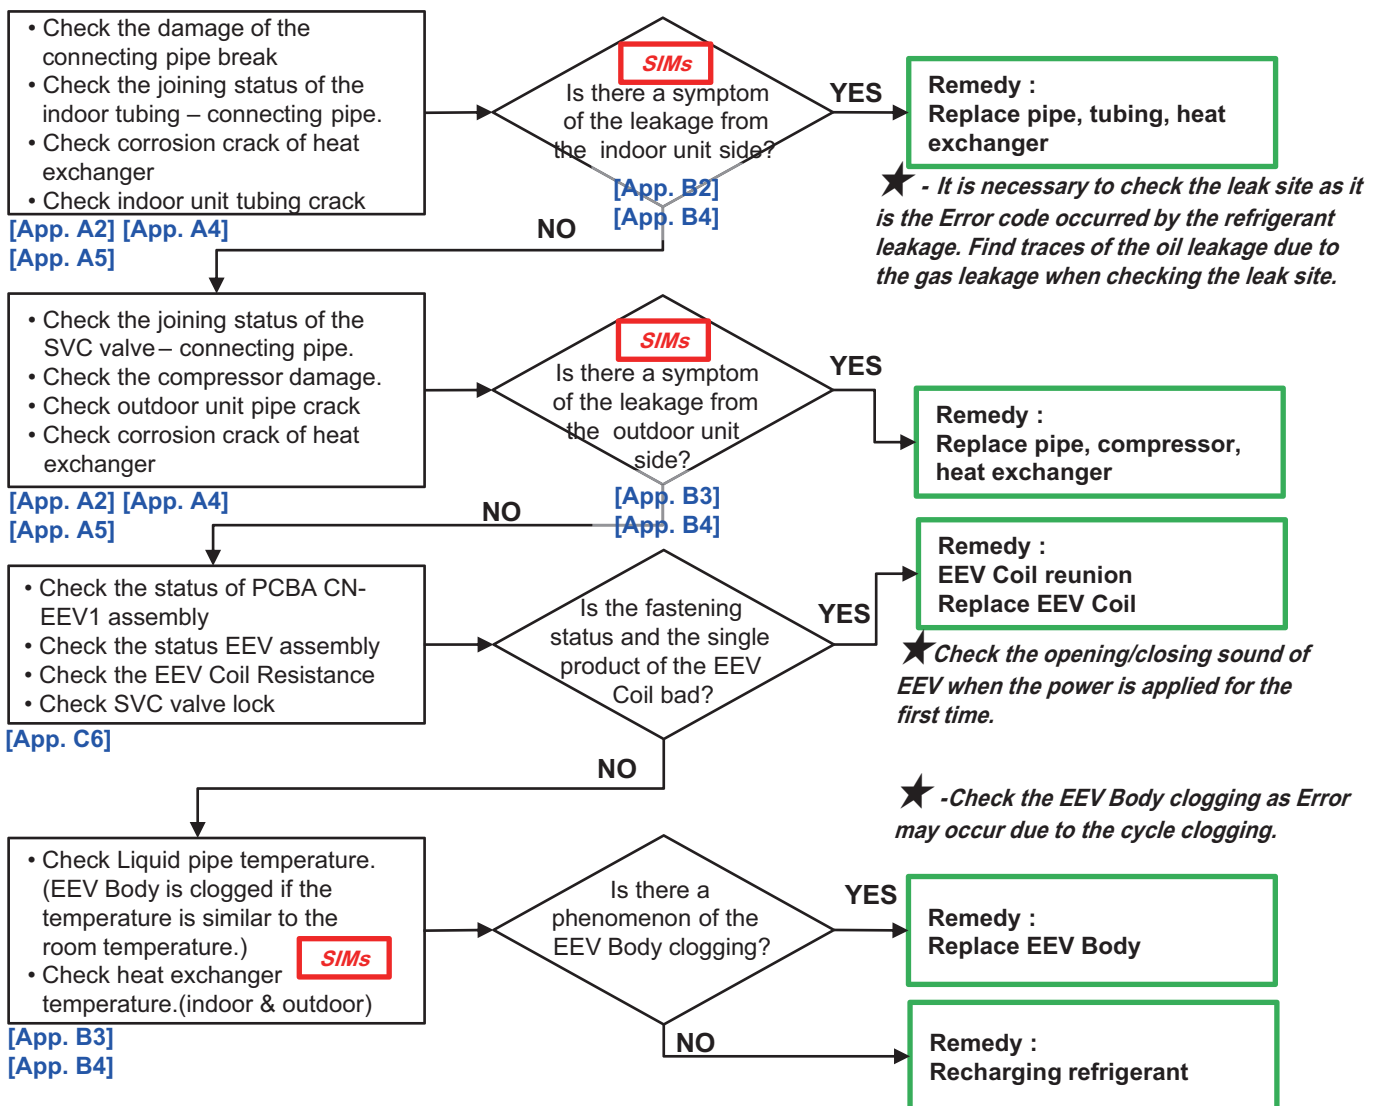



| Error Code | Error Detection | Cause of Error | Check Point |
|------------|---------------------------|---|--|
| CH37 | Failure compressing ratio | <ul style="list-style-type: none"> • Overload operation (outdoor fan constraint, screened, blocked) • SVC valve lock • Bad compressor sensor • EEV connector displaced / poor EEV assembly • EEV Body clogging • Refrigerant leakage (insufficient) • Refrigerant overcharge | <ul style="list-style-type: none"> • Check outdoor fan constraint / screened / flow structure • Check SVC valve lock • Check resistance of pressure sensor • Check the status of EEV assembly • Check EEV clogging • Check refrigerant leakage 3 • Check the quantity of the refrigerant. |

⚠ WARNING


Before checking PCBA or each outdoor/indoor electric parts, wait for 3 minutes after the power is off.

When measuring at standby state of power supply, after checking the measurement mode of the meter, be careful of the short-circuits with other parts.

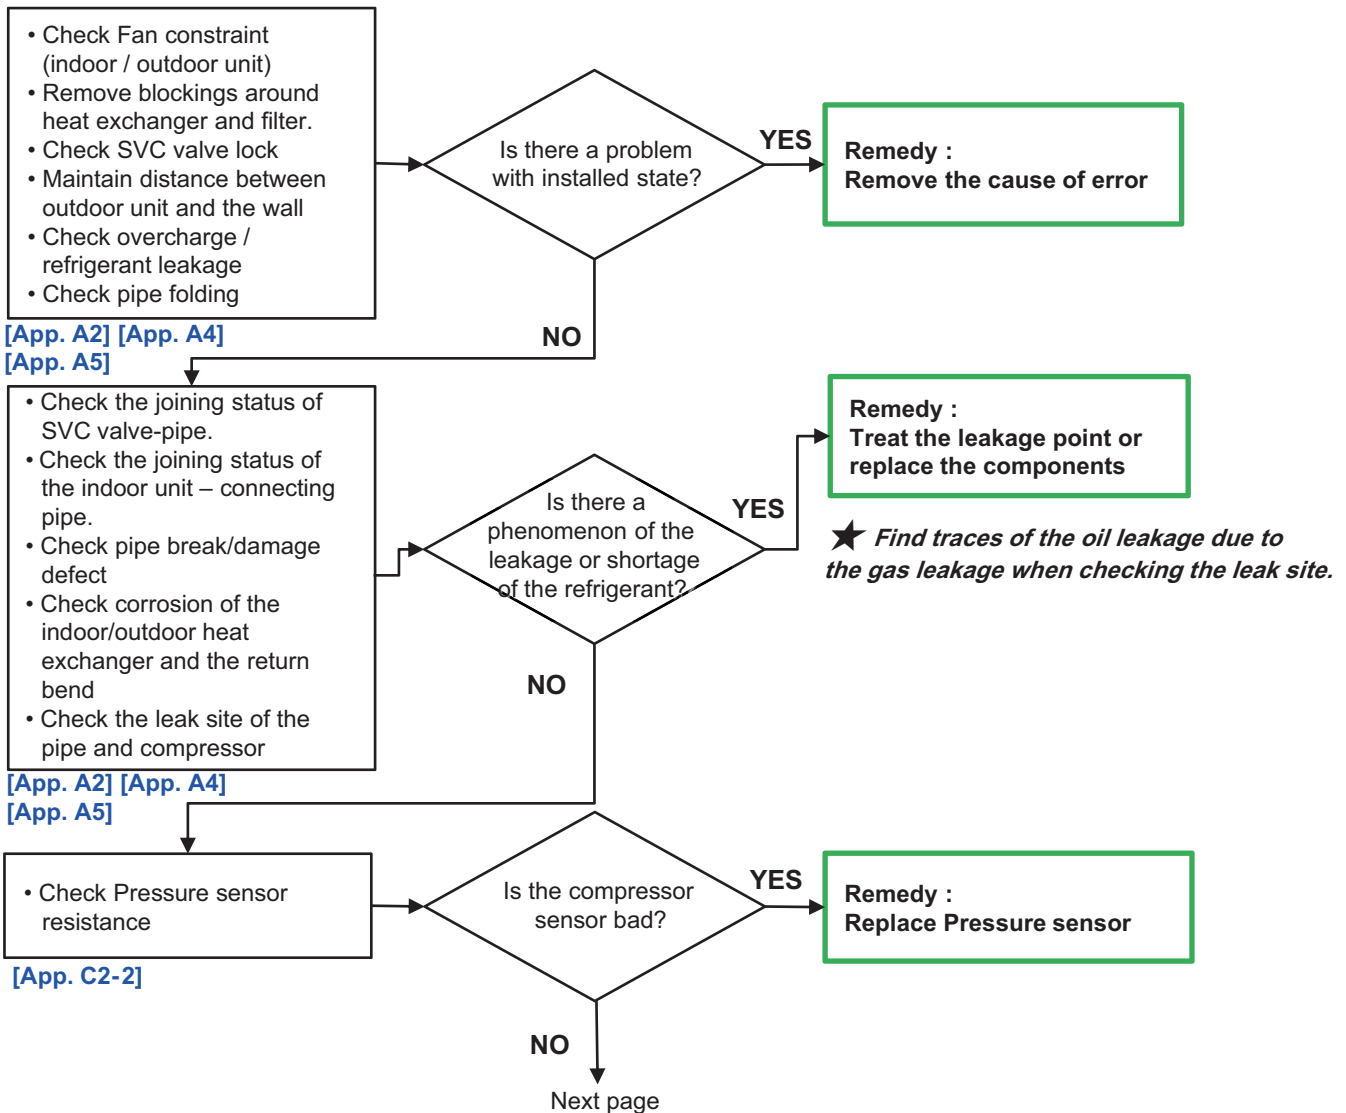

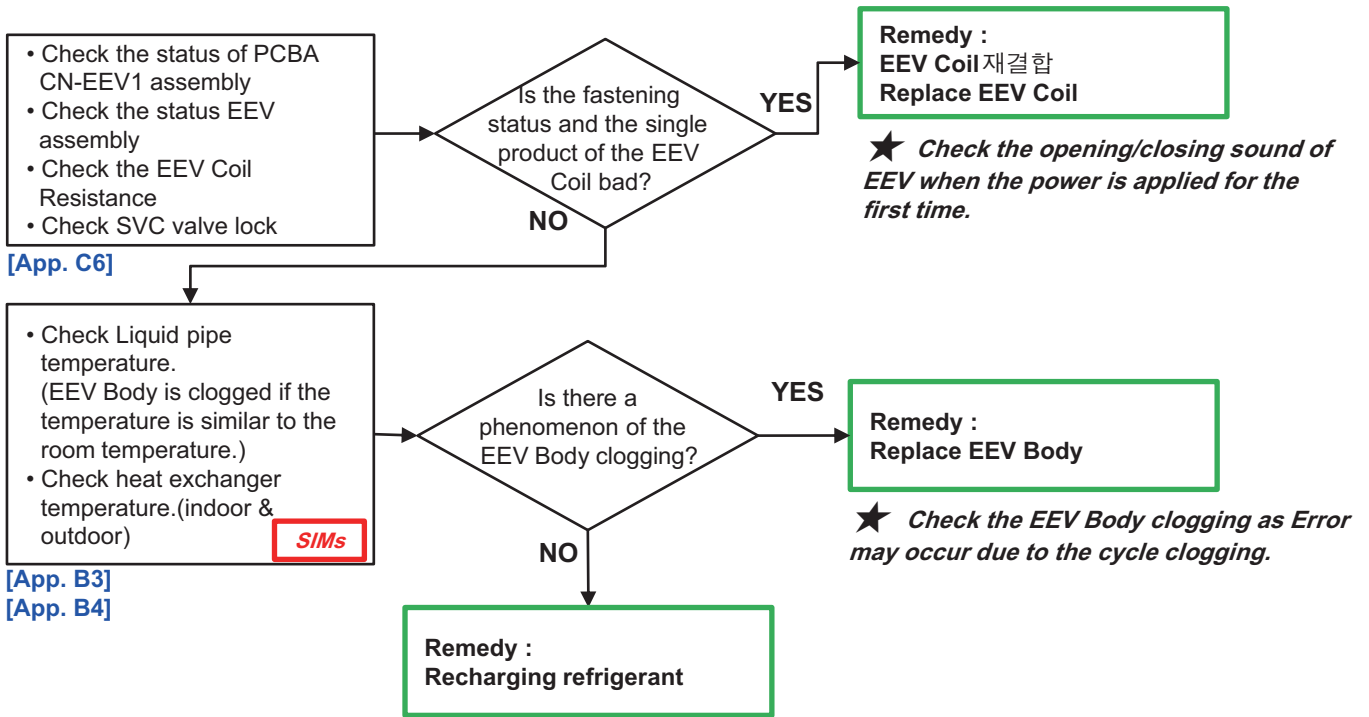


※ **Parts Replacement Procedure (Recommended)**



| Error Code | Error Detection | Cause of Error | Check Point |
|------------|-------------------------------|------------------------------------|-------------|
| CH40 | Inverter CT sensor open/short | • PCBA sensing circuit part burned | - |

| | |
|--|--|
|  WARNING | <p>Before checking PCBA or each outdoor/indoor electric parts, wait for 3 minutes after the power is off.</p> <p>When measuring at standby state of power supply, after checking the measurement mode of the meter, be careful of the short-circuits with other parts.</p> |
|--|--|

- As CH 40 Error code phenomenon occurs due to the burn-out of the components of the outdoor unit PCBA, replace the PCBA without separate inspection.

※ **Parts Replacement Procedure(Recommended)**




| Error Code | Error Detection | Cause of Error | Check Point |
|------------|--|--|--|
| CH41 | Inverter discharge temperature sensor open or short | | |
| CH44 | Outdoor room temperature sensor open or short | <ul style="list-style-type: none"> • Sensor mis-wiring/Short • Moisture penetration / Bad canning sheath | <ul style="list-style-type: none"> • Check whether the sensor connector was wired wrongly. • Bad canning sheath of the sensor wire / Short part check • Sensor faulty check |
| CH45 | Outdoor sensor (Outdoor heat exchanger)open or short | | |
| CH48 | Outdoor sensor (Outdoor heat exchanger)open or short | | |
| CH46 | Compressor suction temperature sensor open / short | | |

⚠ WARNING

Before checking PCBA or each outdoor/indoor electric parts, wait for 3 minutes after the power is off.

When measuring at standby state of power supply, after checking the measurement mode of the meter, be careful of the short-circuits with other parts.

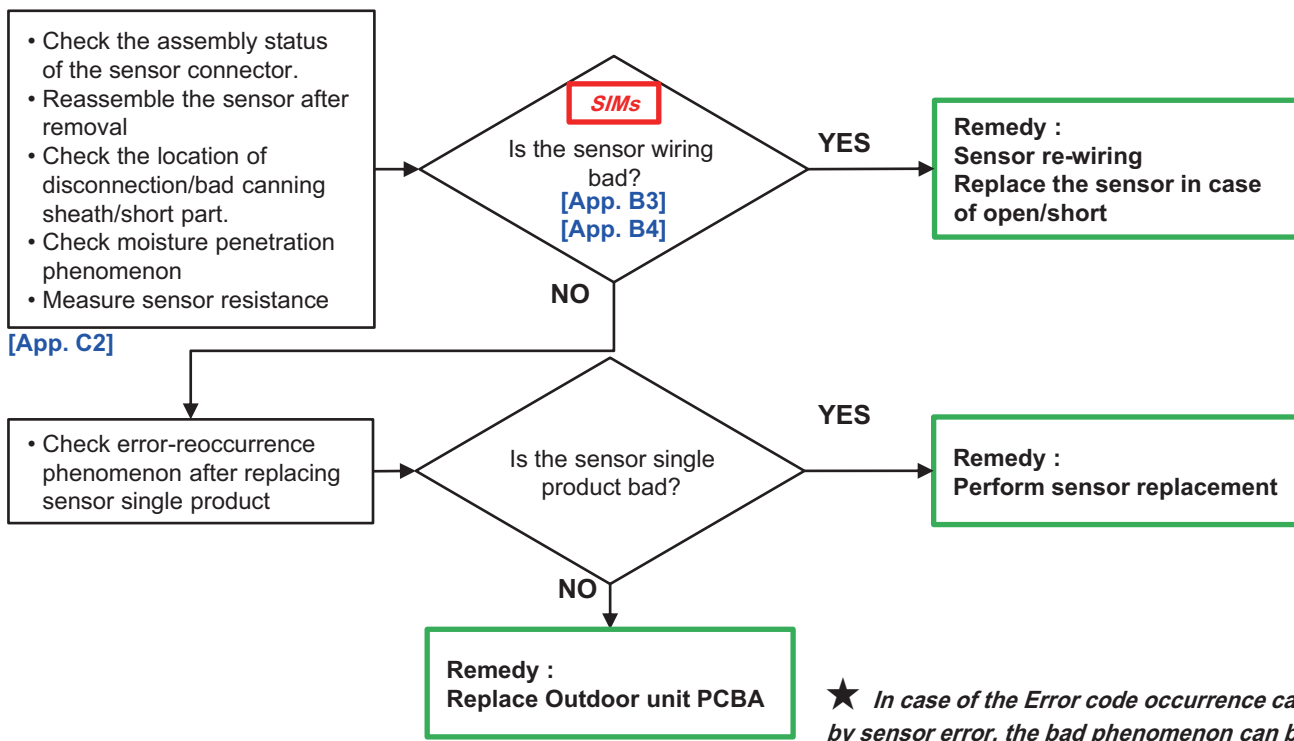

※ Be sure to confirm the status of the installation environment and the sensor as the corresponding error is less likely to have PCBA problem.

★ In case of the Error code occurrence caused by sensor error, the bad phenomenon can be figured out with reference to the temperature value read from the sensor by utilizing MV before decomposition.


※ Pipe In/Out sensor may not exist depending on the product, so proceed the service referring to SVC Manual.

※ **Parts Replacement Procedure(Recommended)**

Temperature Sensor

| Error Code | Error Detection | Cause of Error | Check Point |
|------------|---------------------------------|-------------------------------------|---|
| CH42 | Low pressure Sensor open/short | • Bad wiring of the pressure sensor | • Check whether the sensor connector was wired wrongly. |
| CH43 | High pressure Sensor open/short | • Bad pressure sensor | |

⚠ WARNING Before checking PCBA or each outdoor/indoor electric parts, wait for 3 minutes after the power is off.
 When measuring at standby state of power supply, after checking the measurement mode of the meter, be careful of the short-circuits with other parts.

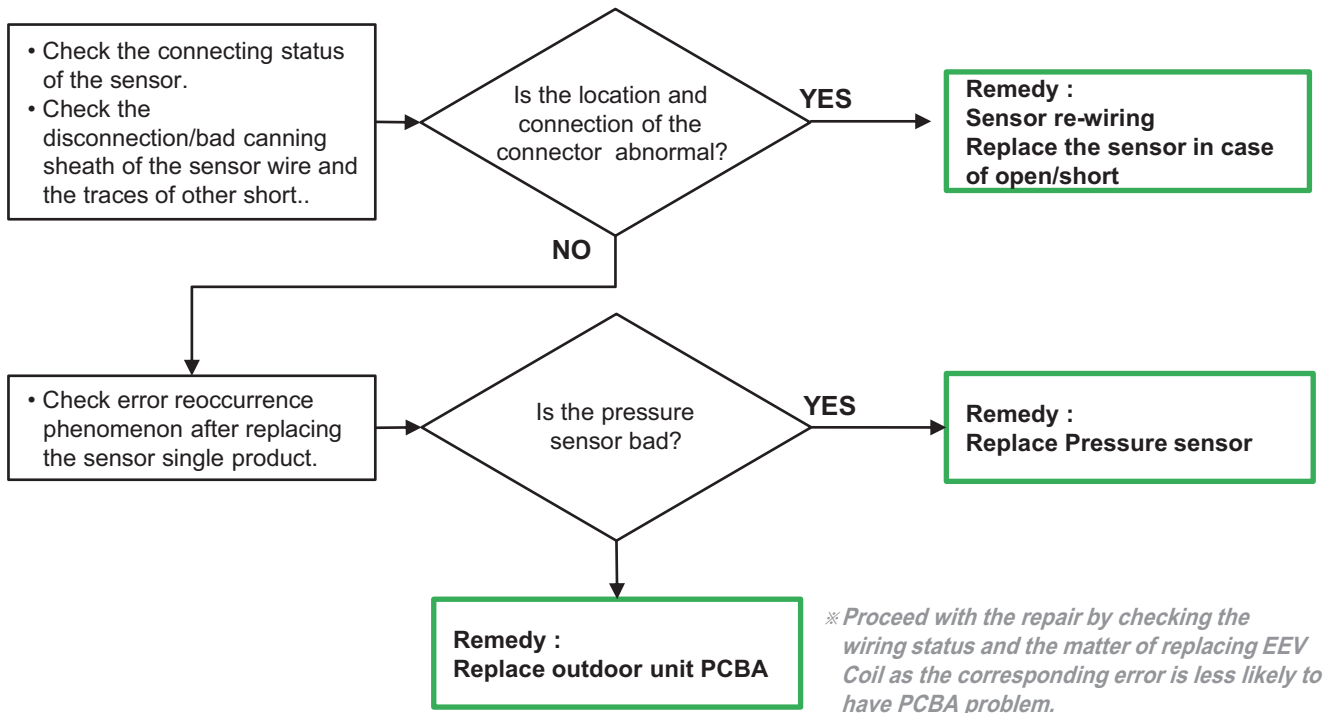

※ **Parts Replacement Procedure(Recommended)**



| Error Code | Error Detection | Cause of Error | Check Point |
|------------|--|---|---|
| CH51 | Excessive number of the over-capacity access unit (Exceeds the sum of the capacity of the indoor unit) | • Mis-wiring of the indoor/outdoor unit | • Check the matching status of the indoor/outdoor unit. |

- Case of field defect
 - Wrong wiring connection during installation of large numbers of the similar model at the same site.
- In case like this, make sure to double check that wiring connection and piping connection are connected to the same model.





| Error Code | Error Detection | Cause of Error | Check Point |
|------------|--------------------------------|--|--|
| CH61 | High temperature in Cond. Pipe | <ul style="list-style-type: none"> • Overload operation (Fan constraint, screened, blocked) • Heat exchanger contaminated • Poor Cond. pipe sensor assembly / burned • EEV connector displaced/poor EEV assembly | <ul style="list-style-type: none"> • Check fan constraint, screened, flow structure • Check if refrigerant overcharged • Check the status of sensor assembly / burn • Check the status of EEV assembly |

⚠ WARNING

Before checking PCBA or each outdoor/indoor electric parts, wait for 3 minutes after the power is off.

When measuring at standby state of power supply, after checking the measurement mode of the meter, be careful of the short-circuits with other parts.

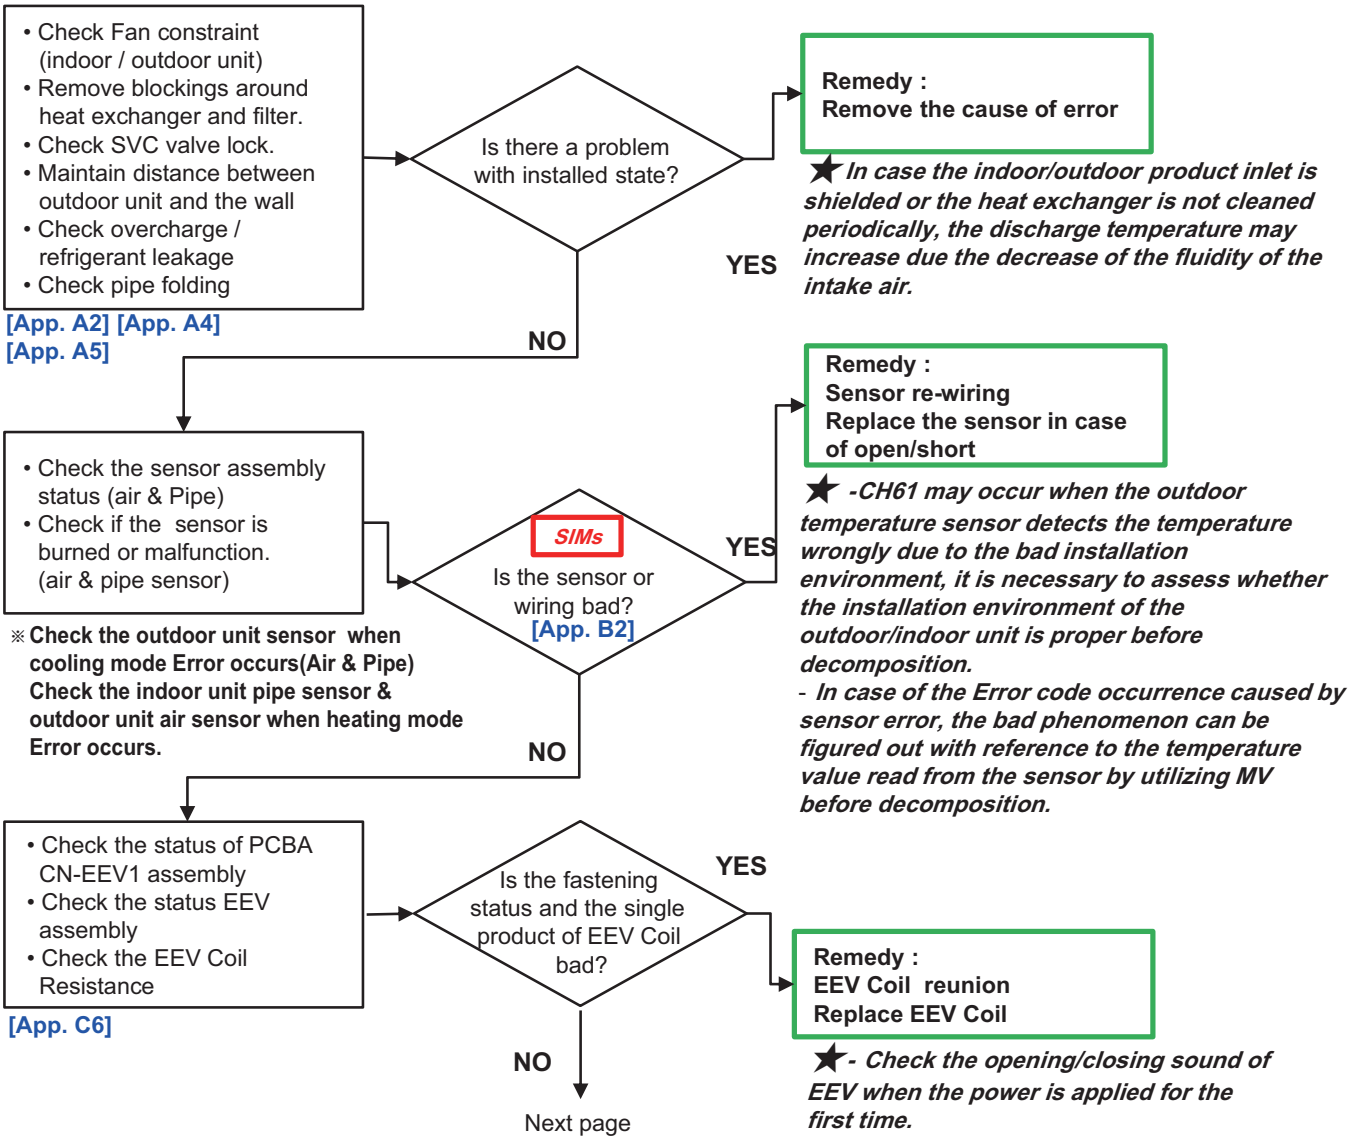

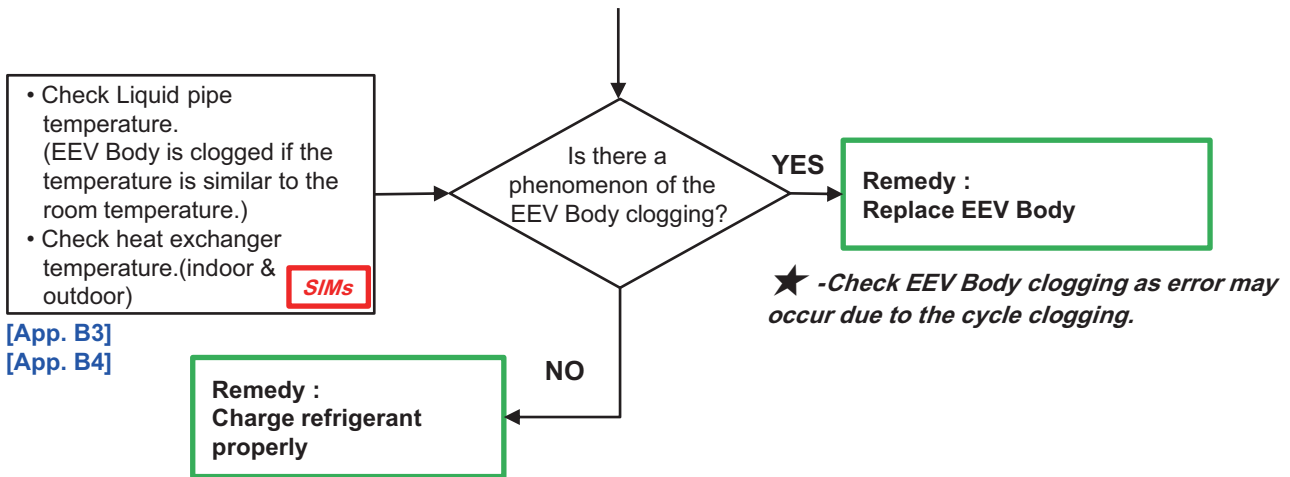

※ **Parts Replacement Procedure(Recommended)**

- When error occurs during cooling mode.




- When error occurs during heating mode.



Field failure examples

- Airflow to condenser is blocked

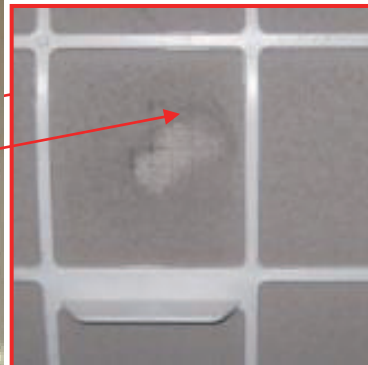


| Error Code | Error Detection | Cause of Error | Check Point |
|------------|--|--|--|
| CH62 | High temperature in outdoor PCBA heat sink | <ul style="list-style-type: none"> • Improper installation environment • Overload operation (outdoor fan constraint, screened, blocked) • Poor PCBA heat sink assembly • Poor PCBA temperature sensing circuit parts | <ul style="list-style-type: none"> • Check installation environment • Check outdoor fan constraint / screened/ flow structure • Check for the status of the PCBA heat sink connection • Check PCBA temperature sensing parts |

⚠ WARNING

Before checking PCBA or each outdoor/indoor electric parts, wait for 3 minutes after the power is off.

When measuring at standby state of power supply, after checking the measurement mode of the meter, be careful of the short-circuits with other parts.

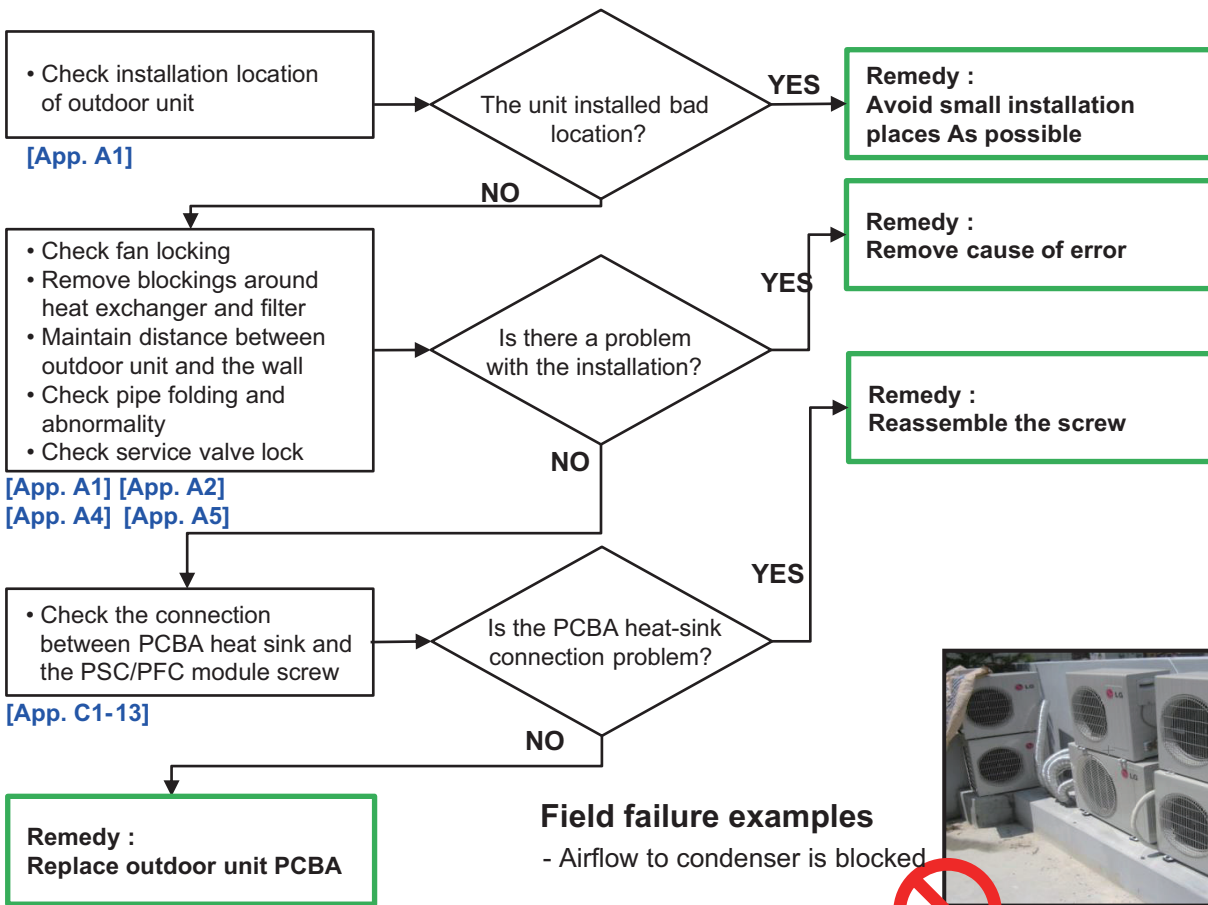

Field failure examples

- Airflow to condenser is blocked




※ The corresponding Error occurs due to the bad environment of the installation and it is less likely that the PCBA is bad. (if the installation environment is bad, the phenomenon may not be solved even when replacing PCBA.)

| Error Code | Error Detection | Cause of Error | Check Point |
|------------|---|--|--|
| CH67 | Outdoor BLDC fan locking (faulty motor operation) | <ul style="list-style-type: none"> Fan lock by physical force (foreign structure stuck in the motor) Poor connection of motor connector Motor failure PCBA failure | <ul style="list-style-type: none"> Structural locking of fan Poor connection of the motor connector Check motor failure Check PCBA failure |


WARNING

Before checking PCBA or each outdoor/indoor electric parts, wait for 3 minutes after the power is off.

When measuring at standby state of power supply, after checking the measurement mode of the meter, be careful of the short-circuits with other parts.

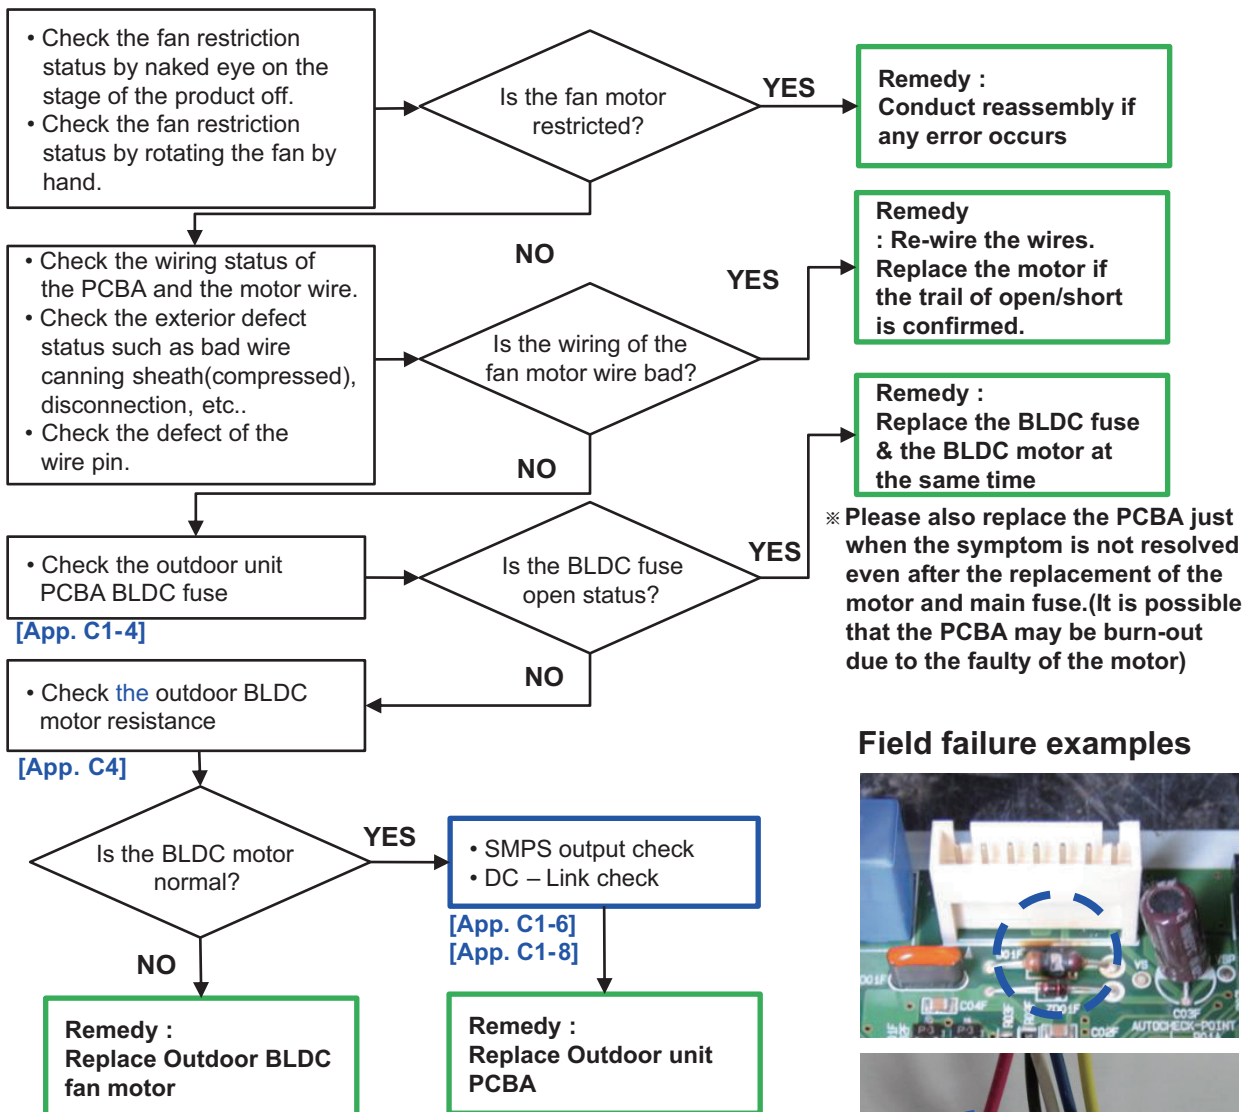

Field failure examples

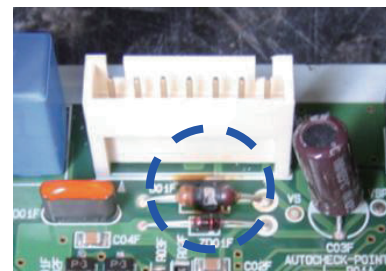

- ※ The connection of motor connector to PCBA should be done under no power supplying to PCBA
- ※ **Parts Replacement Procedure(Recommended)**




| Error Code | Error Detection | Cause of Error | Check Point |
|------------|-------------------------------------|---|---|
| CH72 | Switching for 4 way valve is failed | <ul style="list-style-type: none"> Indoor/outdoor sensor short/open Disconnection of 4 way valve connector 4 way valve open/short Burned part inside PCBA | <ul style="list-style-type: none"> Check sensor status (indoor/outdoor middle pipe) Check connector for 4 way valve Check 4 way valve coil resistance Check CN-4 way output voltage |


⚠ WARNING

Before checking PCBA or each outdoor/indoor electric parts, wait for 3 minutes after the power is off.

When measuring at standby state of power supply, after checking the measurement mode of the meter, be careful of the short-circuits with other parts.

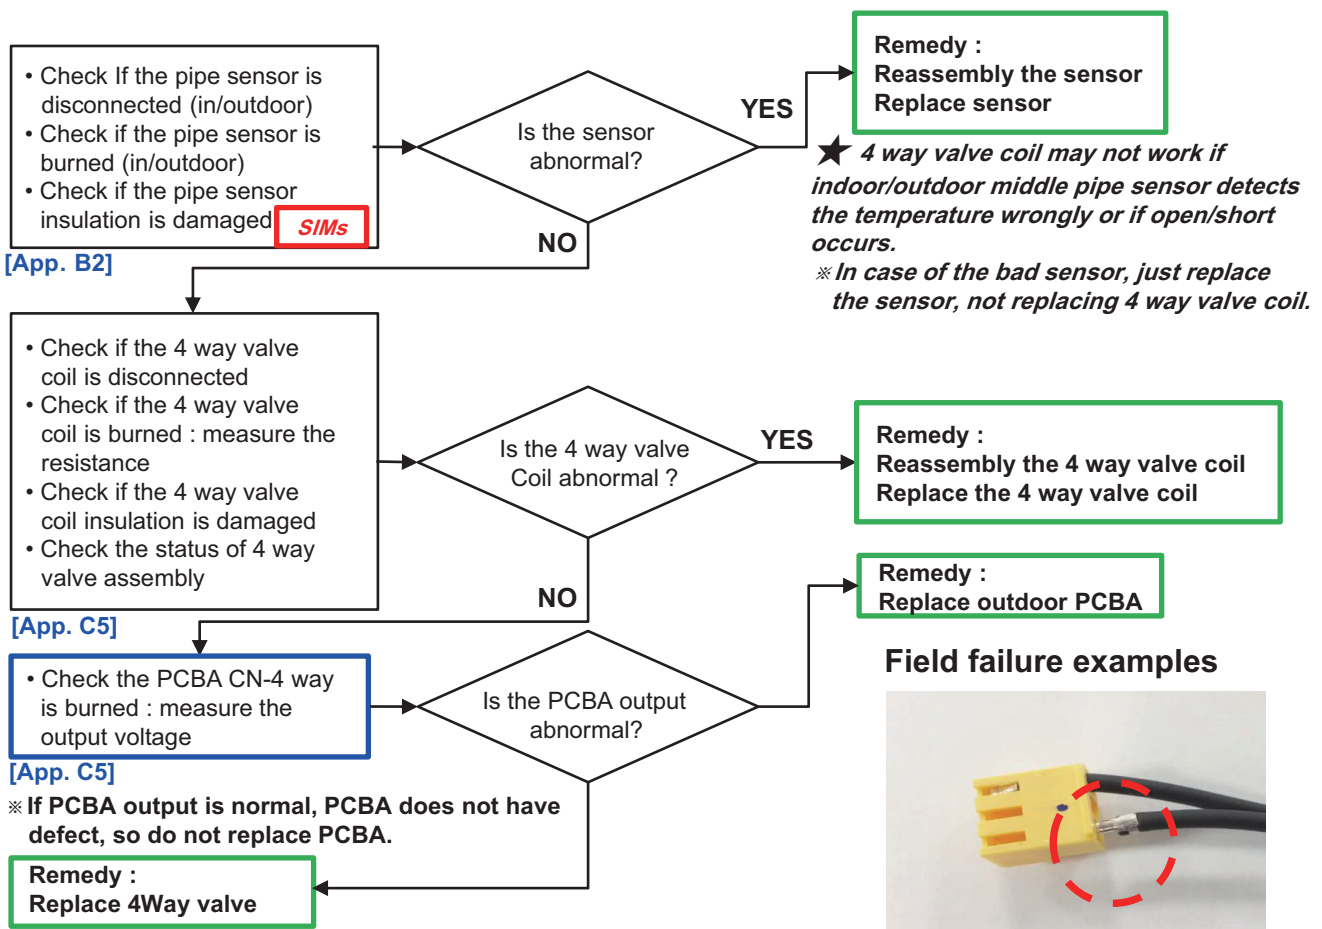

Field failure examples

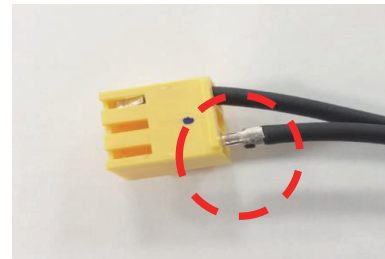

※ Parts Replacement Procedure(Recommended)



Appendix

Appendix A

Installation Checking

Guide

- 1. Installation Location**
- 2. Piping work**
- 3. Electric wiring work**
- 4. Insulation work**
- 5. Vacuum**
- 6. Test run**

A1. Installation location

A1-1 Check indoor unit location(1)

How?

- Make sure there is no heat or steam around indoor unit.
- Make sure heat radiation from condenser is not blocked.
- Place where noise & vibration are minimum.




Why?

- Reduce cooling capacity.
- Cause low performance.
- Prevent noise problem.

Indoor Unit Space Requirement :

Unit : mm

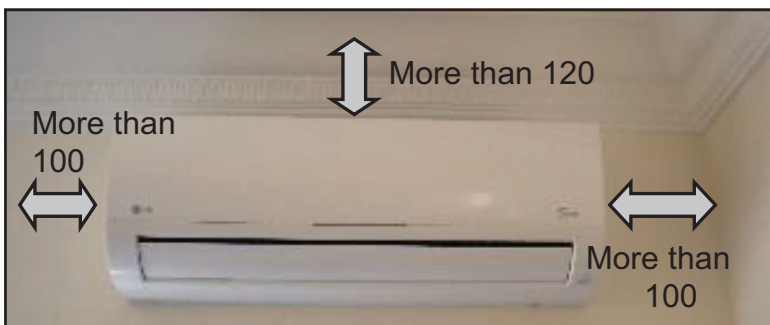

Tips :

- Where inlet/outlet airflow is not blocked.
→ Low cooling performance.
- Always follow the space requirements to prevent such cases.
- Consider safety, servicing space when selecting installation place.

Case of field defect (a)


- **Improper unit installation place**
→ Difficult when servicing



A1-1 Check indoor unit location(2)

Case of field defect (b)

- Inlet airflow to evaporator is blocked
 - Product low cooling / heating
 - Noise might occurs

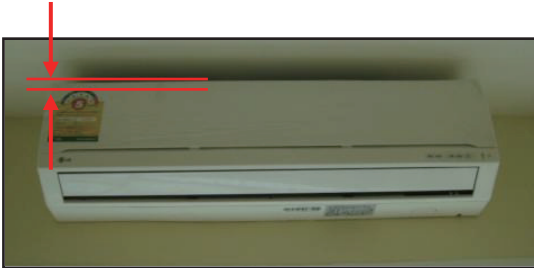

Case of field defect (c)

- Indoor unit is installed too high
 - Discharge air can't be fully distributed to user.
 - Low cooling / heating




Case of field defect (d)

- Improper unit installation place.
 - Safety issues



A1-2 Check outdoor unit location(1)

Indoor Unit Space Requirement :

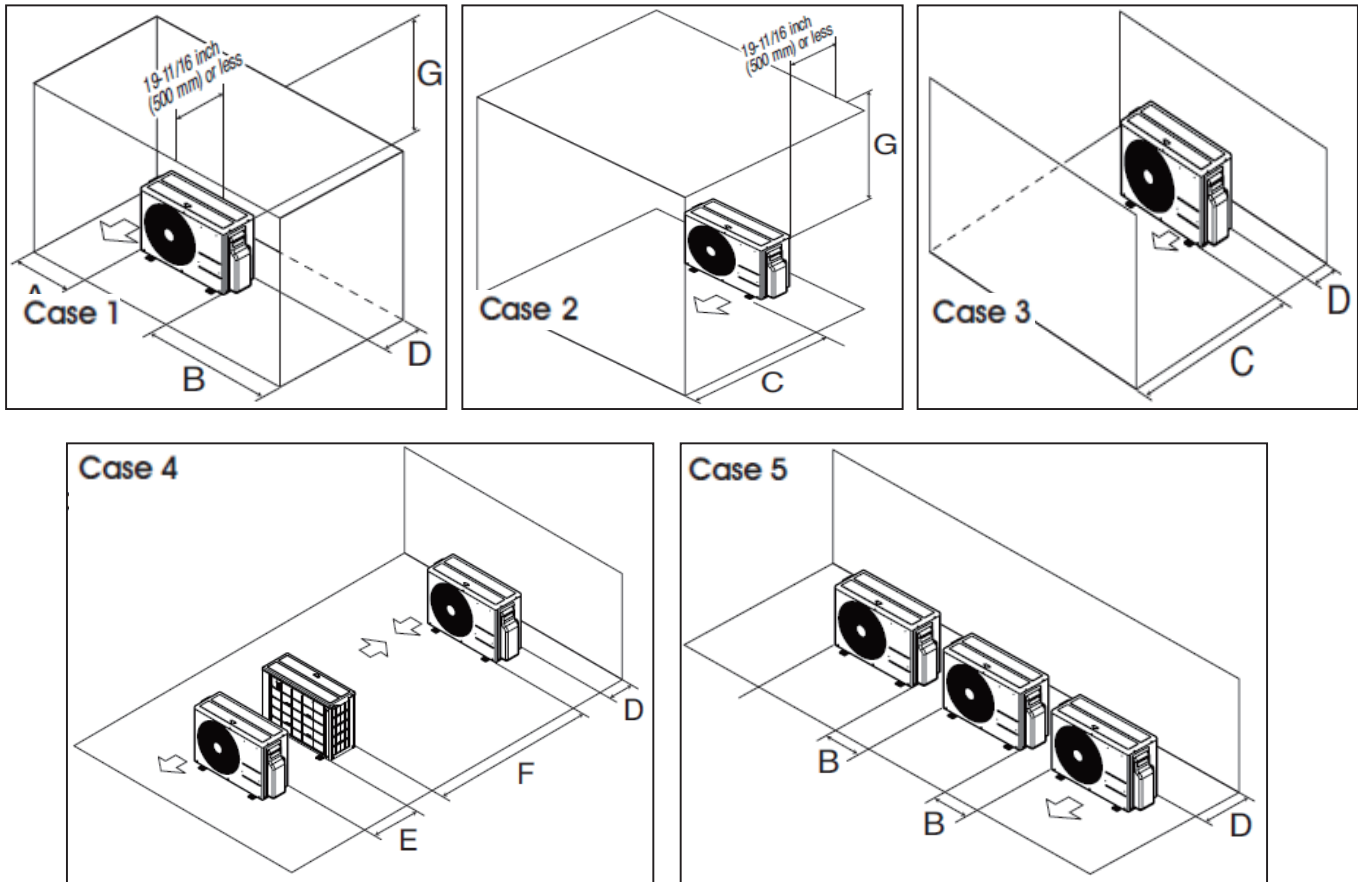

Unit : mm (inch)

| | | A | B | C | D | E | F | G |
|-------|--------|------------|------------|-----------|------------|-----------|------------|------------|
| Case1 | Normal | 300 (11.8) | 700 (27.5) | - | 300 (11.8) | - | - | - |
| | Min. | 100 (4.0) | 250 (7.9) | - | 100 (4.0) | - | - | 1000(39.4) |
| Case2 | Normal | - | - | 500(19.7) | - | - | - | - |
| | Min. | - | - | 350(13.8) | - | - | - | 1000(39.4) |
| Case3 | Normal | - | - | 500(19.7) | 300 (11.8) | - | - | - |
| | Min. | - | - | 350(13.8) | 100 (4.0) | - | - | - |
| Case4 | Normal | - | - | - | 300 (11.8) | 600(23.6) | 2000(78.7) | - |
| | Min. | - | - | - | 100 (4.0) | 200(7.9) | - | - |
| Case5 | Normal | - | 700 (27.5) | - | 300 (11.8) | - | - | - |
| | Min. | - | 250 (7.9) | - | 100 (4.0) | - | - | - |

A1-2 Check outdoor unit location(2)

Tips :

- When installing the unit at a high place be sure to fix the unit legs. (safety precautions)
- Consider enough space for service when installing outdoor unit.
- Avoid small installation places as possible.
- Always follow the given space requirement when selecting install location.

Case of field defect (a)

- **Outdoor unit is installed on top of each other without safely anchoring the unit.**
 - Noise/vibration
 - Hard to service
 - Safety issues



A1-2 Check outdoor unit location(3)

Case of field defect (b)

- Hot discharge air will enter the unit cause a work overload and start ON/OFF system.


→ Low performance



Case of field defect (c)

- Inlet airflow to condenser is blocked

→ Operating pressure will be high and the unit may repeatedly on-off resulting low cooling/heating

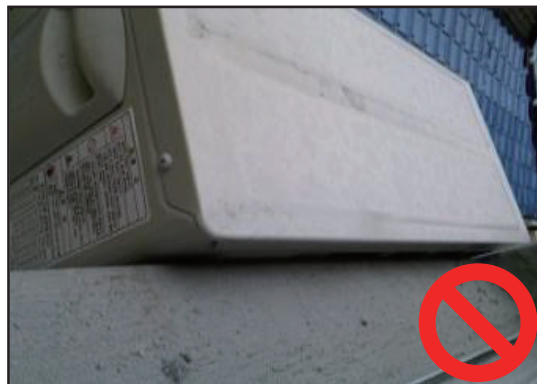

A2. Piping Work

A2-1 Check Piping Connection(1)

How?


- Make sure that the flare do not have any scar or dust, etc.
- Make sure to follow the given applied torque.



Why?

Prevent strange material from entering system.
If applied torque is too strong, flare will get damaged.

Flaring Position :

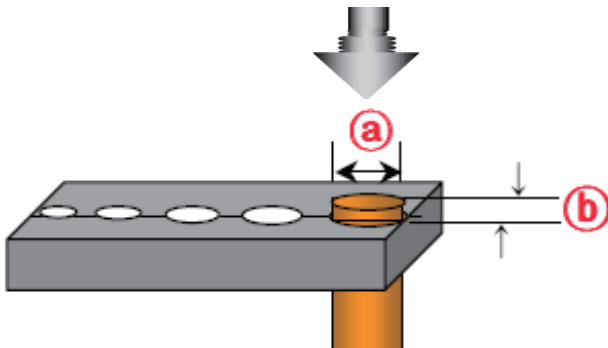


| Outside diameter @ | | ⓑ | Thickness |
|--------------------|------|---------|-----------|
| mm | inch | mm | inch |
| Ø6.35 | 1/4 | 1.1~1.3 | 0.7 |
| Ø9.52 | 3/8 | 1.5~1.7 | 0.8 |
| Ø12.7 | 1/2 | 1.6~1.8 | 0.8 |
| Ø15.88 | 5/8 | 1.6~1.8 | 1.0 |
| Ø19.05 | 3/4 | 1.9~2.1 | 1.0 |

• Checking Flare Work

- Compare the flaring work with the figure.
- If a flaring section is defective, cut it off and do flaring work again.


Smooth all round

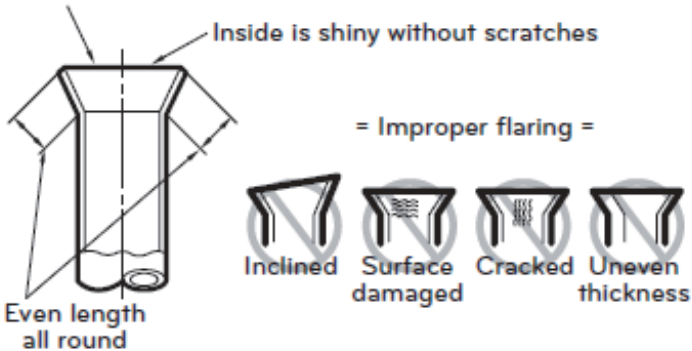

Case of field defect

• Improper flaring

- Gas leakage




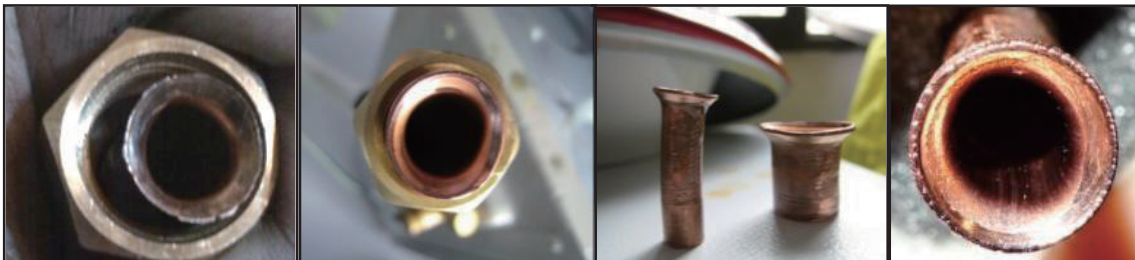


A2-1 Check Piping Connection(2)

Piping connection :

- Align the center of the pipes and sufficiently tighten the flare nut by hand.
- Finally, tighten the flare nut with torque wrench until the wrench clicks.

| Outside diameter | | Torque | |
|------------------|------|----------|-----------|
| mm | inch | kgf·cm | N·m |
| Ø6.35 | 1/4 | 180~250 | 17.6~24.5 |
| Ø9.52 | 3/8 | 340~420 | 33.3~41.2 |
| Ø12.7 | 1/2 | 550~660 | 53.9~64.7 |
| Ø15.88 | 5/8 | 630~820 | 61.7~80.4 |
| Ø19.05 | 3/4 | 990~1210 | 97~118.6 |

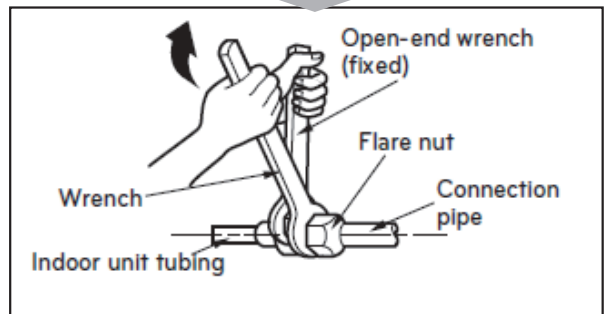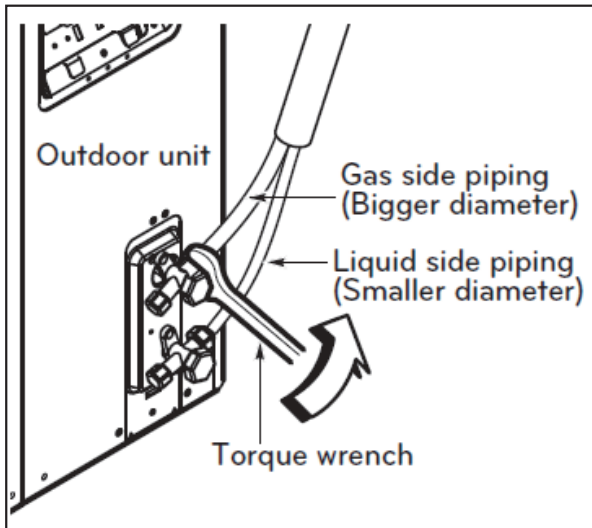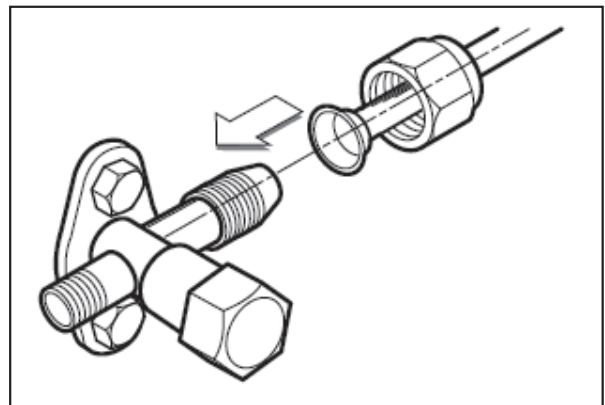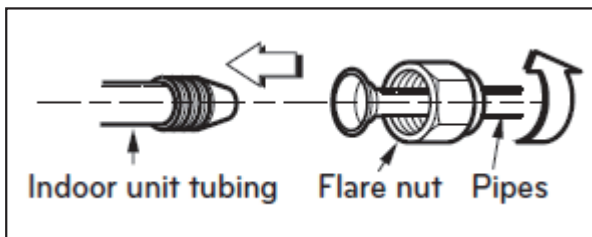

Case of field defect


- Applied torque is too strong flare will get damaged.
→ Gas leakage



A2-1 Check Piping Connection(3)

Bending pipe :

- Do not bend the pipe more than 2 times and work and work in large radius.
- If the pipe is bent, the cooling / heating capacity may deteriorate and cause a leakage problem.
- For aluminum pipe, be careful not to cause an crack on the part where the aluminum and copper are joined.

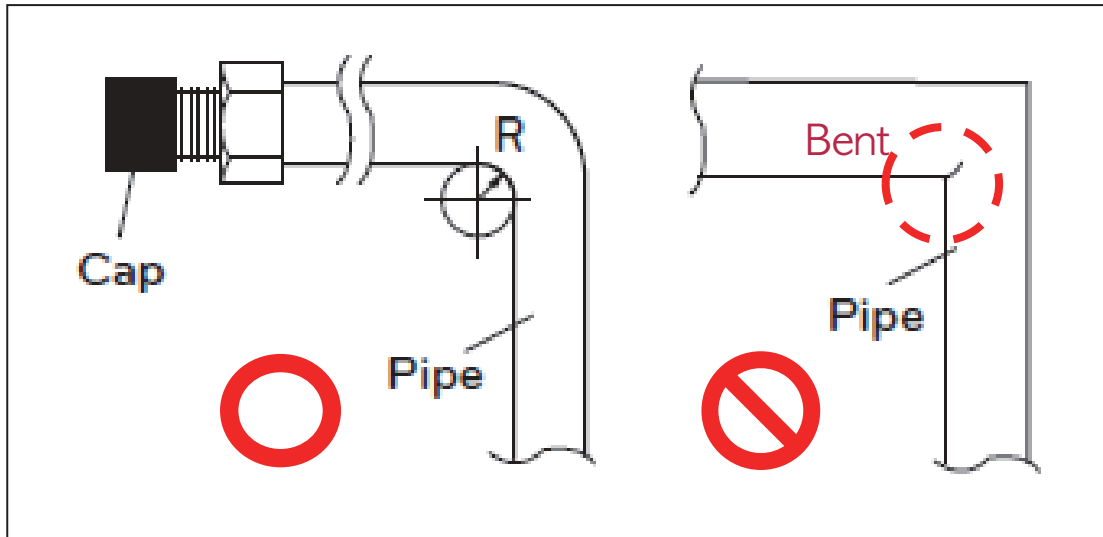

Case of field defect

- **Damage during pipe bending work.**
→ Clogged refrigerant cycle



A2-2 Check welding(brazing) work

How?

- Nitrogen should be allowed to flow without building up a pressure in the pipeline.
- Brazing requires sophisticated techniques, it must be preformed by qualified person.




Why?

Prevent from carbon scales clogging. Safety precautions and to make sure the work is done properly without any leakage.

Brazing with Nitrogen :

- Connect a nitrogen cylinder to one end of the pipe work.
- Turn on the gas and regulate the flow.
→ 0.1 ~ 0.2 kgf/cm² (1.4 ~ 2.8 psi)
- Continue the flow until the joints have cooled.

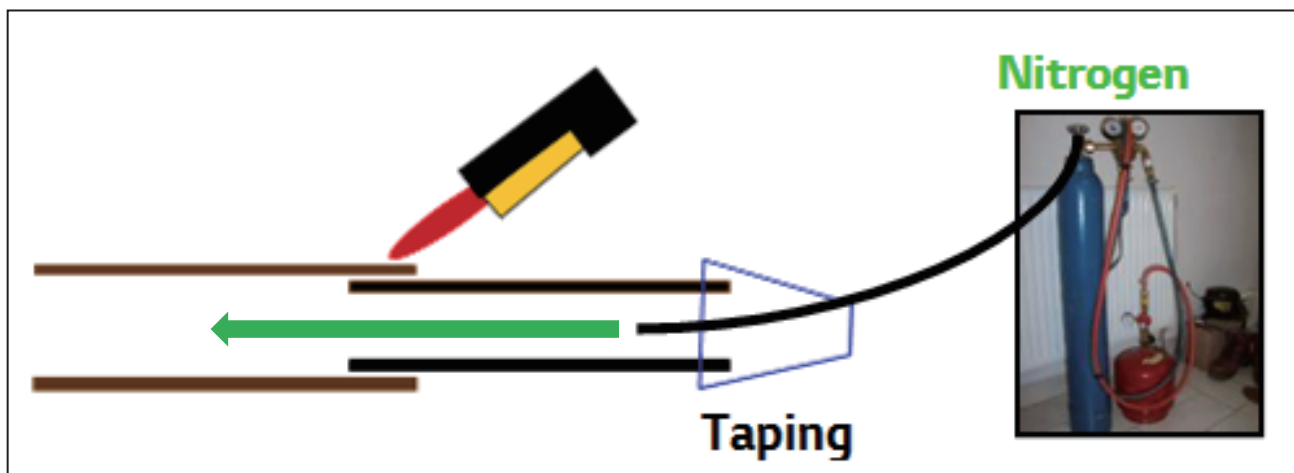

Case of field defect

- **Brazing without Nitrogen release.**
→ Troubles during circulation in a cycle, like clogging EEV / Compressor / Pipe.



- **Pipe frozen**
→ Cycle blocked

A3. Electric wiring work

A3-1 Check Wire Specification

How?

- Always follow the wiring & circuit breaker spec.
- Additional Earth Leakage Circuit Breaker for inverter product is highly recommended.




Why?

Cause abnormal heat / terminal over-heating.
Product earth leak detector malfunction.

Wire & Circuit Breaker Selection :


- Connect a nitrogen cylinder to one end of the pipe work.
- Turn on the gas and regulate the flow.
→ 0.1 ~ 0.2 kgf/cm² (1.4 ~ 2.8 psi)
- Continue the flow until the joints have cooled.

| Cross section area | Grade(kBtu) | | |
|--------------------|-------------|-----|----|
| | 9/12 | 18 | 24 |
| 1 | 1.5 | 2.5 | |

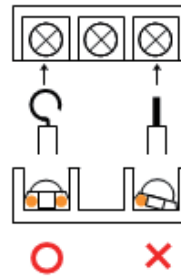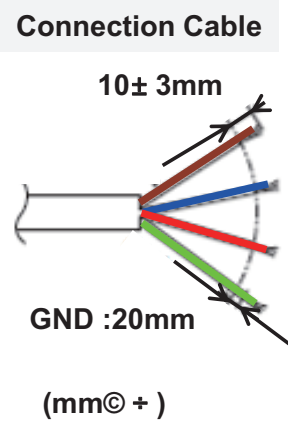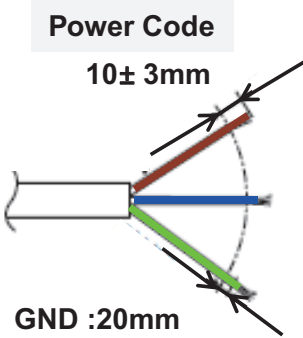


Excessive strip length
→ shock or leakage

Outdoor

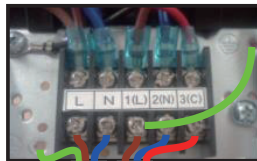

Indoor

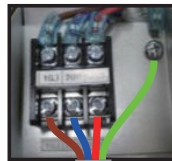



*ELB : Earth Leakage Breaker (A)

| Circuit Breaker | Grade(kBtu) | | |
|-----------------|-------------|----|----|
| | 9/12 | 18 | 24 |
| 15 | 20 | 30 | |

Circuit breaker size selection
(Refer to Label Quality for current value)

- Normal : Running current x 1.75
- Inverter : Running current x 2.0

Use end-terminal for safety precautions

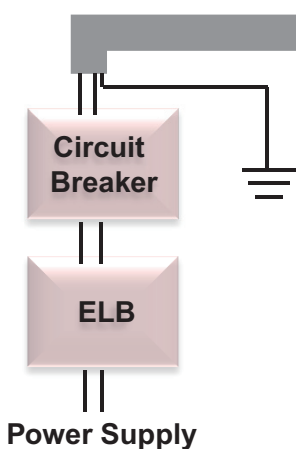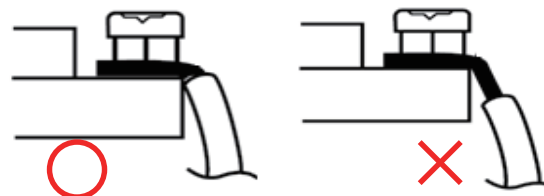

A3-2 Check Wiring connection(1)

How?

- Connect the wires between indoor & outdoor units so that the terminal numbers and colors are matched.
- Tighten the terminal screws securely.
- Do not extend cable connections.





Why?

If the wires are not matched, communication error will occur.
 If the connection is loose, electric shock may occur.
 Extending cable will create noise or electric

Indoor Power Supplied Type





Connection cable

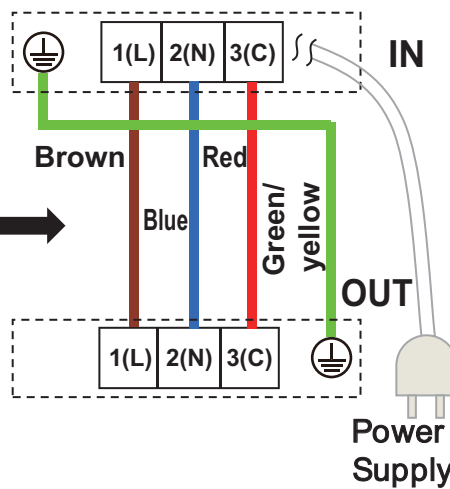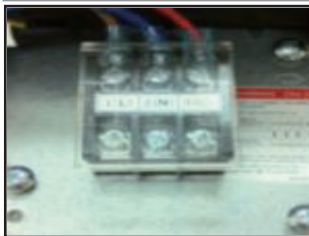

Outdoor Power Supplied Type





Connection cable

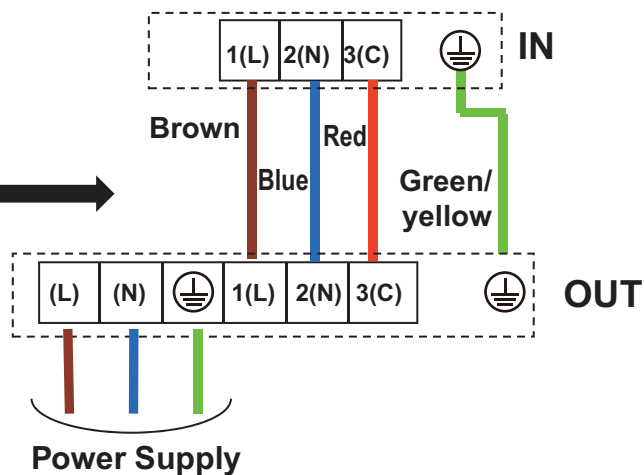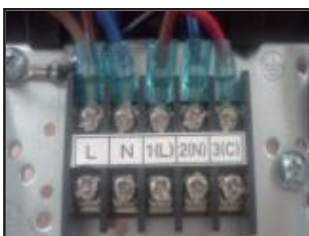

A3-2 Check Wiring connection(3)

Case of field defect (b)

- Improper power supply wiring / absent ground wire
 - Heat ignition of terminal block can cause fire.
 - Electric shock


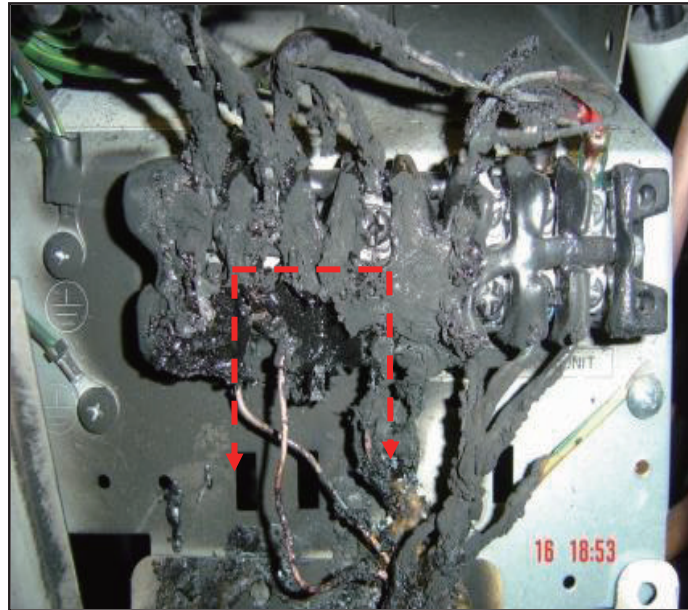
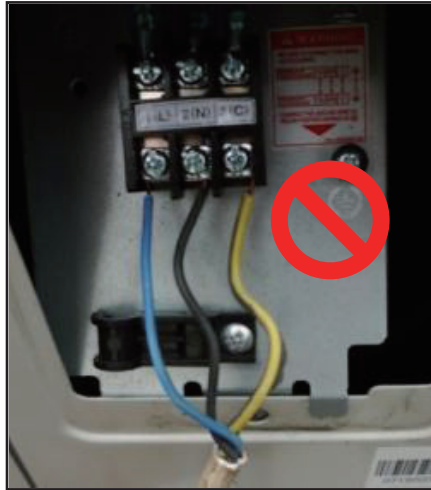


A3-2 Check Wiring connection(2)

Case of field defect (a)

• Improper extended wiring connection

- Cable over heat or fire might occur
- Communication Error CH05/53 occur (operating stop)

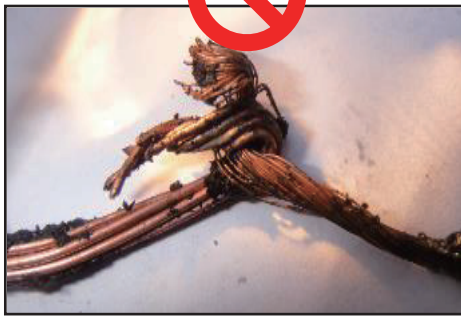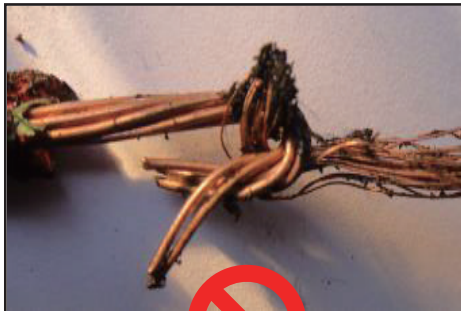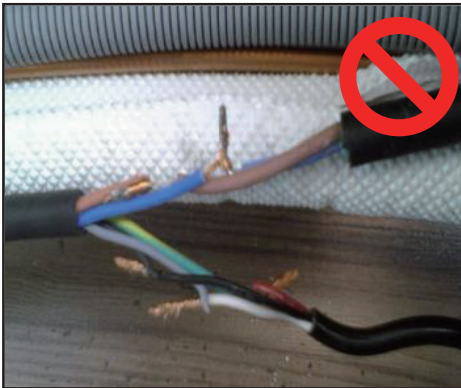

Tips :


Extending electric wire;

1st layer of insulation :

Make sure to solder the wires to reduce the contact resistance and by using thermal contraction tube.

2nd layer of insulation :

Wrap the connection with insulation tape to prevent exposure to moisture/surrounding

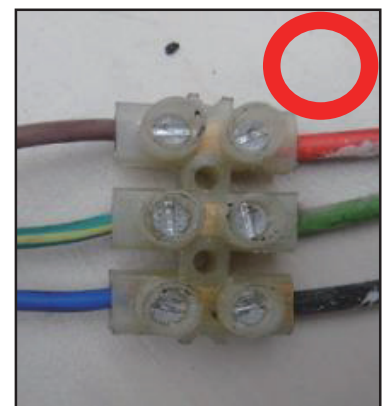

A4. Insulation & Drain Work

A4-1 Standard insulation work (1)

How?

- Do the insulation after leak test is done.
- Bundle the pipe and drain hose together with vinyl tape.




Why?

Prevent possible water leakage.



Work Process :

- Wrap together refrigerant piping, cable and drain hose with vinyl tape.

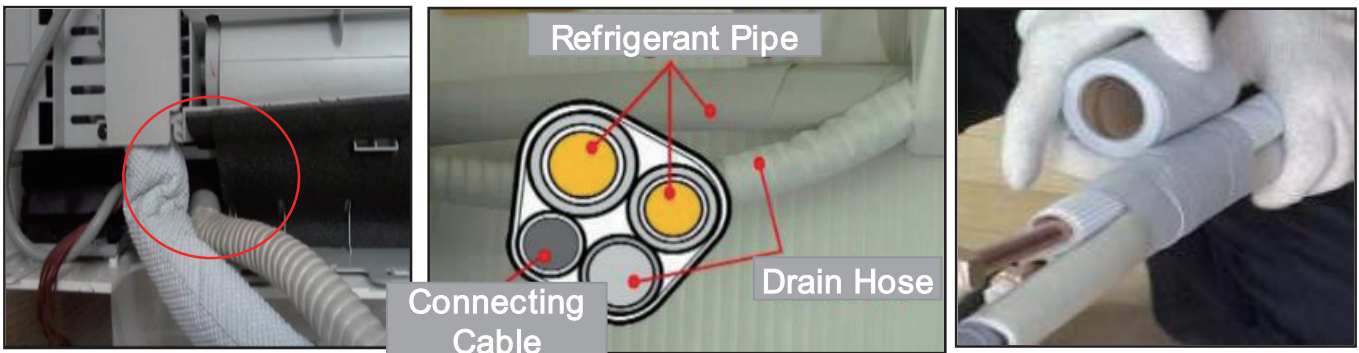

Caution :



- Set the tubing line upward → prevent possible water leakage.

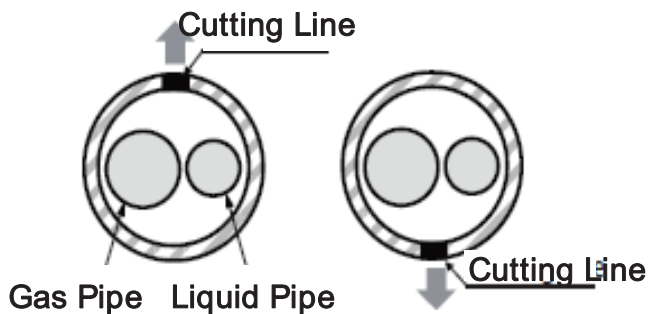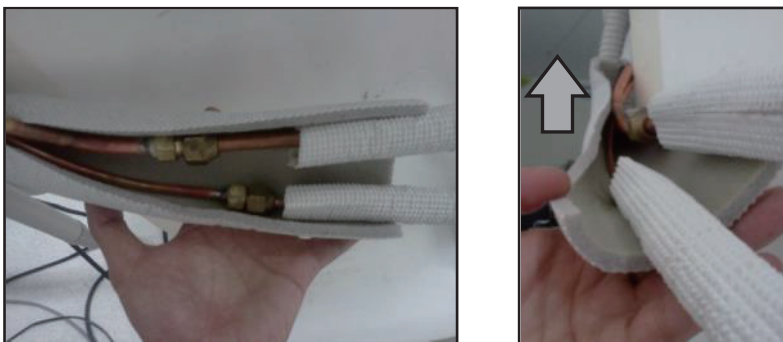

A4-1 Standard insulation work (2)




Tips :

- Fully insulate the connection part between indoor drain hose & extension hose.
- If not leakage may occur as the water will condensate due to temperature changes.
- Slightly slanted to outdoor side. → Ensure water properly flow in downward direction.

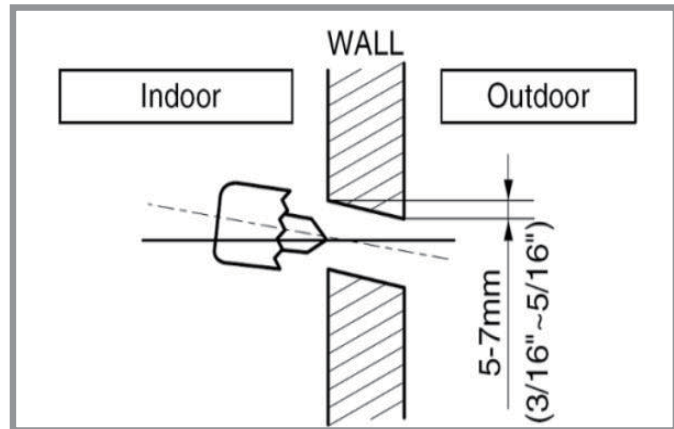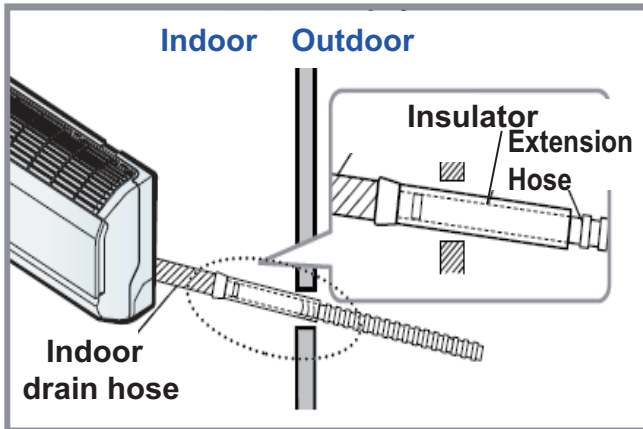

Case of field defect (a)

- Water leakage at pipe connection due to bad insulation.
→ Mold gather at the wall.

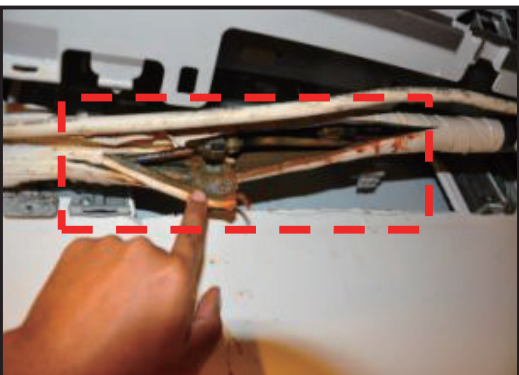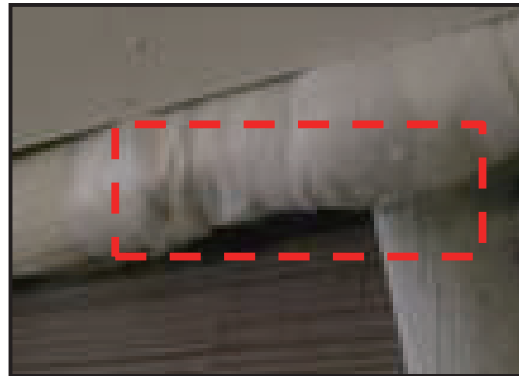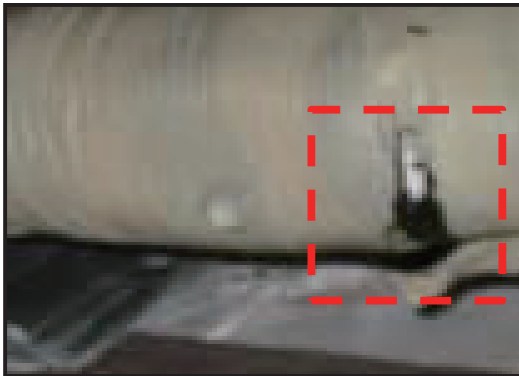

A4-2 Water Leak Test(1)

How?


- Pour a water to make sure well drainage.
- Make sure the route of drainage is done properly



Why?



Prevent water leakage during operation. If the drain hose curled, water leakage occurs.

Checking Drainage :

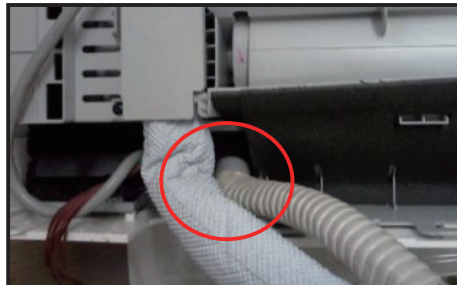

Tips :

- The drain hose should point downward for easy drain flow
- Warp the area which accommodates the refrigerant piping, electric cable, drain hose with vinyl tape in Bottom-up direction.
- Fix drain hose to prevent bending or curling
- Drain hose connection must be easy accessible & serviceable.
- For every 1 m (3 ft), fix the drain pipe with clip/tie wrap.

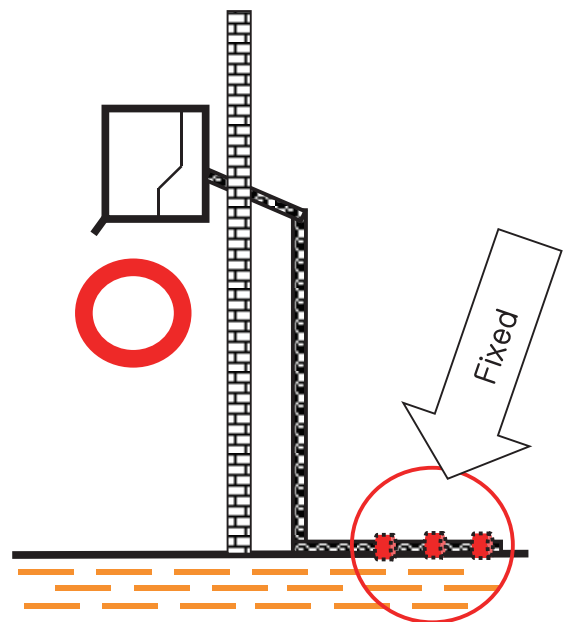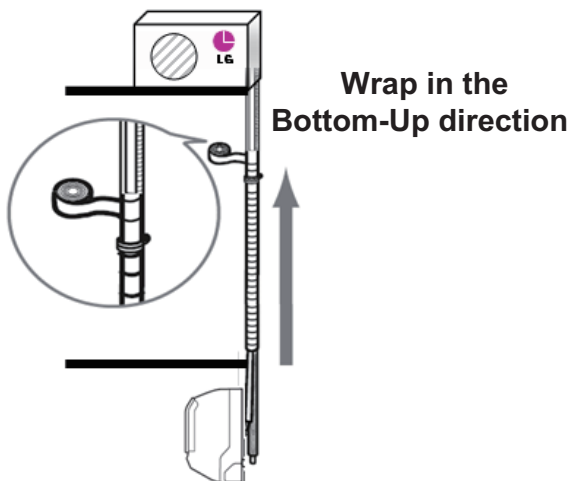

A4-2 Water Leak Test(2)

Case of field defect :

- Drain hose is in upward slanted direction.
→ Drain water can not flow to outdoor unit.
- Curled drain hose will block water flow.
→ Water leaks at indoor unit.
- Vinyl tape has to be wrapped from bottom to the top.
→ Prevent possible leakage to indoor when raining.




A4-2 Water Leak Test(3)

Caution of Drain work:




Case 1 : Indoor drain hose is high more than outdoor.

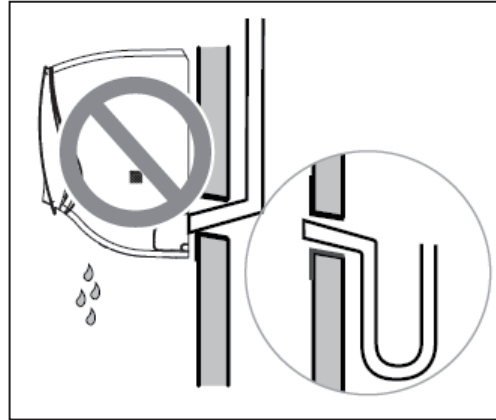

Case 2 : Installing without rain traps



Case 3 : The end of the drain hose plugged into a bottle.

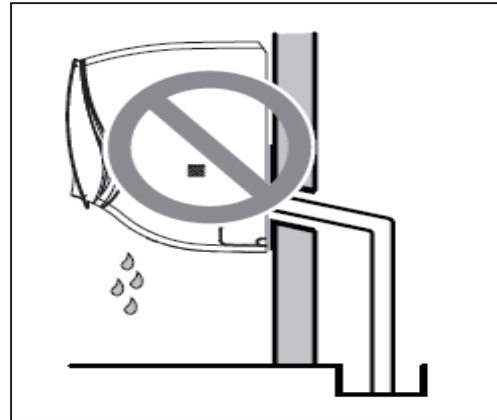

Case 4 : When the end of the drain hose is locked in the sewer.




Case 5 : The end of the drain hose is locked into the water.




Case 6 : The end of drain hose is curled up.

A4-2 Water Leak Test(4)


Caution of Drain work:

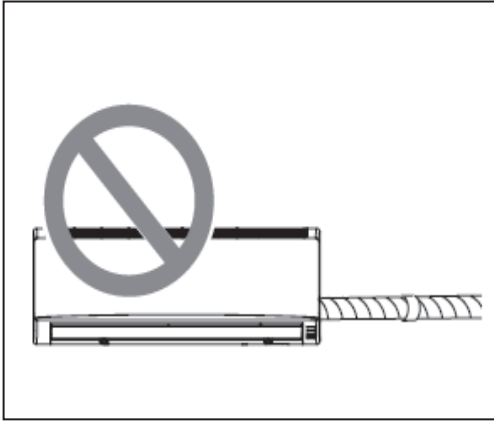

Case 7 : When the drain hose is installed in more than 2m horizontally.

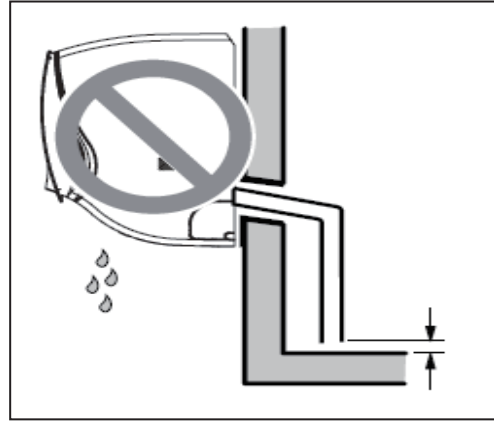

Case 8 : When the end of the drain hose abuts narrow the gap with the ground.

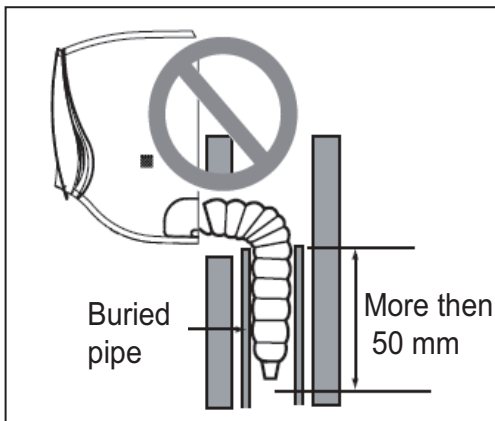

Case 9 : When drain hose is not inserted at least 50mm into the buried pipe.

A5. Vacuum

A5-1 Gas Leak Test(1)

How?


- Top of nitrogen cylinder must be higher than its bottom.
- Use soap bubble to identify the location of leak.
(Bubble indicates gas leak)




Why?

To avoid liquid state nitrogen from entering the system. Insufficient gas will reduce the cooling capacity.

Work Process :

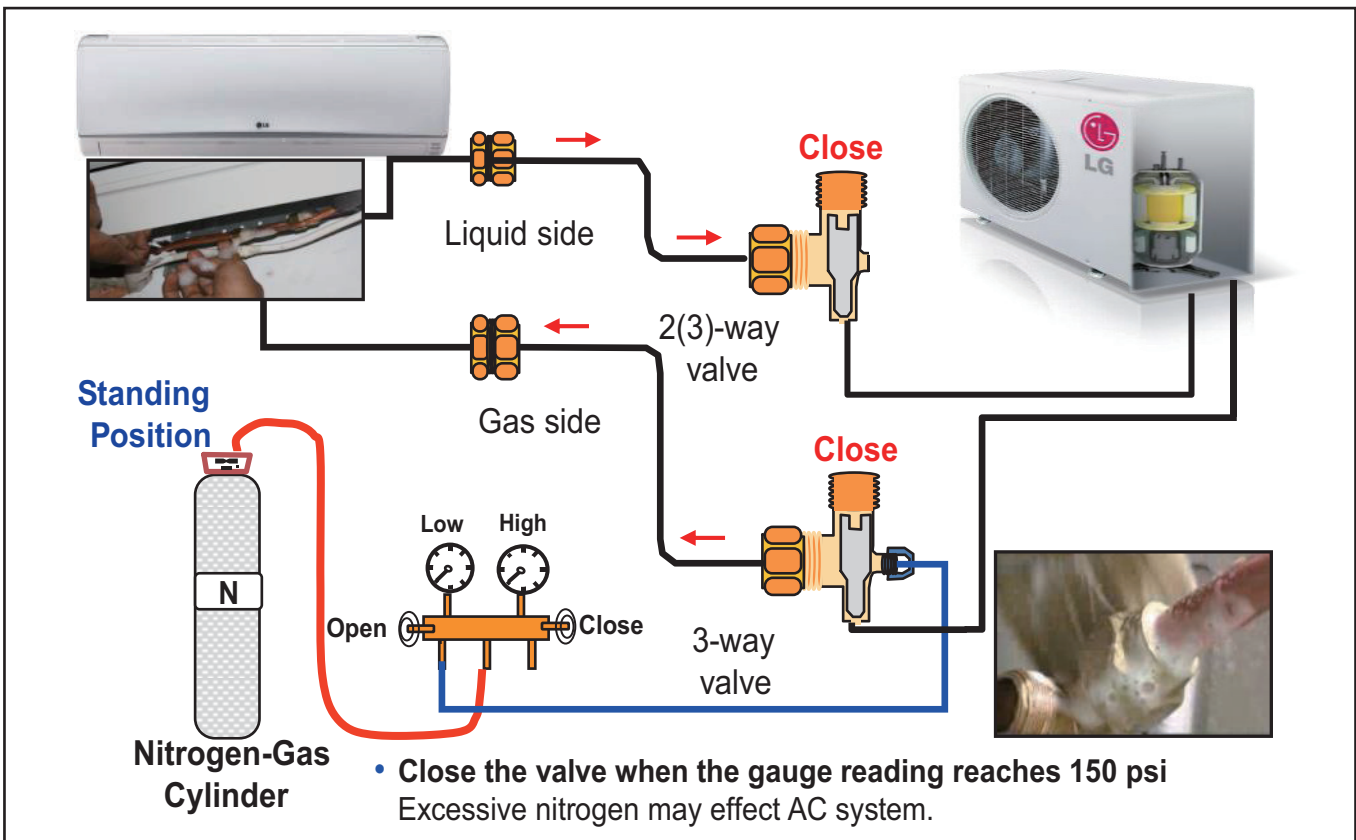

※ Gas Leak Test with nitrogen Process

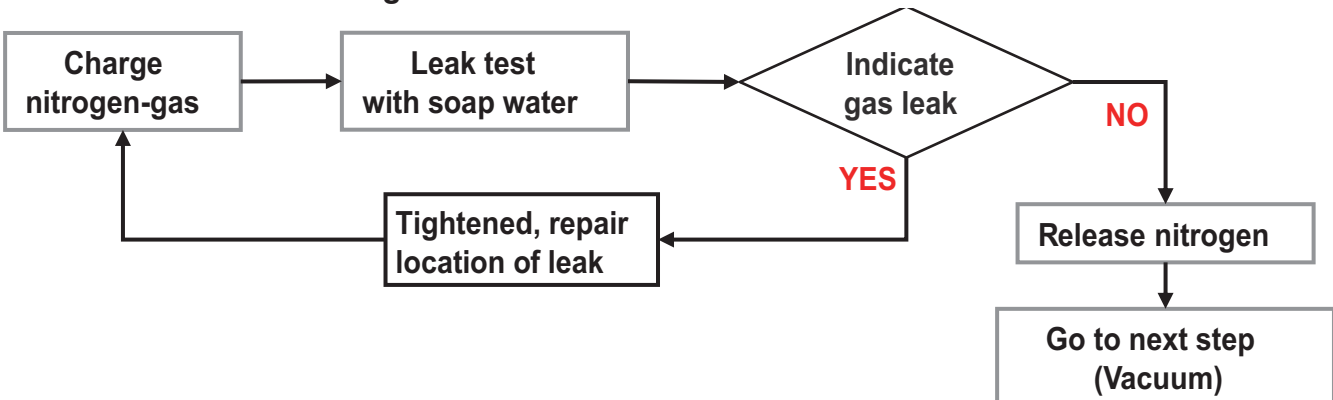

A5-2 Vacuum work process(1)

How?


- Air evacuation with vacuum pump is a must.
- Liquid and the gas side **SVC valves are kept closed.**




Why?

- Air and moisture in system have bad effects as :
- Pressure in the system rises.
 - Cooling / heating efficiency drops.

Work Process : A NEW Product

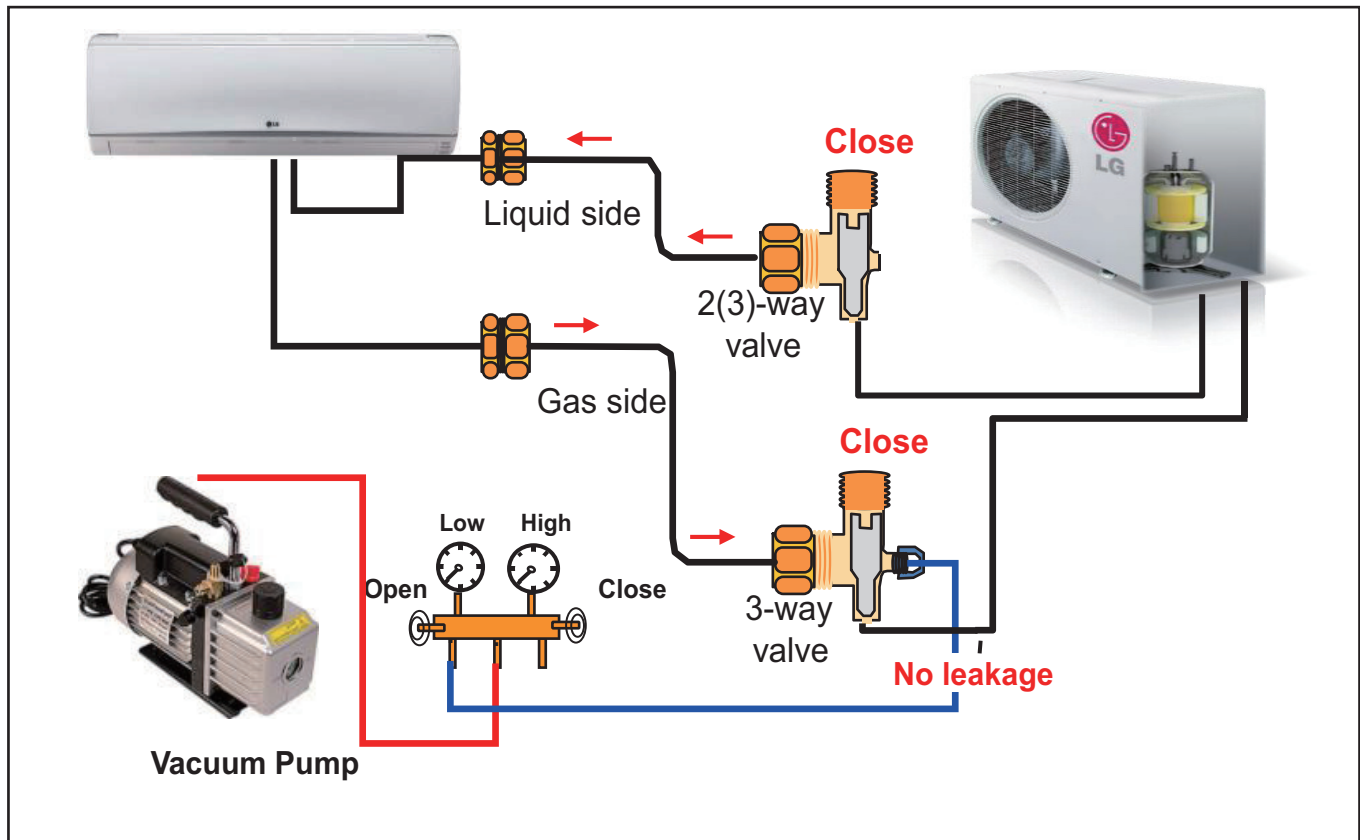

※ Vacuum work Process (A NEW Product)

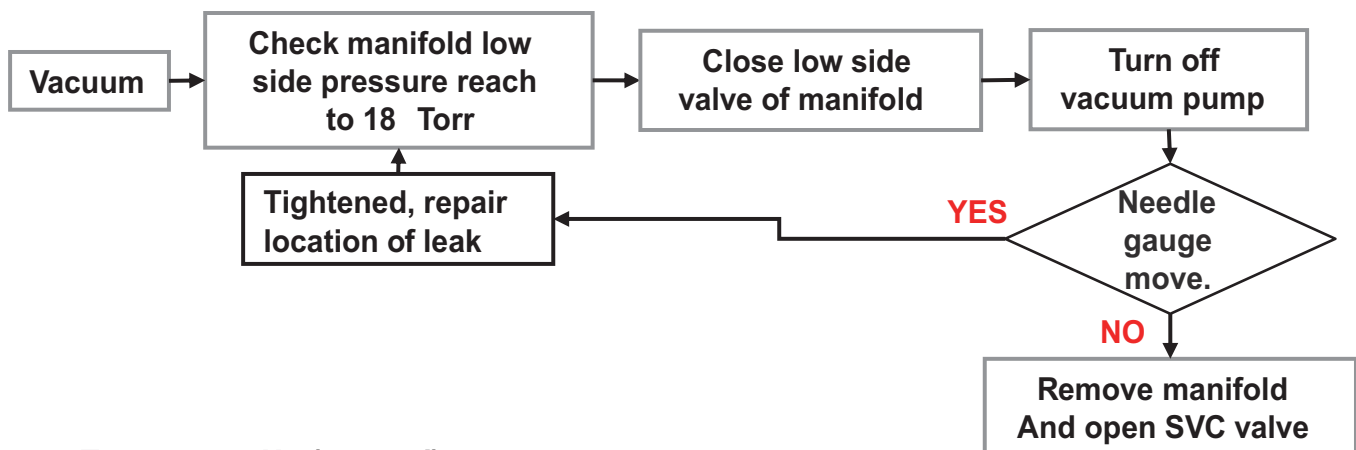

※ 18 Torr : 1.8 cmHg (0.35 psi)

A5-2 Vacuum work process(2)

How?


- Air evacuation with vacuum pump is a must.
- Liquid and the gas side **SVC valves are must open.**




Why?

- Air and moisture in system have bad effects as :
- Pressure in the system rises.
 - Cooling / heating efficiency drops.

Work Process : Vacuum work when recharging refrigerant

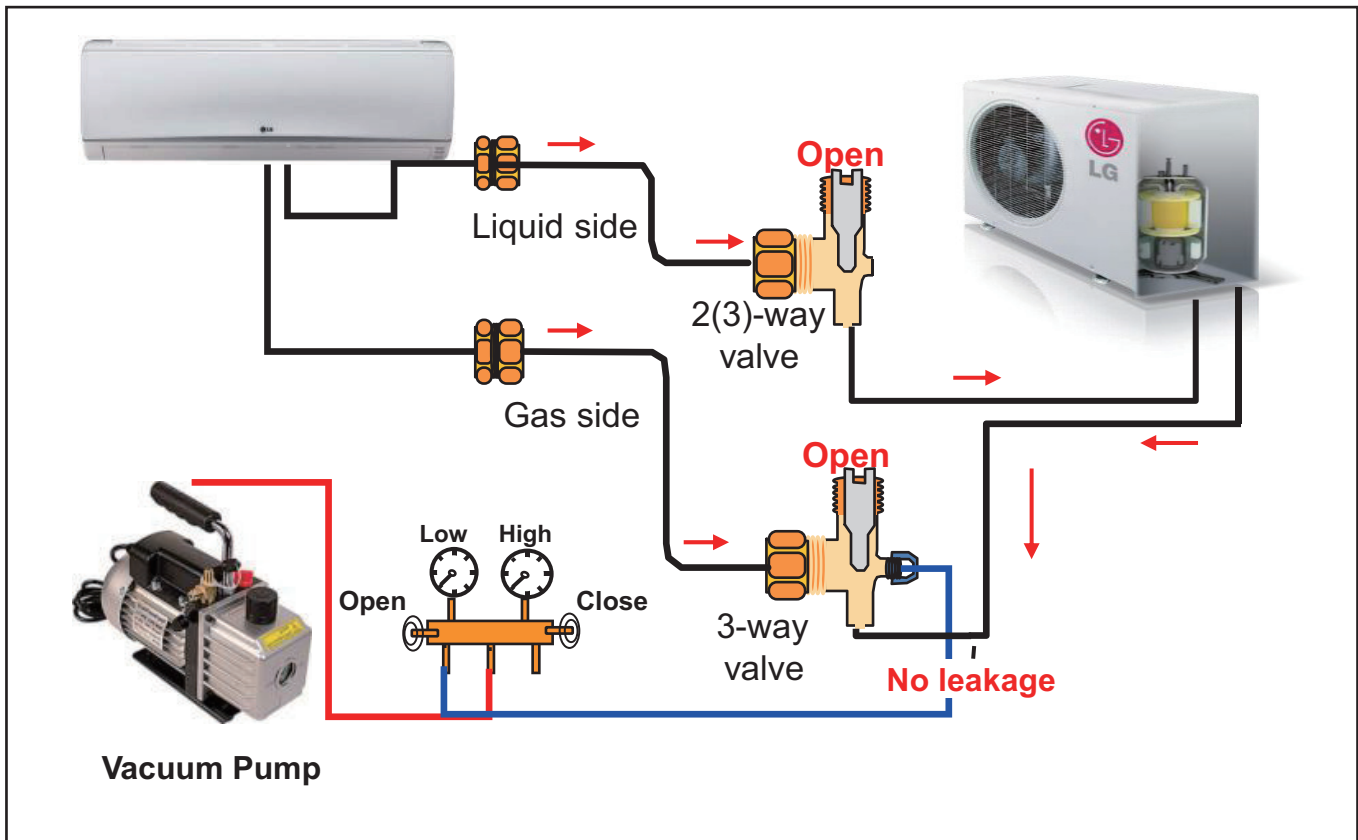

※ Vacuum work Process (When recharging refrigerant)

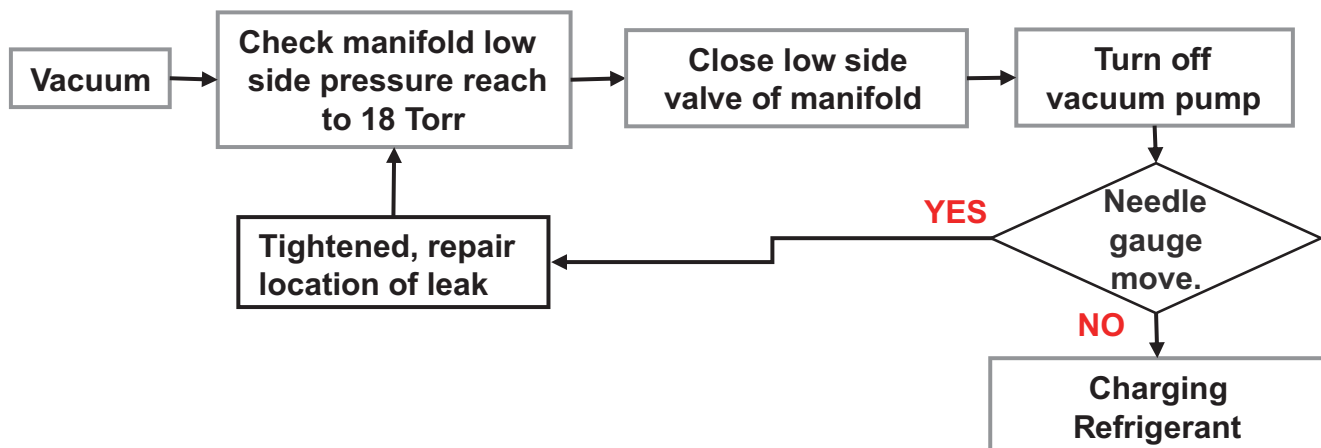

※ 18 Torr : 1.8 cmHg (0.35 psi)

A5-3 Additional charge refrigerant

How?


- Charge in standing upright position.




Why?

Charging R410A must be liquid state for right composition
- Effect such as low cooling.

Work Process : Additional charge refrigerant

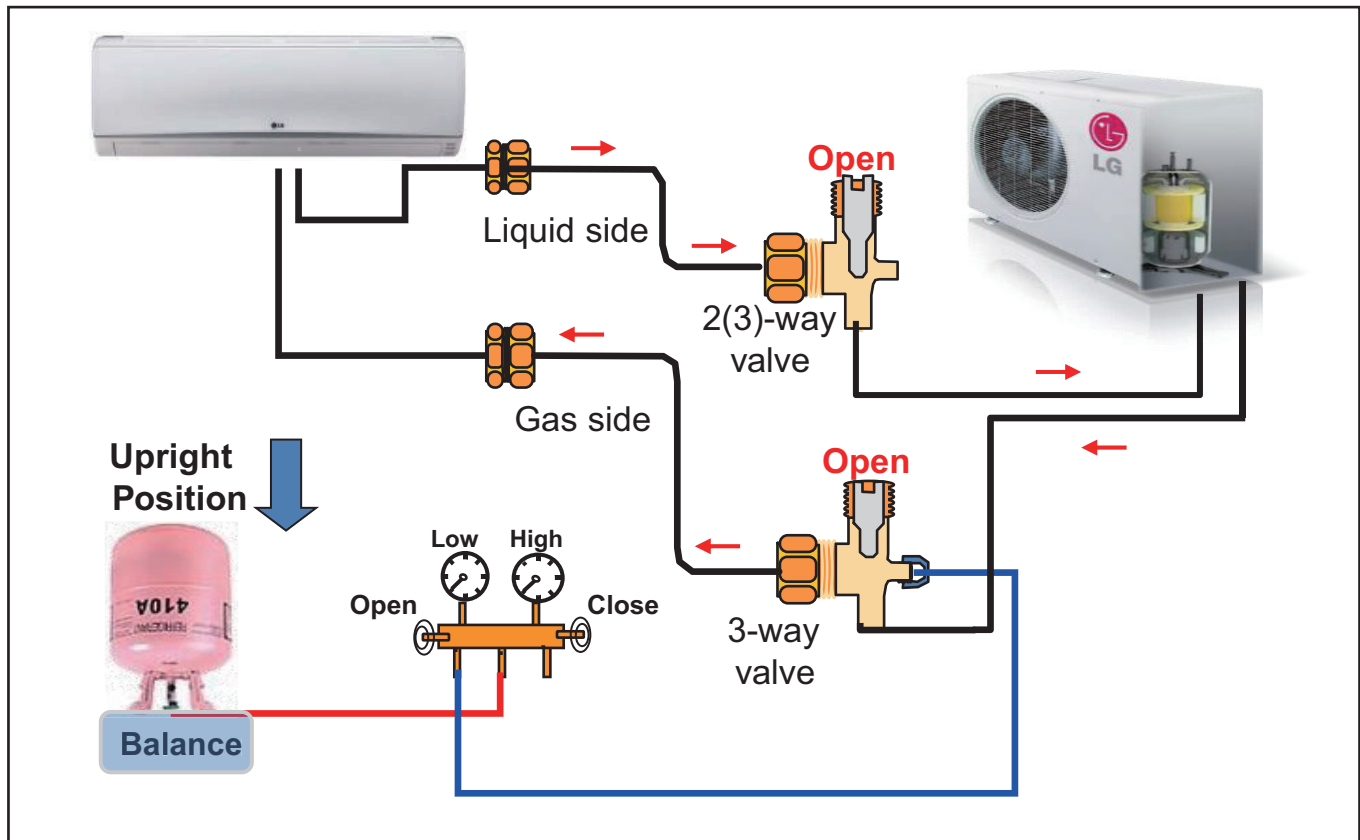

※ Charging work Process (when recharging refrigerant)

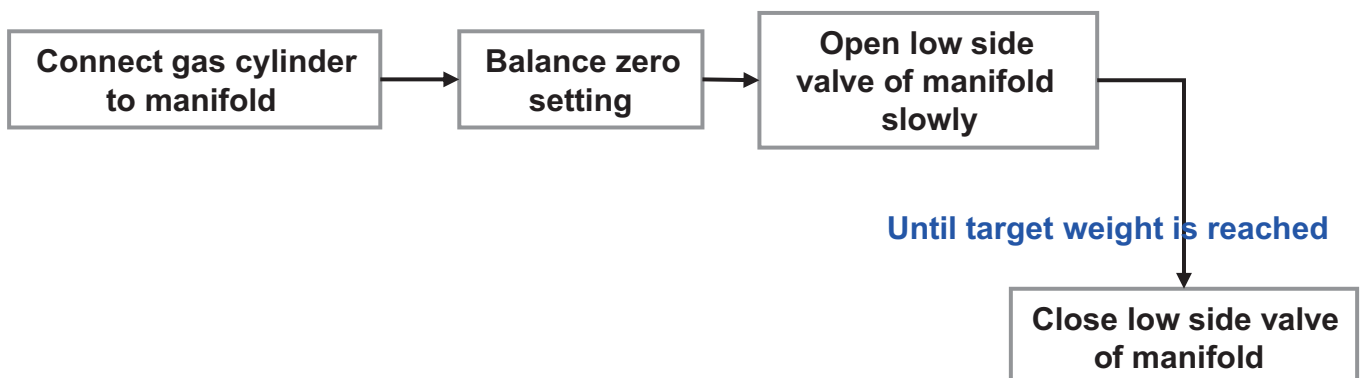


A6. Test Run SIMs

A6-1 How to operating

How?

- Press On/Off button(on the indoor product) and hold 3 ~ 6 sec.
- Press On/Off button(on the remote control) with Temp v button and hold 3 sec.
- Check operating temperature, pressure, current, voltage etc.




Why?


To enter a mode is specially designed for test run. Ensure the product work properly or not.

Test Run Operating Logic :

- In this mode, regardless of the outside temperature, the unit will operate for 18 ± 1 minute in below conditions :
 - Cooling mode
 - Thermal On/Comp On
 - Comp. fixed frequency
 - Indoor fan speed high
 - Vertical auto swing airflow

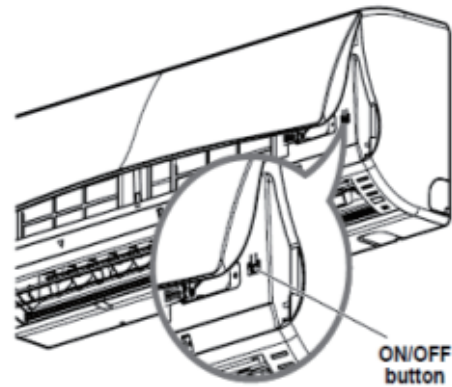

- Wireless remote control

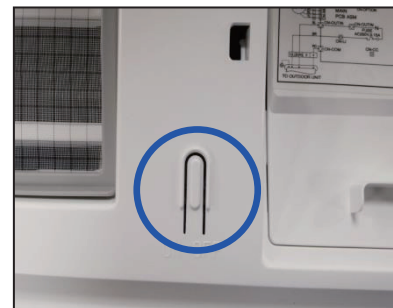

- Knob switch on the indoor unit

A6-2 Check item(1)

Check Items (a):

- Measure the temperature of the intake & discharge air.



※ Ensure the difference between the intake & discharge temp. is more than 8°C (Cooling) & 14°C(Heating)

Check Items (b):

- Measure the pressure of the gas side service valve.



| Refri. | Outside ambient TEMP | Pressure of the gas Side Service valve. |
|--------|----------------------|--|
| R410A | 35°C(95°F) | 9.5 ± 3 kg/cm ² G (135 ± 43 P.S.I.G) |

※ If the pressure is drop or significantly higher than specification:



Pressure is low:
Gas leakage / insufficient



Pressure is high:
System is overloaded
Possibility of overcharge
Closed SVC valve recheck

A6-2 Check item(2)

Check Items (c):

- Measure the voltage & operating current.(Refer to Label Quality for specification)



※ Power supply voltage/current complied with the rated value

Check Items (d):

| Check Items | Symptom |
|--|------------------------------|
| Indoor & Outdoor units are installed on solid bases. | Fall, vibration, noise |
| System is properly ground to earth | Electrical leakage |
| Wiring connection | Inoperative or error code 05 |
| Drain line is properly installed | Water leakage |

Appendix B

LG SIMs

(T/S guide with LG SIMs)

- 1. How to use LG SIMs 2.0**
- 2. Basic Checking Guide**
- 3. Abnormal Case Guide**
- 4. Reference Cycle Temperature Table**

B1. How to use LG SIMs 2.0

B1-1 LG SIMs 2.0 (Wi-Fi) Specification

- ❖ If engineer use the LG SIMs for check the unit operation during Installation & SVC.
So that Installer & SVC engineer can correct diagnosis,

Indoor Unit Space Requirement :

- Name : LG SIMs 2.0 (Wi-Fi)
- LG Smart phone Inverter Monitoring System
- Operation OS

| Smart phone supporting specifications | | | | Wireless communication effective distance |
|---------------------------------------|-----------------------|---------------------------|--|--|
| OS | Minimum Specification | Recommended Specification | Resolution | |
| iOS | iOS 6.1 | iOS 6.1 / 7.0 / 8.0 | 960x640 / 1136x640 / 1334 x 750 / 1920 x 1080 | • Effective distance : 10 m (Open area) • The effective distance may be reduced by the communication environment. |
| Android | Android 2.3 | Android 4.4 | 480x800 / 720x1280 / 768x1280 / 768x1024 / 1080x1920 | |

※ SIMs 2.0 is not optimized for tablets.

- Accessory : SIMs Wi-Fi module
- Connection
 - LG SIMs 2.0 connect with LGMV cable in ODU
 - Operate LGSIMs app. in Smart phone.
 - ※ Wi-Fi Connection Name is LGE_MV-XX-XX-XX

Connection



[Smart LGMV Wi-Fi Module]



[SIMs 2.0 to typical DFS System]


B1-2 LG SIMs 2.0 (Wi-Fi)/ Main Information(1)

Initial setup




[Main Info]

- ① Tap the start button and SIMs2.0 will begin to scan for active Wi-Fi devices in the area. Tap the SIMs2.0 Wi-Fi name in the list to connect to the Wi-Fi module. Press the OK button and the main info screen display.

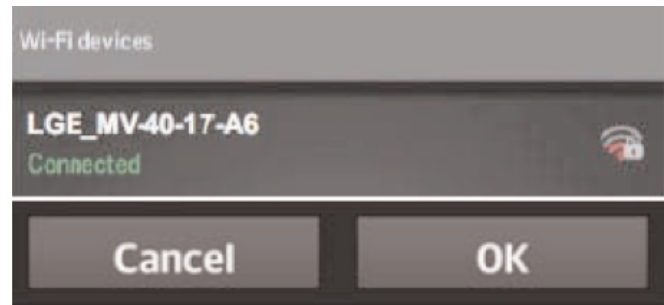


- ② The setting screen displays. You can make selections for language, unit and Demo mode.

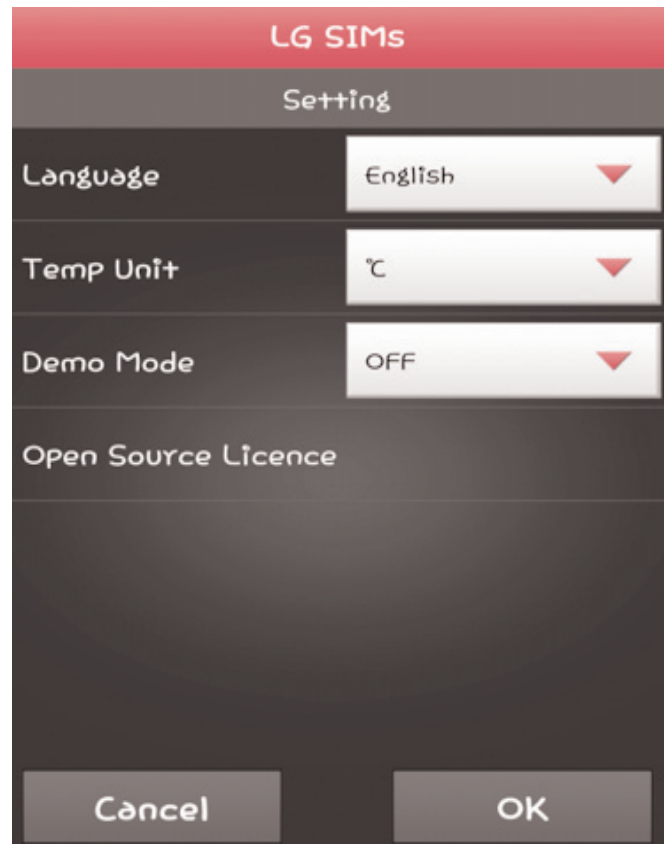

B1-2 LG SIMs 2.0 (Wi-Fi)/ Main Information(2)

After the Wi-Fi is being connected, while the Main Info is displayed

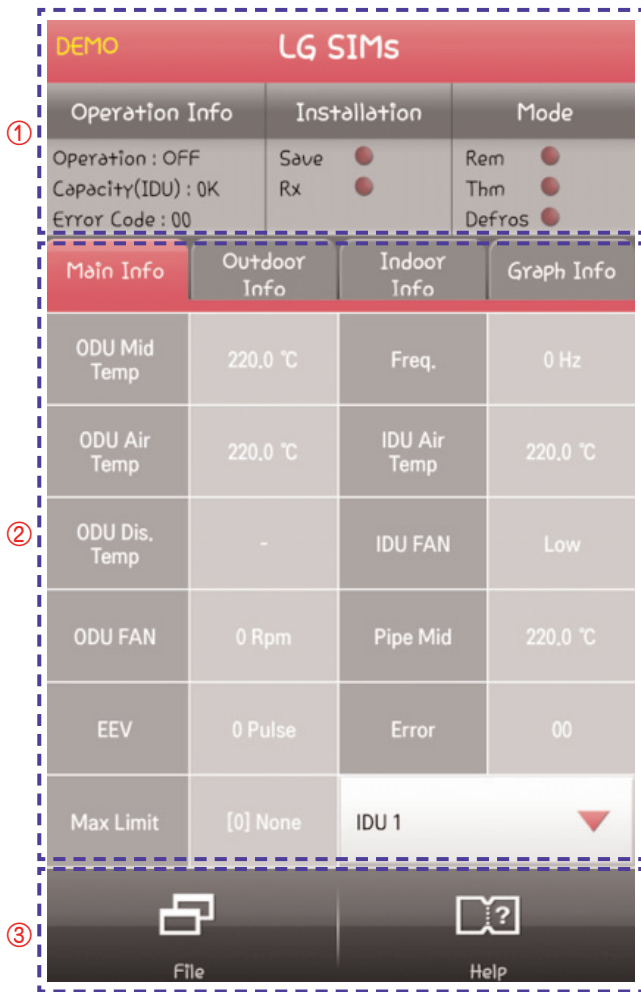

[Main Info]

① Operation information

| Item | Description |
|----------------|---|
| Operation | ODU operating mode: Cooling/Heating/Fan/Off |
| Capacity (IDU) | Capacity of the selected indoor unit |
| Error Code: XX | Current AC system error (if any) |
| Save | Not used |
| Rx | When lit, indicates an active Wireless connection |
| Rem | Remote controller is on when lit |
| Thm | Thermo on when lit |
| Defrost | System in defrost mode when lit |

② Cycle information (on main info tab)

| Item | Description |
|---------------|--|
| ODU Mid Temp | Outdoor heat exchanger middle pipe temperature |
| ODU Air Temp | Outdoor temperature |
| ODU Dis. Temp | Outdoor unit compressor out temperature |
| ODU FAN | Outdoor unit fan speed in RPM |
| EEV | Electronic expansion valve |
| Max Limit | Inverter compressor frequency restriction |
| Freq. | Outdoor unit compressor frequency |
| IDU Air Temp | Indoor temperature |
| IDU FAN | Indoor unit wind amount |
| Pipe Mid | Indoor heat exchanger middle pipe temperature |
| Error | Error code |
| IDU 1 | Indoor unit 1. Tap to display list of all indoor units. The data SIMs displays is for the indoor unit selected by this button. |

③ Help menu

| Item | Description |
|------|--|
| File | Save current cycle data by this button (save only) The contents of files can be accessed by the Factory user |
| Help | Tap to display troubleshooting guide |

B1-2 LG SIMs 2.0 (Wi-Fi)/ Main Information(3)

| DEMO LG SIMs | | | |
|--------------------|--------------|-------------------------------|---------------------------------|
| Operation Info | | Installation | Mode |
| Operation : OFF | | Save <input type="checkbox"/> | Rem <input type="checkbox"/> |
| Capacity(IDU) : OK | | Rx <input type="checkbox"/> | Thm <input type="checkbox"/> |
| Error Code : 00 | | | Defros <input type="checkbox"/> |
| Main Info | Outdoor Info | Indoor Info | Graph Info |
| ODU Mid Temp | 220.0 °C | Freq. | 0 Hz |
| ODU Air Temp | 220.0 °C | IDU Air Temp | 220.0 °C |
| ODU Dis. Temp | - | IDU FAN | Low |
| ODU FAN | 0 Rpm | Pipe Mid | 220.0 °C |
| EEV | 0 Pulse | Error | 00 |
| Max Limit | [0] None | IDU 1 | |

• Max Limit(Protection mode)

Specific wording is displayed in accordance with the operation mode of the product. It means that the protection logic, by which the system operates in the safe range according to the ambient temperature condition and environmental condition, is operating. It is not a failure. The type of the system protection is listed in the following table.

| Max. Limit | Description |
|------------------|---|
| Tc Limit | Cooling : Outdoor HEX temperature protection mode Heating : Indoor HEX temperature protection mode |
| Te Limit | Indoor HEX temperature protection mode |
| Td Limit | Compressor out temperature protection mode |
| Current Limit | Current protection mode |
| H/S Limit | Heat-sink temperature protection mode |
| Air Temp | System protection mode in accordance with the outdoor temperature |
| Voltage Limit | Voltage protection mode |
| Dew Limit | Indoor unit Anti-dew protection in operation |
| Quiet Mode Limit | Quiet mode in operation |
| Sleep Limit | Sleep mode in operation |
| Dehumidify Limit | Dehumidification mode in operation |

B1-3 LG SIMs 2.0 (Wi-Fi)/ Outdoor Information(2)

Outdoor Unit Information Display

| Operation Info | | Installation | | Mode | |
|--------------------|---------------------|-------------------------------|------------|---------------------------------|--|
| Operation : OFF | | Save <input type="checkbox"/> | | Rem <input type="checkbox"/> | |
| Capacity(IDU) : 0K | | Rx <input type="checkbox"/> | | Thm <input type="checkbox"/> | |
| Error Code : 00 | | | | Defros <input type="checkbox"/> | |
| Main Info | Outdoor Info | Indoor Info | Graph Info | | |
| Component | Temperature | | | | |
| | Target | Present | | | |
| Frequency | 0 Hz | 0 Hz | | | |
| FAN1 RPM | 0 Rpm | 0 Rpm | | | |
| FAN2 RPM | 0 Rpm | 0 Rpm | | | |
| DC Link | 0 V | 0 V | | | |
| Current | 0.0A | Restart Timer | 0 S | | |
| Voltage | 140 V | Comp Mode | Stop | | |
| EEV Mode | 0 | Main EEV | 0 Pulse | | |

Tap the outdoor info tap to display ODU information. The outdoor info tab has two sub-display, Component and Temperature. Tap the desired one to display its data.

| Item | Description |
|---------------|--|
| Frequency | Target and present inverter compressor frequency |
| FAN1 RPM | Target and present fan 1 speed |
| FAN2 RPM | Target and present fan 2 speed |
| DC Link | Target and present DC link voltage |
| Current | Input current |
| Voltage | Input voltage |
| EEV Mode | EEV operation mode |
| Restart Timer | Restart timer |
| Comp Mode | Compressor operation status |
| Main EEV | Electronic expansion valve pulse |

| Operation Info | | Installation | | Mode | |
|--------------------|---------------------|-------------------------------|------------|---------------------------------|--|
| Operation : OFF | | Save <input type="checkbox"/> | | Rem <input type="checkbox"/> | |
| Capacity(IDU) : 0K | | Rx <input type="checkbox"/> | | Thm <input type="checkbox"/> | |
| Error Code : 00 | | | | Defros <input type="checkbox"/> | |
| Main Info | Outdoor Info | Indoor Info | Graph Info | | |
| Component | Temperature | | | | |
| | Target | Present | | | |
| Inv Td | 0.0 °C | 0.0 °C | | | |
| Suction | | - | | | |
| Discharge | | - | | | |
| Cond Mid | | 220.0 °C | | | |
| Cond Out | | - | | | |
| Heatsink | | 400.0 °C | | | |
| Air Temp | | 220.0 °C | | | |

| Item | Description |
|-----------|--|
| Inv Td | Target and present out temperature |
| Suction | Compressor in temperature |
| Discharge | Compressor out temperature |
| Cond Mid | Heat exchanger pipe middle temperature |
| Cond Out | Heat exchanger pipe outlet temperature |
| Heatsink | Heat sink temperature |
| Air Temp | Outdoor temperature |

B1-3 LG SIMs 2.0 (Wi-Fi) Outdoor Information(1)

| Operation Info | | Installation | | Mode | |
|--------------------|---------------------|------------------|-------------|--------|---|
| Operation : OFF | | Save | ● | Rem | ● |
| Capacity(IDU) : 0K | | Rx | ● | Thm | ● |
| Error Code : 00 | | | | Defros | ● |
| Main Info | Outdoor Info | Indoor Info | Graph Info | | |
| Component | Temperature | | | | |
| | Target | Present | | | |
| Frequency | 0 Hz | 0 Hz | | | |
| FAN1 RPM | 0 Rpm | 0 Rpm | | | |
| FAN2 RPM | 0 Rpm | 0 Rpm | | | |
| DC Link | 0 V | 0 V | | | |
| Current | 0.0A | Restart Timer | 0 S | | |
| Voltage | 140 V | Comp Mode | Stop | | |
| EEV Mode | 0 | Main EEV | 0 Pulse | | |

Compressor operating mode


| Comp Mode | Description |
|-----------|--|
| Stop | Stop control |
| Start | Operation control |
| Steady | On time control |
| Special | Special control(Defrost operation, Oil recovery operation) |

EEV operating mode

| EEV Mode | Description |
|----------|--|
| 0 | EEV Power apply initialization control |
| 1 | EEV Start-up initialization control |
| 2 | EEV Start-up control mode 1 |
| 3 | EEV Start-up control mode 2 |
| 4 | EEV On time control |
| 5 | EEV Stop control |

B1-4 LG SIMs 2.0 (Wi-Fi) Indoor Information

Indoor Unit Information Display

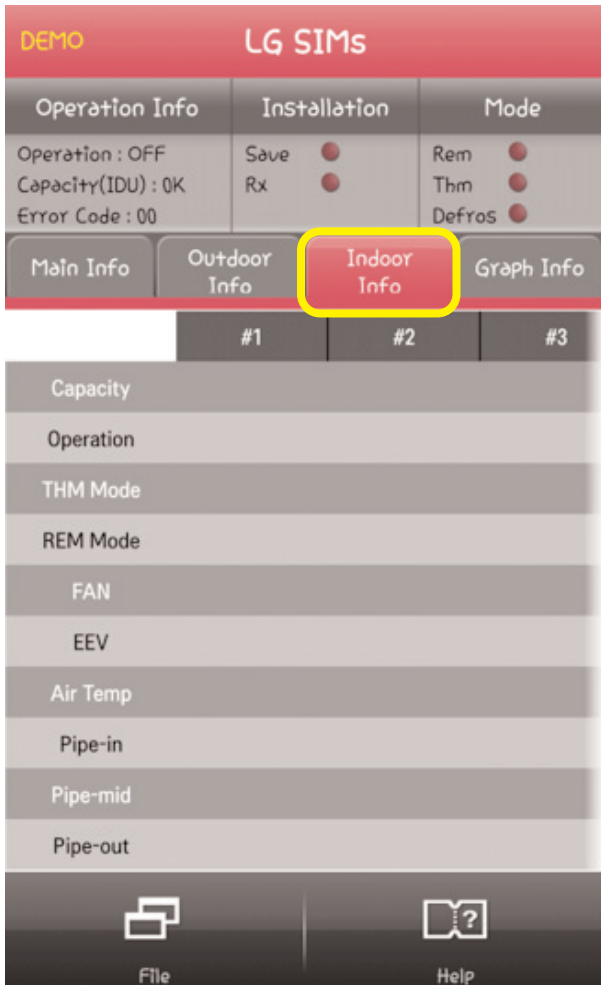

Tap the indoor info tap to display IDU information. Tap the number of the IDU you want to display (#1, #2, etc.). Swipe the number list to the left to display any additional IDU numbers.

| Item | Description |
|-----------|--|
| Capacity | Indoor unit capacity |
| Operation | Indoor unit operating mode (cooling/heating) |
| THM Mode | Thermo on/off |
| REM Mode | Remote controller on/off |
| FAN | Fan speed in RPM |
| EEV | Electronic expansion valve |
| Air Temp | Indoor temperature |
| Pipe-in | Heat exchanger pipe inlet temperature |
| Pipe-mid | Heat exchanger pipe middle temperature |
| Pipe-out | Heat exchanger pipe outlet temperature |

B1-5 LG SIMs 2.0 (Wi-Fi) Graph(Temp & Electronic)

Graph monitoring (IDU Temp)




Tap the graph info tab and then tap the IDU tab to display IDU information in graph format. Information displayed is for the IDU # selected on the Main screen. You can “pinch” the screen in and out to change the time scale to display data for a longer or shorter data collection period.

| Item | Description |
|---------------|--|
| Room Temp | Indoor temperature |
| Pipe mid Temp | Heat exchanger pipe middle temperature |
| Pipe in Temp | Heat exchanger pipe in temperature |
| Pipe out Temp | Heat exchanger pipe out temperature |

Allow SIMs to run for 30 to 60 minutes to acquire enough data to show system operating trends.

B1-5 LG SIMs 2.0 (Wi-Fi)/ Graph(Temp & Electronic)


Graph monitoring (ODU Temp & Freq.)

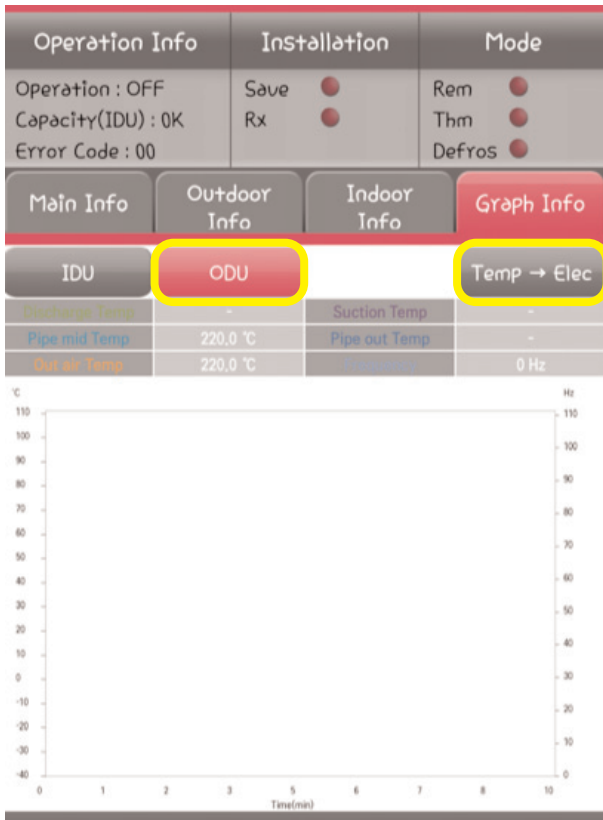

Tap the graph info tab and then tap the ODU tab to display ODU information in graph format.
 Tap the Temp → Elec. tab / Elec. → Temp tab to switch between ODU temperature and electric data.
 You can “pinch” the screen in and out to change the time scale to display data for a longer or shorter data collection period.

| Item | Description |
|----------------|----------------------------|
| Discharge Temp | Compressor out temperature |
| Pipe mid Temp | Pipe middle temperature |
| Out air Temp | Outdoor air temperature |
| Suction Temp | Compressor in temperature |
| Pipe out Temp | Pipe outlet temperature |
| Frequency | Compressor frequency |

Allow SIMs to run for 30 to 60 minutes to acquire enough data to show system operating trends.

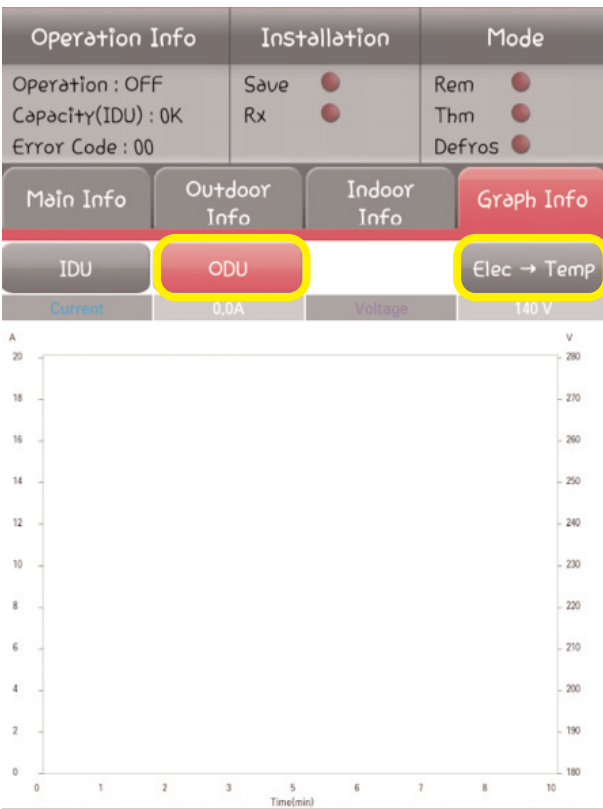

| Item | Description |
|---------|----------------------|
| Current | Outdoor unit current |
| Voltage | Outdoor unit voltage |

B2. Basic Checking Guide

B2-1 Power apply Check

❖ After installing SIMs 2.0 Module to the product, apply power.

The malfunction of the product may occur without specific Error code Message if the characteristics failure of the electric components happens. By utilizing SIMs 2.0 Module, you can check the operation characteristics of the core electric components in real time and find Service point.

2-1-a Error Code Check

| DEMO | | LG SIMs | |
|--------------------|--------------|---------------------------------------|---|
| Operation Info | | Installation | Mode |
| Operation : OFF | | Save ● | Rem ● |
| Capacity(IDU) : 0K | | Rx ● | Thm ● |
| Error Code : 00 | | | Defros ● |
| Main Info | Outdoor Info | Indoor Info | Graph Info |
| ODU Mid Temp | 220.0 °C | Freq. | 0 Hz |
| ODU Air Temp | 220.0 °C | IDU Air Temp | 220.0 °C |
| ODU Dis. Temp | - | IDU FAN | Low |
| ODU FAN | 0 Rpm | Pipe Mid | 220.0 °C |
| EEV | 0 Pulse | Error | 00 |
| Max Limit | [0] None | IDU 1 | ▼ |
| File | | Help | |

By using SIMs 2.0 Module, the sensor problem due to the characteristics failure as well as Error Code due to the sensor failure can be detected.

• Make sure whether the Error Code is recognized on the Error section at the bottom side of the screen of the SIMs main Info tab.

※ When Error Code occurs, proceed with SVC referring to the corresponding Error Code Trouble shooting guide.

2-1-a Error Code Check

| Operation Info | | Installation | | Mode | |
|--------------------|---------------------|-------------------------------|-----------------------------|---------------------------------|------------------------------|
| Operation : OFF | | Save <input type="checkbox"/> | Rx <input type="checkbox"/> | Rem <input type="checkbox"/> | Thm <input type="checkbox"/> |
| Capacity(IDU) : 0K | | | | Defros <input type="checkbox"/> | |
| Error Code : 00 | | | | | |
| Main Info | Outdoor Info | Indoor Info | Graph Info | | |
| Component | Temperature | | | | |
| | Target | Present | | | |
| Frequency | 0 Hz | 0 Hz | | | |
| FAN1 RPM | 0 Rpm | 0 Rpm | | | |
| FAN2 RPM | 0 Rpm | 0 Rpm | | | |
| DC Link | 0 V | 0 V | | | |
| Current | 0.0A | Restart Timer | 0 S | | |
| Voltage | 140 V | Comp Mode | Stop | | |
| EEV Mode | 0 | Main EEV | 0 Pulse | | |

• Shift to Outdoor info tab and check the voltage status.

- In case Input pressure is different with the product Spec.
- Verify the applied voltage of the external power supply → Request electric work if the external power supply is faulty
 - Check whether the Multi-tap(surge protector, power strip) is used → In case Multi-tap(surge protector, power strip) is used, there is a possibility in malfunction due to the instantaneous over current and over capacity
 - Bad power Line wiring

B2-1-c Check Outdoor Unit Temperature

| Operation Info | | Installation | | Mode | |
|--------------------|---------------------|-------------------------------|-----------------------------|---------------------------------|------------------------------|
| Operation : OFF | | Save <input type="checkbox"/> | Rx <input type="checkbox"/> | Rem <input type="checkbox"/> | Thm <input type="checkbox"/> |
| Capacity(IDU) : 0K | | | | Defros <input type="checkbox"/> | |
| Error Code : 00 | | | | | |
| Main Info | Outdoor Info | Indoor Info | Graph Info | | |
| Component | Temperature | | | | |
| | Target | Present | | | |
| Inv Td | 0.0 °C | 0.0 °C | | | |
| Suction | | - | | | |
| Discharge | | - | | | |
| Cond Mid | | 220.0 °C | | | |
| Cond Out | | - | | | |
| Heatsink | | 400.0 °C | | | |
| Air Temp | | 220.0 °C | | | |

• Shift to Temperature tap and verify whether the temperature of the outdoor temperature sensor stays within the normal range.

- In case the characteristics failure of the temperature sensor occurs, it does Sensing more than 10 °C high or low compared to the indoor/outdoor temperature.
- Provided, as the sensing temperature can vary due to the residual heat of the product inside according to the operation mode of the product before inspection, verify after 2hours elapse from the product Off.

- ※ In case of the on-site service, if the product is under the operation or if the product was off within 2 hours, follow B2-2 product operation Check guide.
- ※ If the corresponding temperature information can not be checked(in case it is displayed as" - "), judge it as Open/Short and proceed with SVC.
- ※ As there exists some product not equipped with the specific sensor for each product, verify the SVC Manual of the served product and judge it.

B2-1-d Check Indoor Unit Temperature

| Operation Info | Installation | Mode |
|--|----------------|----------------------------|
| Operation : OFF Capacity(IDU) : 0K Error Code : 00 | Save ● Rx ● | Rem ● Thm ● Defros ● |
| Main Info | Outdoor Info | Indoor Info |
| | #1 | #2 |
| Capacity | | |
| Operation | | |
| THM Mode | | |
| REM Mode | | |
| FAN | | |
| EEV | | |
| Air Temp | | |
| Pipe-in | | |
| Pipe-mid | | |
| Pipe-out | | |

• Shift to Indoor tap and verify whether the temperature of the indoor temperature sensor stays within the normal range.

- In case the characteristics failure of the temperature sensor occurs, it does Sensing more than 10 °C high or low compared to the indoor/outdoor temperature.
- Provided, as the sensing temperature can vary due to the residual heat of the product inside according to the operation mode of the product before inspection, verify after 1hour elapse from the product Off.
 - ※ In case of the on-site service, if the product is under the operation or if the product was off within 2 hours, follow B2-2 product operation Check guide.
(For fast convergence of the temperature of the indoor unit, perform inspection 1 hour after operating blower mode for 15minutes after product shutdown.)
 - ※ If the corresponding temperature information can not be checked(in case it is displayed as" _ "), judge it as Open/Short and proceed with SVC.
 - ※ As there exists some product not equipped with the specific sensor for each product, verify the SVC Manual of the served product and judge it.

B2-2 Product operation Check

B2-2-a Check DC Link Voltage

| Operation Info | | Installation | | Mode | |
|--------------------|--------------|---------------|------------|----------|--|
| Operation : OFF | | Save ● | | Rem ● | |
| Capacity(IDU) : 0K | | Rx ● | | Thm ● | |
| Error Code : 00 | | | | Defros ● | |
| Main Info | Outdoor Info | Indoor Info | Graph Info | | |
| Component | Temperature | | | | |
| | Target | Present | | | |
| Frequency | 0 Hz | 0 Hz | | | |
| FAN1 RPM | 0 Rpm | 0 Rpm | | | |
| FAN2 RPM | 0 Rpm | 0 Rpm | | | |
| DC Link | 0 V | 0 V | | | |
| Current | 0,0A | Restart Timer | 0 S | | |
| Voltage | 140 V | Comp Mode | Stop | | |
| EEV Mode | 0 | Main EEV | 0 Pulse | | |

• Shift to Outdoor tap and check the status of the DC Link voltage.

- If the DC Link voltage is lower or higher than the Target, malfunction symptom may occur, so it needs confirmation.
- If DC Link problem occurs, shift to Error Code CH23 Page and follow the measures.

B2-2-b Check Outdoor Unit Temperature

| Operation Info | | Installation | | Mode | |
|--------------------|--------------|--------------|------------|----------|--|
| Operation : OFF | | Save ● | | Rem ● | |
| Capacity(IDU) : 0K | | Rx ● | | Thm ● | |
| Error Code : 00 | | | | Defros ● | |
| Main Info | Outdoor Info | Indoor Info | Graph Info | | |
| Component | Temperature | | | | |
| | Target | Present | | | |
| Inv Td | 0,0 °C | 0,0 °C | | | |
| Suction | | - | | | |
| Discharge | | - | | | |
| Cond Mid | 220,0 °C | | | | |
| Cond Out | | - | | | |
| Heatsink | 400,0 °C | | | | |
| Air Temp | 220,0 °C | | | | |

• Shift to Outdoor tap and verify whether the temperature of the outdoor temperature sensor stays within the normal range.

- For the determination of normal cycle, refer to the App. Reference Temperature table. (Sensing temperature of the product varies according to the temperature condition of each outdoor air temperature. Therefore, the standard temperature based on the outdoor/indoor temperature condition is needed in order to determine the normality of the product operation cycle.)

※ The sensing temperature in the initial start-up product shows rapid change(Ramp up), it is difficult to judge for the normal(Steady) Cycle. Therefore, in case of the product operation, judge for the sensing temperature after around 20 minutes considering the stabilization period.

B2-2-c Check Outdoor Unit Temperature

| Operation Info | Installation | Mode | |
|--|----------------|----------------------------|------------|
| Operation : OFF Capacity(IDU) : 0K Error Code : 00 | Save ● Rx ● | Rem ● Thm ● Defros ● | |
| Main Info | Outdoor Info | Indoor Info | Graph Info |
| | #1 | #2 | #3 |
| Capacity | | | |
| Operation | | | |
| THM Mode | | | |
| REM Mode | | | |
| FAN | | | |
| EEV | | | |
| Air Temp | | | |
| Pipe-in | | | |
| Pipe-mid | | | |
| Pipe-out | | | |

• Shift to outdoor tap and verify whether the temperature of the outdoor temperature sensor stays within the normal range.


- For the determination of normal cycle, refer to the App. Reference Temperature table (Sensing temperature of the product varies according to the temperature condition of each outdoor air temperature. Therefore, the standard temperature based on the outdoor/indoor temperature condition is needed in order to determine the normality of the product operation cycle.)

※ The sensing temperature in the initial start-up product shows rapid change(Ramp up), it is difficult to judge for the normal(Steady) Cycle.
Therefore, in case of the product operation, judge for the sensing temperature after around 20 minutes considering the stabilization period.

B3. Abnormal Case Guide

B3-1 No refrigerant / Bad location of the sensor

※ Guide was made based on the Cooling mode, and Heating mode can be detected with the same principle.

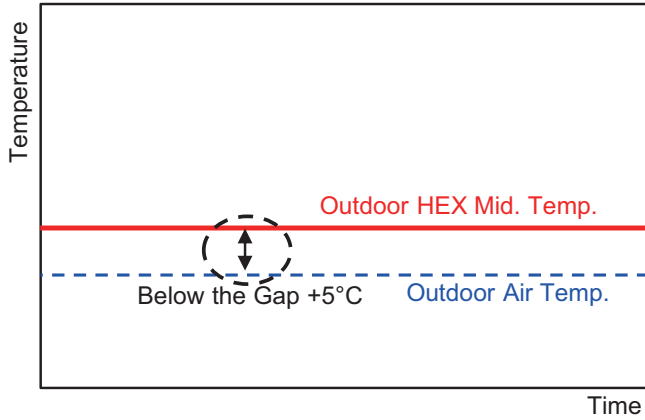


• In case the temperature data of the SIMs graph is similar to the shape of the left graph, there is a possibility in no refrigerant, so leak test should be done.


- When outdoor heat exchanger temperature(ODU MID TEMP) is constantly kept within the gap difference of 'Below +5°C' with outdoor temperature(ODU AIR)
- When indoor heat exchanger temperature(IDU PIPE TEMP) is constantly kept within the gap difference of 'Below +5°C' with indoor temperature(IDU AIR)

※ If above 2 cases are satisfied at the same time, judge that there is no refrigerant inside of the product and perform SVC.

※ If the grape shape of the specific temperature sensor is same to the left, check the position of the sensor(Bad location/Removed)



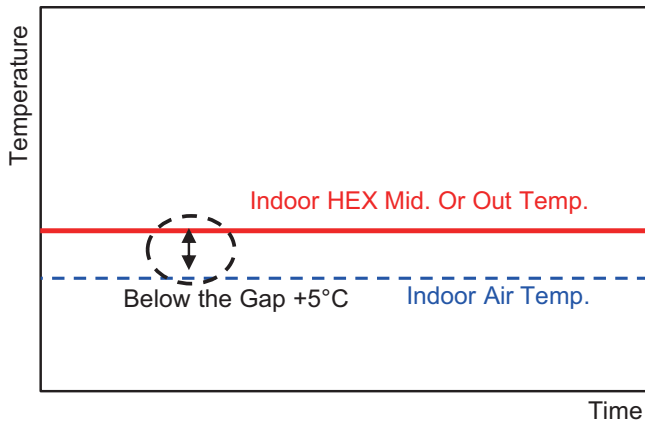


| Operation Info | Installation | Mode | |
|--------------------|--------------|---------------|------------|
| Operation : OFF | Save ● | Rem ● | |
| Capacity(IDU) : OK | Rx ● | Thm ● | |
| Error Code : 00 | | Defros ● | |
| Main Info | Outdoor Info | Indoor Info | Graph Info |
| IDU | ODU | | Temp |
| Room Temp | 220.0 °C | Pipe in Temp | 220.0 °C |
| Pipe mid Temp | 220.0 °C | Pipe out Temp | 220.0 °C |

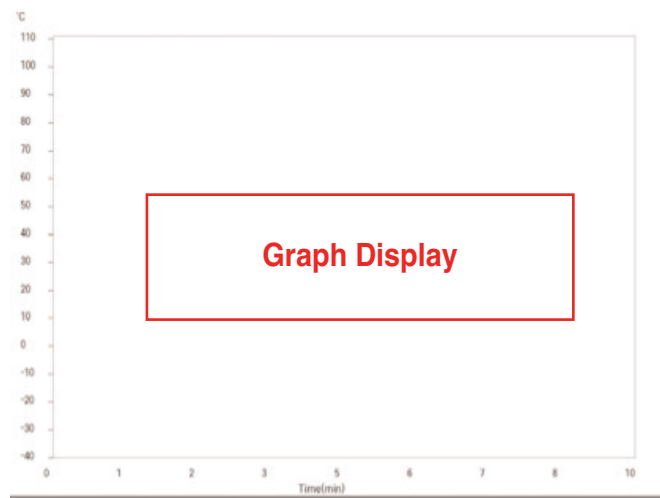

B3-2 Cycle Block (EEV, SVC Valve closed)

※ Guide was made based on the Cooling mode, and Heating mode can be detected with the same principle.

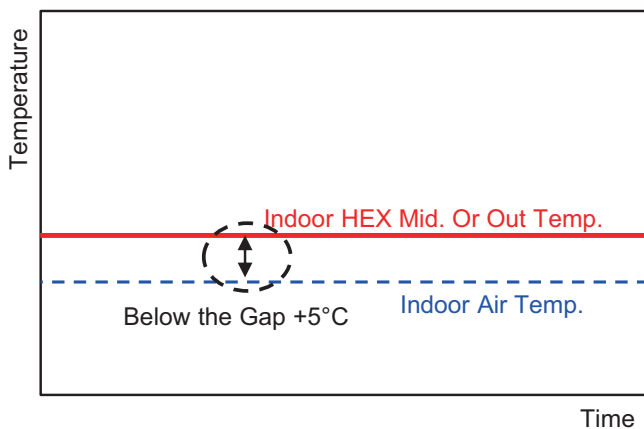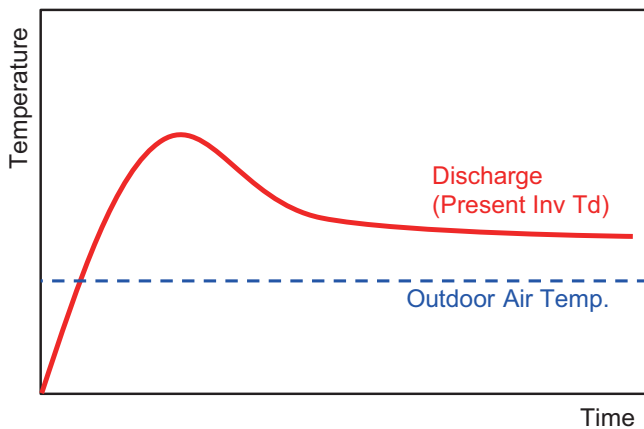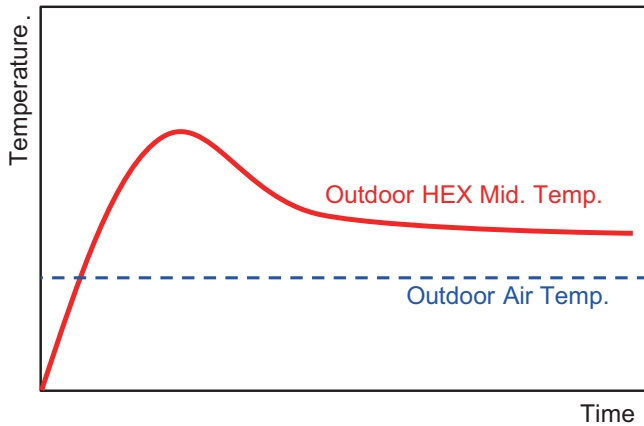


• In case the temperature data on the SIMs graph is similar to the shape of the left graph, Cycle clogging is suspected, so SVC Valve Lock should be checked.

- When outdoor heat exchanger temperature(ODU MID TEMP) approaches the outdoor temperature(ODU AIR) by gradual decrease after increase
 - When compressor discharge temperature approaches the outdoor temperature(ODU AIR) by gradual decrease after increase
 - When indoor heat exchanger temperature(IDU PIPE TEMP) is constantly kept within the gap difference of 'Below +5°C' with indoor temperature(IDU AIR)
- ※ If above 3 cases are satisfied at the same time, judge that there is no refrigerant inside of the product and perform SVC.

※ In case of the outdoor temperature sensor graph, it can occur as a phenomenon of the normal control under the condition that Compressor Frequency is changing.


| Operation Info | Installation | Mode |
|--------------------|--------------|----------|
| Operation : OFF | Save ● | Rem ● |
| Capacity(IDU) : 0K | Rx ● | Thm ● |
| Error Code : 00 | | Defros ● |

| Main Info | Outdoor Info | Indoor Info | Graph Info |
|---------------|--------------|---------------|------------|
| IDU | ODU | | Temp |
| Room Temp | 220.0 °C | Pipe in Temp | 220.0 °C |
| Pipe mid Temp | 220.0 °C | Pipe out Temp | 220.0 °C |

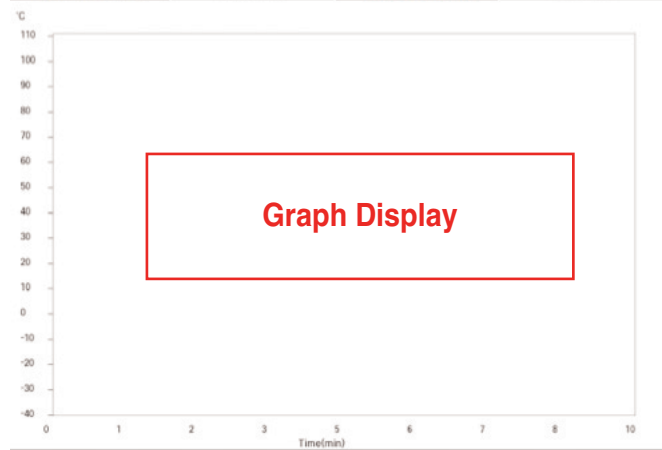

B3-3 Cycle Block (No action of EEV) / Bad location of Td sensor

• No action of EEV (too much open)

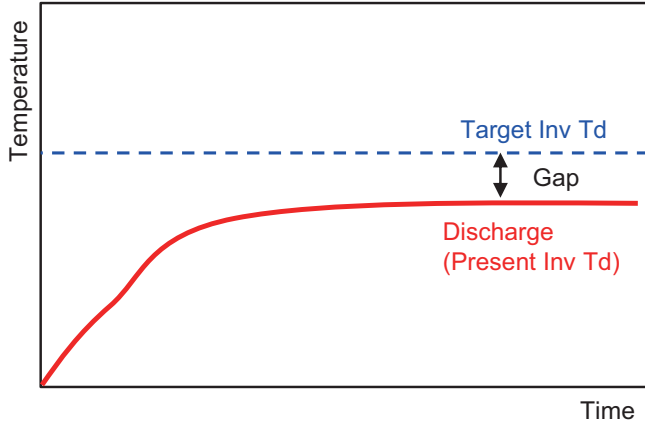

• In case the temperature data on the SIMs graph is similar to the shape of the left graph, judge it as 'No action of EEV' or 'Bad location of Td sensor'.

- When the compressor discharge temperature becomes stabilized under that state of not reaching Target Inv Td (Gap occurs over than 10°C)


※ If it is not operated under the state that EEV opening is opened a lot, the same phenomenon may occur.

※ If the location of Td sensor is faulty (Removed/Inserted wrongly), the same phenomenon may occur.


- When the compressor discharge temperature becomes stabilized under that state of exceeding Target Inv Td (Gap occurs over than 10°C)

※ If it is not operated under the state that EEV opening is opened a little, the same phenomenon may occur.

• No action of EEV (too much close)

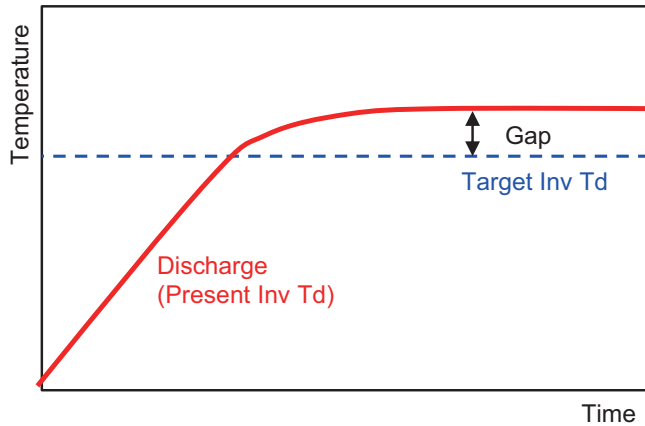

• Abnormal fastening state of EEV Coil

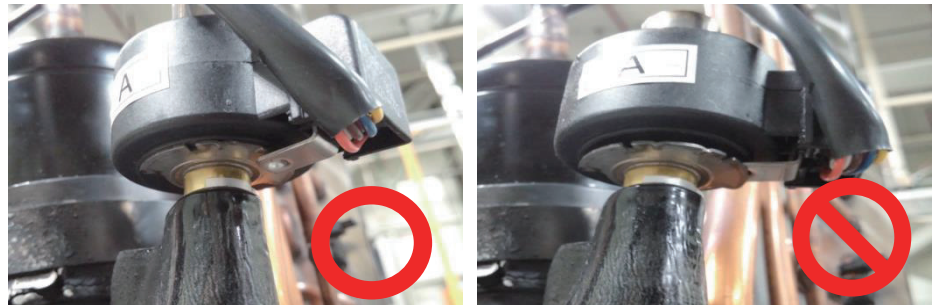

• Abnormal fastening state of Td sensor



B4. Reference Cycle Temperature Table

B4-1. Cooling Mode

- ❖ Determine the normal temperature range referring to the Reference Cycle data for each indoor/outdoor temperature condition.
- ※ Under the cooling operation mode, Inv.Td should always higher than the temperature of the outdoor pipe. IF Inv.Td temperature is same or lower than the outdoor pipe temperature, the confirmation for the sensor insertion faulty/characteristics faulty is required.

B4-1-a Standard Cooling Temperature : Indoor 27 °C (81 °F)/ Outdoor 35 °C (95 °F)

| Capacity (B.T.U) | Tool | Pipe Length (m/ft) | Indoor | | | Outdoor | | | | | | |
|---------------------|------|--------------------------|-----------|-------------|------------|------------|------------|------------|-------------|------------|---------------------------|-----------------|
| | | | °C (°F) | | | °C (°F) | | | | | kgf/cm ² (psi) | |
| | | | HEX In | HEX Mid. | HEX Out | Suction | INV Td | HEX In | HEX Mid. | HEX Out | Pressure High | Pressure Low |
| 9k | UA3 | 7.5(24.6) | 9.5 (49) | 8.9 (48) | 10 (50) | 10.2 (50) | 79.4 (175) | 76.4 (170) | 49 (120) | 40.3 (105) | 30.8 (437) | 8.3 (118) |
| 12k | UA3 | | 10.3 (51) | 9.4 (49) | 9.1 (48) | 8.1 (47) | 79.2 (175) | 74.6 (166) | 47.9 (118) | 39.1 (102) | 32.3 (459) | 8.0 (114) |
| | UL2 | | 9.9 (50) | 8.9 (48) | 9.3 (49) | 8.6 (48) | 77.5 (172) | 71.9 (161) | 45.9 (115) | 39 (102) | 28.9 (411) | 7.8 (111) |
| 18k | UL2 | | 10 (50) | 10 (50) | 11.5 (53) | 11.7 (53) | 77.8 (172) | 74.9 (166) | 49.5 (121) | 42.1 (108) | 30.6 (435) | 8.8 (125) |
| | UE | | 8.7 (48) | 9.3 (49) | 9.8 (50) | 8.8 (48) | 75.2 (167) | 73.3 (164) | 47.2 (117) | 40.1 (104) | 27.8 (395) | 9.3 (133) |
| 24k | UE | | 7.7 (46) | 7.7 (46) | 9.5 (49) | 7.3 (45) | 80.3 (177) | 75.6 (168) | 50.1 (122) | 40.5 (105) | 30.1 (428) | 9.0 (128) |
| | UE1+ | 8.5 (47) | 7.7 (46) | 7.8 (46) | 8.3 (47) | 77.9 (172) | 72 (162) | 49.4 (121) | 41.0 (106) | 31 (440) | 7.8 (111) | |

※ Cycle Judgment Tolerance

Indoor HEX Temp. : 10(50) ± 5(9) °C (°F)

Outdoor HEX In : 74(165) ± 15(27) °C (°F)

Outdoor HEX Mid. : 48(118) ± 10(18) °C (°F)

Outdoor HEX Out : 40(104) ± 10(18) °C (°F)

Suction : More then 2(35) °C (°F)

Inv Td : 78(172) ± 15(27) °C (°F)

Pressure Low : 8.5(120) ± 3(43) kg/cm² (psi)

B4-1-b Cooling Overload Temperature : Indoor 32 °C (90 °F)/ Outdoor 48 °C (118 °F)

| Capacity (B.T.U) | Tool | Pipe Length (m/ft) | Indoor | | | Outdoor | | | | | | |
|---------------------|------|--------------------------|-----------|-------------|------------|-----------|------------|------------|-------------|------------|---------------------------|-----------------|
| | | | °C (°F) | | | °C (°F) | | | | | kgf/cm ² (psi) | |
| | | | HEX In | HEX Mid. | HEX Out | Suction | INV Td | HEX In | HEX Mid. | HEX Out | Pressure High | Pressure Low |
| 9k | UA3 | 7.5(24.6) | 18.5 (65) | 18.9 (66) | 17.9 (64) | 16.8 (62) | 79.7 (175) | 76.7 (170) | 58.9 (138) | 56.2 (133) | 38.3 (544) | 12.3 (175) |
| | | 20(65.6) | 19.7 (66) | 19.1 (66) | 19.0 (66) | 17.3 (63) | 76.3 (169) | 70.7 (159) | 57.1 (135) | 55.4 (132) | 39.5 (561) | 12.2 (173) |
| 12k | UA3 | 7.5(24.6) | 18.3 (65) | 19 (66) | 17.8 (64) | 18.6 (65) | 79.3 (175) | 71.9 (161) | 55.1 (131) | 53.4 (128) | 37.3 (530) | 11.9 (169) |
| | | 20(65.6) | 18.8 (66) | 19.1 (66) | 18.8 (66) | 17.3 (63) | 76.3 (169) | 69.7 (157) | 57.1 (135) | 53.7 (129) | 38.5 (547) | 11.9 (169) |
| | UL2 | 7.5(24.6) | 16.3 (61) | 17.3 (63) | 17.9 (64) | 23.9 (75) | 87.5 (190) | 82.2 (180) | 55.5 (132) | 51.5 (125) | 35.6 (506) | 11.2 (159) |
| | | 20(65.6) | 18.2 (65) | 18.4 (65) | 19.3 (67) | 20.9 (70) | 82.4 (180) | 77.2 (171) | 54.8 (131) | 52.4 (126) | 35.7 (507) | 11.8 (168) |
| 18k | UL2 | 7.5(24.6) | 18 (64) | 18.4 (65) | 19.5 (67) | 22.8 (73) | 87.9 (190) | 81.2 (178) | 57.4 (135) | 55.3 (132) | 36.1 (513) | 11.9 (169) |
| | | 20(65.6) | 18.6 (65) | 18.4 (65) | 19.8 (68) | 16.8 (62) | 84.4 (184) | 76.1 (169) | 55.4 (132) | 52.1 (126) | 38.4 (545) | 12.3 (175) |
| | UE | 7.5(24.6) | 16 (61) | 18.2 (65) | 16.7 (62) | 15.9 (61) | 84.7 (184) | 78.9 (174) | 57.5 (136) | 54.5 (130) | 37.7 (535) | 11.2 (159) |
| | | 30(98.4) | 17.9 (64) | 18.3 (65) | 18.3 (65) | 15.3 (60) | 82 (180) | 77.1 (171) | 56.6 (134) | 53.4 (128) | 32.2 (457) | 13.9 (197) |
| 24k | UE | 7.5(24.6) | 17.6 (64) | 19.8 (68) | 17.8 (64) | 19.8 (68) | 84.4 (184) | 81.2 (178) | 57.3 (135) | 54.5 (130) | 37.3 (430) | 12.0 (170) |
| | | 30(98.4) | 17.6 (64) | 18.1 (65) | 18.5 (65) | 16.0 (61) | 82.6 (181) | 75.9 (169) | 56.8 (134) | 52 (126) | 37.9 (538) | 11.9 (169) |
| | UE1+ | 7.5(24.6) | 16.1 (61) | 16.5 (62) | 17.1 (63) | 17.5 (64) | 81.8 (179) | 77.4 (171) | 57.4 (135) | 53.6 (128) | 36.5 (518) | 10.8 (153) |
| | | 30(98.4) | 16.7 (62) | 17.4 (63) | 17.1 (63) | 18.9 (66) | 81.5 (179) | 72.5 (163) | 58.1 (137) | 50.6 (123) | 36.9 (524) | 11.2 (159) |

※ Cycle Judgment Tolerance

Indoor HEX Temp. : 18(64) ± 5(9) °C (°F)

Outdoor HEX In : 74(165) ± 15(27) °C (°F)

Outdoor HEX Mid. : 57(135) ± 10(18) °C (°F)

Outdoor HEX Out : 40(130) ± 10(18) °C (°F)

Suction : More then 12(54) °C (°F)

Inv Td : 78(172) ± 15(27) °C (°F)

Pressure Low : 12(171) ± 3(43) kg/cm² (psi)

B4-1-c Cooling Low Temperature : Indoor 21 °C (70 °F)/ Outdoor 21 °C (70 °F)

| Capacity (B.T.U) | Tool | Pipe Length (m/ft) | Indoor | | | Outdoor | | | | | | |
|---------------------|------|--------------------------|-----------|-------------|------------|-----------|------------|------------|-------------|------------|---------------------------|-----------------|
| | | | °C (°F) | | | °C (°F) | | | | | kgf/cm ² (psi) | |
| | | | HEX In | HEX Mid. | HEX Out | Suction | INV Td | HEX In | HEX Mid. | HEX Out | Pressure High | Pressure Low |
| 9k | UA3 | 7.5(24.6) | 3.5 (38) | 3.2 (38) | 2.7 (37) | 1.4 (34) | 40 (104) | 35.3 (96) | 29.3 (85) | 27.6 (82) | 18.5 (263) | 7.4 (105) |
| | | 20(65.6) | 3.1 (38) | 3.3 (38) | 2.5 (36) | -0.8 (31) | 37.2 (99) | 31.5 (89) | 30.6 (87) | 26.7 (80) | 20.5 (286) | 7.1 (101) |
| 12k | UA3 | 7.5(24.6) | 4.6 (40) | 4.4 (40) | 5.6 (42) | 5.6 (42) | 44 (111) | 38.4 (101) | 28.2 (83) | 23.5 (74) | 18.1 (257) | 7.7 (109) |
| | | 20(65.6) | 5 (41) | 5.3 (41) | 5.9 (43) | 2.9 (37) | 42.9 (109) | 37.7 (100) | 30.1 (86) | 24.3 (76) | 18.3 (260) | 7.7 (110) |
| | UL2 | 7.5(24.6) | 4.1 (39) | 4.3 (40) | 5.5 (42) | 5.9 (43) | 42.7 (109) | 36.9 (98) | 27.4 (81) | 23.4 (74) | 17.6 (251) | 7.6 (108) |
| | | 20(65.6) | 4.9 (41) | 5.3 (42) | 6 (43) | 3.2 (38) | 43.2 (110) | 38.1 (101) | 28.1 (83) | 24.6 (76) | 17.7 (252) | 7.7 (110) |
| 18k | UL2 | 7.5(24.6) | 6.3 (43) | 5.8 (42) | 6.8 (44) | 6.5 (44) | 47.4 (117) | 40.2 (104) | 30 (86) | 27.9 (82) | 19.5 (276) | 8.0 (114) |
| | | 20(65.6) | 5.7 (42) | 7.1 (45) | 7.1 (45) | 4.3 (40) | 44.9 (113) | 42.5 (109) | 30.7 (87) | 25.1 (77) | 20.9 (297) | 7.6 (108) |
| 24k | UE | 7.5(24.6) | 4.9 (41) | 4.7 (40) | 6.4 (43) | 5.7 (42) | 48.3 (119) | 42 (108) | 31.6 (89) | 25.5 (78) | 19.9 (283) | 7.7 (110) |
| | | 30(98.4) | 4.6 (40) | 4.7 (40) | 4.9 (41) | 3.0 (37) | 44.7 (113) | 38.5 (101) | 29.6 (85) | 23.1 (74) | 20.6 (292) | 7.7 (110) |
| | UE1+ | 7.5(24.6) | 6.3 (43) | 6.7 (44) | 9.2 (49) | 11.1 (52) | 47.1 (117) | 40.7 (105) | 27.9 (82) | 22.4 (72) | 17.6 (250) | 8.4 (119) |
| | | 30(98.4) | 5.7 (42) | 6.1 (43) | 7.6 (46) | 11.1 (52) | 48.8 (120) | 38.9 (102) | 28.3 (83) | 22.5 (73) | 17.7 (252) | 8.1 (114) |

※ Cycle Judgment Tolerance

Indoor HEX Temp. : More than 0(32) °C (°F)

Outdoor HEX In : 38(100) ± 15(27) °C (°F)

Outdoor HEX Mid. : 32(90) ± 10(18) °C (°F)

Outdoor HEX Out : 32(90) ± 10(18) °C (°F)

Suction : 6(43) ± 9(16) °C (°F)

Inv Td : 44(111) ± 15(27) °C (°F)

Pressure Low : 8(114) ± 3(43) kg/cm² (psi)

B4-2. Heating Mode

- ❖ Determine the normal temperature range referring to the Reference Cycle data for each indoor/outdoor temperature condition
- ※ Under the heating operation mode, Inv.Td should always higher than the temperature of the indoor pipe. IF Inv.Td temperature is same or lower than the indoor pipe temperature, the confirmation for the sensor insertion faulty/characteristics faulty is required.

B4-2-a Standard Heating Temperature : Indoor 20 °C (68 °F)/ Outdoor 7 °C (45 °F)

| Capacity (B.T.U) | Tool | Pipe Length (m/ft) | Indoor | | | Outdoor | | | | | | |
|---------------------|------|--------------------------|------------|-------------|------------|-----------|------------|-----------|-------------|------------|---------------------------|-----------------|
| | | | °C (°F) | | | °C (°F) | | | | | kgf/cm ² (psi) | |
| | | | HEX In | HEX Mid. | HEX Out | Suction | INV Td | HEX In | HEX Mid. | HEX Out | Pressure High | Pressure Low |
| 9k | UA3 | 7.5(24.6) | 59.7 (139) | 44.4 (112) | 41.5 (107) | 1.4 (34) | 70.2 (158) | 1.6 (35) | 0.7 (33) | 2.1 (36) | 28.4 (404) | 6.7 (95) |
| 12k | UA3 | | 57.6 (136) | 46.6 (116) | 43.3 (110) | -0.2 (32) | 72.5 (162) | 1.4 (35) | 1 (34) | 0.9 (34) | 31.2 (444) | 6.8 (96) |
| | UL2 | | 62.1 (144) | 48.5 (119) | 40.5 (105) | 0.5 (33) | 73 (163) | 2.2 (36) | 1.3 (34) | 1.8 (35) | 30.7 (436) | 6.9 (98) |
| 18k | UL2 | | 63.9 (147) | 44.4 (112) | 39.6 (103) | 0.9 (34) | 74.4 (166) | 1.2 (34) | 0.7 (33) | 1.5 (35) | 28.4 (403) | 6.7 (94) |
| 24k | UE | | 65.1 (149) | 48.9 (120) | 43.8 (111) | -1.3 (30) | 74 (165) | 1 (34) | 0.9 (34) | 1.5 (35) | 29.7 (422) | 7.6 (108) |
| | UE1+ | | 68.8 (156) | 51.0 (124) | 43.7 (111) | -0.8 (31) | 73.9 (165) | 3.3 (38) | 1.4 (35) | 1.4 (34) | 33.1 (470) | 6.5 (93) |

※ Cycle Judgment Tolerance

Outdoor HEX Mid. : More then -1 (30) °C (°F)
 Indoor HEX In : 63(145) ± 15(27) °C (°F)
 Indoor HEX Mid. : 47(117) ± 10(18) °C (°F)
 Indoor HEX Out : 42(108) ± 10(18) °C (°F)

Suction : 0(32) ± 3(5) °C (°F)
 Inv Td : 73(163) ± 15(27) °C (°F)
 Pressure Low : 7(100) ± 3(43) kg/cm² (psi)

B4-2-b Heating Overload Temperature : Indoor 27 °C (81 °F)/ Outdoor 24 °C (75 °F)

| Capacity (B.T.U) | Tool | Pipe Length (m/ft) | Indoor | | | Outdoor | | | | | | |
|---------------------|------|--------------------------|------------|-------------|------------|-----------|------------|-----------|-------------|------------|---------------------------|-----------------|
| | | | °C (°F) | | | °C (°F) | | | | | kgf/cm ² (psi) | |
| | | | HEX In | HEX Mid. | HEX Out | Suction | INV Td | HEX In | HEX Mid. | HEX Out | Pressure High | Pressure Low |
| 9k | UA3 | 7.5(24.6) | 66 (151) | 49.3 (121) | 48.1 (119) | 20.8 (70) | 75.2 (167) | 15.6 (60) | 16.4 (62) | 19.5 (67) | 31.8 (451) | 11.5 (164) |
| | | 20(65.6) | 64.3 (148) | 48.2 (119) | 46.9 (116) | 21.8 (71) | 77.0 (171) | 14.2 (58) | 14.6 (58) | 19.3 (67) | 30.7 (435) | 11.0 (157) |
| 12k | UL2 | 7.5(24.6) | 63.5 (146) | 51.1 (124) | 44.4 (112) | 14.2 (58) | 72.9 (163) | 16.8 (56) | 13.3 (56) | 14.3 (58) | 32.2 (457) | 10.6 (151) |
| | | 20(65.6) | 63.2 (146) | 50.3 (122) | 44.3 (112) | 14.3 (58) | 73.0 (163) | 12.8 (55) | 12.8 (55) | 14.3 (58) | 32 (454) | 10.8 (153) |
| 18k | UL2 | 7.5(24.6) | 65.6 (150) | 48.8 (120) | 44.6 (112) | 15.1 (59) | 75.7 (168) | 11.3 (52) | 11.2 (52) | 13.4 (56) | 31.2 (443) | 9.8 (139) |
| | | 20(65.6) | 64.5 (148) | 48.7 (120) | 45.5 (114) | 17.2 (63) | 80.1 (176) | 10.8 (52) | 11.2 (52) | 14.8 (59) | 30.9 (438) | 9.7 (137) |
| 24k | UE | 7.5(24.6) | 64.5 (148) | 50.8 (123) | 48.5 (119) | 13.0 (55) | 70.9 (160) | 13.3 (56) | 13.4 (56) | 14.2 (58) | 32.1 (456) | 10.8 (154) |
| | | 30(98.4) | 61.5 (143) | 49.5 (121) | 47.7 (118) | 15.1 (59) | 72.4 (162) | 12.2 (54) | 12.4 (54) | 14.4 (58) | 31.4 (446) | 10.5 (150) |

※ Cycle Judgment Tolerance

Outdoor HEX Mid. : 13(60) ± 8(14) °C (°F)
 Indoor Pipe In : 63(145) ± 15(27) °C (°F)
 Indoor Pipe Mid. : 47(117) ± 10(18) °C (°F)
 Indoor Pipe Out : 42(108) ± 10(18) °C (°F)

Suction : 17(63) ± 7(13) °C (°F)
 Inv Td : 73(163) ± 15(27) °C (°F)
 Pressure Low : 11(156) ± 3(43) kg/cm² (psi)

B4-2-c Heating Low Temperature : Indoor 16 °C (61 °F)/ Outdoor -10 °C (14 °F)

| Capacity (B.T.U) | Tool | Pipe Length (m/ft) | Indoor | | | Outdoor | | | | | | |
|---------------------|------|--------------------------|------------|-------------|------------|------------|------------|------------|-------------|------------|---------------------------|-----------------|
| | | | °C (°F) | | | °C (°F) | | | | | kgf/cm ² (psi) | |
| | | | HEX In | HEX Mid. | HEX Out | Suction | INV Td | HEX In | HEX Mid. | HEX Out | Pressure High | Pressure Low |
| 9k | UA3 | 7.5(24.6) | 45.5 (114) | 35.9 (97) | 35.7 (96) | -16.2 (3) | 57 (135) | -14.2 (7) | -13.6 (7) | -12.3 (10) | 23.2 (330) | 3.6 (51) |
| | | 20(65.6) | 40.4 (105) | 35.9 (97) | 35.6 (96) | -15.6 (4) | 55.2 (131) | -14.5 (6) | -13 (9) | -12.6 (9) | 23 (326) | 3.6 (52) |
| 12k | UL2 | 7.5(24.6) | 59.2 (139) | 39.1 (102) | 32.6 (91) | -16.2 (3) | 74.6 (166) | -16.1 (3) | -16 (3) | -15.3 (5) | 25.1 (356) | 3.4 (48) |
| | | 20(65.6) | 55.6 (132) | 40.5 (105) | 29.3 (85) | -16.2 (3) | 73.2 (164) | -15.9 (3) | -16.5 (2) | -15.5 (4) | 25.9 (367) | 3.5 (50) |
| 18k | UL2 | 7.5(24.6) | 46.5 (116) | 34.4 (94) | 31.6 (89) | -19 (-2) | 67.8 (154) | -17.6 (0) | -16.7 (2) | -16.1 (3) | 22.5 (320) | 2.9 (41) |
| | | 20(65.6) | 42.4 (108) | 34.2 (93) | 31.2 (88) | -19.1 (-2) | 59.5 (139) | -16.9 (2) | -16.6 (2) | -15.9 (3) | 22.1 (314) | 2.9 (41) |
| 24k | UE | 7.5(24.6) | 47.5 (117) | 37.8 (100) | 32.9 (91) | -19.5 (-3) | 58.9 (138) | -18.4 (-1) | -17.7 (0) | -17.6 (0) | 24.3 (345) | 3.0 (42) |
| | | 30(98.4) | 44 (111) | 35.4 (96) | 31.6 (89) | -19.1 (-2) | 65.2 (149) | -17.6 (0) | -18.6 (-1) | -17.9 (0) | 22.3 (317) | 2.7 (38) |
| | UE1+ | 7.5(24.6) | 61.2 (142) | 41.6 (107) | 37.8 (100) | -21.3 (-6) | 73.7 (165) | -18.0 (0) | -16.9 (2) | -15.9 (3) | 27.8 (394) | 2.9 (41) |
| | | 30(98.4) | 48.7 (120) | 35.2 (95) | 34.1 (93) | -20.4 (-5) | 64.8 (149) | -18.2 (-1) | -16.8 (2) | -15.5 (4) | 22.5 (320) | 2.7 (38) |

※ Cycle Judgment Tolerance**Outdoor HEX Temp.** : More then -30 (-22) °C (°F)**Indoor HEX In** : 50(122) ± 15(27) °C (°F)**Indoor HEX Mid.** : 37(99) ± 10(18) °C (°F)**Indoor HEX Out** : 37(99) ± 10(18) °C (°F)**Suction** : more then -23(-9) ± 5(9) °C (°F)**Inv Td** : 65(150) ± 15(27) °C (°F)**Pressure Low** : 2.5(36) ~ 8(114) kg/cm² (psi)

Appendix C

Electrical part

Checking Method

- 1. PCBA**
- 2. Sensor (Temperature / Pressure)**
- 3. Comp**
- 4. Motor**
- 5. 4 Way Valve**
- 6. EEV**
- 7. Etc.**

C1. PCBA

C1-1. PCBA Type Classification(1)


- ❖ Check the type for PCBA P/NO(Part number) when performing product SVC, and refer to the measurement method for each type shown in the Appendix C.

| TYPE 1 | TYPE 2 | TYPE 3 | TYPE 4 |
|--|-------------------------------------|--|--|
| Gen2 1.5kW | Gen2 2.0kW | Gen2 2.0kW Standby | Gen2 3.0kW |
| EBR803609 EBR801043 EBR780506 EBR771596 EBR741212 EBR730978 EBR770678 EBR785697 EBR718478 EBR727941 EBR786320 EBR752600 | EBR741496 EBR783507 EBR765706 | EBR807500 EBR746319 EBR770549 EBR790985 | EBR746262 EBR779920 EBR772343 EBR805607 EBR765707 EBR770391 EBR791872 EBR793644 |
| TYPE 5 | TYPE 6 | TYPE 7 | TYPE 8 |
| Gen2 4.0kW | Gen2 3.0kW I-PFC | Gen2 4.0kW I-PFC | Gen2 1.5kW 115V |
| EBR770974 EBR750746 EBR723479 EBR785343 EBR770392 | EBR788632 | EBR774517 | EBR772723 |


If Part Number is not in the table, Please find similar PCBA shape to see the photos.

C1-1. PCBA Type Classification (2)

< TYPE 1 >

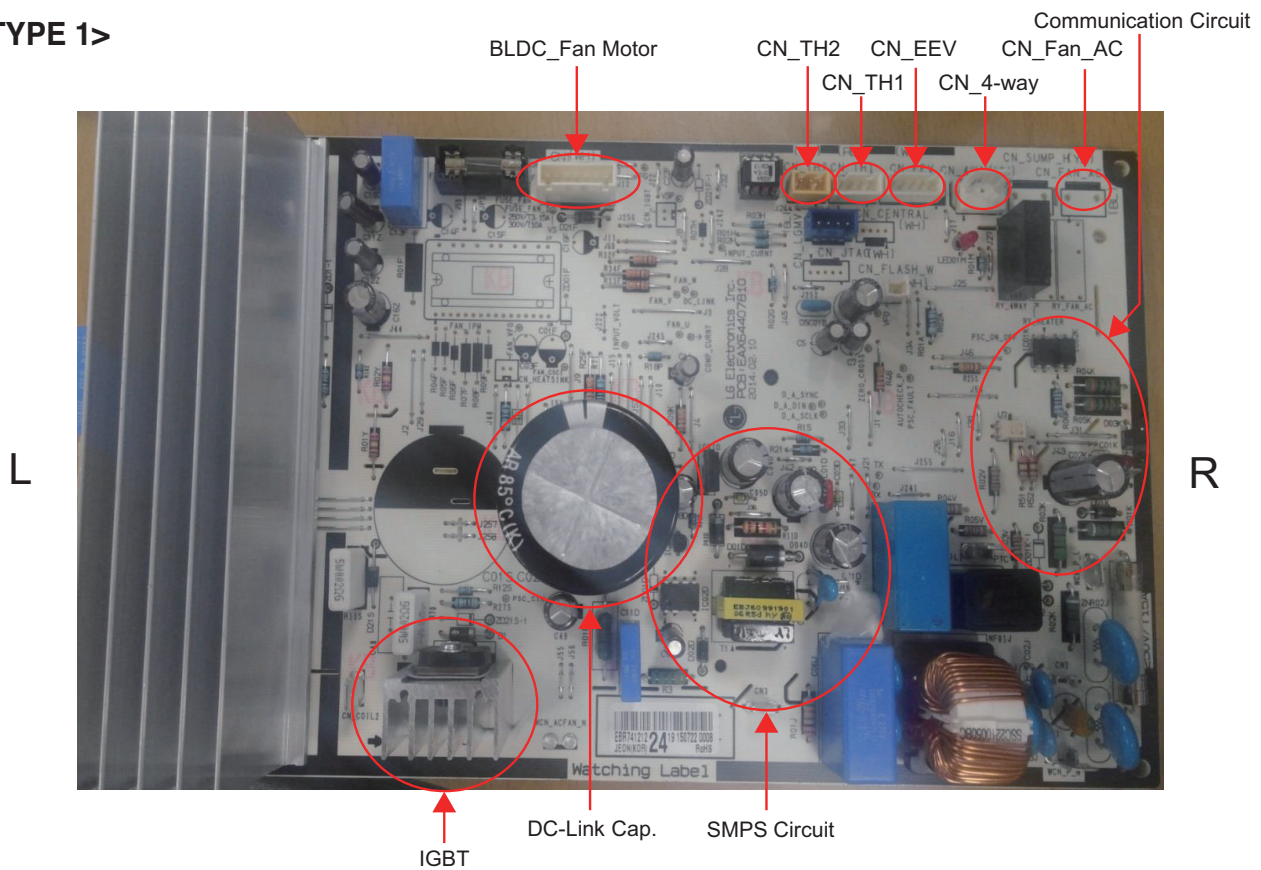


< TYPE 2 >

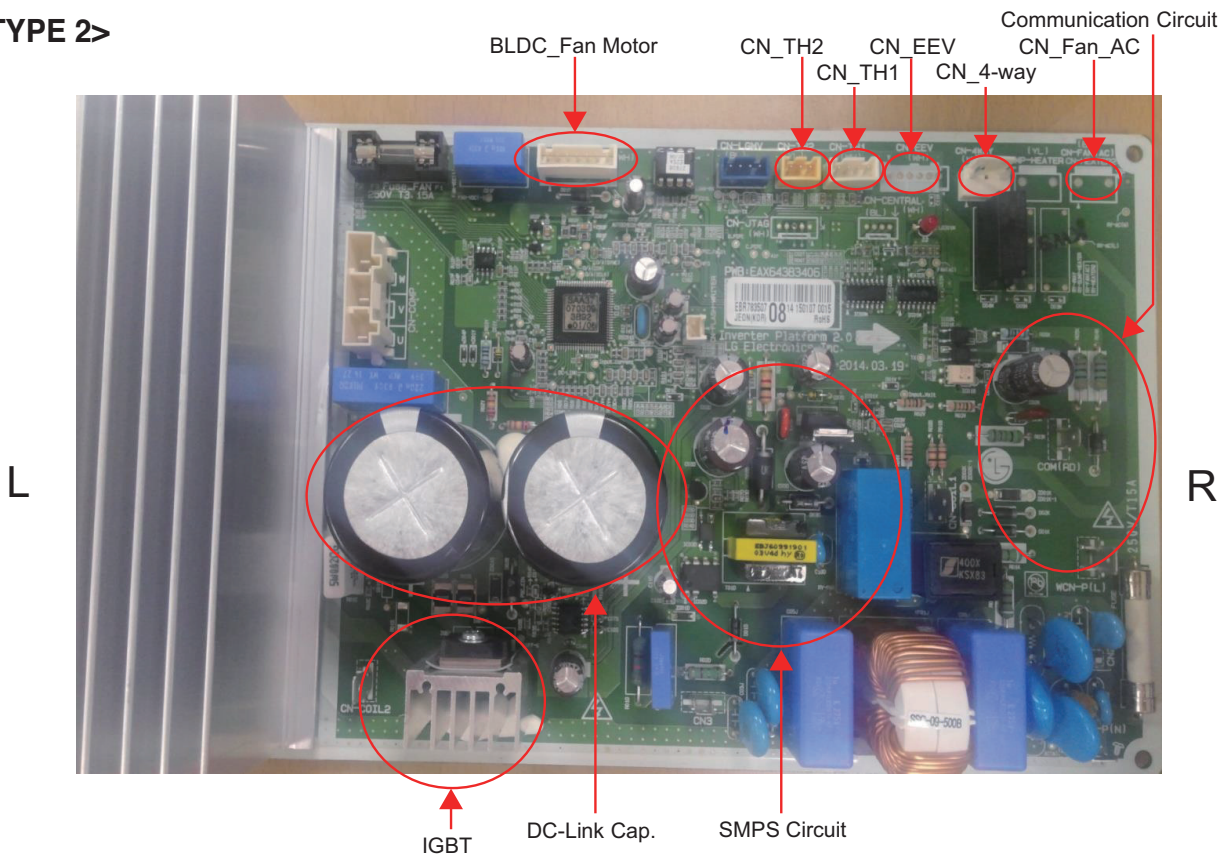


C1-1. PCBA Type Classification (3)

< TYPE 3 >

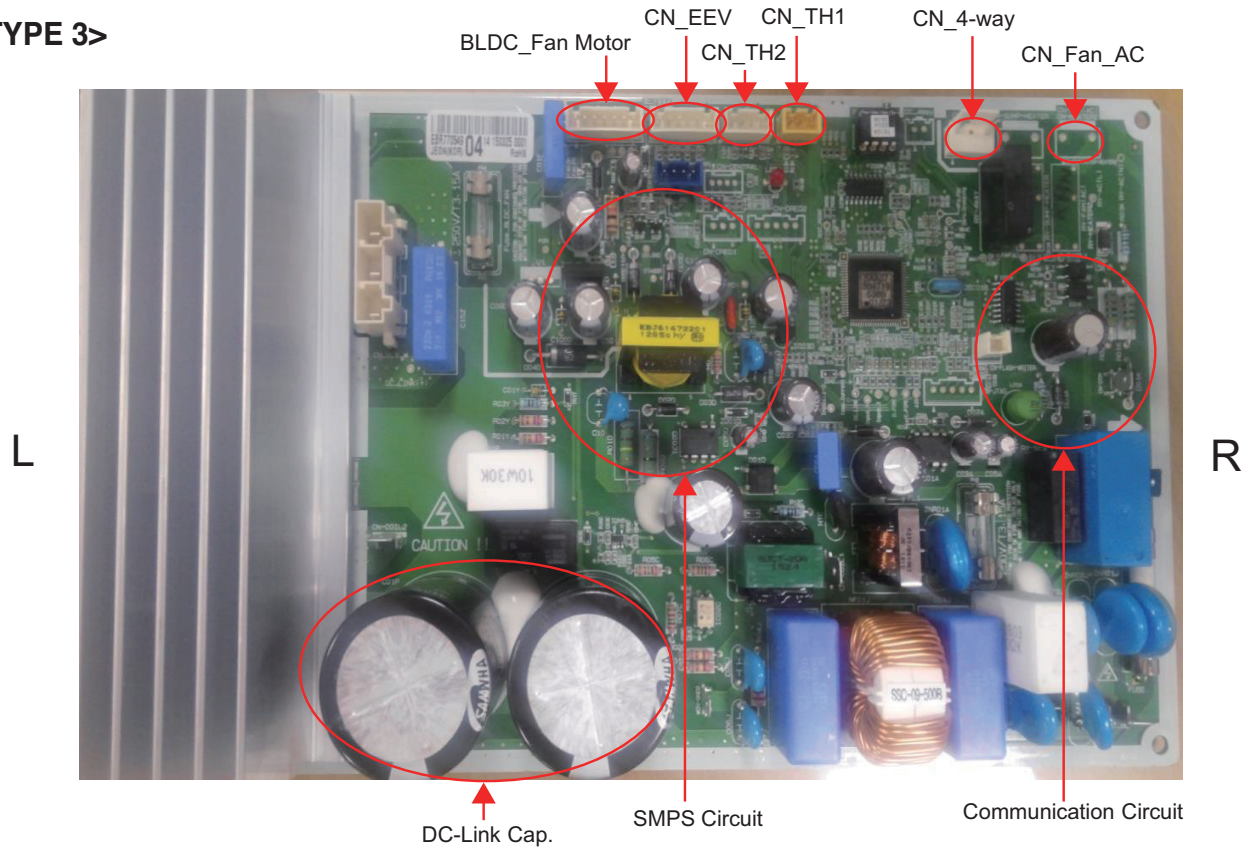


< TYPE 4 >

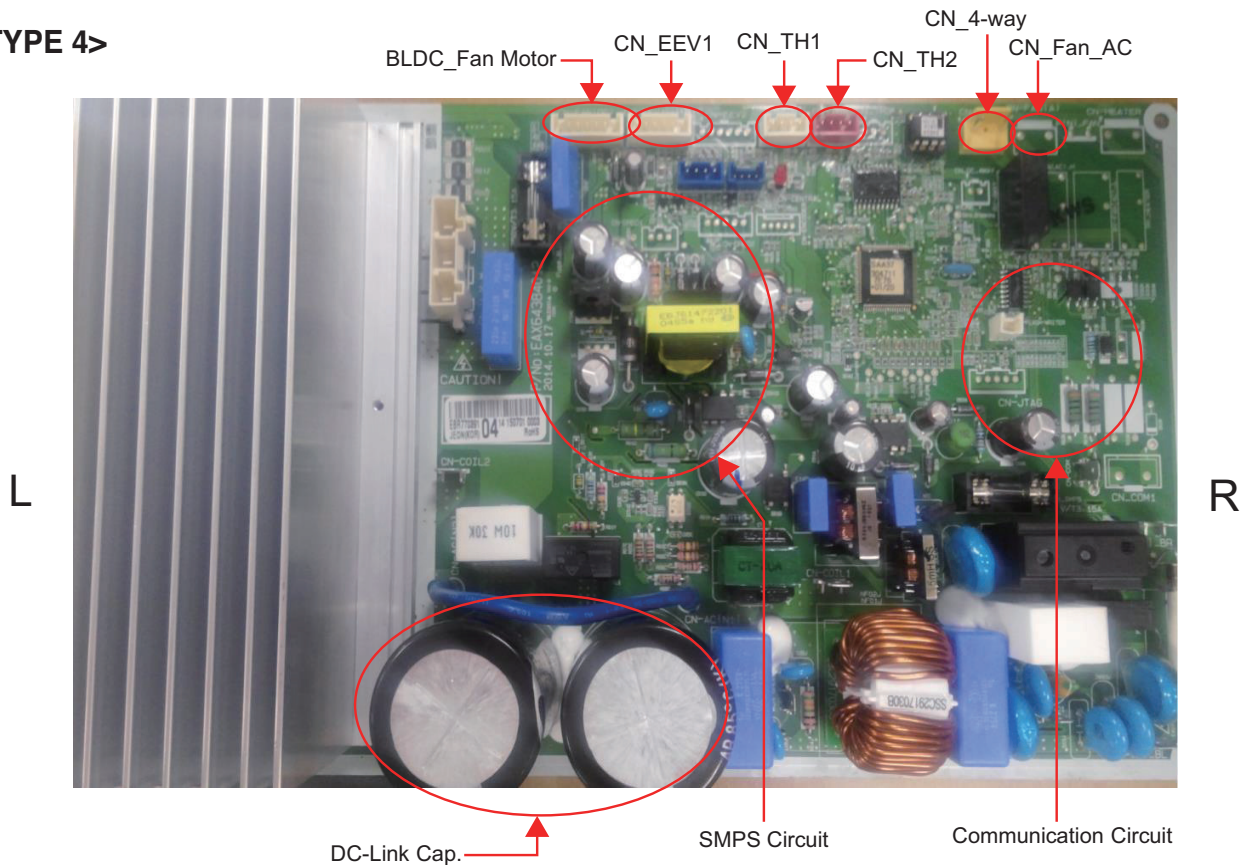


C1-1. PCBA Type Classification (4)

< TYPE 5 >

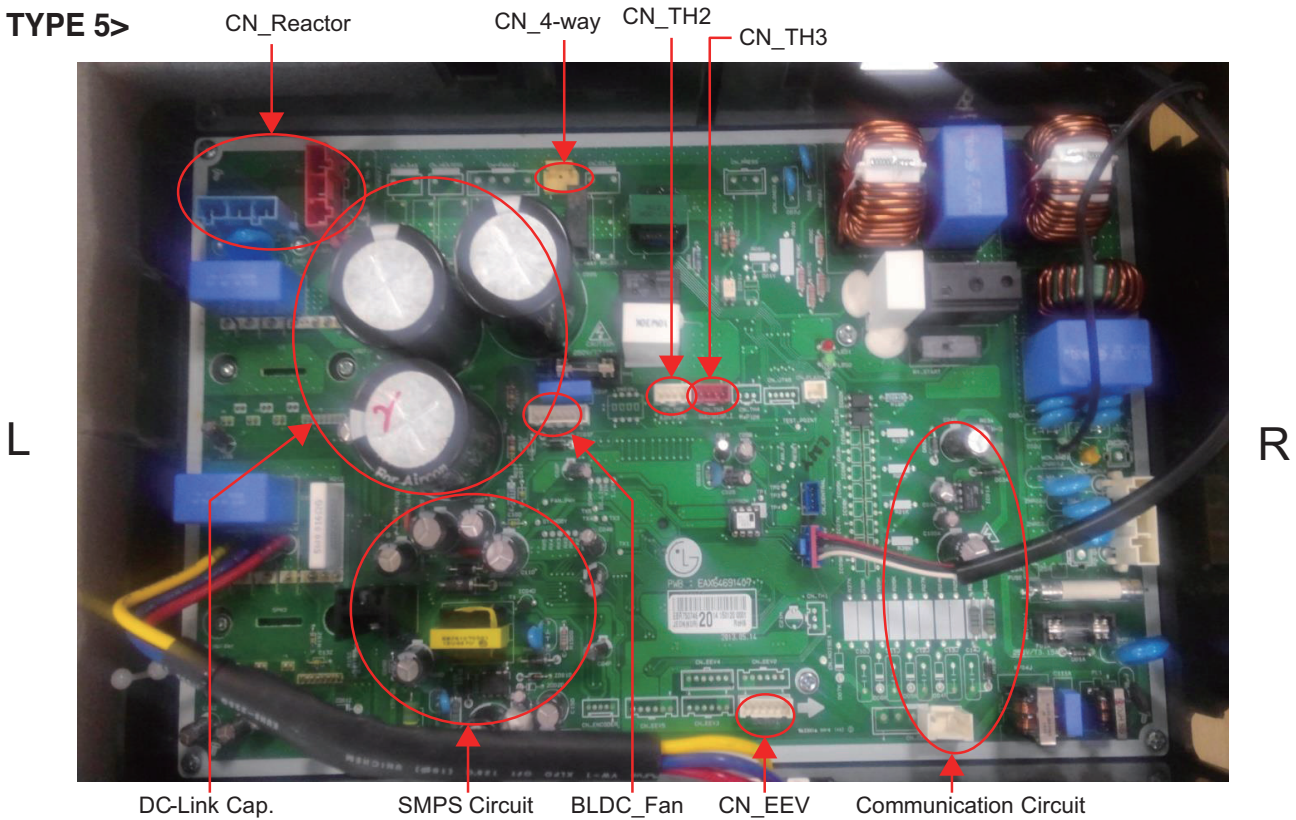


< TYPE 6 >

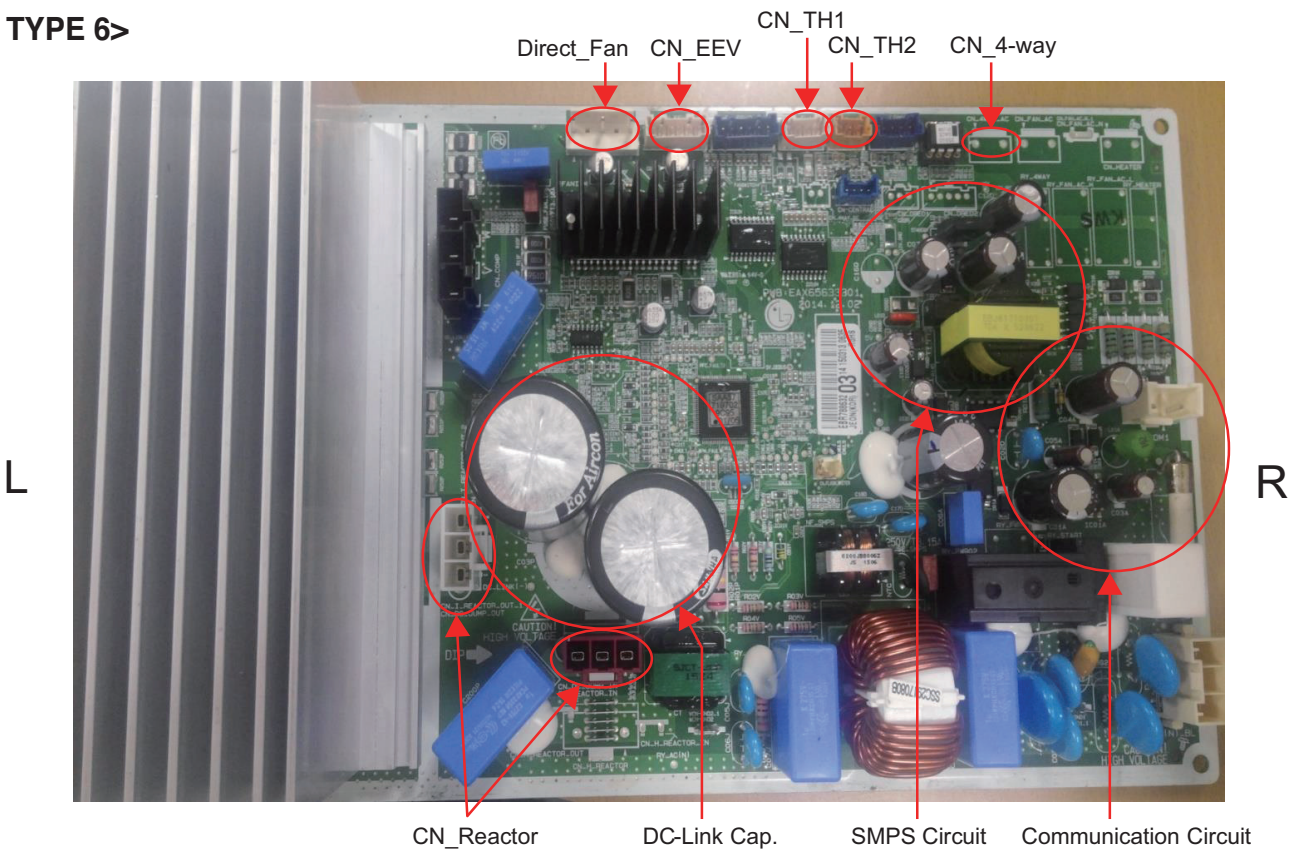


C1-1. PCBA Type Classification (5)

< TYPE 7 >

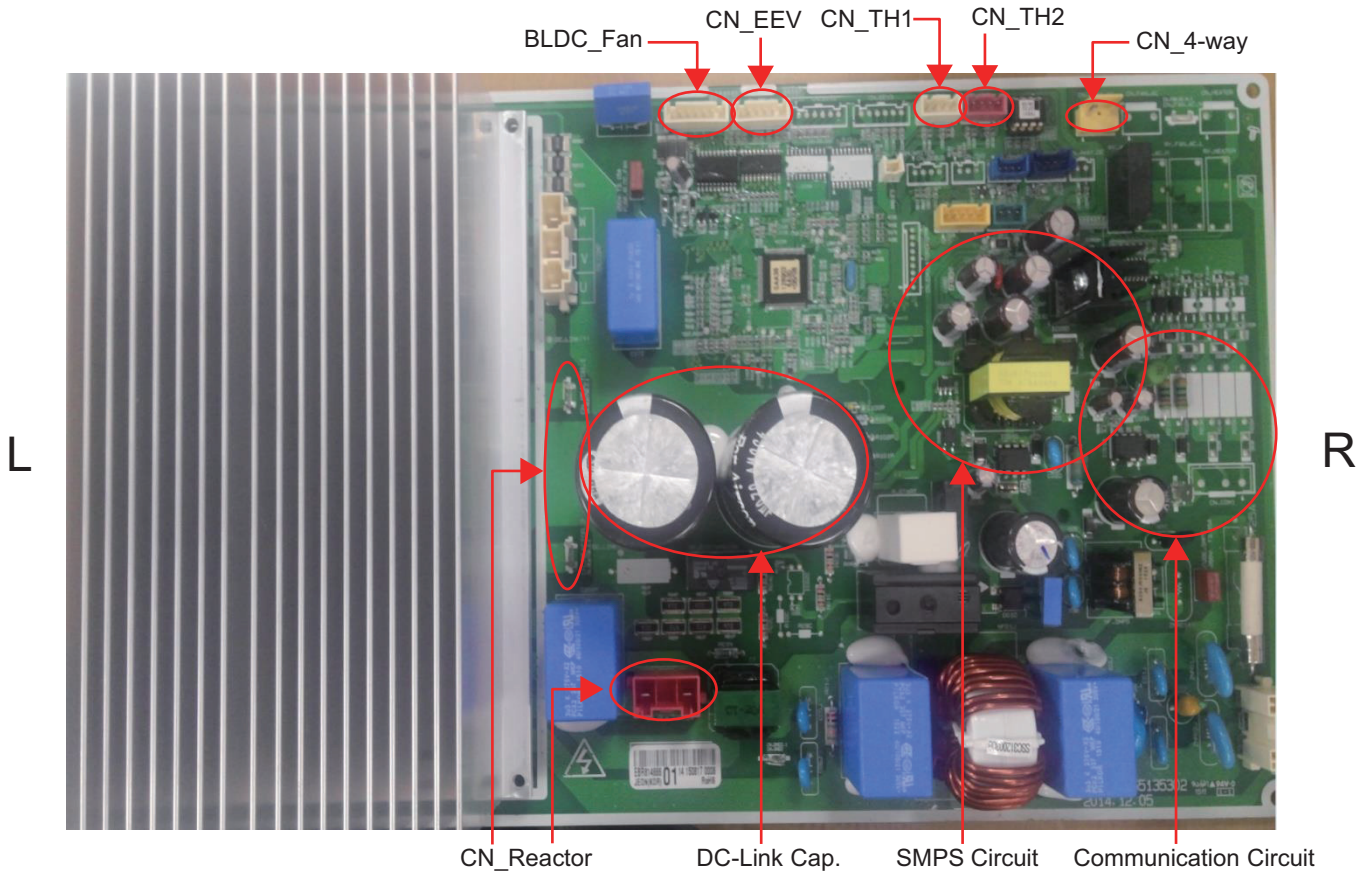

C1-2. Key measurement points for each type(1)

< TYPE 1 >

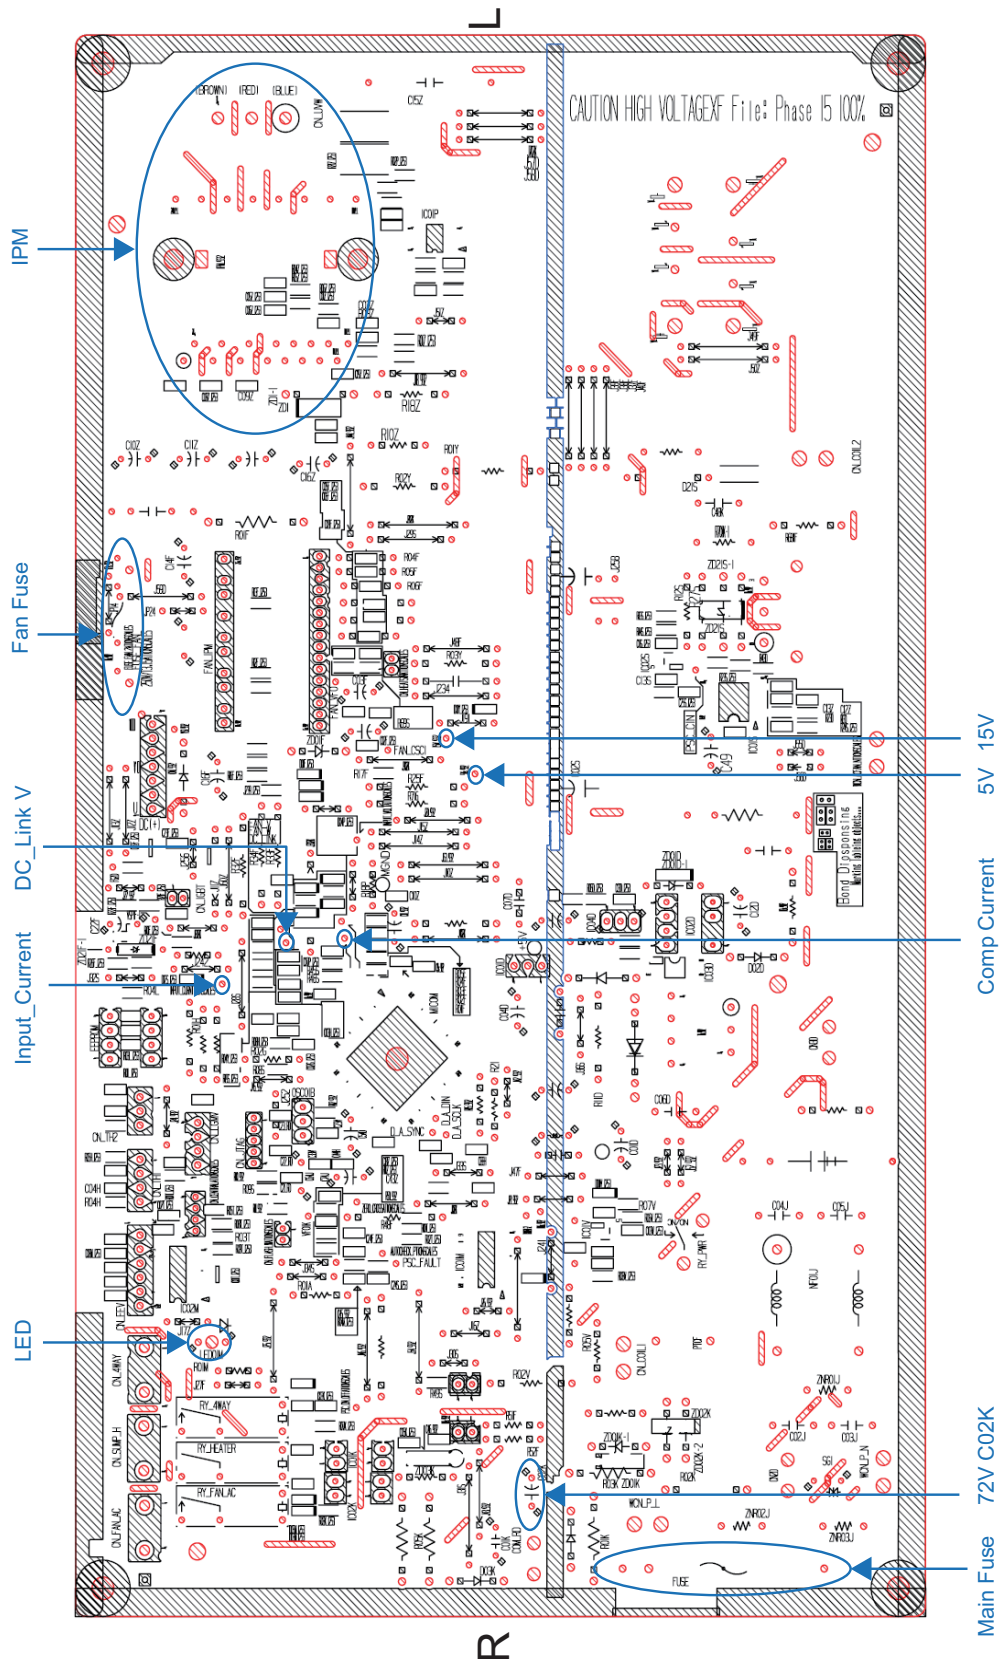


※ Measurement Point.

→ For detailed measuring point, refer to App. for each items.

C1-2. Key measurement points for each type(2)


< TYPE 2 >

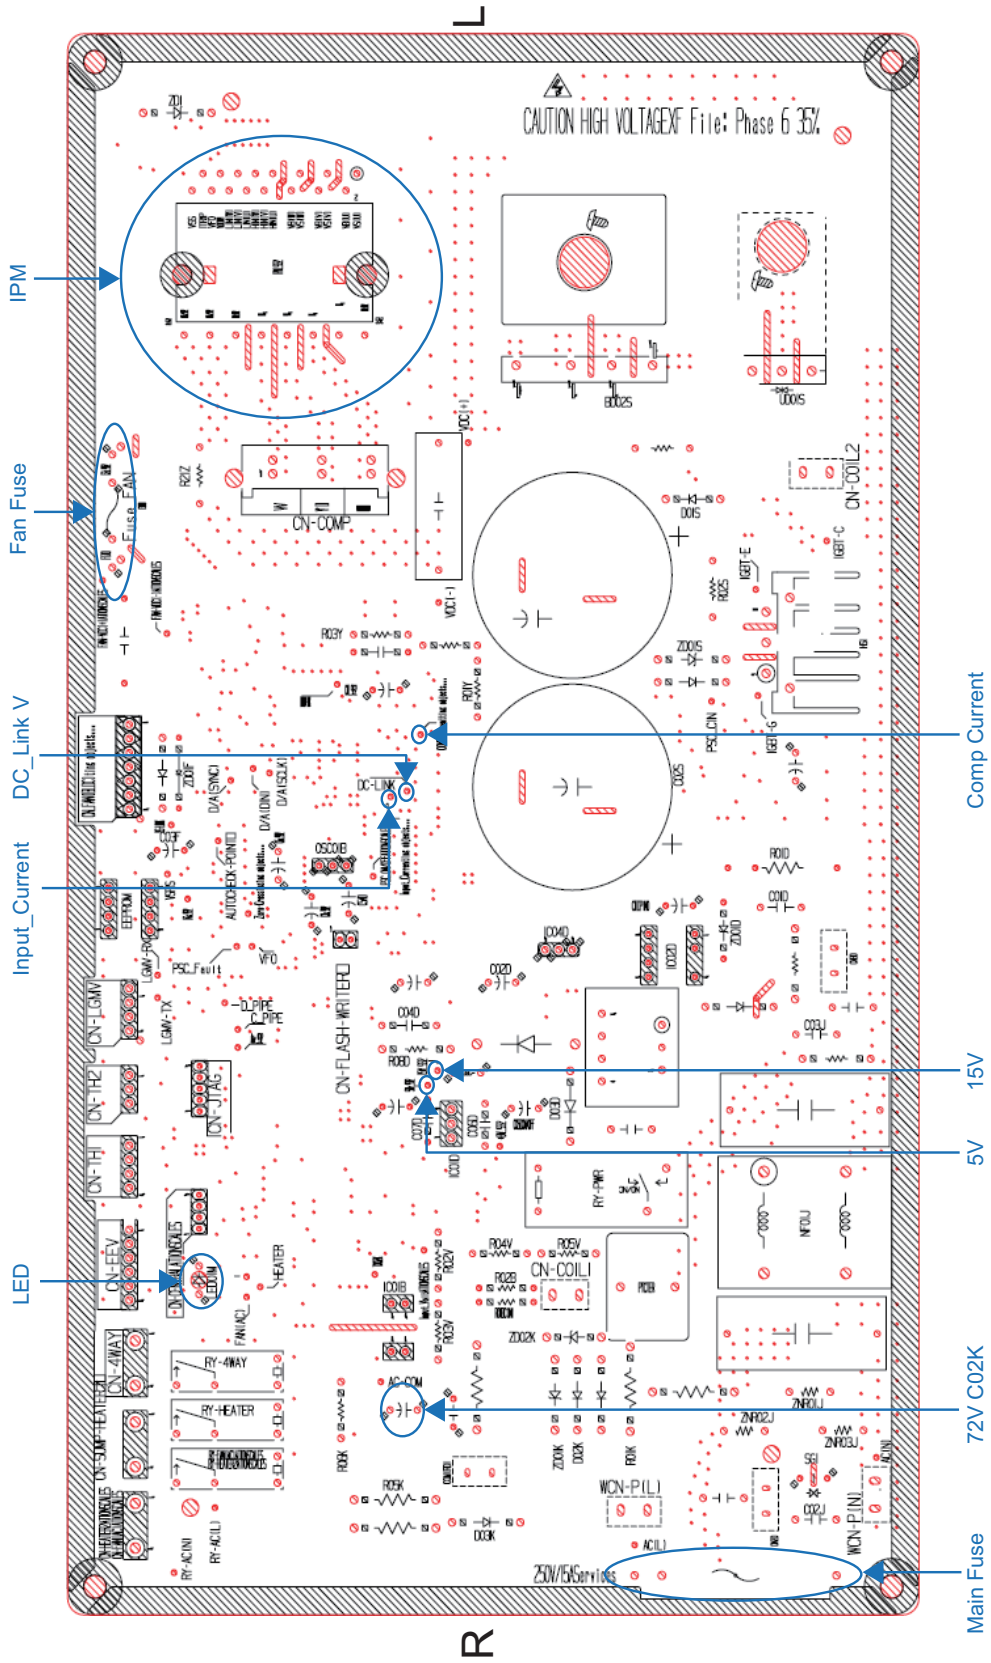

※ Measurement Point.
 → For detailed measuring point, refer to App. for each items.

C1-2. Key measurement points for each type(3)

< TYPE 3 >

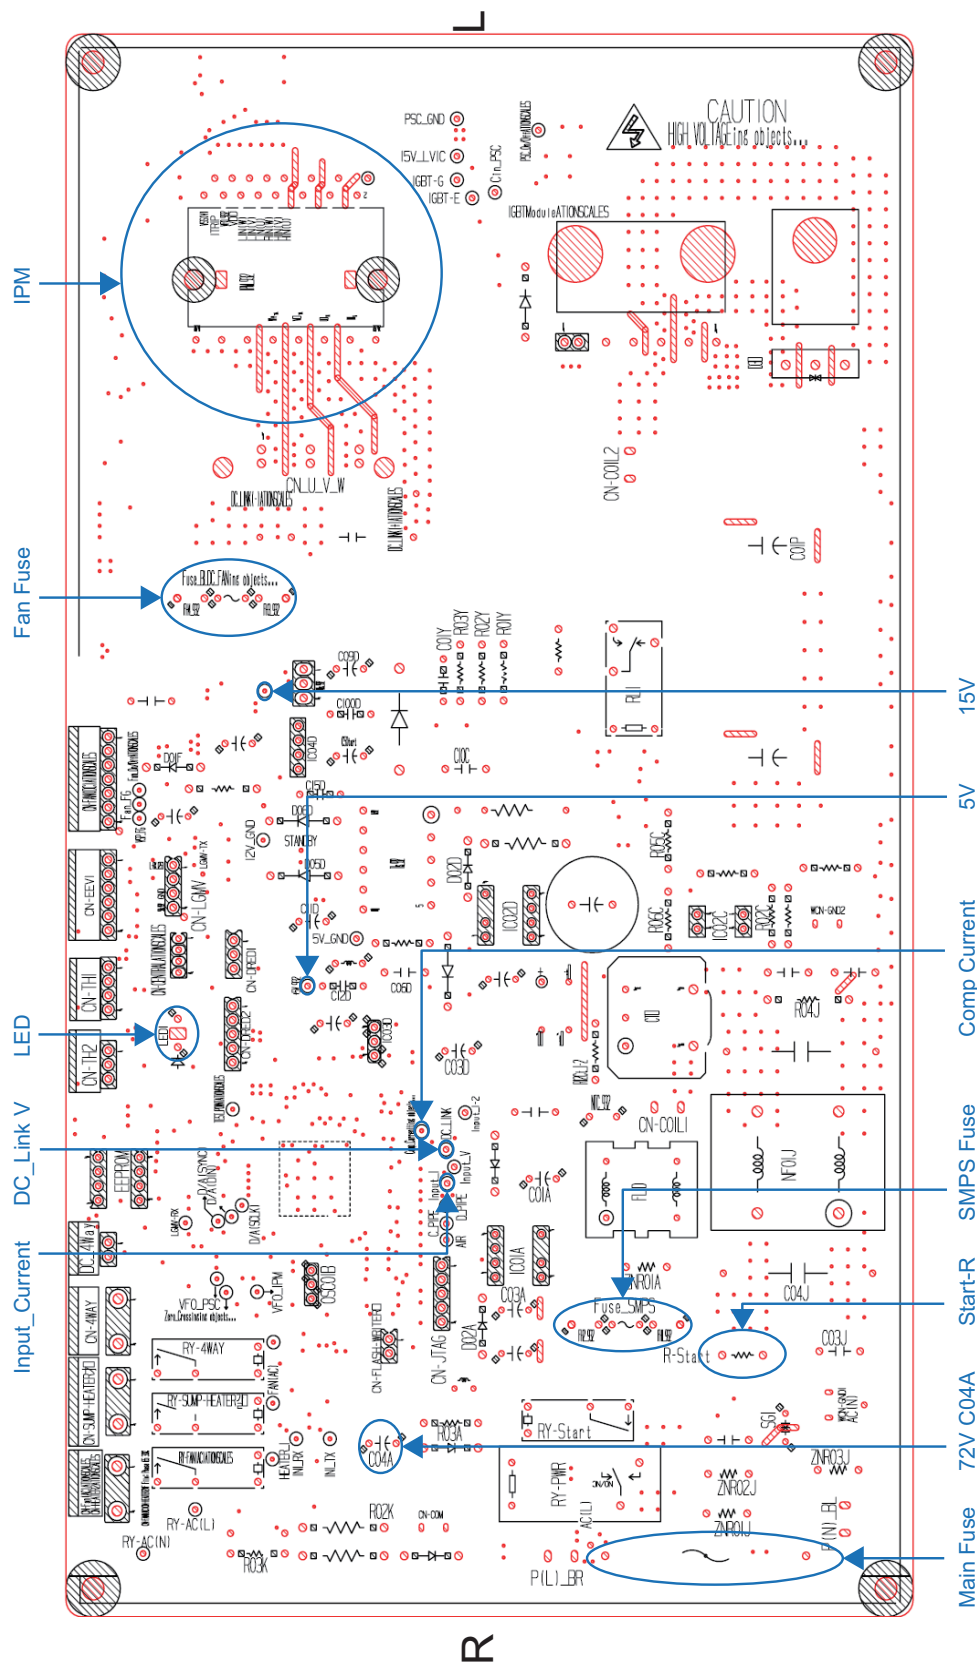


※ Measurement Point.

→ For detailed measuring point, refer to App. for each items.

C1-2. Key measurement points for each type(4)

< TYPE 4 >

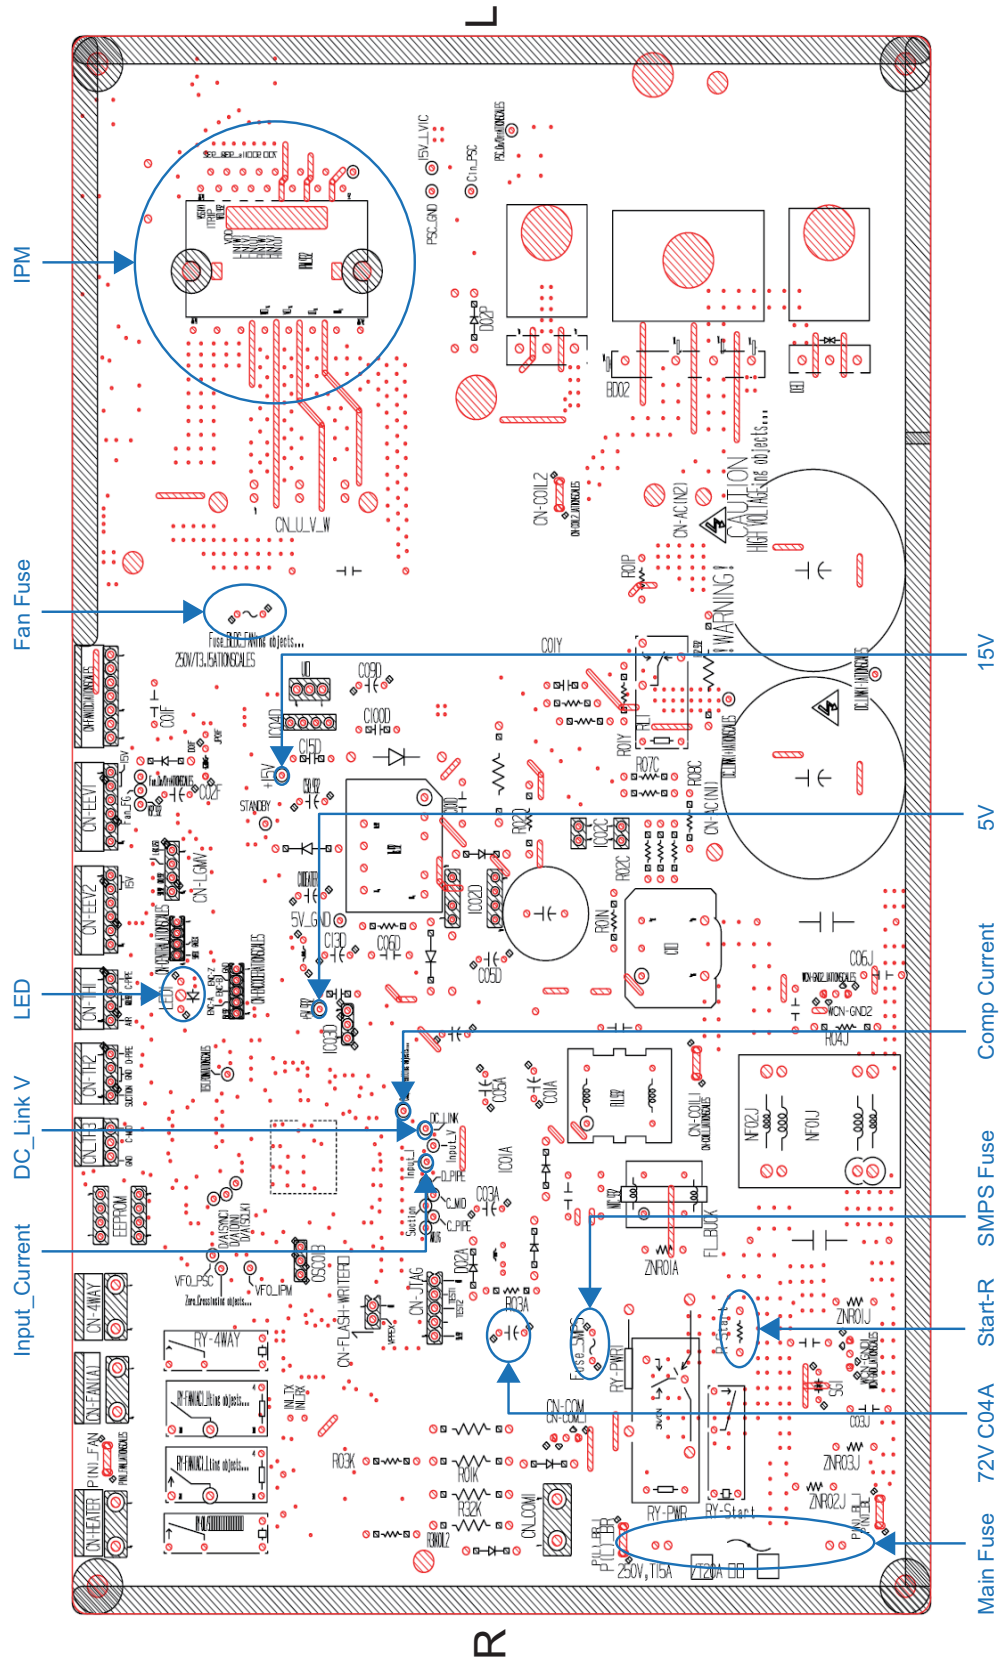


※ Measurement Point.

→ For detailed measuring point, refer to App. for each items.

C1-2. Key measurement points for each type(5)


< TYPE 5 >

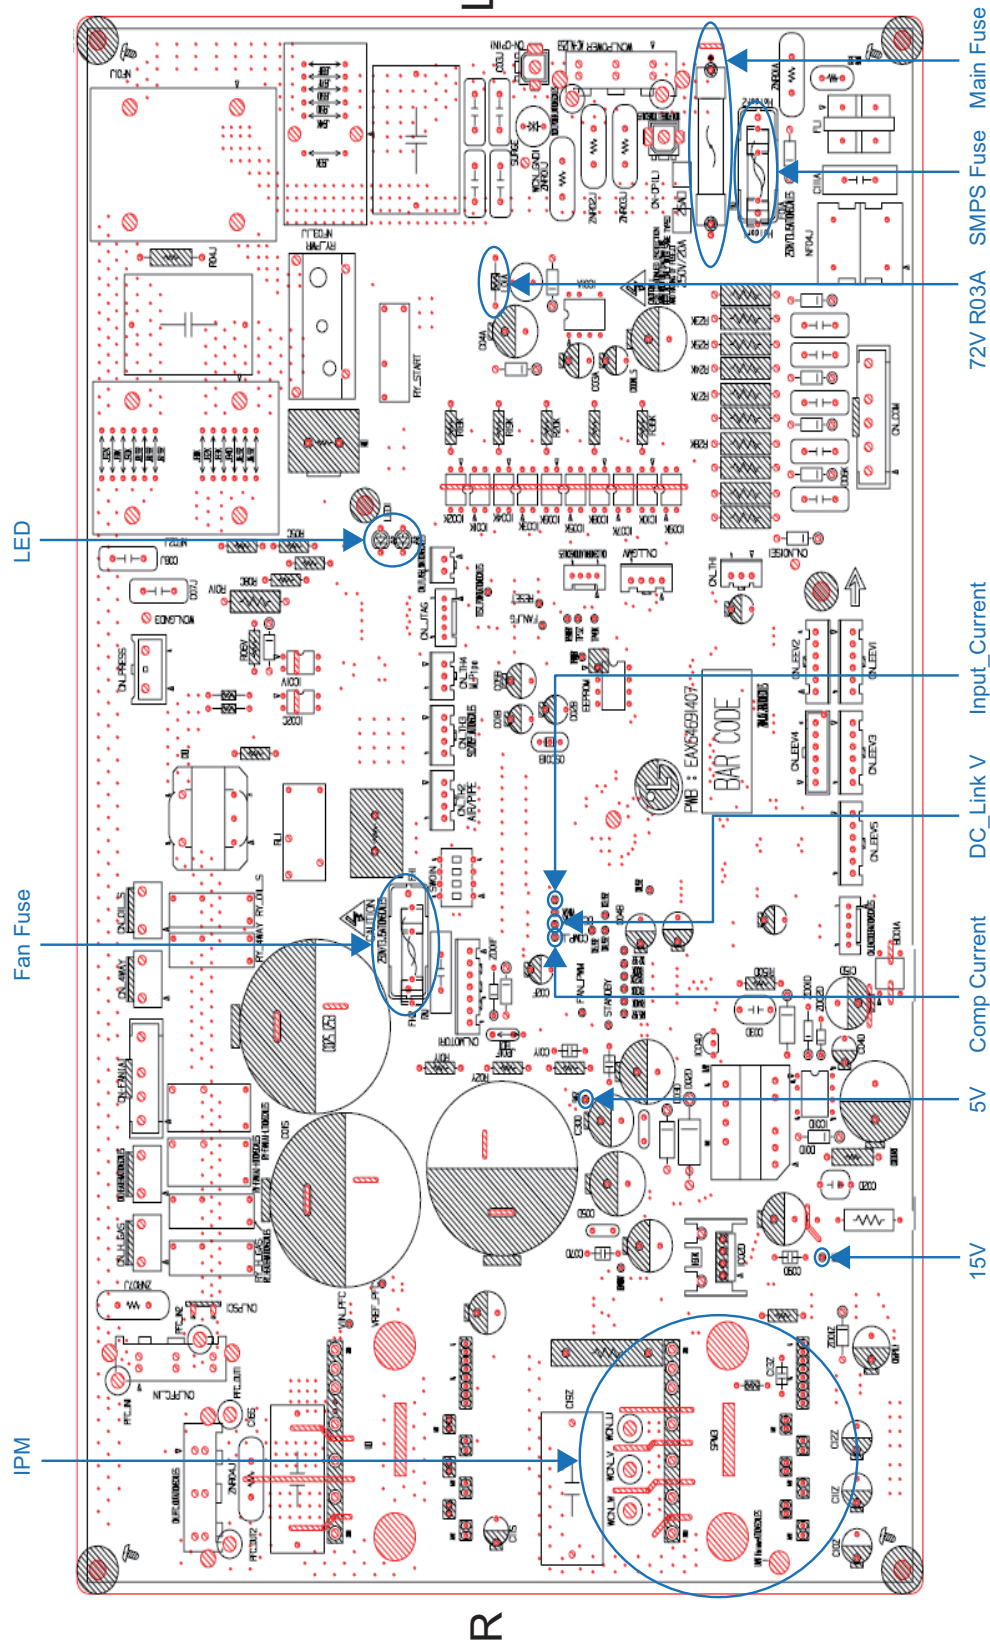

※ Measurement Point.
 → For detailed measuring point, refer to App. for each items.

C1-2. Key measurement points for each type(6)


< TYPE 6 >

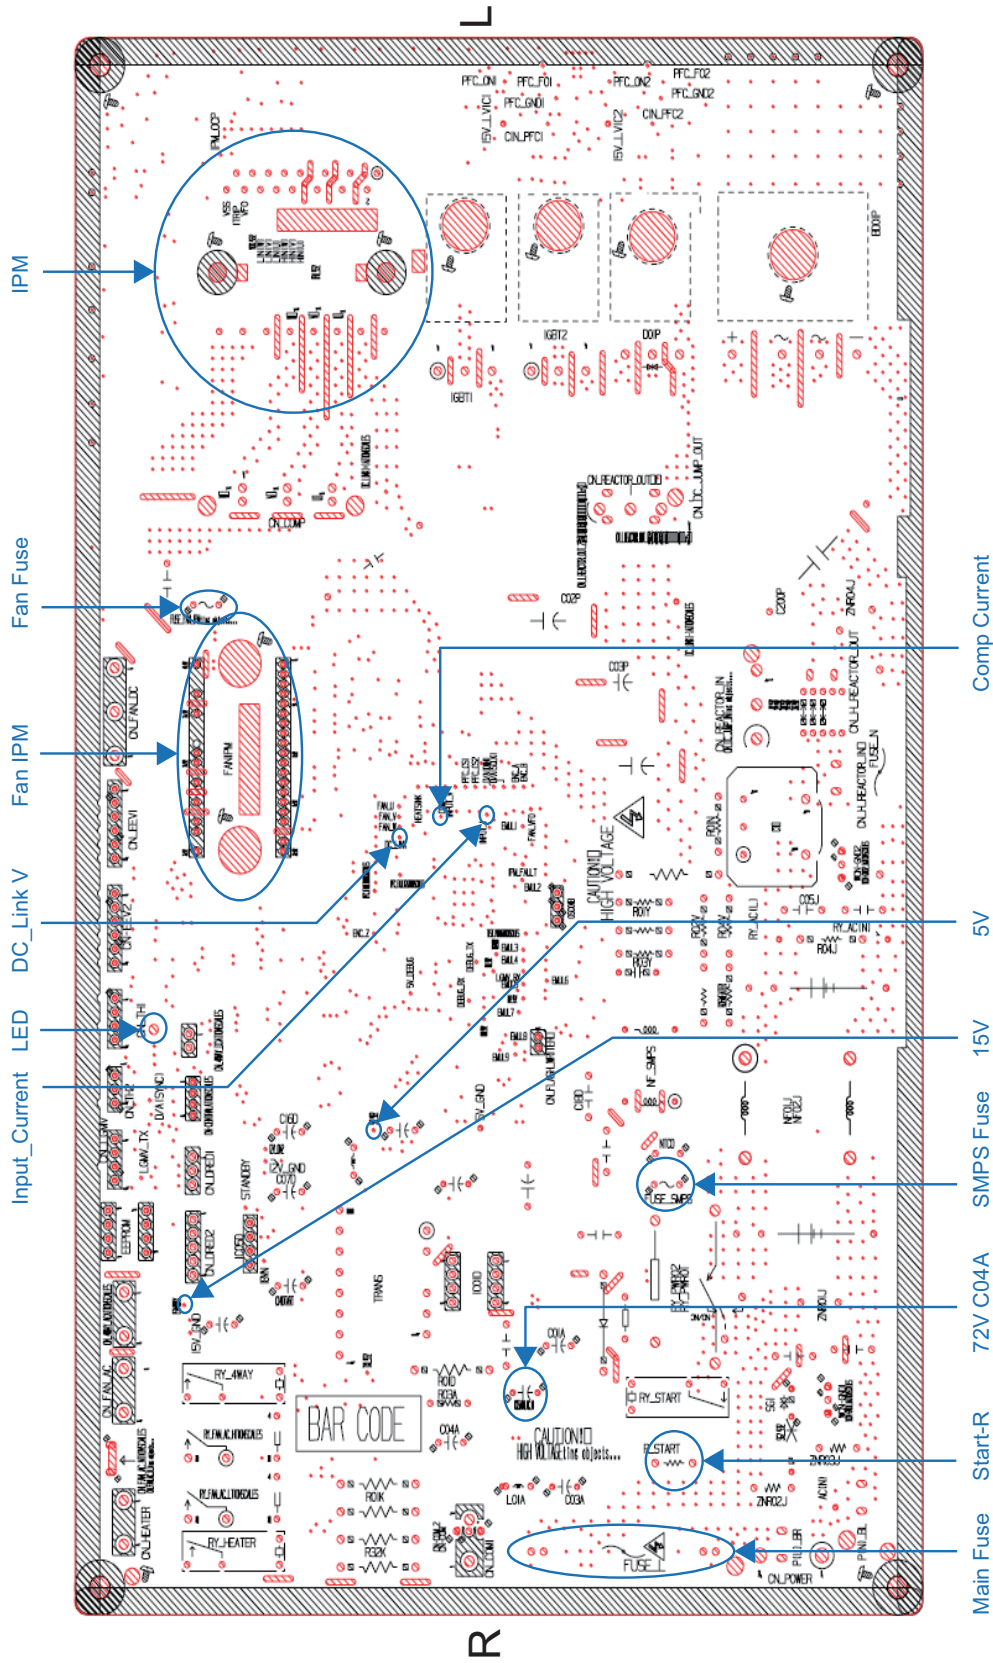

※ Measurement Point.
 → For detailed measuring point, refer to App. for each items.

C1-2. Key measurement points for each type(7)

< TYPE 7 >

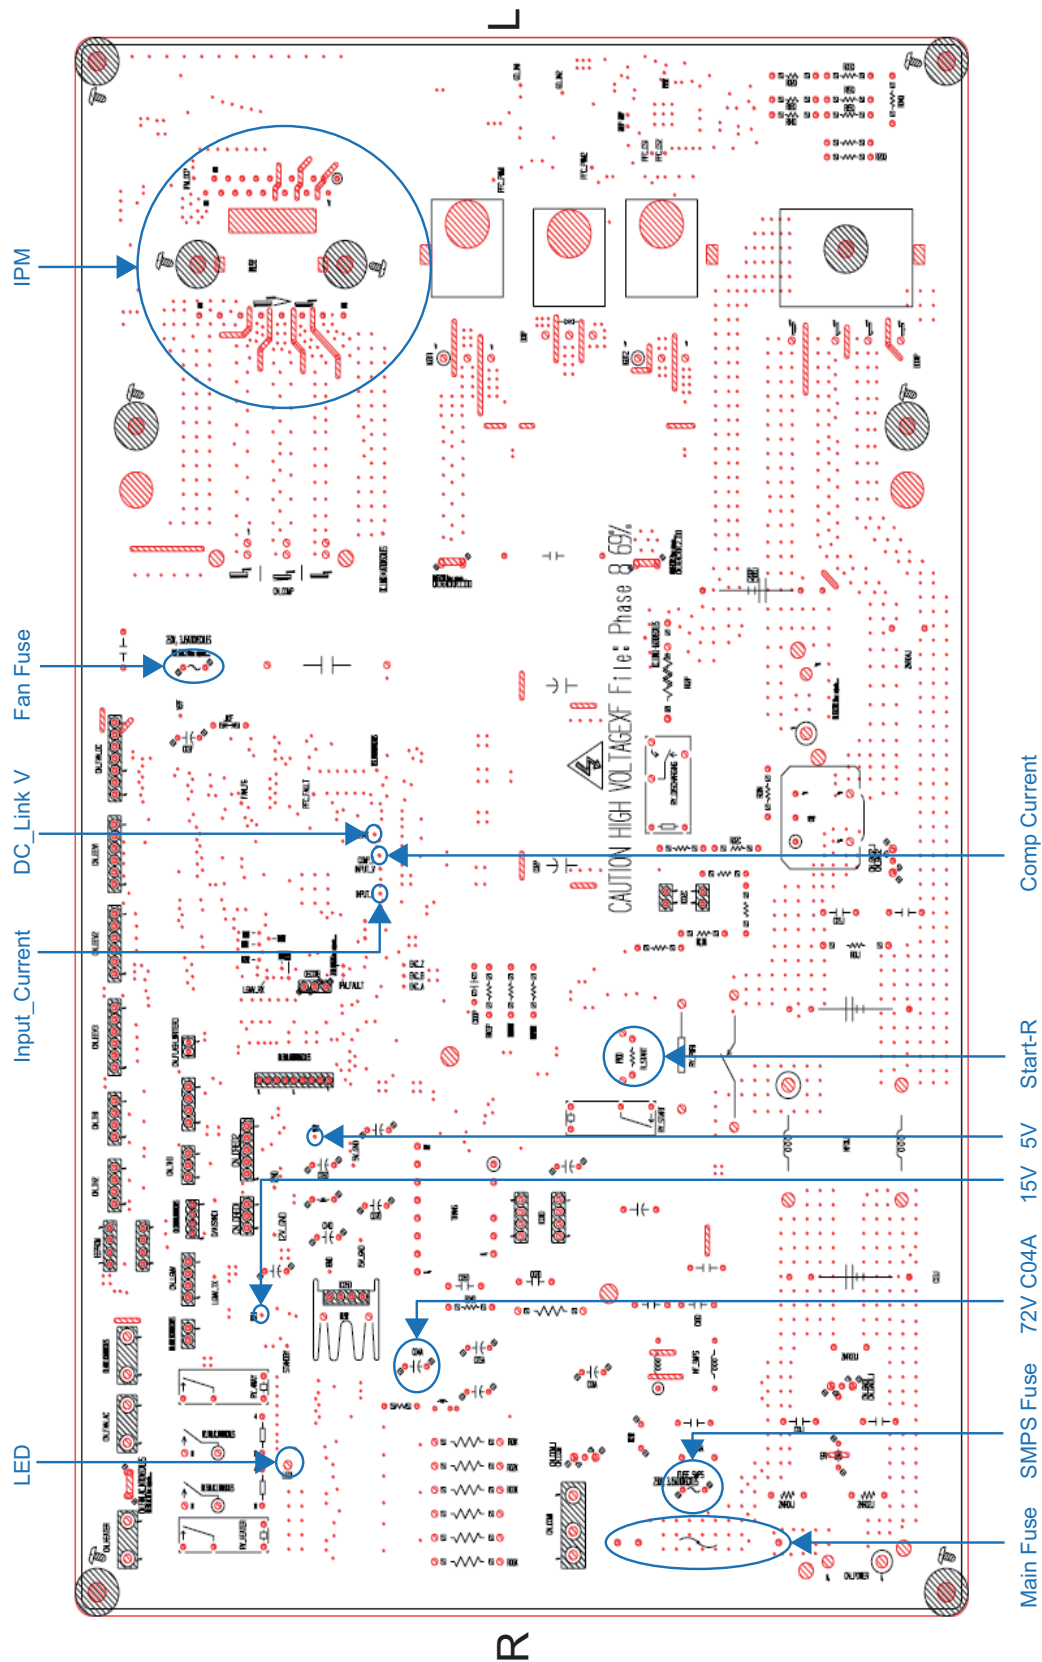


※ Measurement Point.

→ For detailed measuring point, refer to App. for each items.

C1-3. Main Fuse(1)

Outdoor Main Fuse – Type Common

<Top side>

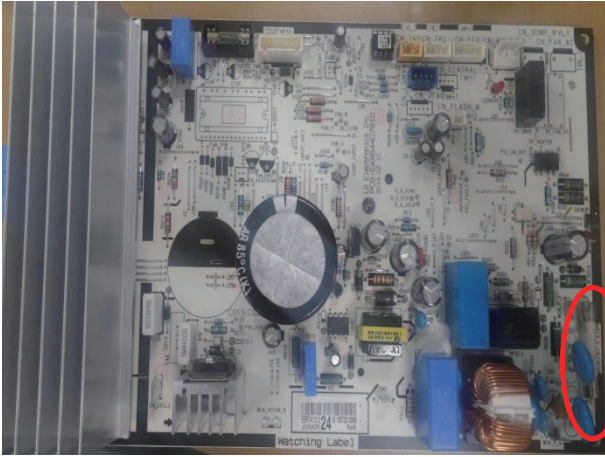


LED Off, CH05 occurs when main fuse is open
 → Replace PCBA




If there is no sound when measuring the ends of the fuse with the sound mode of the multi meter, judge it as 'Fuse burn-out open', if sound is heard, judge it as 'Normal short'

<Bottom Side>

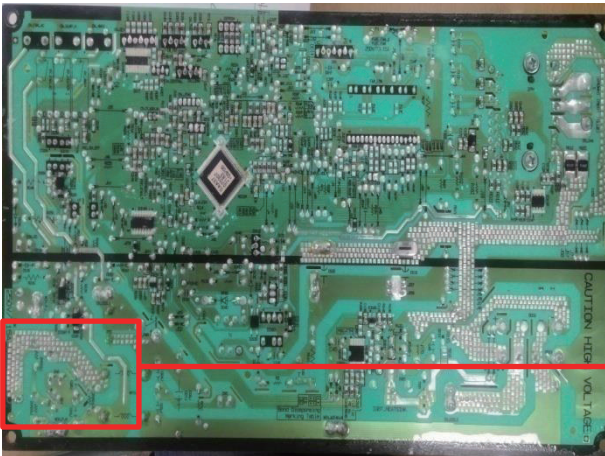

Enlargement of the actual product


<Type5 Top Side>

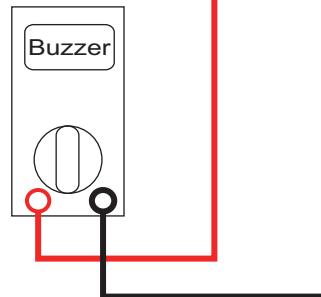

- ※ When measuring the bottom side, do it after scraping the coating gently.
- ※ For Type5, measure it at the Top side.

C1-3. Main Fuse(2)



Indoor Main Fuse

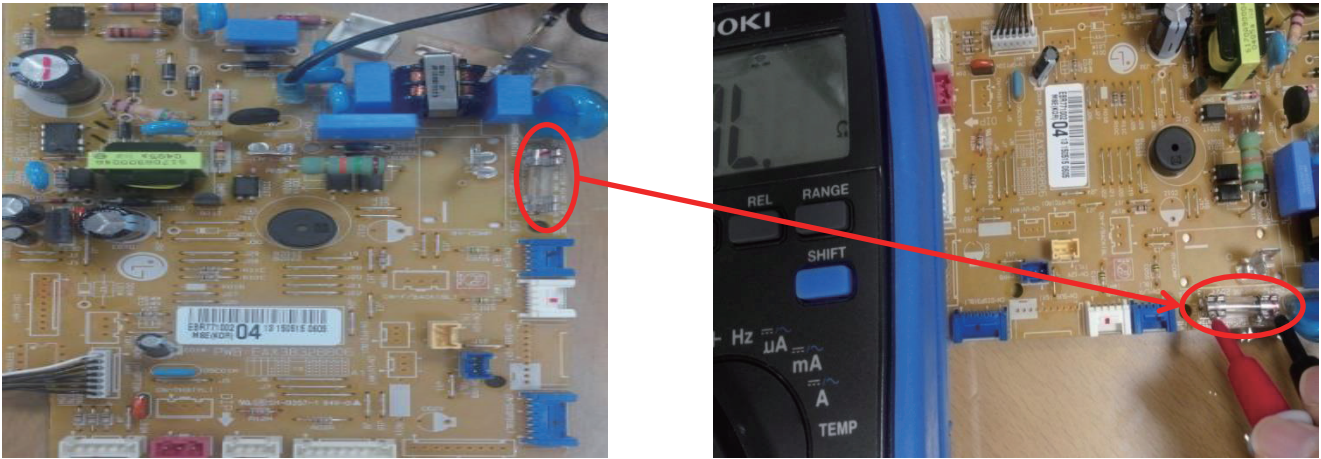

Indoor unit is not operated when main fuse is open (Display Off, No operation buzzer sound)
In case CH05, CH53 occurs with outdoor PCBA LED → Replace indoor PCBA.

C1-4. BLDC Fan Motor Fuse

BLDC Fan Motor Fuse – Type Common ※ When measuring the bottom side, do it after scraping the coating gently.

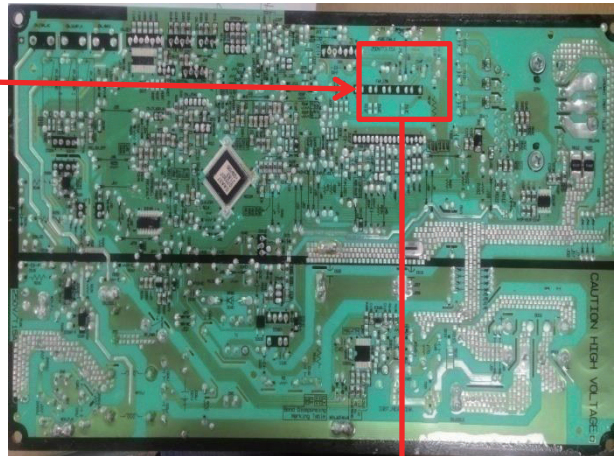
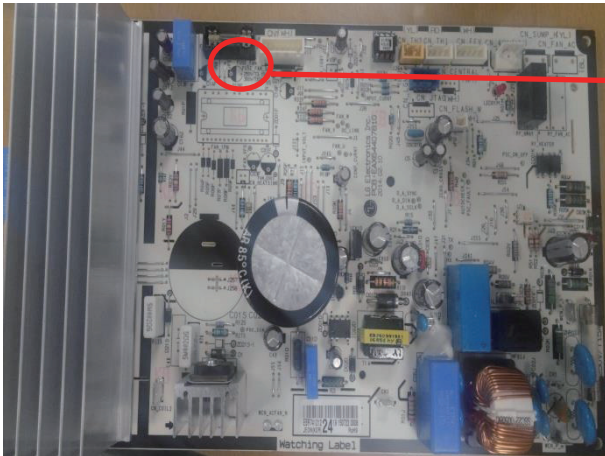


If there is no sound when measuring the ends of the fuse with the sound mode of the multi meter, judge it as 'Fuse burn-out open', if sound is heard, judge it as 'Normal short'

Enlargement of the actual product

When Fan Fuse Open occurs, it is estimated that the Number 1 & 4 pin Short burn-out may occur, then CH67 occurs.

- Inspect the BLDC Motor → Replace the motor
- If Motor is normal, replace the Fuse and check whether there happens same phenomenon.

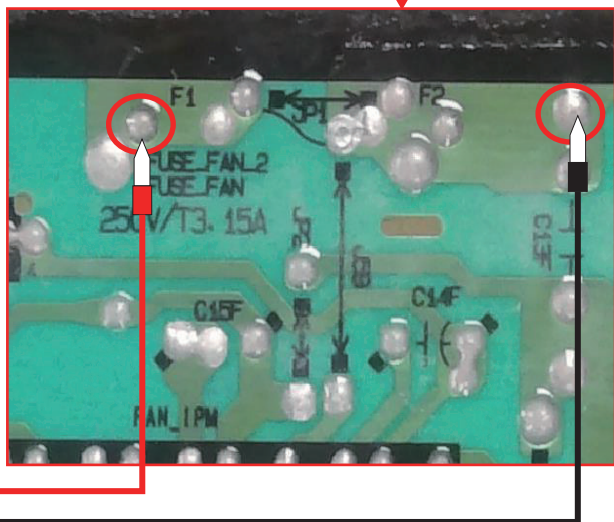


<Type5 Top side>

<Type6, Type7 Top side>



※ For Type5, measure it at the Top side.


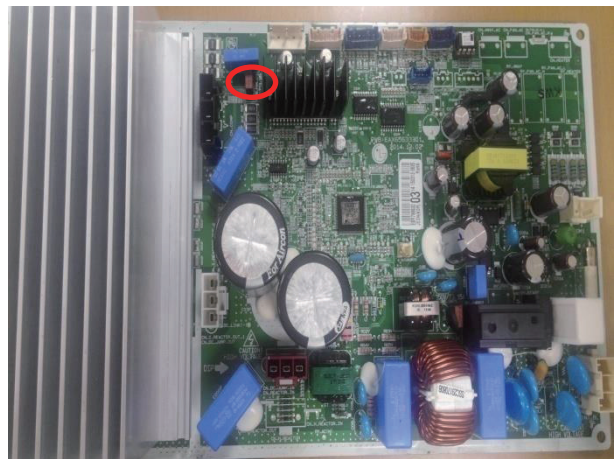


※ For Type6 and Type7, Fuse is Box Type.

C1-5. SMPS Fuse

SMPS Fuse – Type3, Type4, Type5, Type6, Type7

※ When measuring the bottom side, do it after scraping the coating gently.

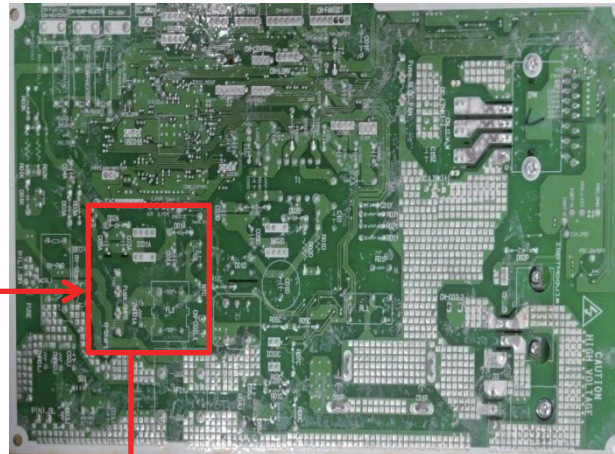
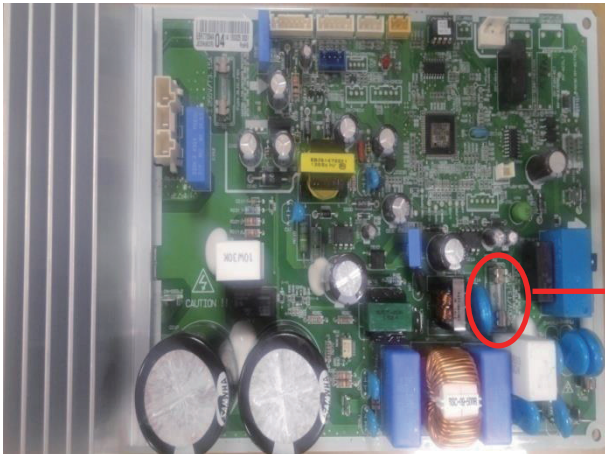


Enlargement of the actual product


If there is no sound when measuring the ends of the fuse with the sound mode of the multi meter, judge it as 'Fuse burn-out open', if sound is heard, judge it as 'Normal short'

LED Off, CH05 occurs when SMPS fuse is open
 → Check the exterior burn-out status of PCBA and if burnt out, replace PCBA.

※ If you want to replace the fuse only, check the short status of the ends of C01A and C01D. Replace Fuse only when it is open. If it is short at the corresponding side, fuse burn-out again.

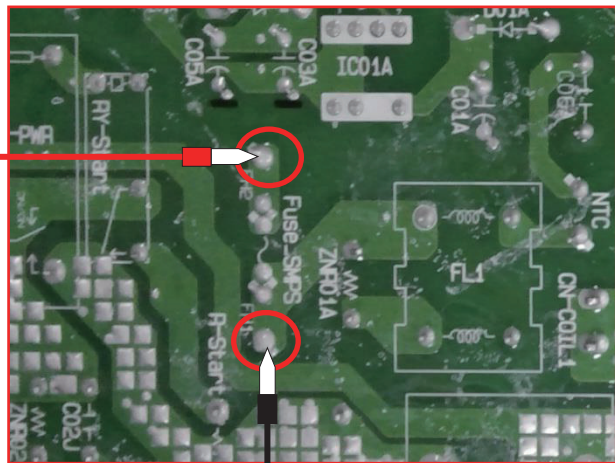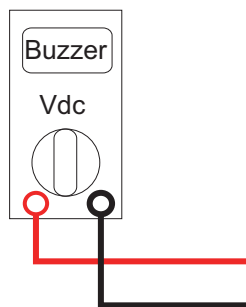


<Type5 Top side>

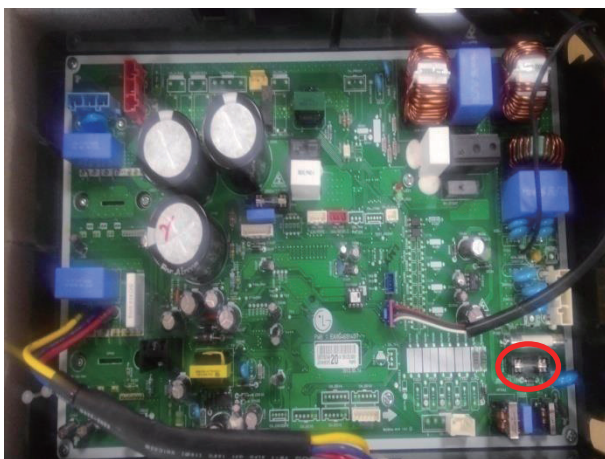

※ For Type5, measure it at the Top side.

<Type6, Type7 Top side>

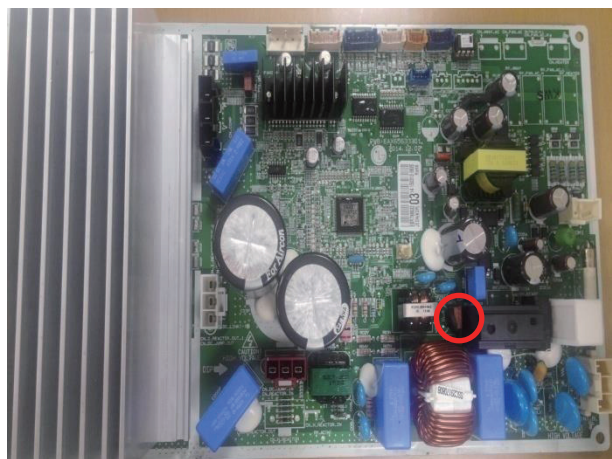

※ For Type6 and Type7, Fuse is Box Type.

C1-6. SMPS circuit check(1)



- ※ Be sure to pay attention as it is high pressure.
- Be sure to pay attention as it is high pressure.
- Wear insulated gloves and be careful skin does not contact PCBA
- ※ When measuring the bottom side, do it after scraping the coating gently.

SMPS output circuit measurement method & Point – Type1



If PCBA is normal, be sure to perform voltage output at SMPS when applying power.

Remove all the load connector and confirm output of SMPS 5V & 15V under the state of applying power only to PCBA.


5V : 4.75 ~ 5.25 V

15V : 14.25 ~ 15.75 V

If above value does not come Out, replace PCBA.

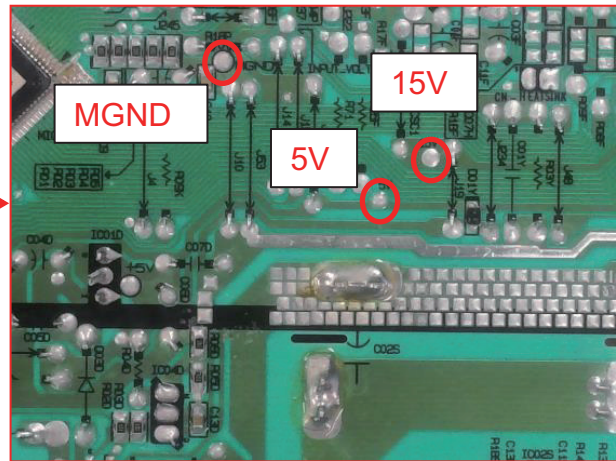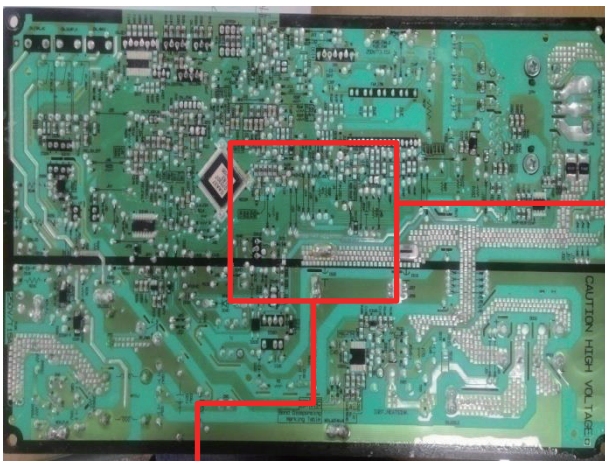

Drawing
Enlargement

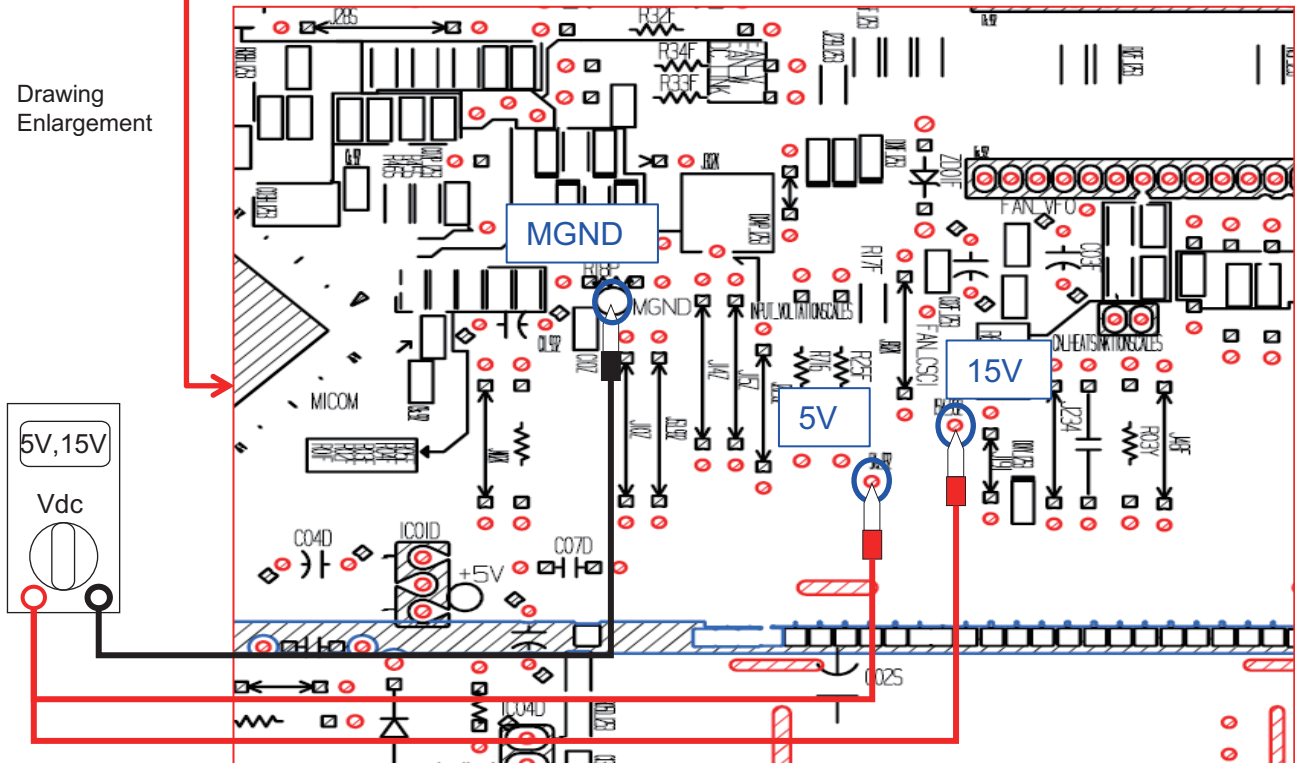

C1-6. SMPS circuit check(2)



- ※ Be sure to pay attention as it is high pressure.
- Be sure to pay attention as it is high pressure.
- Wear insulated gloves and be careful skin does not contact PCBA
- ※ When measuring the bottom side, do it after scraping the coating gently.

SMPS output circuit measurement method & Point – Type2


If PCBA is normal, be sure to perform voltage output at SMPS when applying power.

Remove all the load connector and confirm output of SMPS 5V & 15V under the state of applying power only to PCBA.

5V : 4.75 ~ 5.25 V

15V : 14.25 ~ 15.75 V

If above value does not come Out, replace PCBA.

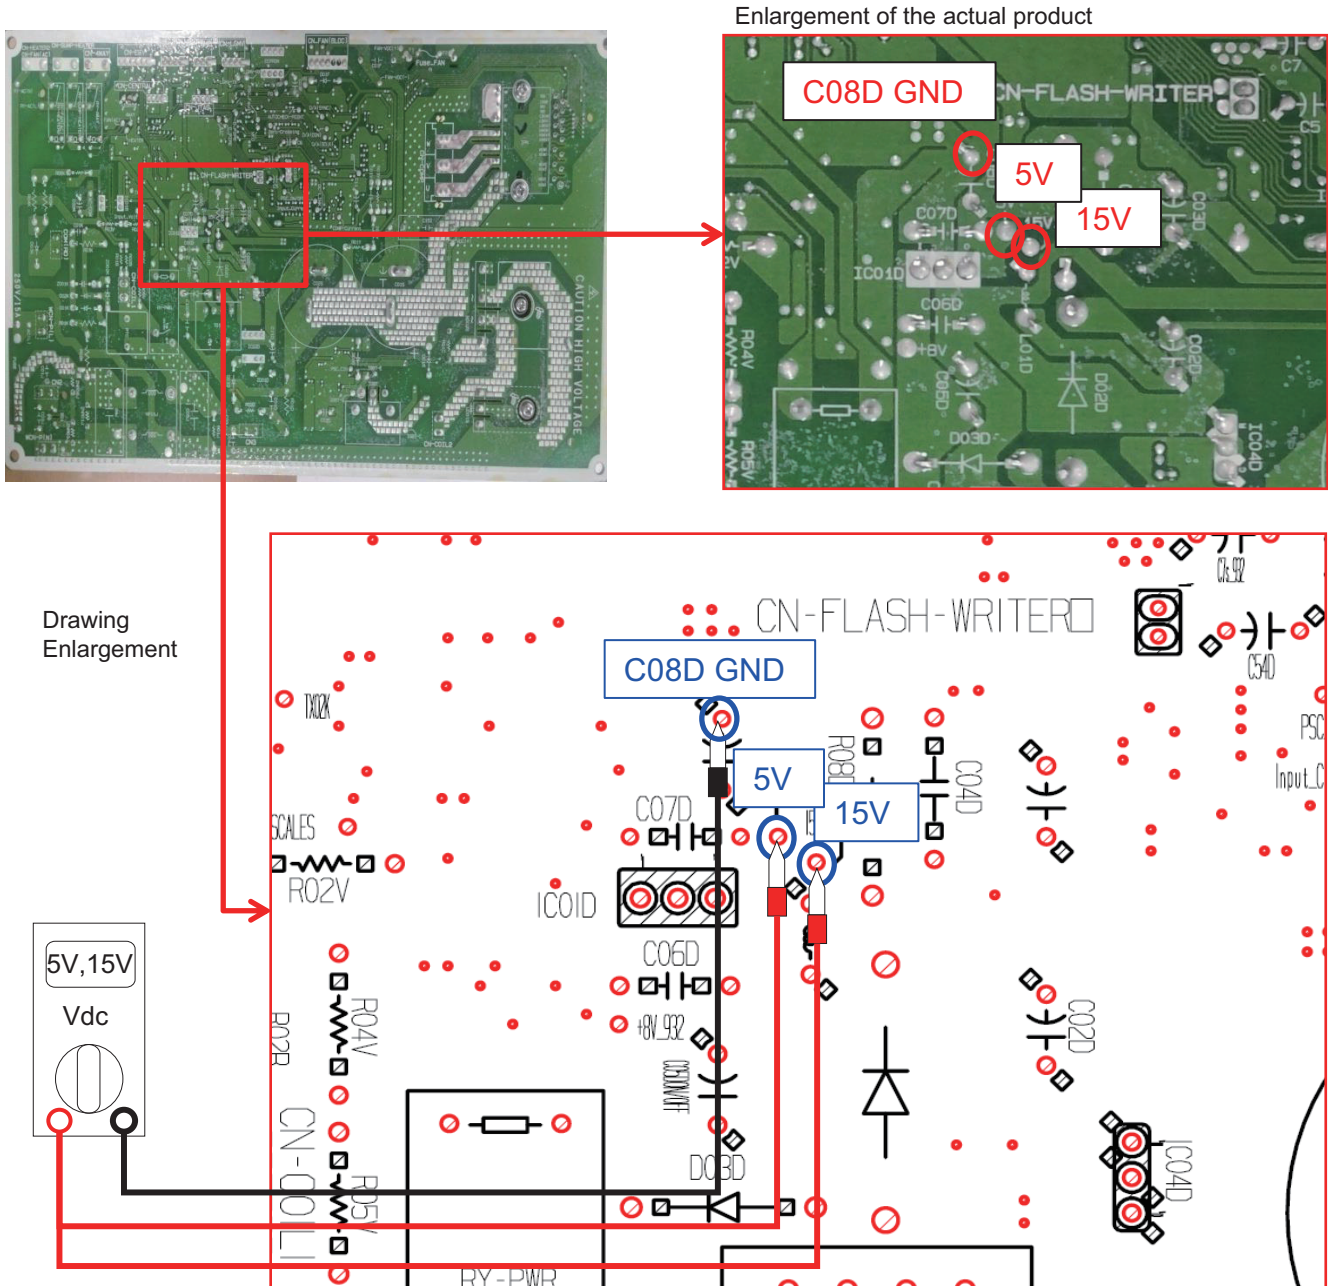

C1-6. SMPS Circuit check(3)



- ※ Be sure to pay attention as it is high pressure.
- Be sure to pay attention as it is high pressure.
- Wear insulated gloves and be careful skin does not contact PCBA
- ※ When measuring the bottom side, do it after scraping the coating gently.

SMPS output circuit measurement method & Point – Type3


If PCBA is normal, be sure to perform voltage output at SMPS when applying power.

Remove all the load connector and confirm output of SMPS 5V & 15V under the state of applying power only to PCBA.


5V : 4.75 ~ 5.25 V

15V : 14.25 ~ 15.75 V

If above value does not come Out, replace PCBA.

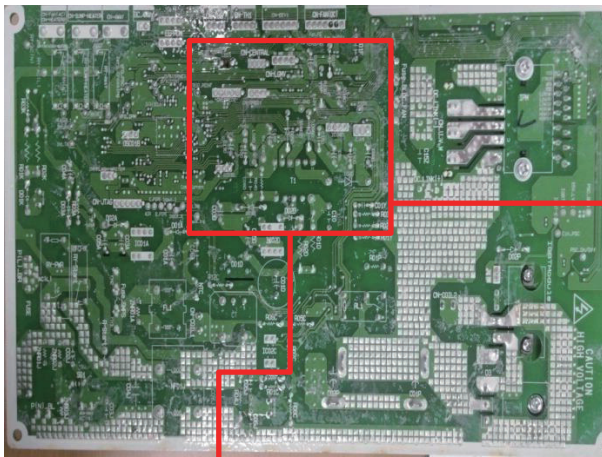

Enlargement of the actual product

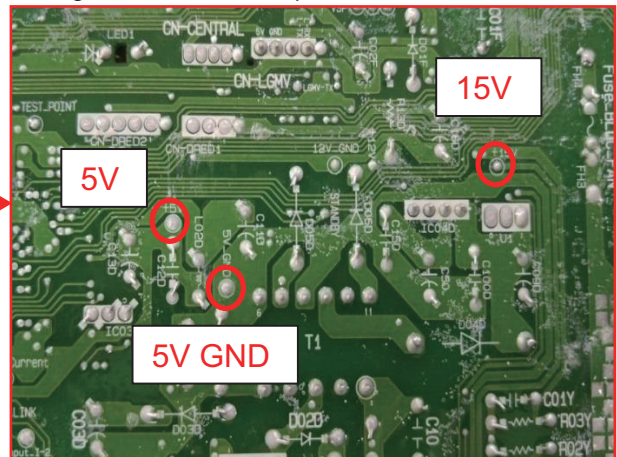

Drawing Enlargement



C1-6. SMPS Circuit check (4)



- ※ Be sure to pay attention as it is high pressure.
- Be sure to pay attention as it is high pressure.
- Wear insulated gloves and be careful skin does not contact PCBA
- ※ When measuring the bottom side, do it after scraping the coating gently.

SMPS output circuit measurement method & Point – Type4

If PCBA is normal, be sure to perform voltage output at SMPS when applying power.


Remove all the load connector and confirm output of SMPS 5V & 15V under the state of applying power only to PCBA.

5V : 4.75 ~ 5.25 V


15V : 14.25 ~ 15.75 V

If above value does not come Out, replace PCBA.

Enlargement of the actual product

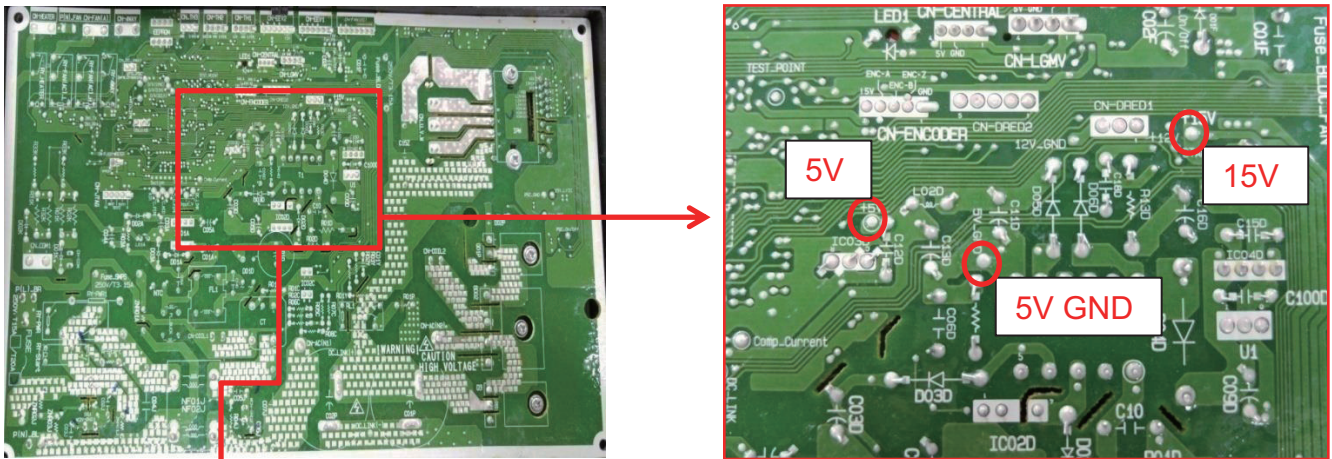

Drawing Enlargement

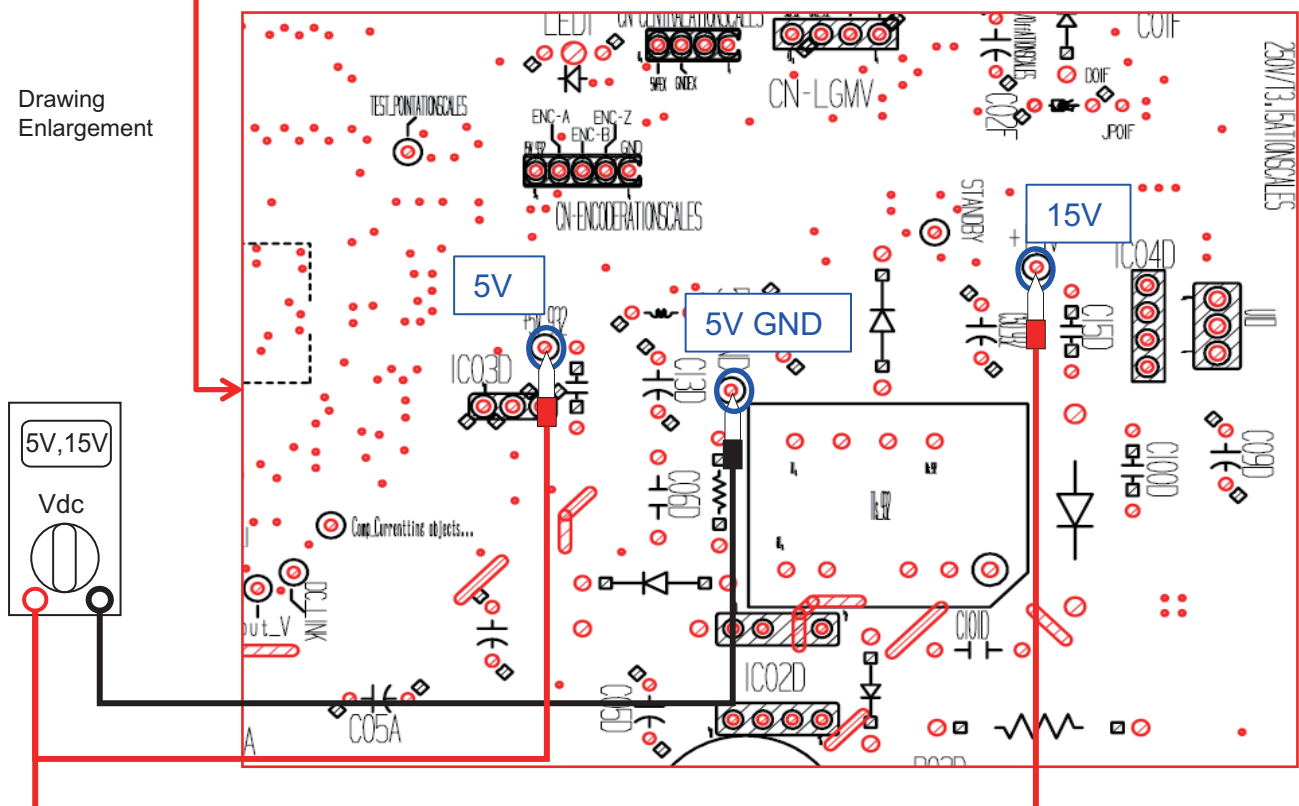

C1-6. SMPS Circuit check (5)



- ※ Be sure to pay attention as it is high pressure.
- Be sure to pay attention as it is high pressure.
- Wear insulated gloves and be careful skin does not contact PCBA
- ※ When measuring the bottom side, do it after scraping the coating gently.

SMPS output circuit measurement method & Point – Type5

If PCBA is normal, be sure to perform voltage output at SMPS when applying power.



Remove all the load connector and confirm output of SMPS 5V & 15V under the state of applying power only to PCBA.

5V : 4.75 ~ 5.25 V


15V : 14.25 ~ 15.75 V

If above value does not come Out, replace PCBA.

Enlargement of the actual product

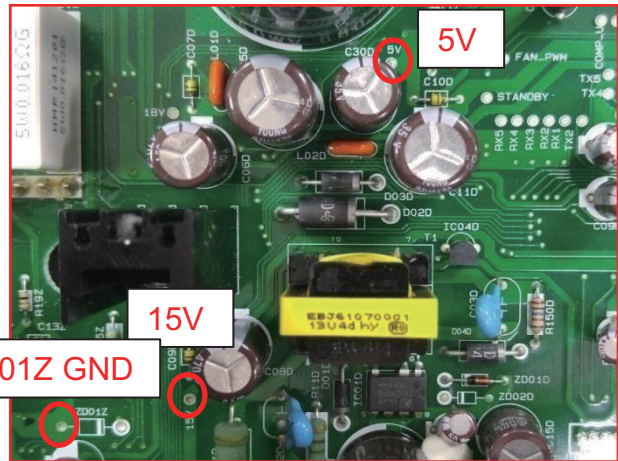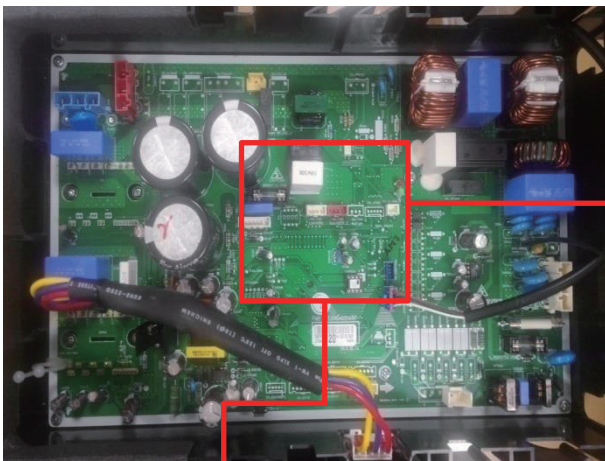

Drawing Enlargement

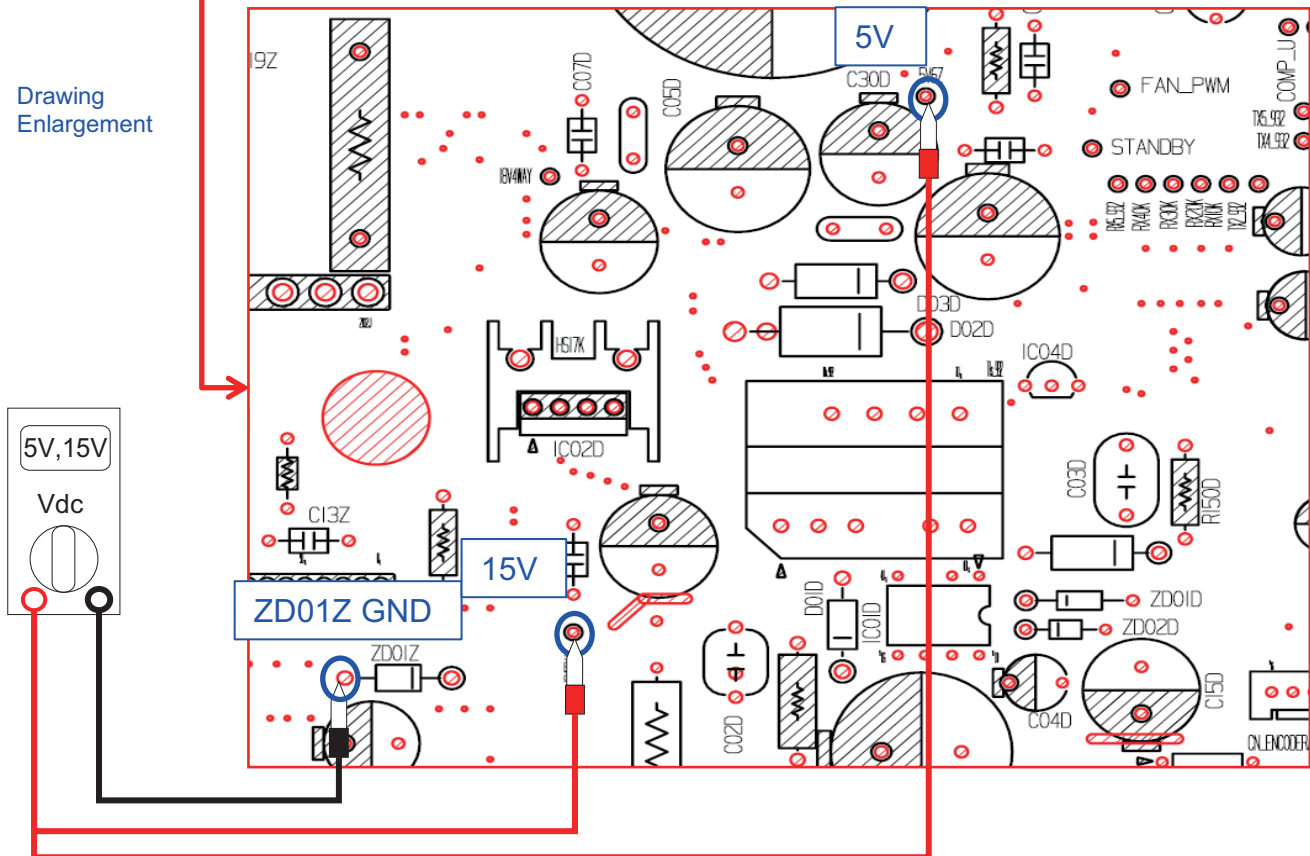

C1-6. SMPS Circuit check (6)



- ※ Be sure to pay attention as it is high pressure.
- Be sure to pay attention as it is high pressure.
- Wear insulated gloves and be careful skin does not contact PCBA
- ※ When measuring the bottom side, do it after scraping the coating gently.

SMPS output circuit measurement method & Point – Type6

If PCBA is normal, be sure to perform voltage output at SMPS when applying power.



Remove all the load connector and confirm output of SMPS 5V & 15V under the state of applying power only to PCBA.

5V : 4.75 ~ 5.25 V


15V : 14.25 ~ 15.75 V

If above value does not come Out, replace PCBA.

Enlargement of the actual product

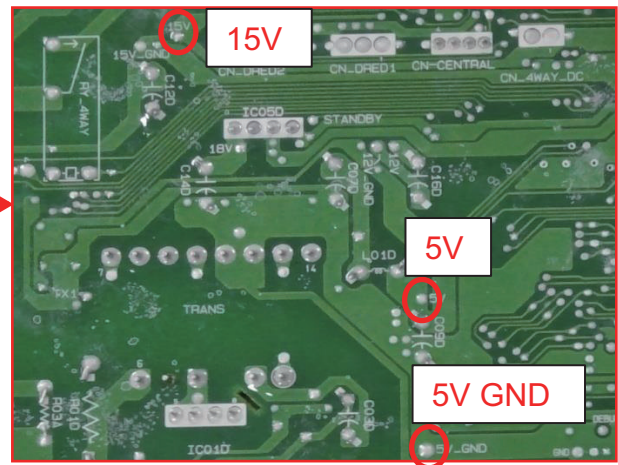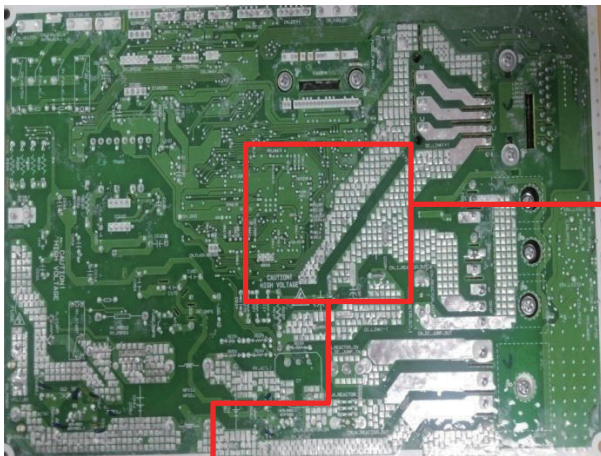

Drawing Enlargement

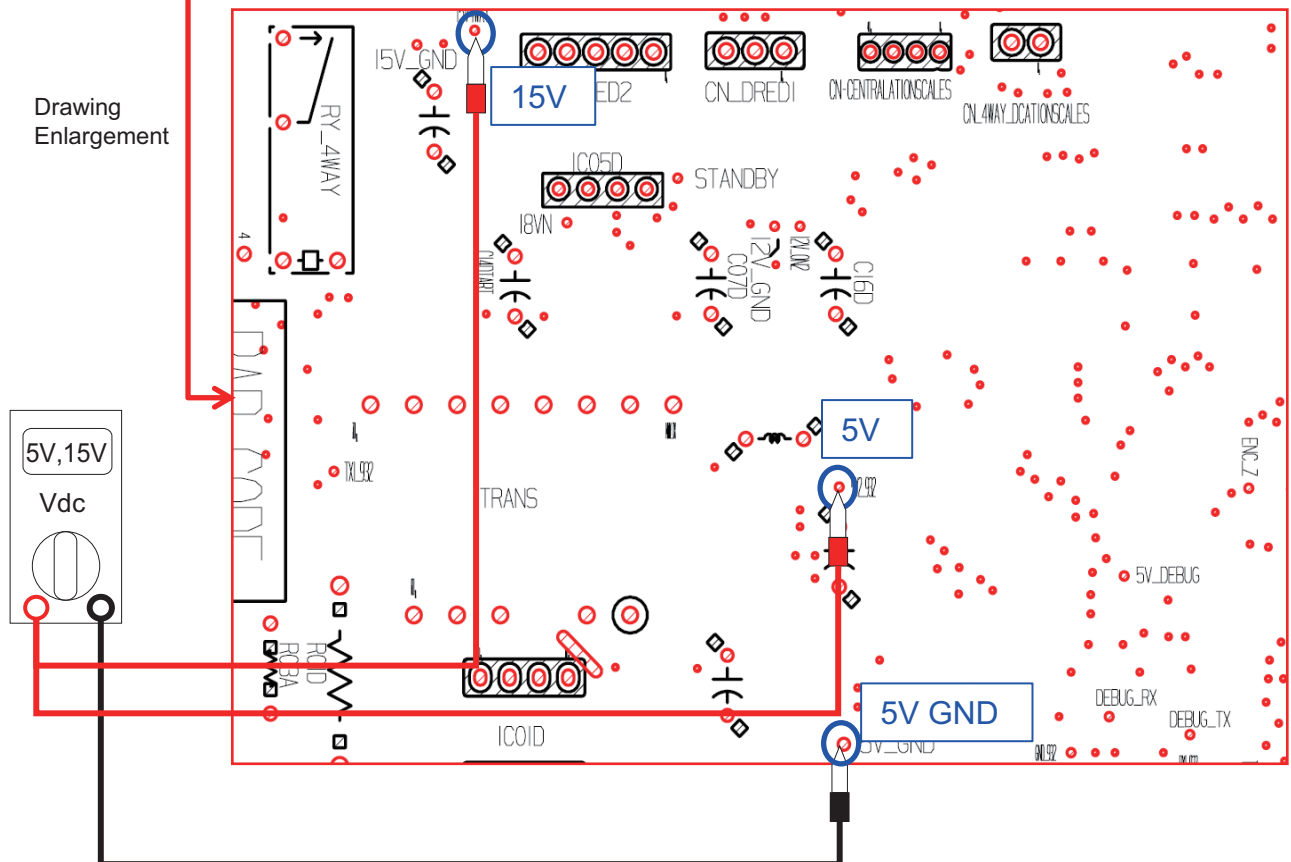

C1-6. SMPS Circuit check (7)



- ※ Be sure to pay attention as it is high pressure.
- Be sure to pay attention as it is high pressure.
- Wear insulated gloves and be careful skin does not contact PCBA
- ※ When measuring the bottom side, do it after scraping the coating gently.

SMPS output circuit measurement method & Point – Type7


If PCBA is normal, be sure to perform voltage output at SMPS when applying power.

Remove all the load connector and confirm output of SMPS 5V & 15V under the state of applying power only to PCBA.


5V : 4.75 ~ 5.25 V

15V : 14.25 ~ 15.75 V


If above value does not come Out, replace PCBA.

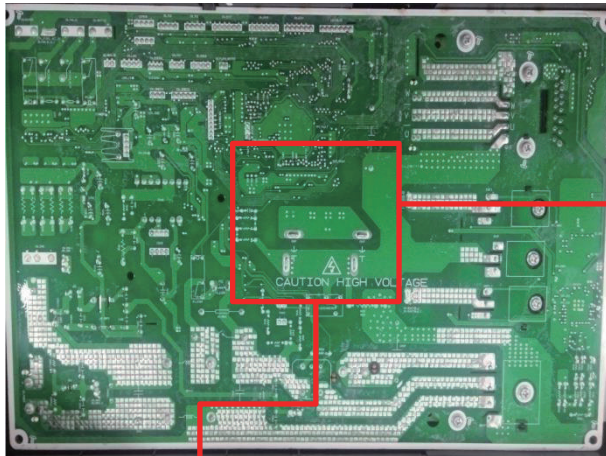

Enlargement of the actual product

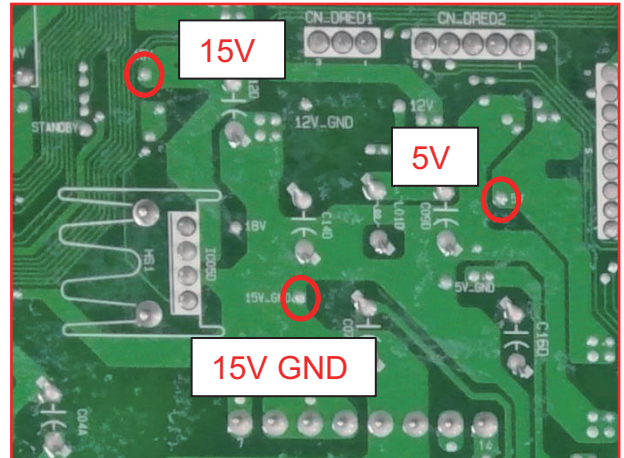

Drawing Enlargement

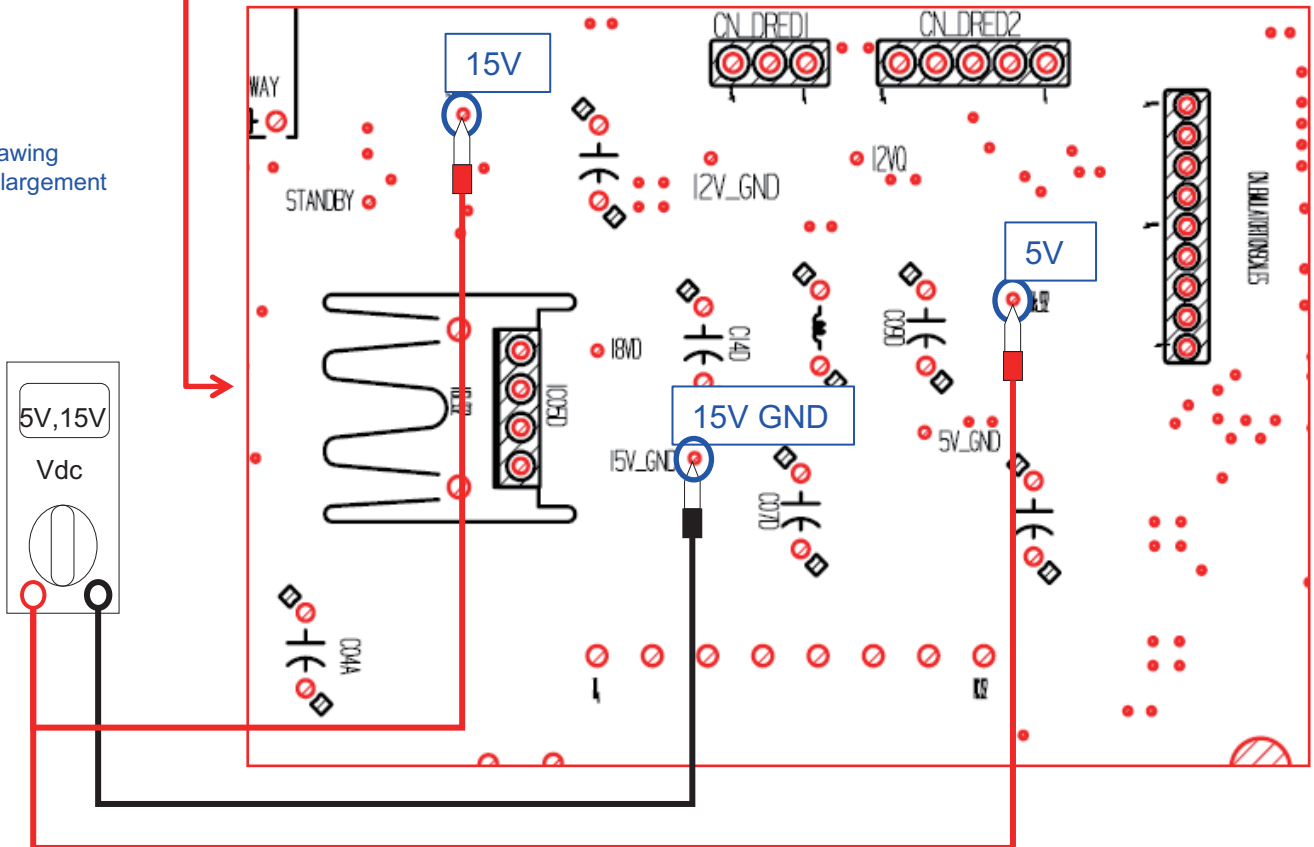

C1-7. Detecting part Circuit check (1)



- ※ Be sure to pay attention as it is high pressure.
- Be sure to pay attention as it is high pressure.
- Wear insulated gloves and be careful skin does not contact PCBA
- ※ When measuring the bottom side, do it after scraping the coating gently.

Detecting part circuit measurement method & Point – Type1

When error occurs, determine whether PCBA is normal by measuring point for confirmation.


After applying power, measure each point by multi meter Vdc.

If determined as abnormal, replace PCBA.

(1) Input Current : CH22 may occur if the input current sensing circuit is abnormal. [Normal : 0~5V]

(2) DC-Link : CH23 may occur if DC-Link voltage sensing circuit is abnormal. [Normal : 2.3~2.7V]

(3) Comp Current : CH21 & CH29 may occur if Comp. current sensing circuit is abnormal. [Normal : 2.3~2.7V]

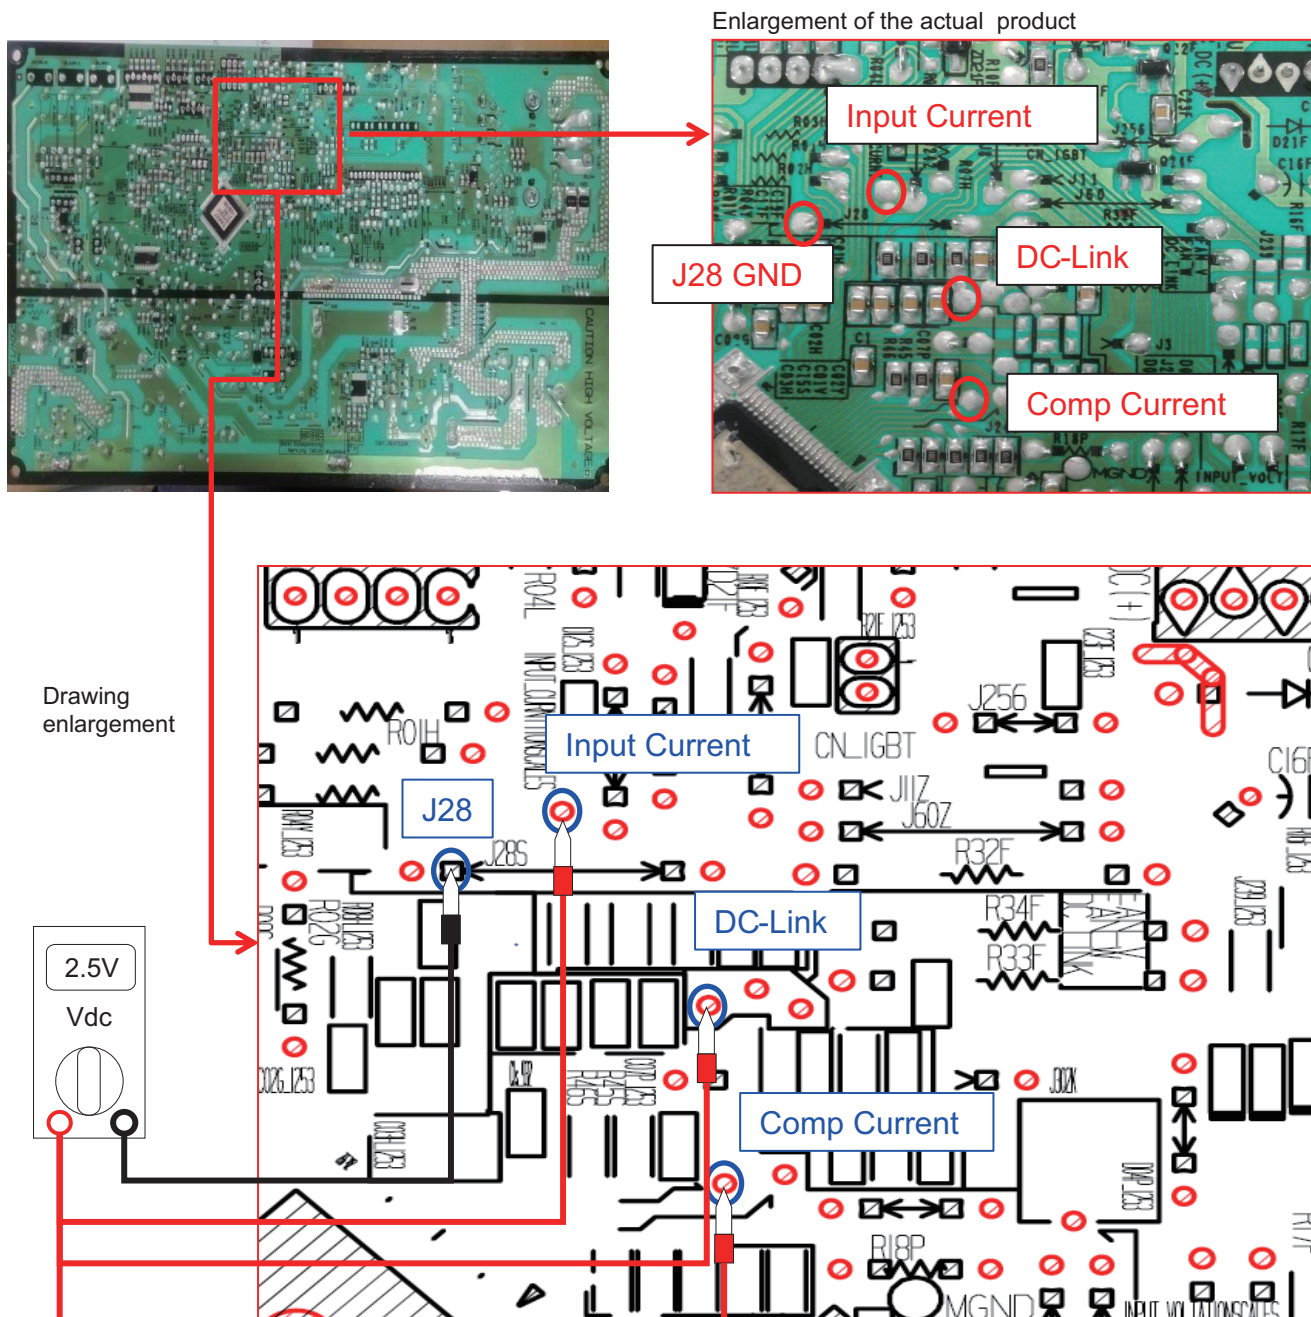

C1-7. Detecting part Circuit check (2)



- ※ Be sure to pay attention as it is high pressure.
- Be sure to pay attention as it is high pressure.
- Wear insulated gloves and be careful skin does not contact PCBA
- ※ When measuring the bottom side, do it after scraping the coating gently.


Detecting part circuit measurement method & Point – Type2

When error occurs, determine whether PCBA is normal by measuring point for confirmation.

After applying power, measure each point by multi meter Vdc.

Each point is normal between 2.3V ~ 2.7V → If determined as abnormal, replace PCBA.

- (1) Input Current : CH22 may occur if the input current sensing circuit is abnormal.
- (2) DC-Link : CH23 may occur if DC-Link voltage sensing circuit is abnormal.
- (3) Comp Current : CH21 & CH29 may occur if Comp. current sensing circuit is abnormal.

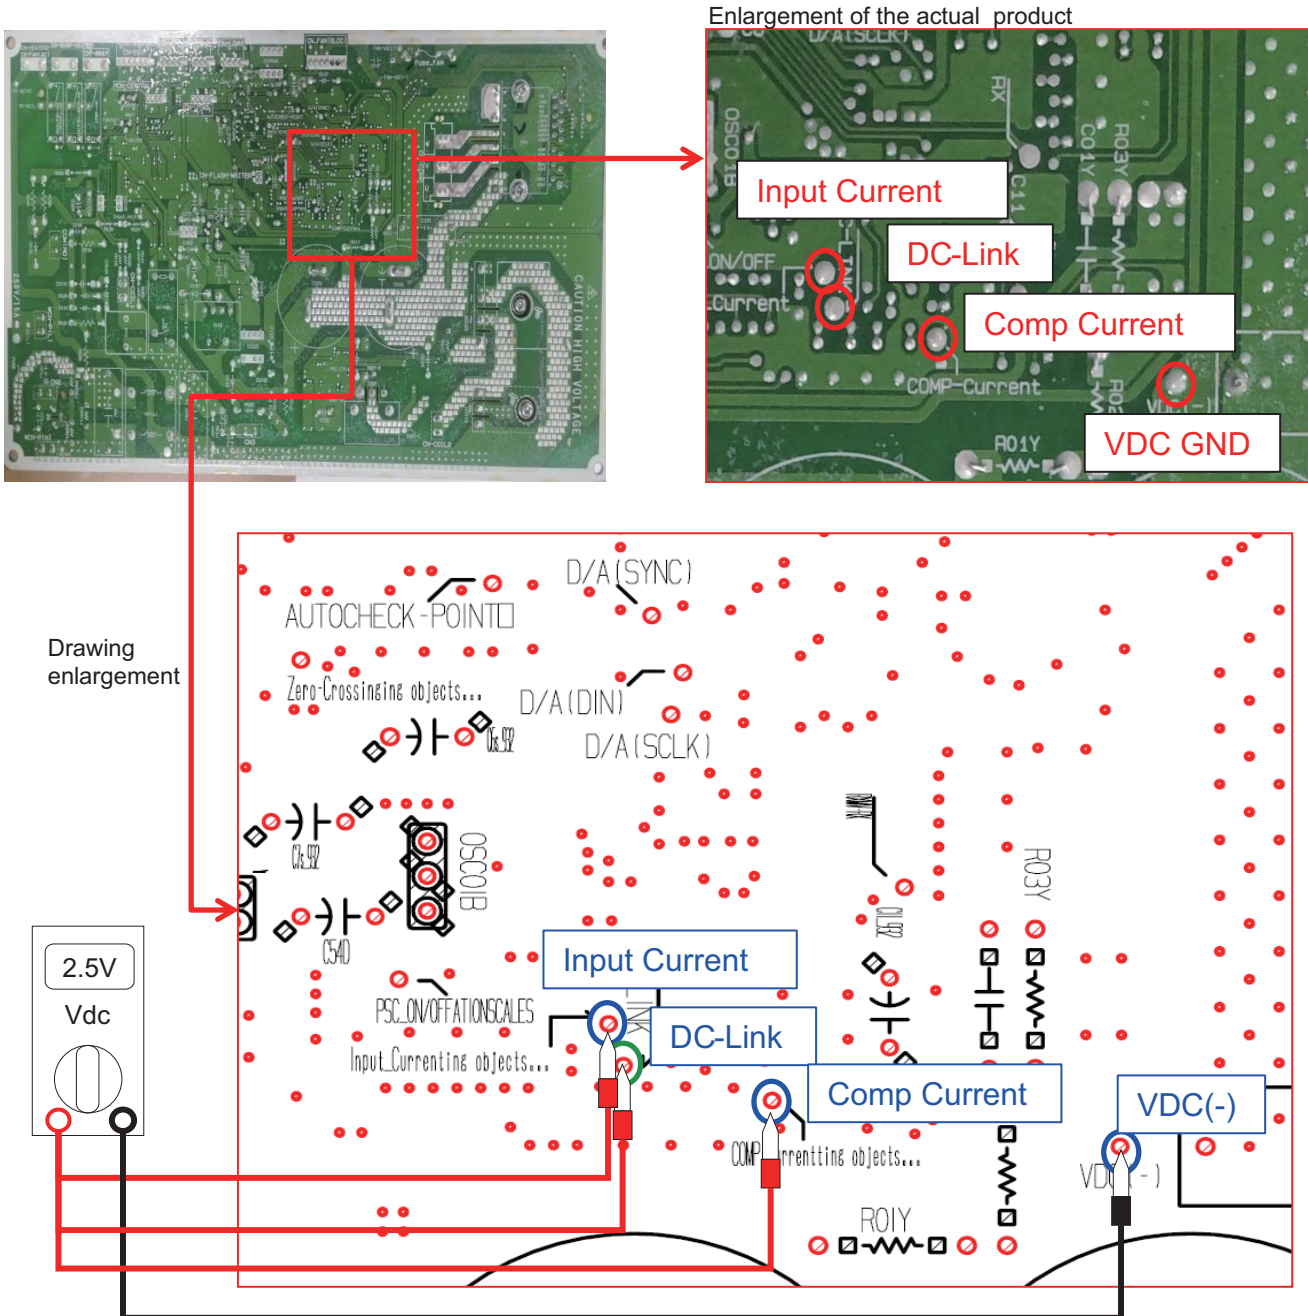

C1-7. Detecting part Circuit check (3)



- ※ Be sure to pay attention as it is high pressure.
- Be sure to pay attention as it is high pressure.
- Wear insulated gloves and be careful skin does not contact PCBA
- ※ When measuring the bottom side, do it after scraping the coating gently.


Detecting part circuit measurement method & Point – Type3

When error occurs, determine whether PCBA is normal by measuring point for confirmation.

After applying power, measure each point by multi meter Vdc.

Each point is normal between 2.3V ~ 2.7V → If determined as abnormal, replace PCBA.

- (1) Input Current : CH22 may occur if the input current sensing circuit is abnormal.
- (2) DC-Link : CH23 may occur if DC-Link voltage sensing circuit is abnormal.
- (3) Comp Current : CH21 & CH29 may occur if Comp. current sensing circuit is abnormal.

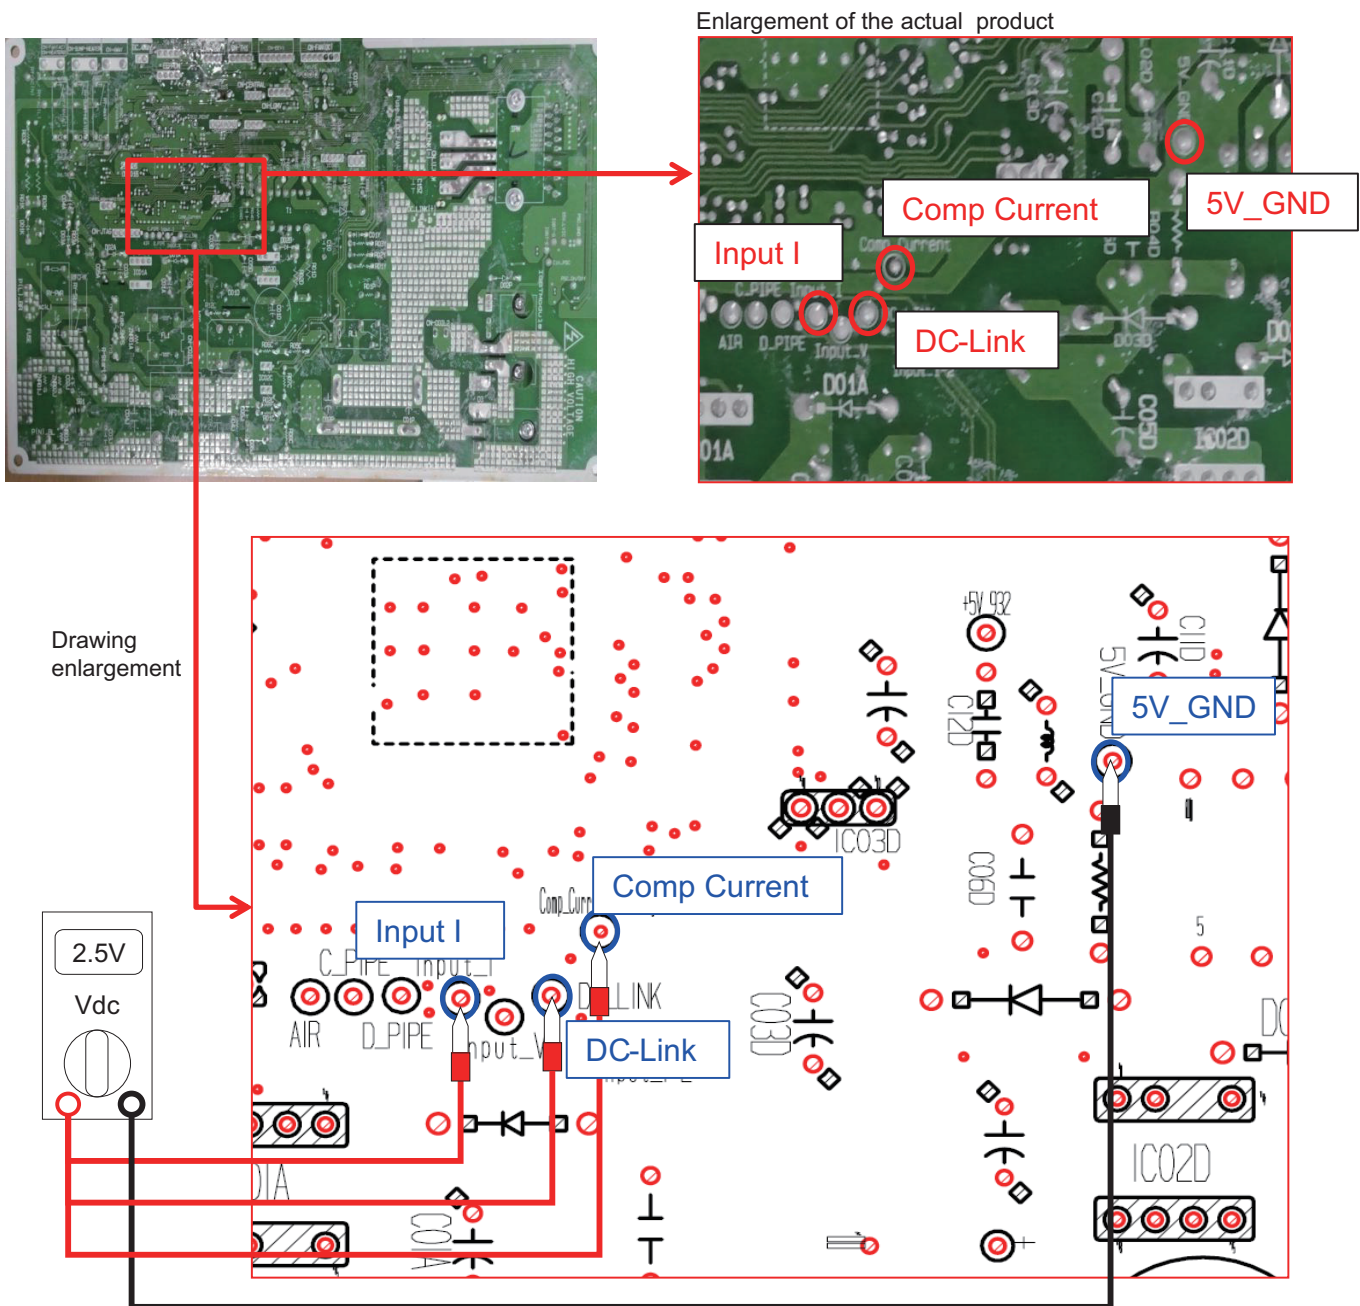

C1-7. Detecting part Circuit check (4)



- ※ Be sure to pay attention as it is high pressure.
- Be sure to pay attention as it is high pressure.
- Wear insulated gloves and be careful skin does not contact PCBA
- ※ When measuring the bottom side, do it after scraping the coating gently.



Detecting part circuit measurement method & Point – Type4

When error occurs, determine whether PCBA is normal by measuring point for confirmation.

After applying power, measure each point by multi meter Vdc.

Each point is normal between 2.3V ~ 2.7V → If determined as abnormal, replace PCBA.

- (1) Input Current : CH22 may occur if the input current sensing circuit is abnormal.
- (2) DC-Link : CH23 may occur if DC-Link voltage sensing circuit is abnormal.
- (3) Comp Current : CH21 & CH29 may occur if Comp. current sensing circuit is abnormal.

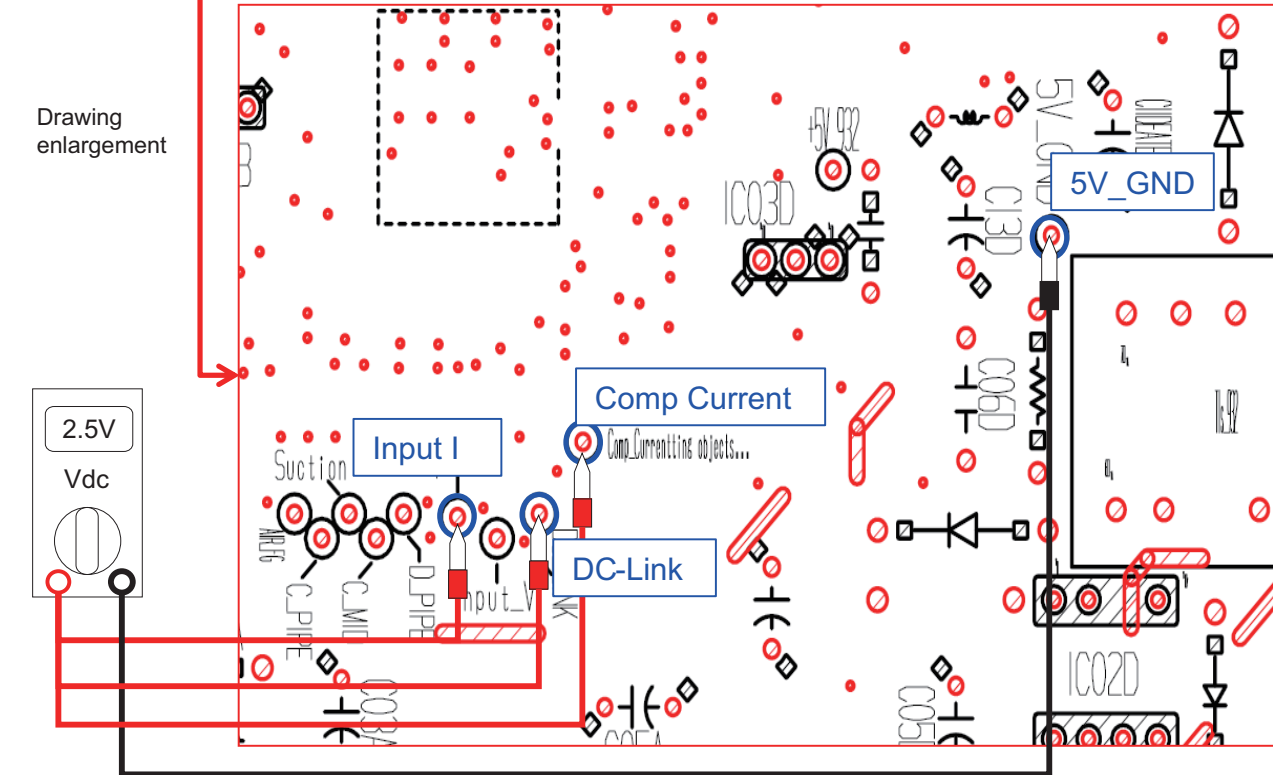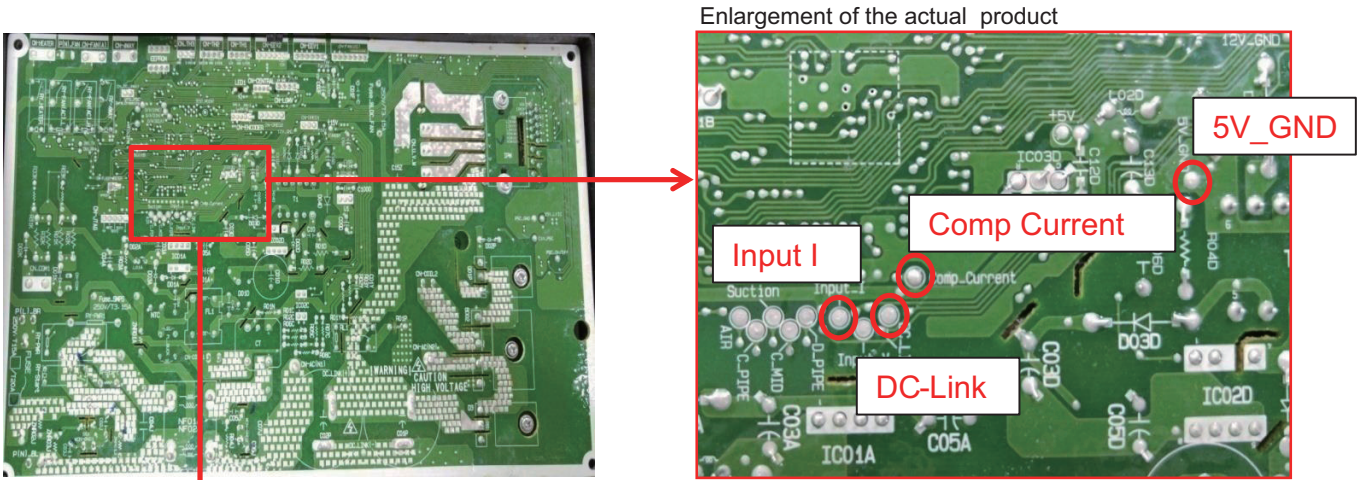

C1-7. Detecting part Circuit check (5)



- ※ Be sure to pay attention as it is high pressure.
- Be sure to pay attention as it is high pressure.
- Wear insulated gloves and be careful skin does not contact PCBA
- ※ When measuring the bottom side, do it after scraping the coating gently.


Detecting part circuit measurement method & Point – Type5

When error occurs, determine whether PCBA is normal by measuring point for confirmation.


After applying power, measure each point by multi meter Vdc.

Each point is normal between 2.3V ~ 2.7V → If determined as abnormal, replace PCBA.


- (1) Input Current : CH22 may occur if the input current sensing circuit is abnormal.
- (2) DC-Link : CH23 may occur if DC-Link voltage sensing circuit is abnormal.
- (3) Comp Current : CH21 & CH29 may occur if Comp. current sensing circuit is abnormal.

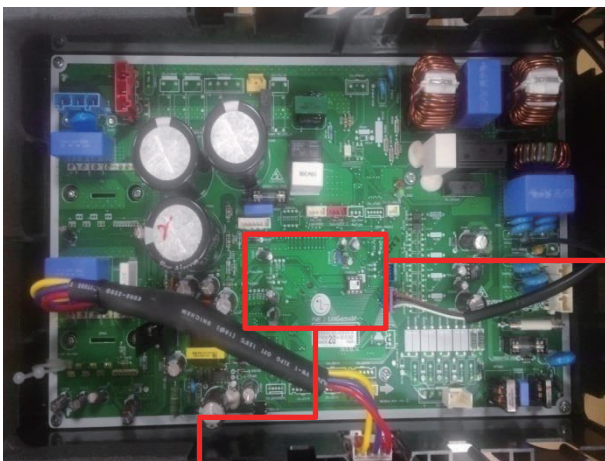

Enlargement of the actual product

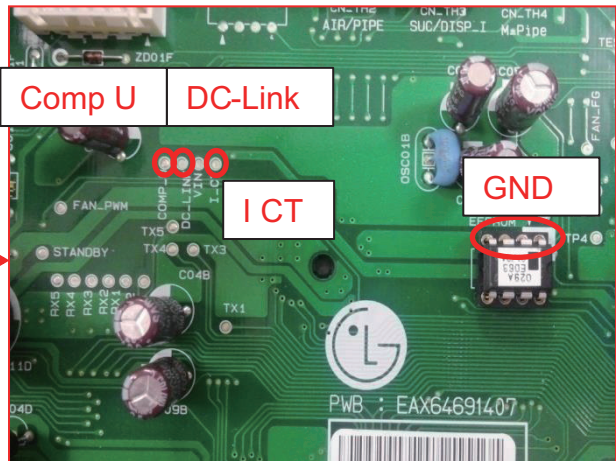

Drawing enlargement

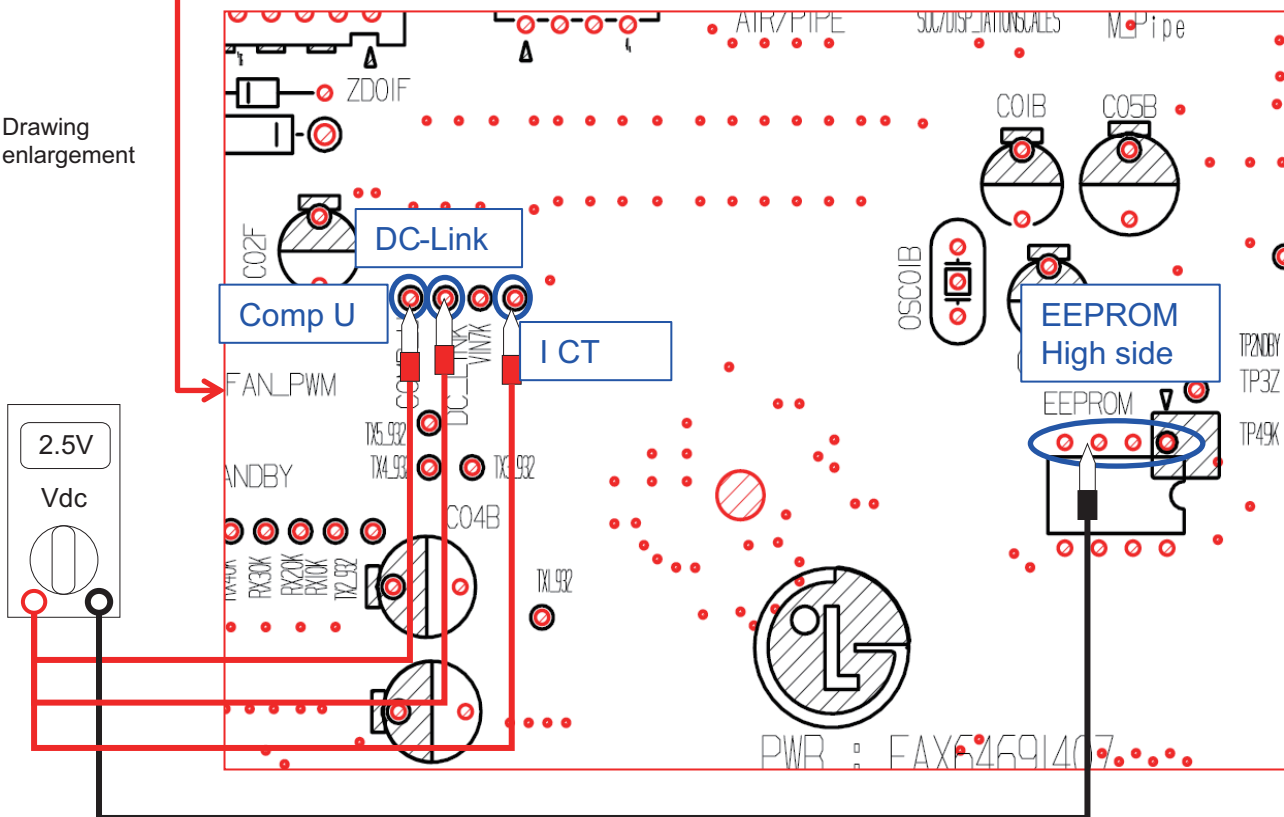


C1-7. Detecting part Circuit check (6)



- ※ Be sure to pay attention as it is high pressure.
- Be sure to pay attention as it is high pressure.
- Wear insulated gloves and be careful skin does not contact PCBA
- ※ When measuring the bottom side, do it after scraping the coating gently.

Detecting part circuit measurement method & Point – Type6

When error occurs, determine whether PCBA is normal by measuring point for confirmation.
 After applying power, measure each point by multi meter Vdc.
 Each point is normal between 2.3V ~ 2.7V → If determined as abnormal, replace PCBA.
 (1) Input Current : CH22 may occur if the input current sensing circuit is abnormal.
 (2) DC-Link : CH23 may occur if DC-Link voltage sensing circuit is abnormal.
 (3) Comp Current : CH21 & CH29 may occur if Comp. current sensing circuit is abnormal.

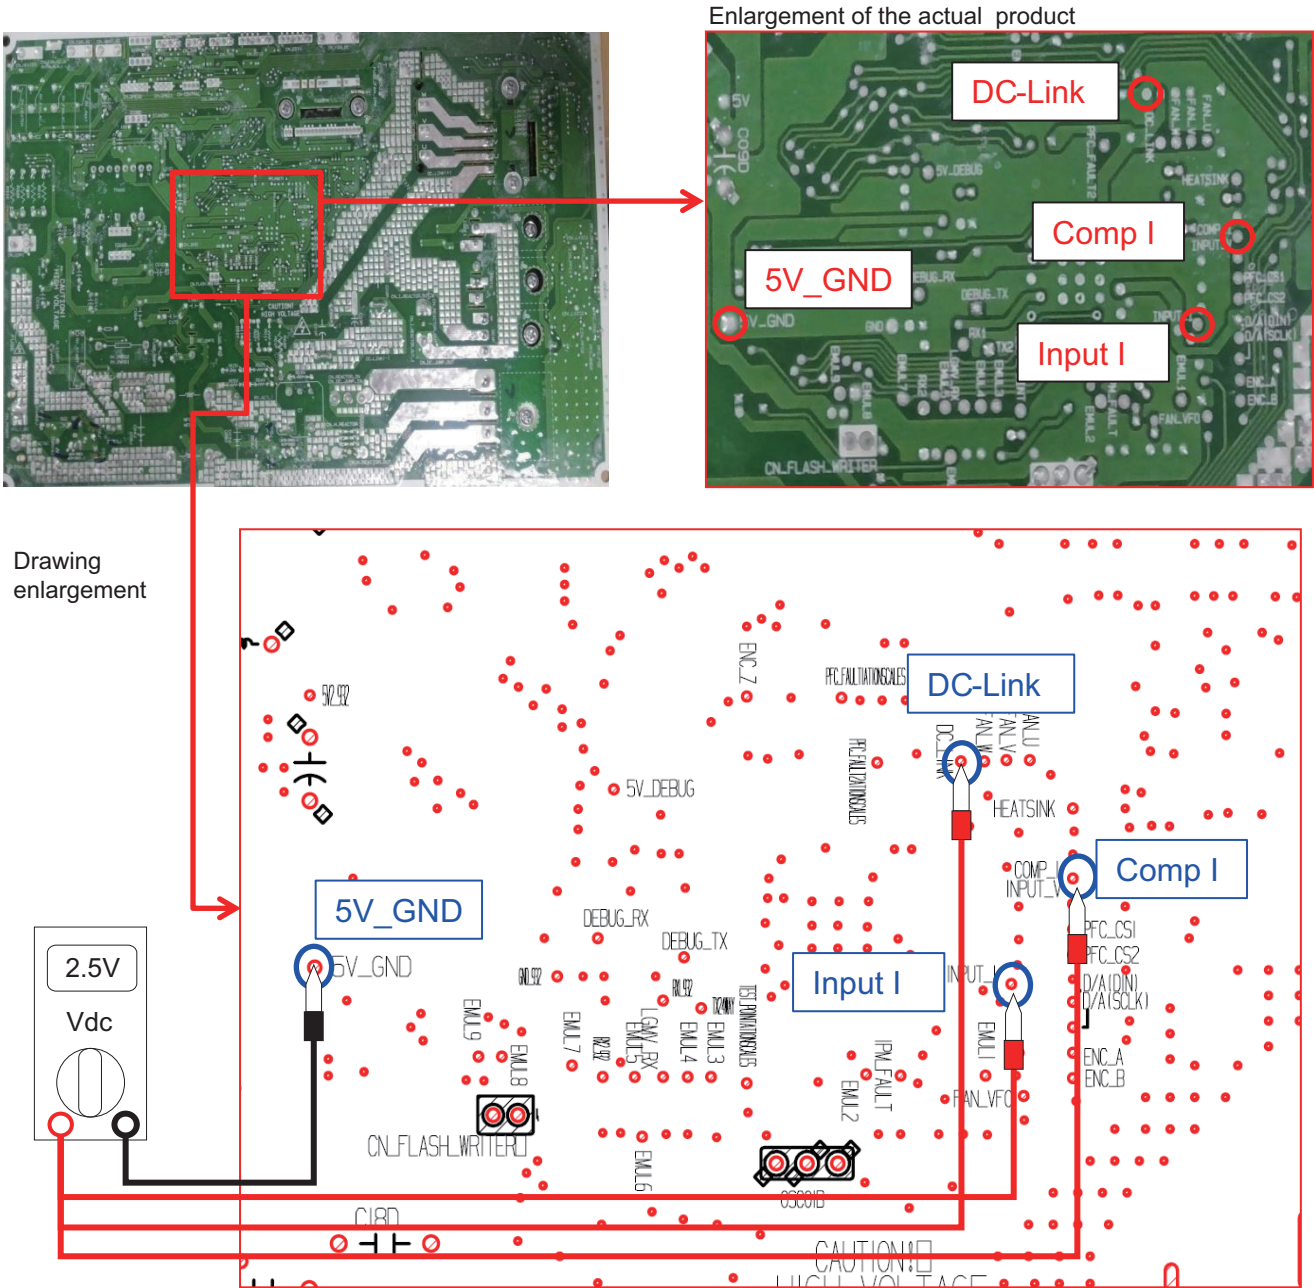

C1-7. Detecting part Circuit check (7)




- ※ Be sure to pay attention as it is high pressure.
- Be sure to pay attention as it is high pressure.
- Wear insulated gloves and be careful skin does not contact PCBA
- ※ When measuring the bottom side, do it after scraping the coating gently.

Detecting part circuit measurement method & Point – Type7

When error occurs, determine whether PCBA is normal by measuring point for confirmation.
 After applying power, measure each point by multi meter Vdc.

Each point is normal between 2.3V ~ 2.7V → If determined as abnormal, replace PCBA.

- (1) Input Current : CH22 may occur if the input current sensing circuit is abnormal.
- (2) DC-Link : CH23 may occur if DC-Link voltage sensing circuit is abnormal.
- (3) Comp Current : CH21 & CH29 may occur if Comp. current sensing circuit is abnormal.

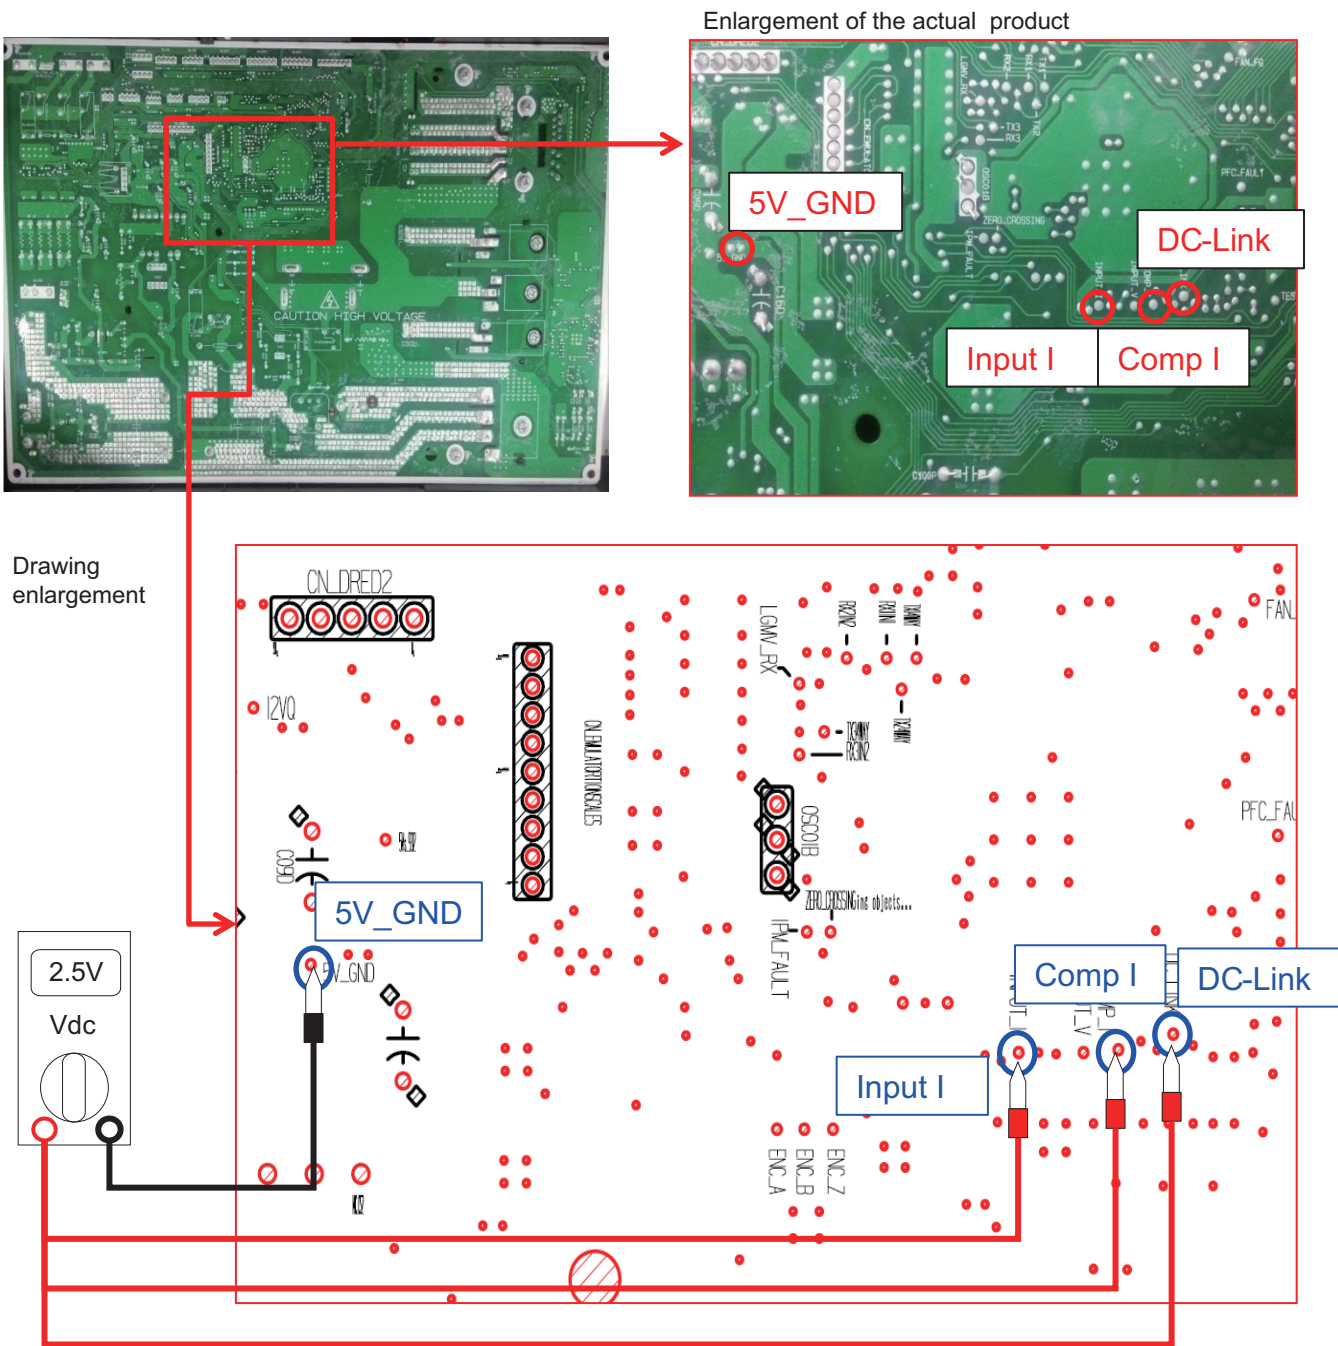

C1-8. DC – Link Check

Check DC-Link voltage using LG-MV, SIMS – Type common

| | | | | | | | |
|---------------|-----------------|-----------------|----------------|-------------------|----------------|---------------------|------------------|
| INV,목표주파수[Hz] | Cond mid 온도 | INV,토출온도 | 입력 전압[V] | 입력 전류[A] | 목표 Td | FAN1,목표 RPM | FAN2,목표 RPM |
| 60 | 47,20 | 75,00 | 230 | 7,80 | 0 | 840 | 0 |
| INV,현재주파수[Hz] | Inv,흡입 온도 | Cond Out 온도 | 운전 모드 | 정속 입력전류[A] | 현재 Td | FAN1,현재 RPM | FAN2,현재 RPM |
| 60 | -100,00 | - | 냉방 | 0,00 | 0 | 840 | 0 |
| Q축 전류[A] | 실외온도 | Inv,Heatsink 온도 | 입력전원주파수 | DC_LINK 목표전압[V] | 실외_Main_LEV | Fan1 선간전압 | Fan2선간전압 |
| 9,60 | 35,50 | 64,00 | 50 | 280 | 0 | 0 | 0 |
| D축 전류[A] | Fan Heatsink 온도 | 소비전력[W] | DC_LINK 현재전압 | 실내기 용량합 | Fan1상전류 | Fan2상전류 | |
| 3,20 | 0 | 0,00 | 1800 | 275 | 24 | 0,00 | 0,00 |
| COMP 기준 STEP | 현재 Step | 제품군 | ERROR CODE | 통신시도횟수 | 재기동 Timer | Fan1 Target Step | Fan2 Target Step |
| 13 | 13 | RAC | 0 | 150 | 255 | 12 | 0 |
| 전류 ref.[A] | Q축 전류 ref.[A] | D축 전류 ref.[A] | Drive 용량 | Converter Type | 실내중간센서유무 | EEPROM C/S High | EEPROM C/S Low |
| 10,40 | 9,80 | 2,60 | None | PSC | 있음 | 0xe3 | 0x4d |
| DC Peak Cnt | DC_Link Low Cnt | Inv 기동실패 Cnt | 충전류메러 Cnt | PFC/PSC Fault Cnt | Fan Lock Cnt | Inv,D-pipe_High Cnt | HeatSink 온도 Cnt |
| 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| Comp 상전류 Cnt | C-Pipe High Cnt | 고압 S/W Cnt | Comp 운전시간[sec] | Comp정시제어주기[se | EEV정시제어주기[sec] | 제상단계 | 습도[%] |
| 0 | 0 | 0 | 255 | 45 | 0 | 0 | 0 |
| Min Step | Max Step | Max 제한사유 | 설정온도차 | EEV 정시증분 | Comp PI증분 | Comp 운전모드 | EEV 운전모드 |
| 1 | 19 | 없음 | 8,20 | 0 | 2 | 정시 | 초기화(Full) |
| 고압[kpa] | 저압[kpa] | 11P_14B | 11P_15B | 12P_6B | 12P_7B | 12P_14B | 12P_15B |
| 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |

In normal PCBA, The value should be close to the value of the table below when power is applied.

->When there comes out abnormal DC – Link output value, replace PCBA.

When CH23 occurs, verify DC-Link voltage first through LG-MV, SIMS.

CH23 occurs when the voltage is below 140V or over 420V.

| Type | Standard Value |
|-------|----------------|
| Type1 | 290V |
| Type2 | 290V |
| Type3 | 290V |
| Type4 | 290V, 330V |
| Type5 | 380V |
| Type6 | 330V |
| Type7 | 380V |

※ The standard value is different according to the model.

C1-9. Communication Part 72V Check (1)





Be sure to pay attention as it is high pressure.

→ Wear insulated gloves and be careful skin does not contact PCBA

※ When measuring the bottom side, do it after scraping the coating gently.

Communication part 72V – Type1, Type2

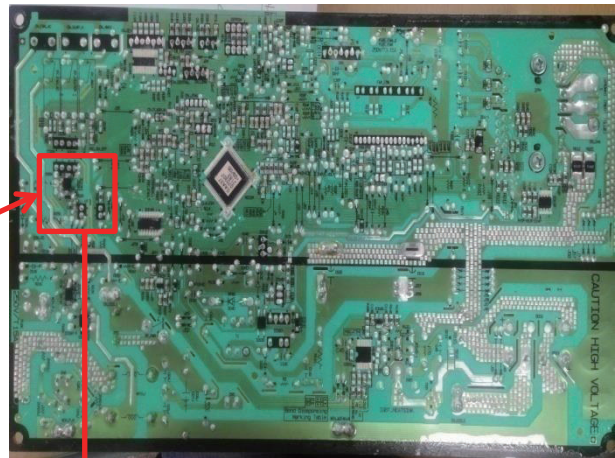
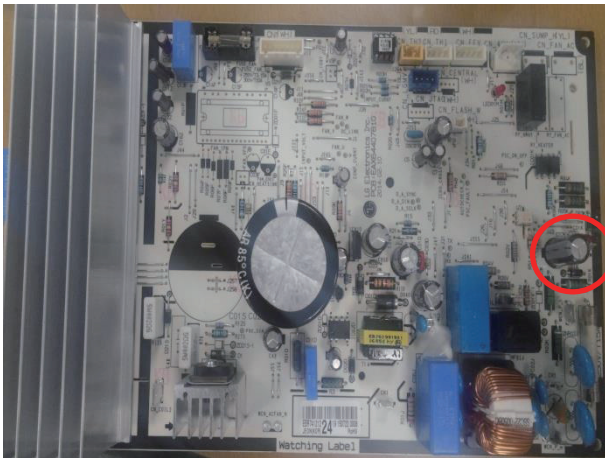


Enlargement of the actual product

Measure it under the power-on status.
Measure with multi meter to C02K at the back side of PCBA.



Measure it by touching red Probe to Remark straight line and black Probe to the curve as shown on the photograph.
Judge it as normal if it is in the range of 69~75V with $72V \pm 5\%$.

→ In case of abnormal output, replace PCBA.

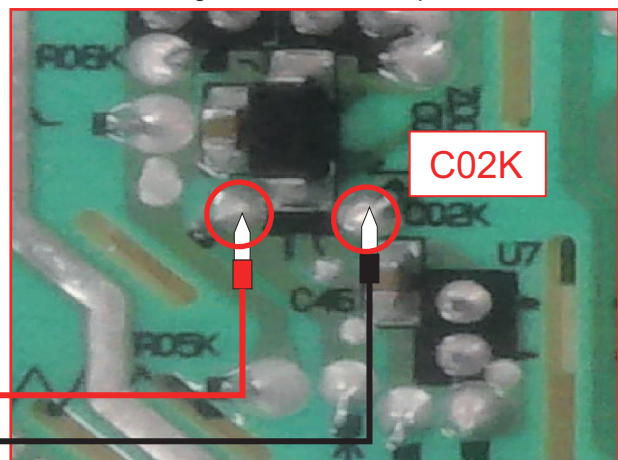

Communication part 72V – Type5

Measure it under the power-on status.
Measure with multi meter to the ends of R03A at the front side of PCBA.

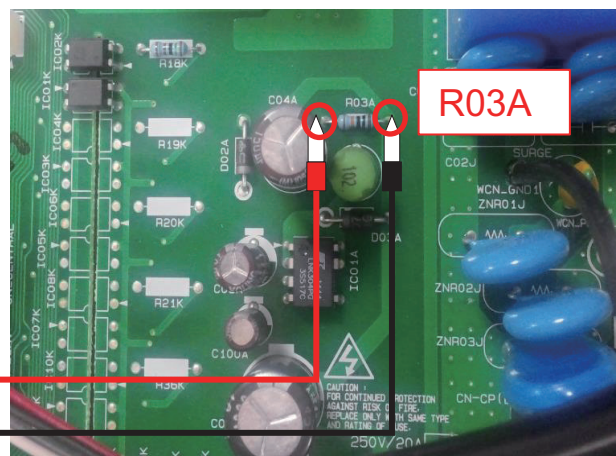


C1-9. Communication Part 72V Check (1)




Be sure to pay attention as it is high pressure.
 → Be sure to pay attention as it is high pressure.
 → Wear insulated gloves and be careful skin does not contact PCBA
 ※ When measuring the bottom side, do it after scraping the coating gently.

Communication part 72V – Type3, Type4, Type6, Type7

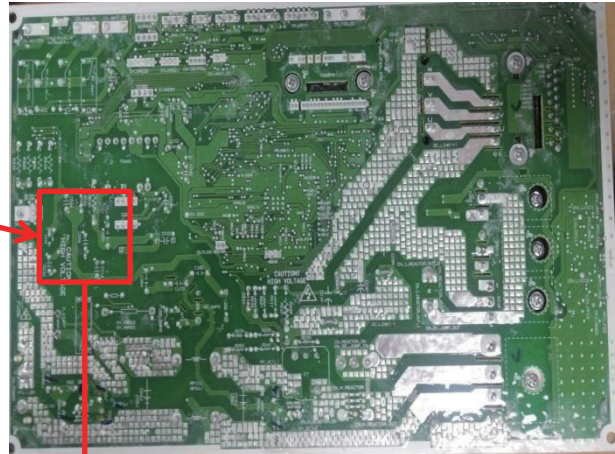

Enlargement of the actual product


Measure it under the power-on status.
 Measure with multi meter to C02K at the back side of PCBA.
 Measure it by touching red Probe to Remark straight line and black Probe to the curve as shown on the photograph.
 Judge it as normal if it is in the range of 69~75V with $72V \pm 5\%$.
 → In case of abnormal output, replace PCBA.

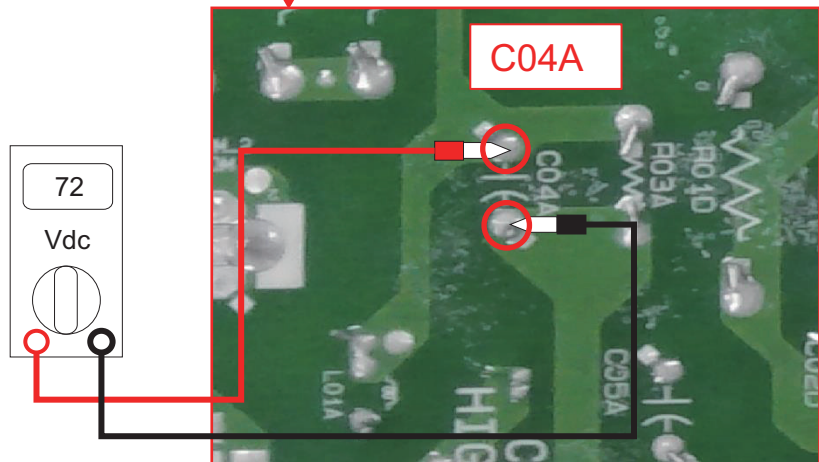




C1-10. IPM Check(1)

※ When measuring the bottom side, do it after scraping the coating gently.

Way to check IPM– Type Common

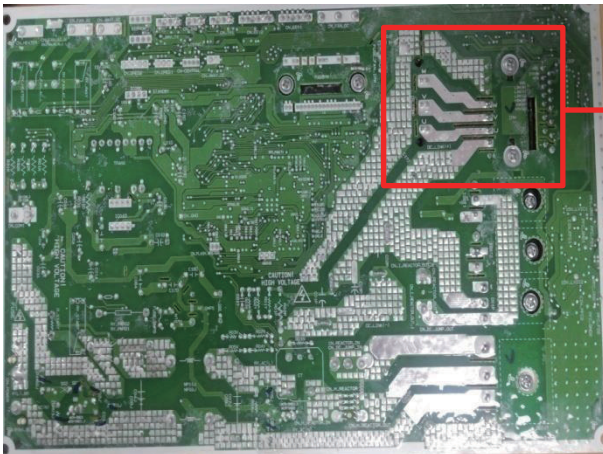

Enlargement of the actual product

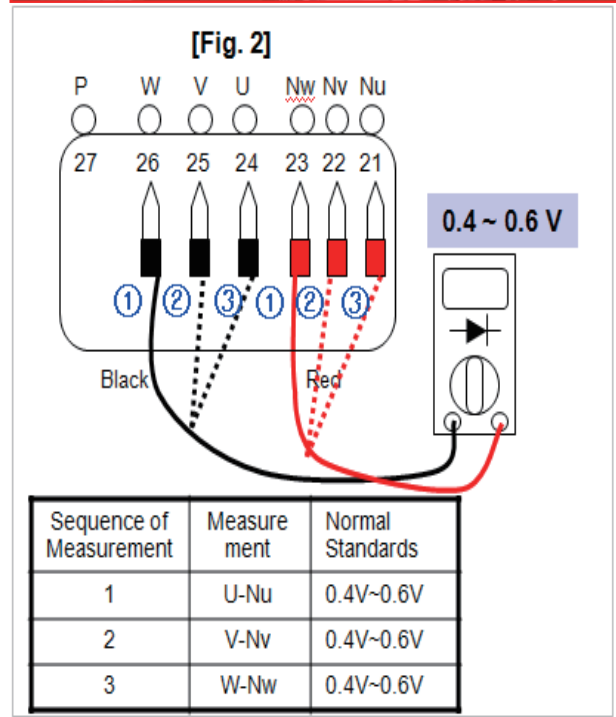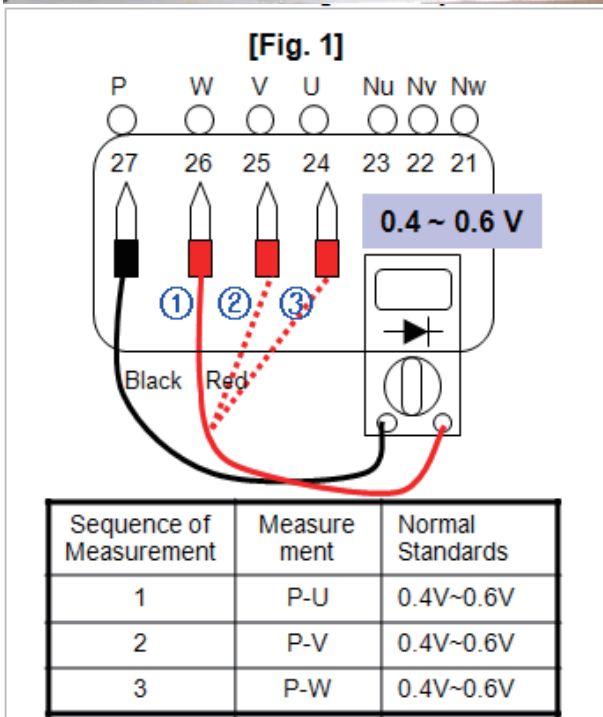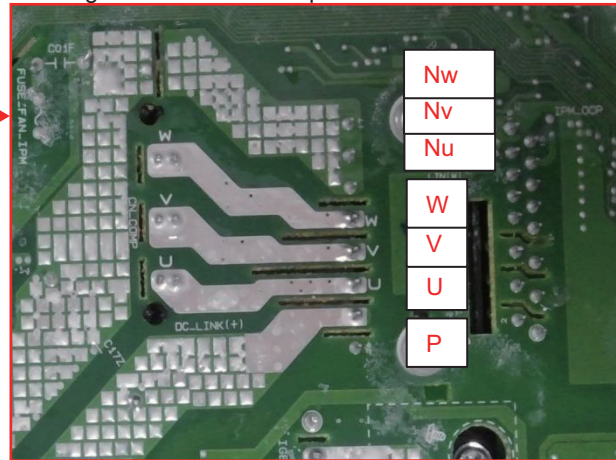

To verify the internal burn-out of the IPM, measure Diode between P part and UVW phase. Then, measure Diode between N part and UVW.

After measurement, if the measured value exists between 0.4~0.6V, judge it as normal.

Verify additionally whether the remaining pins became short.

→ If the measured value deviates from the normal value or if it becomes short, CH21 occurs immediately.

If it is judged as abnormal, replace PCBA.

※ If touched one side by Node whose Nu, Nv, Nw is same, UVW can be measured.



C1-10. IPM Check(2)

※ When measuring the bottom side, do it after scraping the coating gently.

IPM measuring Point for each type



<Type1>

Enlargement of the actual product

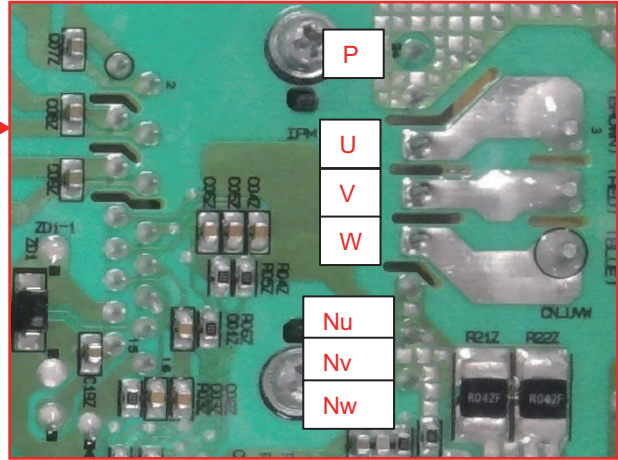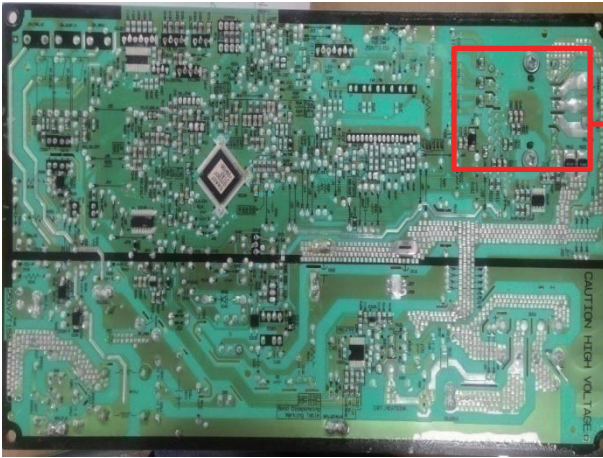



<Type2, Type3, Type4, Type6, Type7>

Enlargement of the actual product

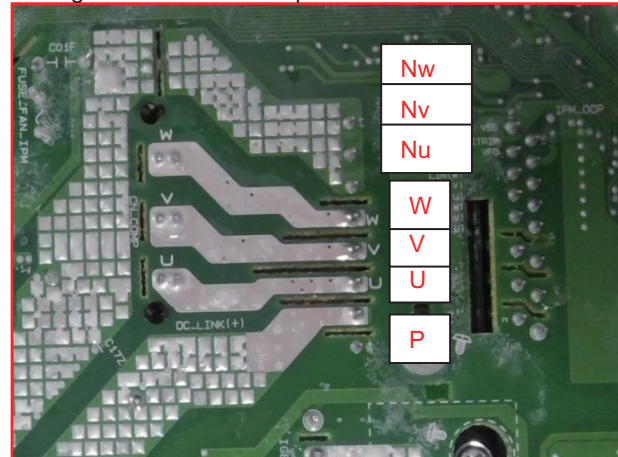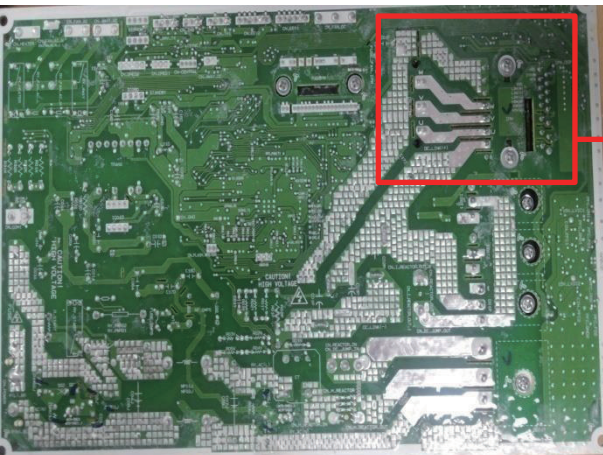

<Type5>


Enlargement of the actual product

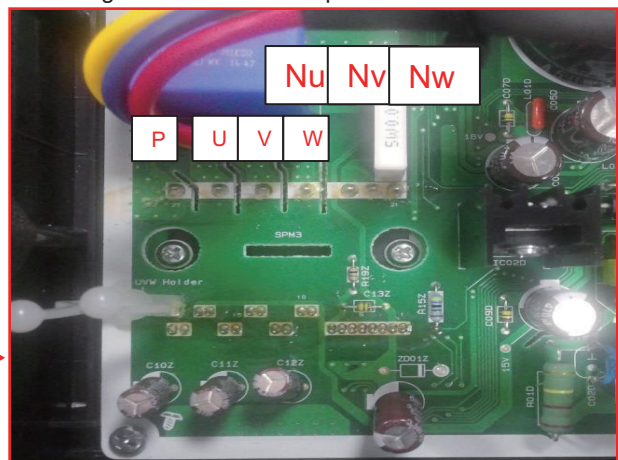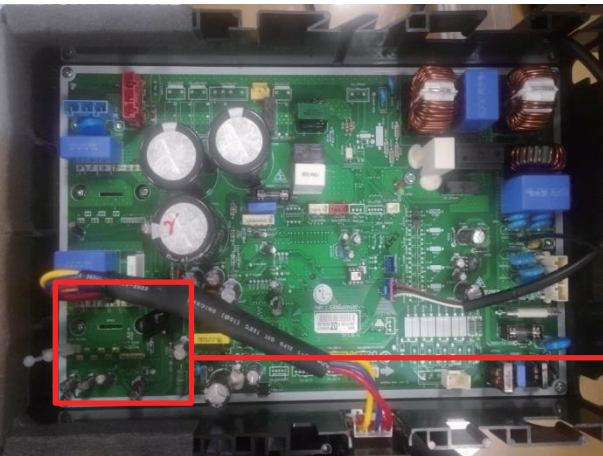




C1-11. External type Fan IPM Check(1)

※ When measuring the bottom side, do it after scraping the coating gently.

Check Fan IPM of External type – Type6

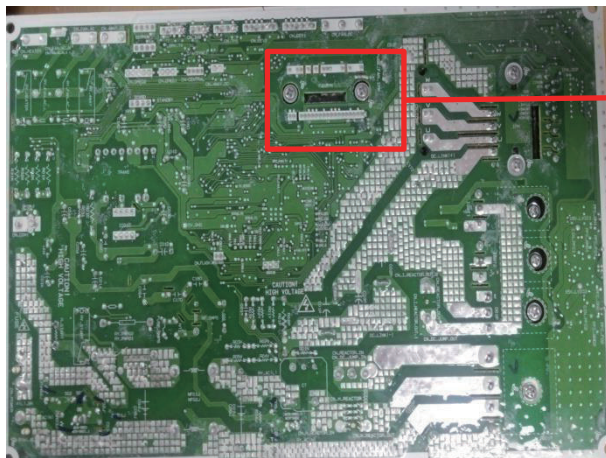

Enlargement of the actual product

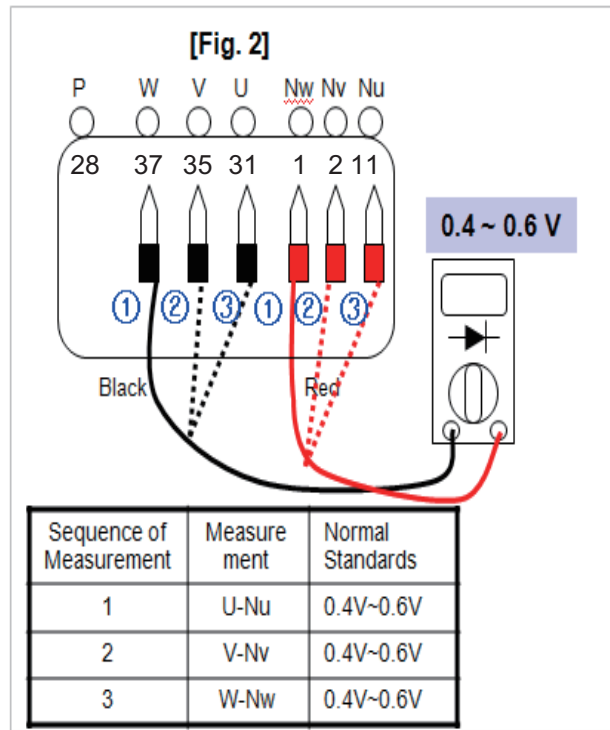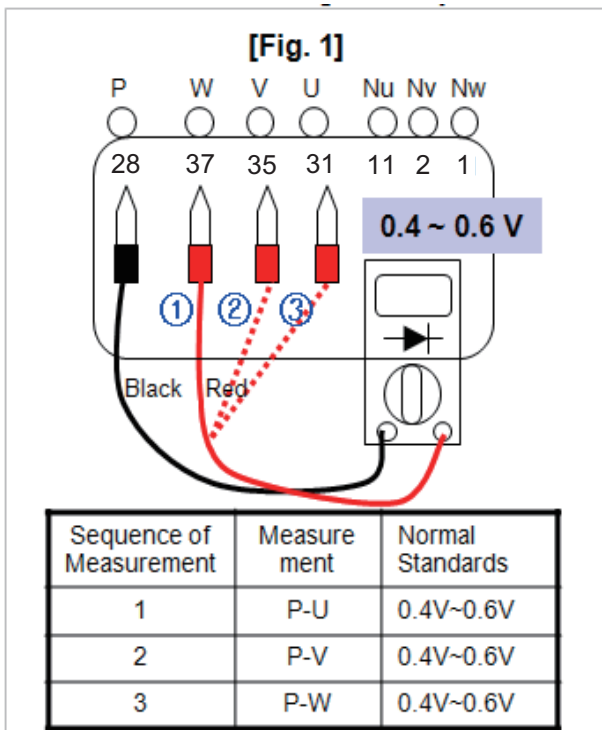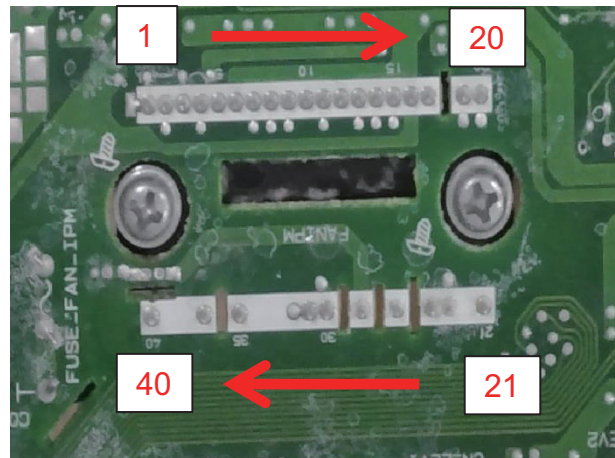


To verify the internal burn-out of the Fan IPM, measure Diode between P part and UVW phase. Then, measure Diode between Nu, Nv, Nw part and UVW. After measurement, if the measured value exists between 0.4~0.6V, judge it as normal.

Verify additionally whether the remaining pins became short.

→ If the measured value deviates from the normal value or if it becomes short, CH67 occurs immediately.


→ If Fan IPM was burnt out, Fan Fuse may be burn out.

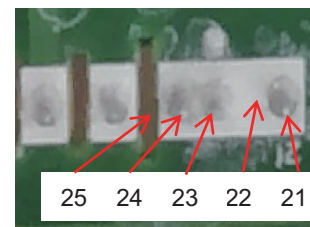




C1-12. PFCM Check

PFCM Diode normality check – Type5

※ When measuring the bottom side, do it after scraping the coating gently.

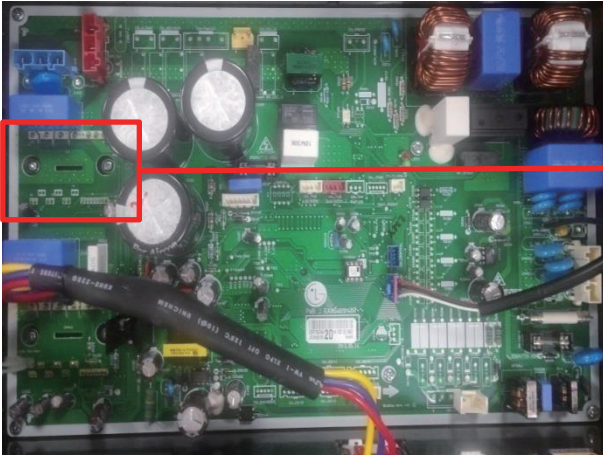

Enlargement of the actual product

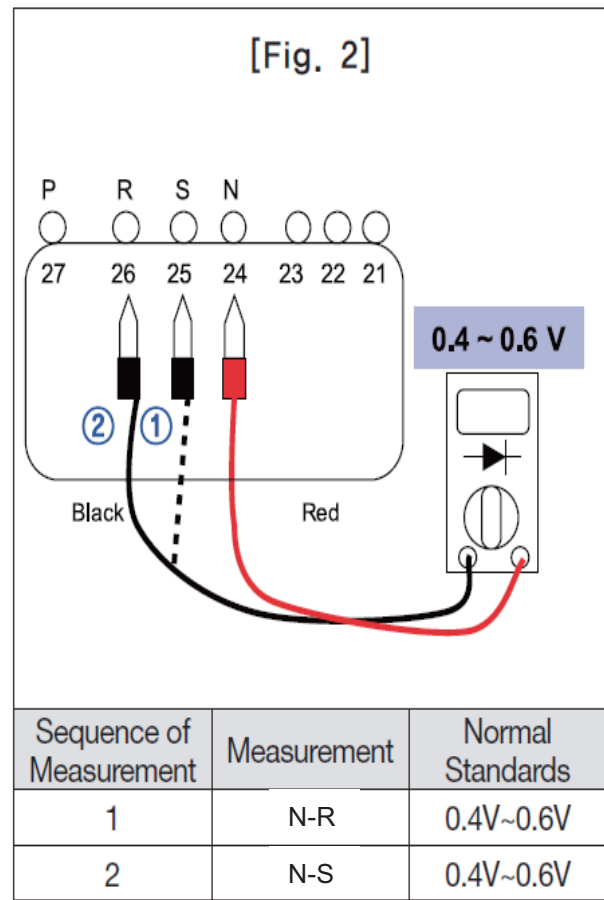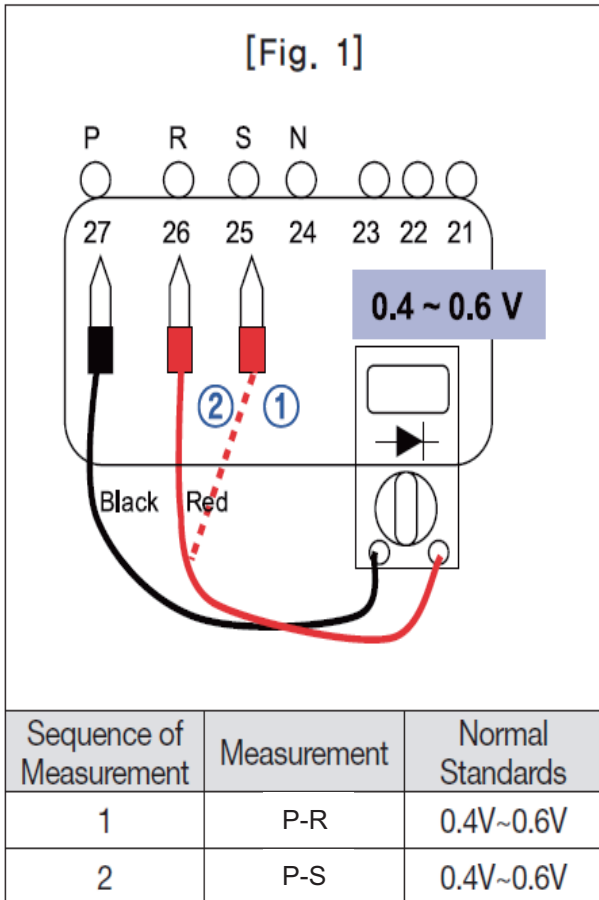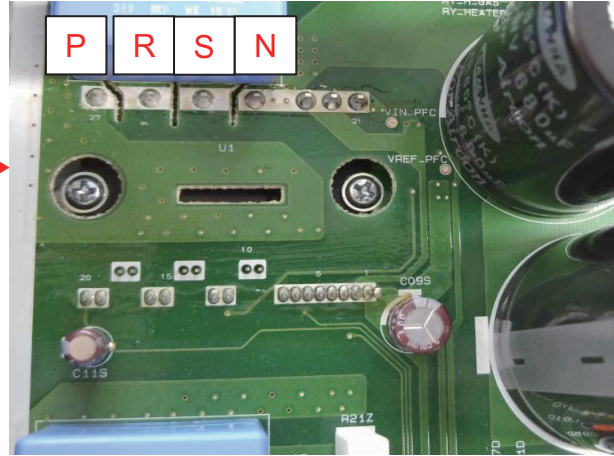



When CH27 occurs, measure each Diode value of PFCM as the above method.
If the measured values is abnormal, replace PCBA.

※ In case of old model, it may occur intermittently, but in case of new model, CH27 does not occur.

C1-13. Heat-Sink Check

Heat-Sink Screw Tightening check - Type Common

When the corresponding screw below was not tightened well, CH62 may occur.
If error occurs, fasten the corresponding point firmly with the drive.

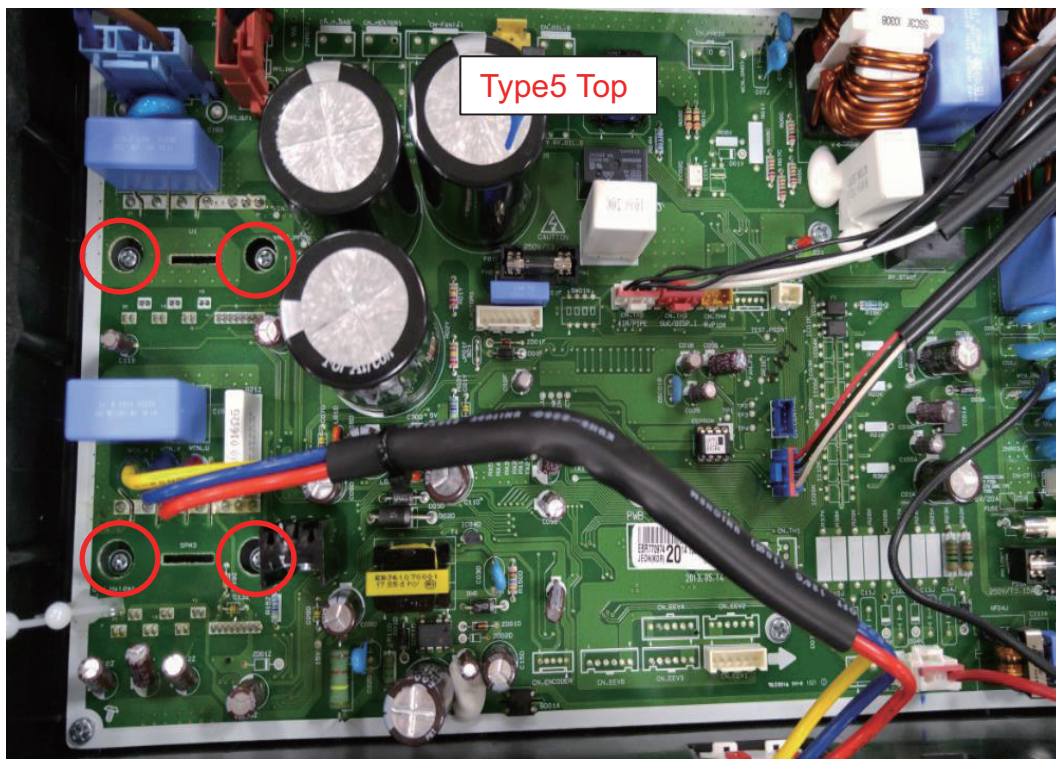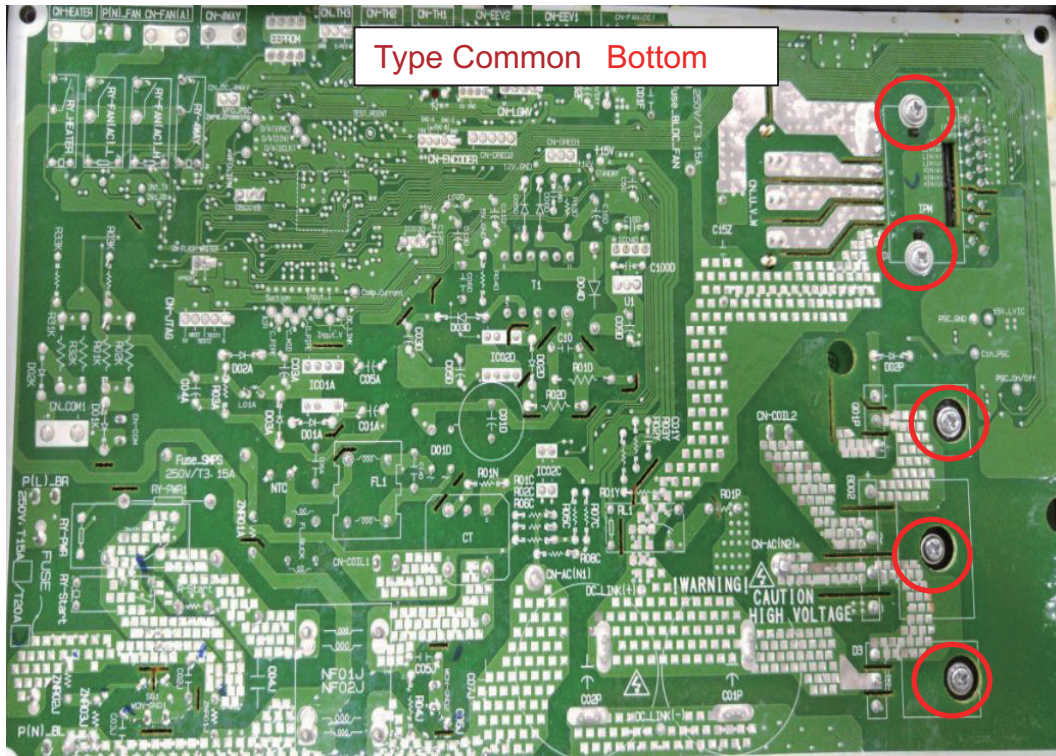


C2. Sensor

C2-1. Air / Pipe Sensor Check

※ Measure based on the back side without sensor hook.

Sensor resistance check


Measure the resistance of the sensor ends with the resistance measuring mode of the multi meter.
When measuring room temperature, refer to the measuring point and value of the followings, and for detailed sensor table, refer to APP.

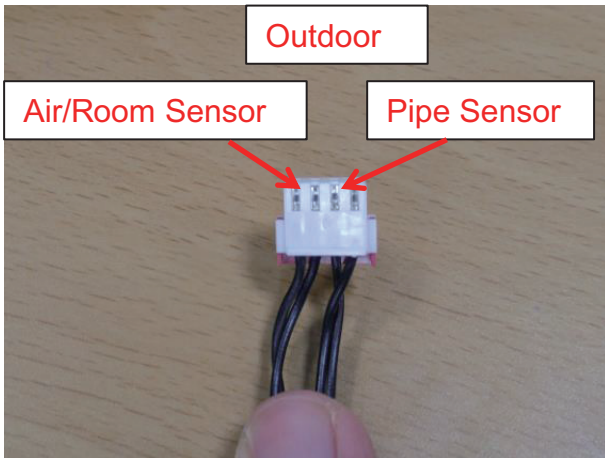

[Table] at 25°C, ±10%

| In/Out door | Value | Error |
|-------------|-------|----------------|
| Air/Room | 10kΩ | Indoor : CH01 |
| | | Outdoor : CH44 |
| Pipe | 5kΩ | Indoor : CH02 |
| | | Outdoor : CH45 |

In addition, in case of the single sensor also, measure the sensor ends resistance value with resistance measuring mode.

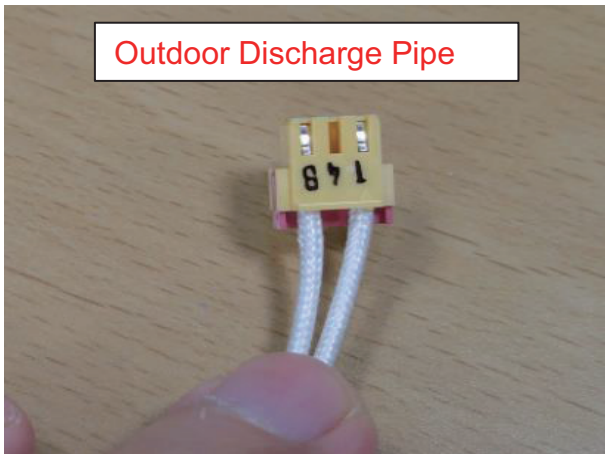


[Table] at 25°C, ±10%

| Indoor | Value | Error |
|------------------|-------|-------|
| Pipe Out Sensor | 5kΩ | CH06 |
| Pipe Mid Sensor | 5kΩ | CH12 |
| Outdoor | Value | Error |
| Discharge Pipe | 200kΩ | CH41 |
| Heat-sink Sensor | 10kΩ | CH65 |

C2-2. Pressure Sensor Check

Sensor Resistance check

Measure the resistance value between each pins with the resistance value measuring mode of the multi meter. When measuring room temperature, judge it whether it is normal referring to the measuring point and value of the followings.

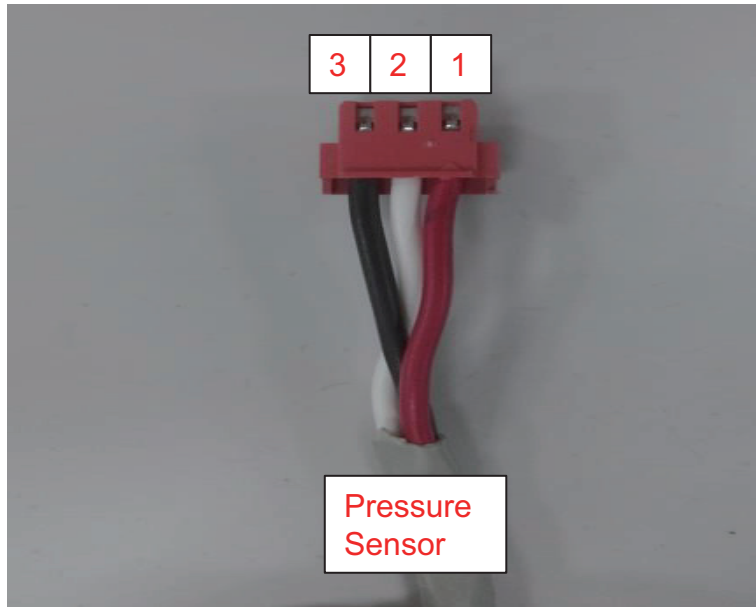

[Table]

| | Value |
|-------------|----------------------|
| No.1- No.3 | $90K\Omega \pm 10\%$ |
| No.2 -No. 3 | $\geq 5M\Omega$ |
| No.1 -No. 2 | $\geq 15M\Omega$ |

C2-3. In/Outdoor Sensor resistance Table(1)

Outdoor Unit Sensor

| Temperature | | Pipe Sensor | | D-Pipe sensor(Inv Td) | | Air Sensor | |
|-------------|-----|-----------------|-------------|-----------------------|-------------|-----------------|-------------|
| °C | °F | Resistance (kΩ) | Voltage (V) | Resistance (kΩ) | Voltage (V) | Resistance (kΩ) | Voltage (V) |
| -30 | -22 | 102.2 | 4.71 | - | - | 204.3 | 4.72 |
| -25 | -13 | 73.5 | 4.60 | - | - | 147.0 | 4.62 |
| -20 | -4 | 53.5 | 4.47 | - | - | 107.1 | 4.49 |
| -15 | 5 | 39.5 | 4.31 | - | - | 79.0 | 4.34 |
| -10 | 14 | 29.5 | 4.12 | - | - | 59.0 | 4.15 |
| -5 | 23 | 22.2 | 3.90 | - | - | 44.5 | 3.93 |
| 0 | 32 | 17.0 | 3.65 | 586 | 4.85 | 33.9 | 3.68 |
| 5 | 41 | 13.0 | 3.38 | 465 | 4.81 | 26.1 | 3.42 |
| 10 | 50 | 10.1 | 3.10 | 372 | 4.77 | 20.3 | 3.13 |
| 15 | 59 | 7.9 | 2.80 | 301 | 4.72 | 15.9 | 2.84 |
| 20 | 68 | 6.3 | 2.51 | 244 | 4.66 | 12.6 | 2.55 |
| 25 | 77 | 5.0 | 2.23 | 200 | 4.59 | 10.0 | 2.26 |
| 30 | 86 | 4.0 | 1.97 | 165 | 4.51 | 8.0 | 1.99 |
| 35 | 95 | 3.2 | 1.72 | 137 | 4.42 | 6.5 | 1.74 |
| 40 | 104 | 2.6 | 1.50 | 114 | 4.32 | 5.3 | 1.52 |
| 45 | 113 | 2.2 | 1.30 | 96 | 4.21 | 4.3 | 1.32 |
| 50 | 122 | 1.8 | 1.12 | 81 | 4.09 | 3.6 | 1.14 |
| 55 | 131 | 1.5 | 0.97 | 68 | 3.96 | 3.0 | 0.98 |
| 60 | 140 | 1.2 | 0.84 | 58 | 3.82 | 2.5 | 0.85 |
| Tolerance | | ± 30% | ± 10% | ± 30% | - | ± 30% | ± 10% |

Indoor Unit Sensor

| Temperature | | Pipe Sensor | | Air Sensor | |
|-------------|-----|-----------------|-------------|-----------------|-------------|
| °C | °F | Resistance (kΩ) | Voltage (V) | Resistance (kΩ) | Voltage (V) |
| 0 | 32 | 16.8 | 3.65 | 33.9 | 3.68 |
| 5 | 41 | 13.0 | 3.38 | 26.1 | 3.42 |
| 10 | 50 | 10.1 | 3.10 | 20.3 | 3.13 |
| 15 | 59 | 7.9 | 2.80 | 15.9 | 2.84 |
| 20 | 68 | 6.3 | 2.51 | 12.6 | 2.55 |
| 25 | 77 | 5.0 | 2.23 | 10.0 | 2.26 |
| 30 | 86 | 4.0 | 1.97 | 8.0 | 1.99 |
| 35 | 95 | 3.3 | 1.72 | 6.5 | 1.74 |
| 40 | 104 | 2.7 | 1.50 | 5.3 | 1.52 |
| 45 | 113 | 2.2 | 1.30 | 4.3 | 1.32 |
| 50 | 122 | 1.8 | 1.12 | 3.6 | 1.14 |
| 55 | 131 | 1.5 | 0.97 | 3.0 | 0.98 |
| 60 | 140 | 1.2 | 0.84 | 2.5 | 0.85 |
| Tolerance | | - | ± 10% | - | ± 10% |



| | | Resistance @25°C |
|---------|--------|------------------|
| Outdoor | Pipe | 5.0 |
| | Air | 10.0 |
| | D-Pipe | 200.0 |
| Indoor | Pipe | 5.0 |
| | Air | 10.0 |



Unit : kΩ


C2-3. In/Outdoor Sensor resistance Table(2)

Sensor Resistance check

Measure the resistance value between each pins with the resistance value measuring mode of the multi meter. When measuring room temperature, judge it whether it is normal referring to the measuring point and value of the followings.

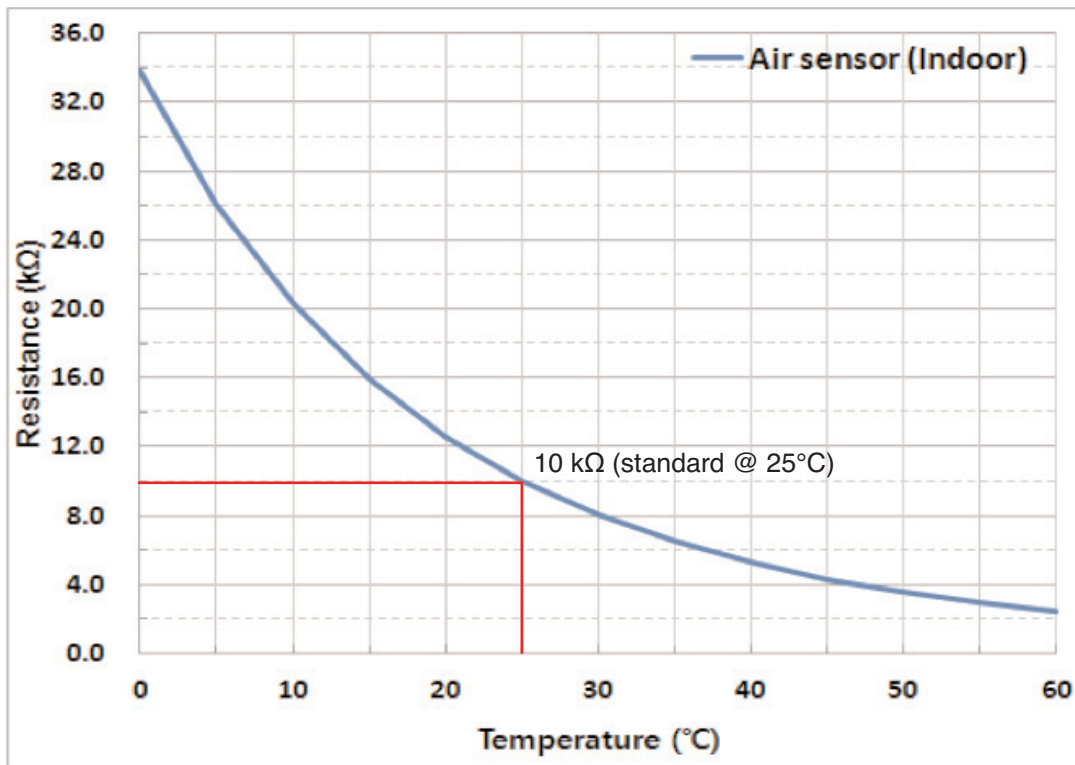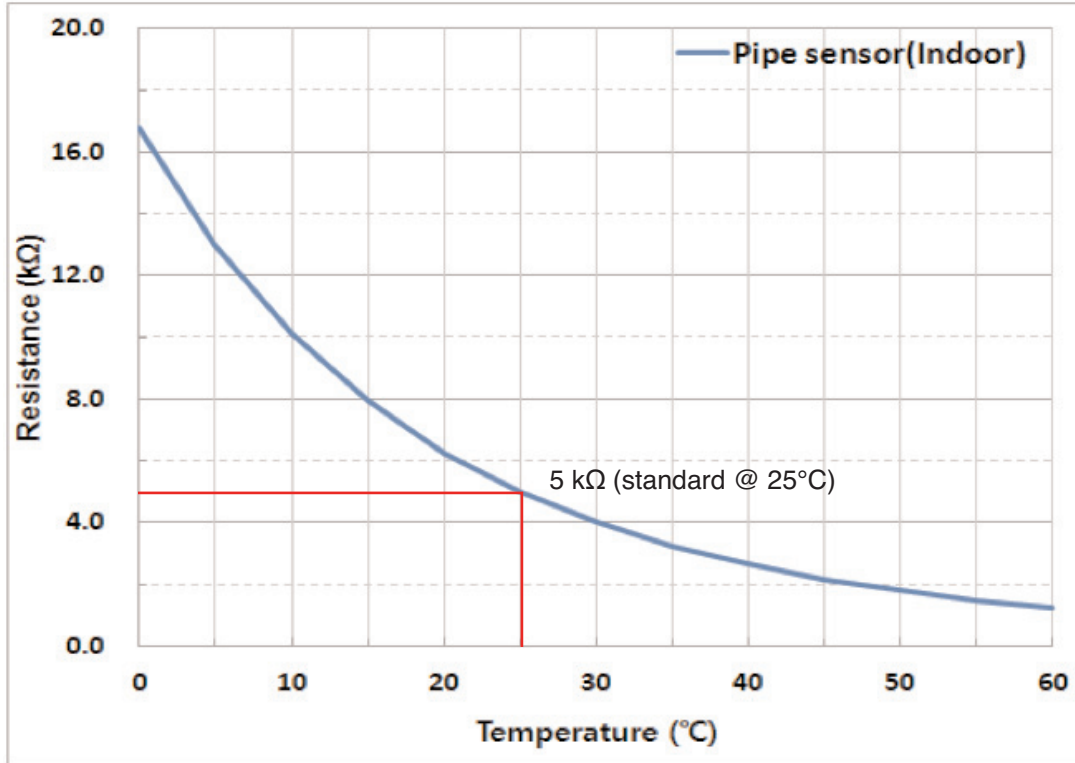

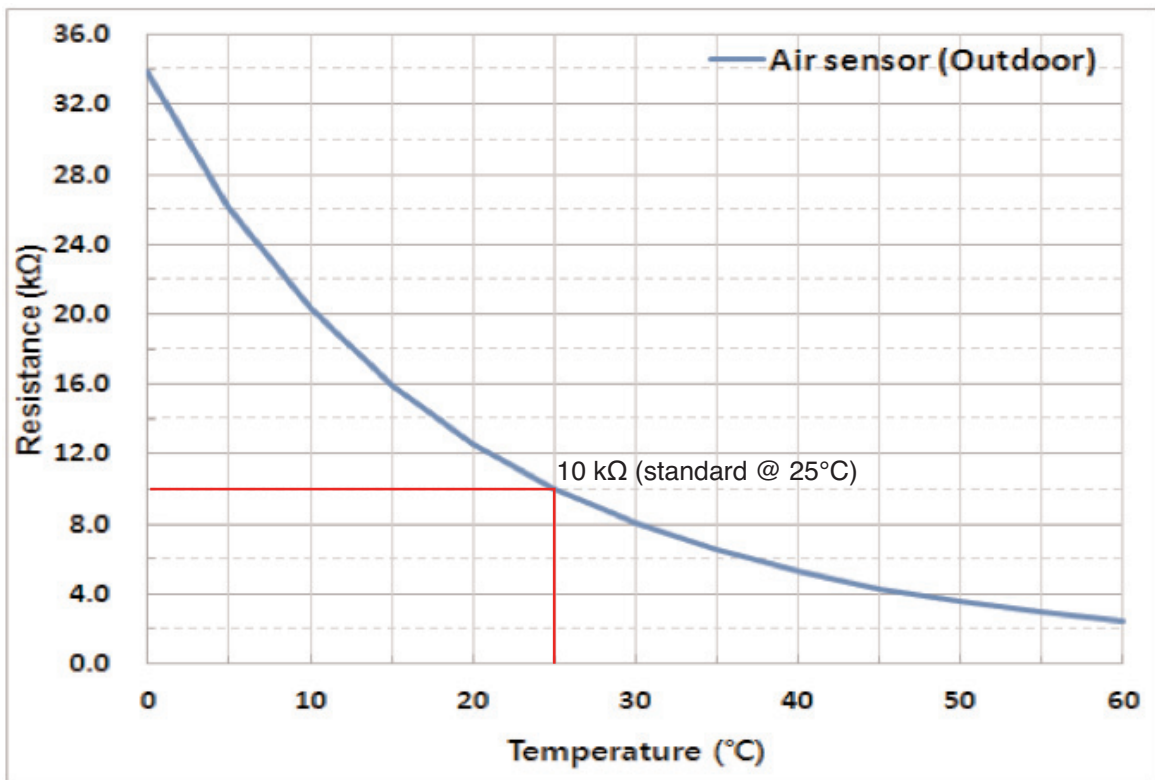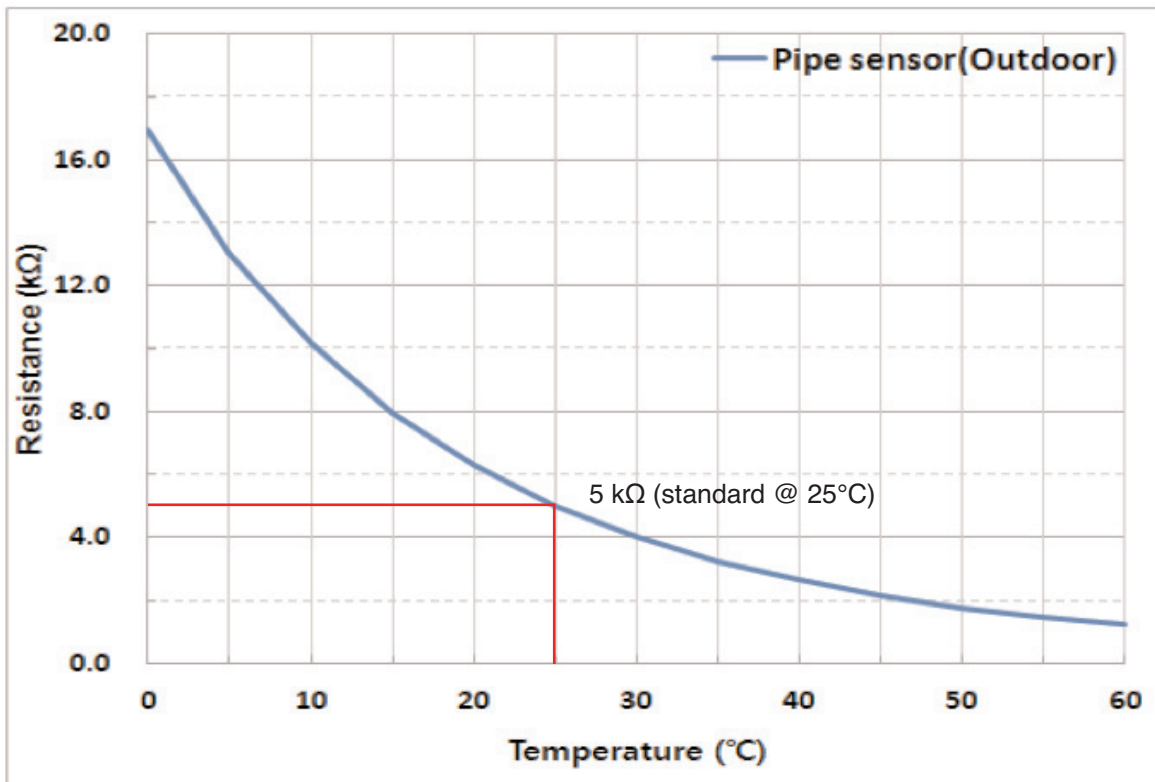C2-3. In/Outdoor Sensor resistance Table(3)


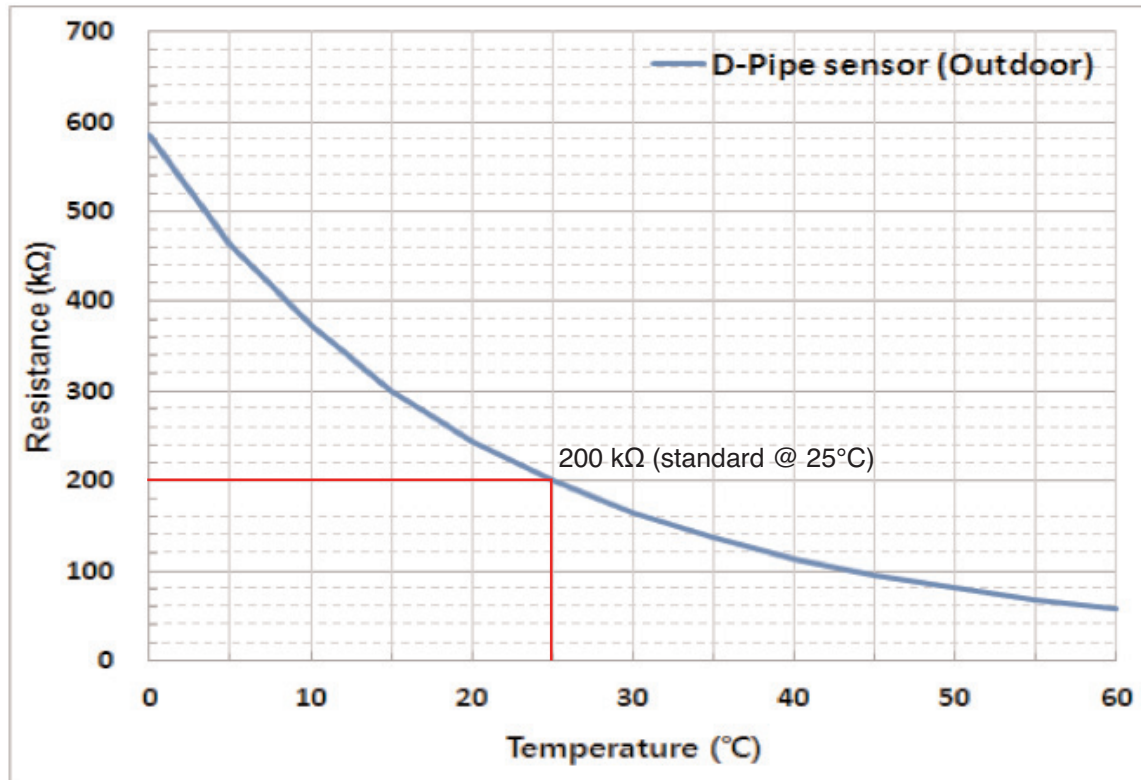
C2-3. In/Outdoor Sensor resistance Table(4)

C3. Compressor

C3-1. Check insulation between Compressor and Pipe

After checking insulation between compressor and pipe, if the compressor resistance value is abnormal, replace compressor.



Measure the resistance between Compressor harness and pipe surface with multi meter.

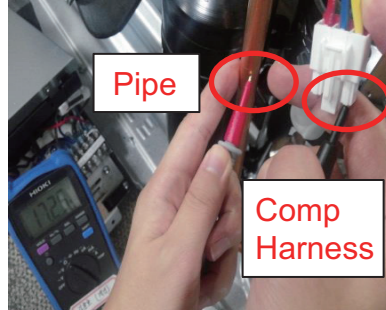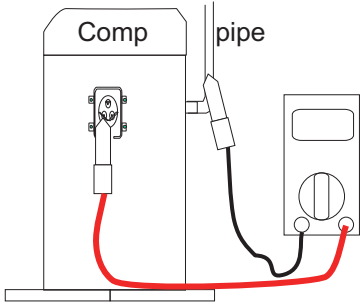

- ※ It is possible to remove the compressor harness and measure the resistance between each phase of the compressor and pipe directly.
- ※ When measuring, judge the resistance value after waiting number of seconds after placing multi meter.
- ※ When the insulation between compressor and pipe is broken, PCBA may be burn out. So, in case of PCBA, check it referring to the measuring method of IPM.

| Measuring point | Normal value |
|-----------------|------------------|
| U - Pipe | $\geq 10M\Omega$ |
| V - Pipe | $\geq 10M\Omega$ |
| W - Pipe | $\geq 10M\Omega$ |

C3-2. Check Compressor Line Resistance

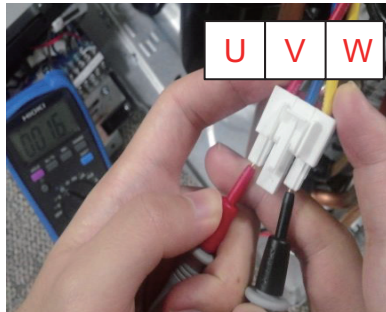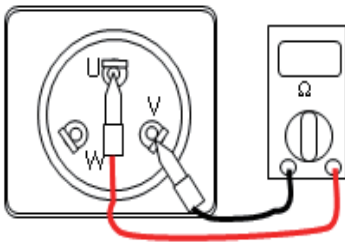

- ※ It is possible to remove the compressor harness and measure the resistance between each lines.
- ※ When measuring, judge the resistance value after waiting number of seconds after placing multi meter.

| Comp. Line Resistance | |
|-----------------------|--------------------|
| U - V | 0.5 ~ 3.0 Ω |
| V - W | 0.5 ~ 3.0 Ω |
| W - U | 0.5 ~ 3.0 Ω |

※ Refer to the line resistance value for compressor type.

| GA092 | | GA102 | | | | | GKT128 | GKT141 | GKT176 | GJT240 | 5RS | | DA128A |
|-------|------|-------|------|------|------|------|--------|--------|--------|--------|--------|------|--------|
| MA | MC | MA | MB | MD | MF | MK | MA | MB | MF | MB | 102XAA | 132Z | 20F |
| 2.56 | 1.95 | 1.59 | 1.73 | 1.07 | 1.08 | 2.06 | 1.13 | 1.54 | 1.14 | 0.63 | 1.31 | 0.8 | 1.31 |



C4. Motor

C4-1. BLDC Motor

BLDC Motor Diode Measurement check


Inspect indoor and outdoor BLDC motor and replace BLDC motor when it is abnormal.

When measuring, set No. 1 and No. 4 of BLDC motor as multi meter Diode mode and judge it as normal in the range of 0.8V ~ 1.2V.

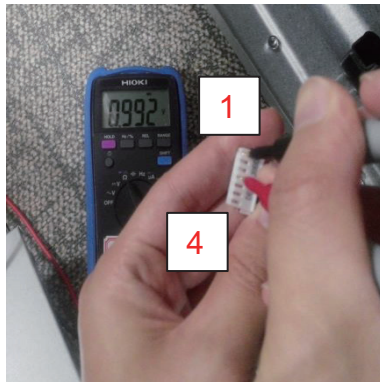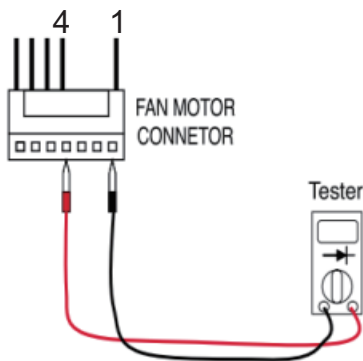



※ When measuring, judge the voltage value of the diode after waiting number of seconds after placing multi meter.

※ It is measurable only when the red Probe of the multi meter contacts No.4 pin of the motor, and when the black Probe contacts No.1 pin of the motor.

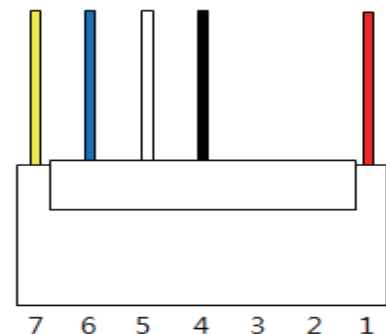

BLDC Motor Resistance measurement check

Measure the resistance value with the following point. If the unit of the measuring value becomes different or when it comes out Open, Short, judge it as abnormal and replace the motor.
(The value is different depending on the maker and the motor type.)

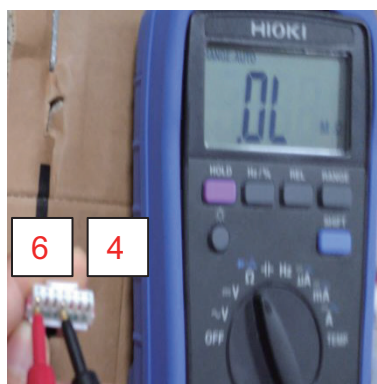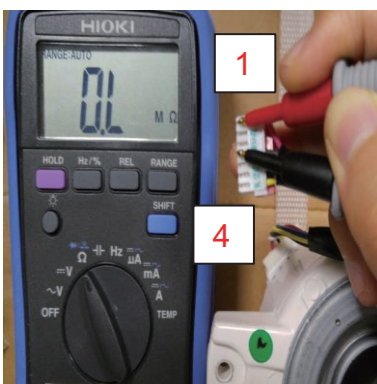

| BLDC Motor line resistance | |
|----------------------------|------------------|
| No.1 – No.4 | Open |
| No.4 – No.5 | $\geq 1K\Omega$ |
| No.4 – No.6 | Open |
| No.4 – No.7 | $\geq 50K\Omega$ |


※ When measuring the resistance value between lines, the black Probe of the multi meter should contact No. 4 pin.

C4-2. AC-Motor



- ※ Be sure to pay attention as it is high pressure.
- Be sure to pay attention as it is high pressure.
- Wear insulated gloves and be careful skin does not contact PCBA
- ※ When measuring the bottom side, do it after scraping the coating gently.

AC-Motor PCBA Output check

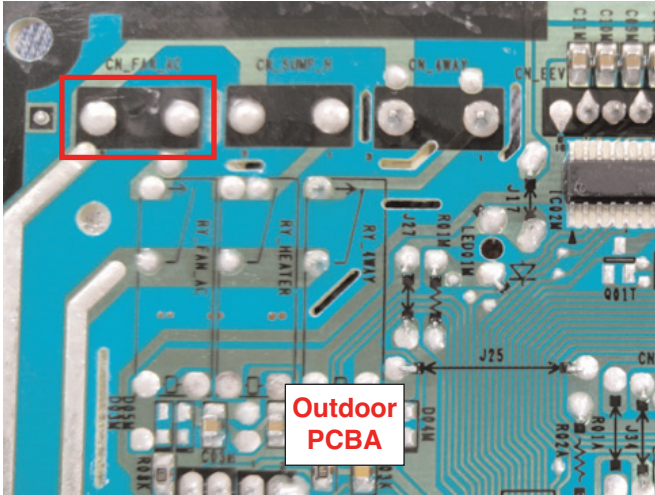

After starting up the compressor at PCBA, measure the voltage between PCBA CN_FAN_AC.
 If the value is input voltage(220V) ± 10% , judge it as normal → Replace PCBA if it is abnormal.
 If AC-Motor does not operate under the normal PCBA output, replace AC-Motor.

AC-Motor Resistance Measurement Check

When measuring indoor and outdoor AC-Motor, measure the resistance value of both AC-Motor pin with multi meter resistance measuring mode.
 Indoors : Main(Orange – Black), Sub(Yellow – Black)
 Outdoors : Main(Yellow – Blue), Sub(Yellow – Red)
 Refer to the table below.



[Table]

| Mearsurement Pin | Normal Standard |
|------------------|-----------------|
| Main(ORG-BLK) | 300Ω ~ 600Ω |
| Sub(YEL-BLK) | 600Ω ~ 900Ω |

[Table]

| Mearsurement Pin | Normal Standard |
|------------------|-----------------|
| Main(YEL-BLU) | 200Ω ~ 600Ω |
| Sub(YEL-Red) | 200Ω ~ 600Ω |

※ The motor resistance value is different depending on the temperature and the maker.

C4-3. Exterior fan Motor


External Fan Motor Resistance Measurement check

Separate PCBA and External fan motor connector and measure the resistance value of the connector 3 phase of the external fan motor with multi meter resistance measuring mode.

If the measurement value is $51.5\Omega \pm 2.6\Omega$ or $76.8\Omega \pm 3.8\Omega$ at 20°C , judge it as normal.

(The approval resistance value is different with the maker.)

[Table]

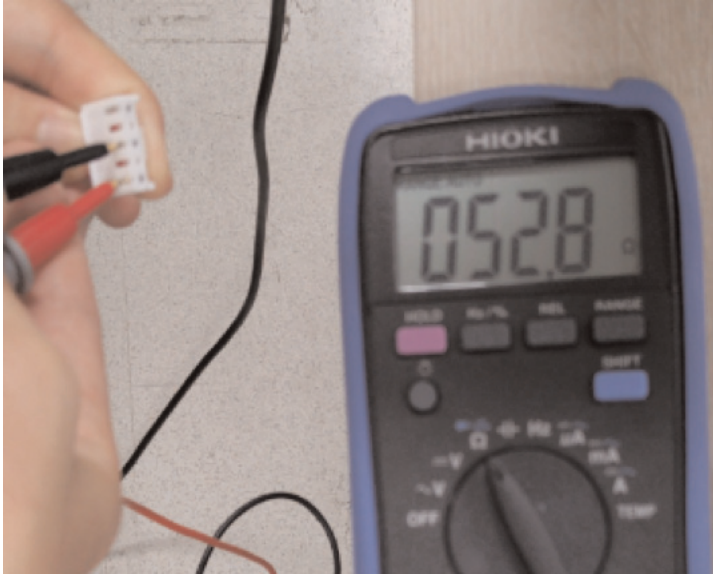

| Measurement Pin | Normal Standard |
|-----------------|---|
| RED – BLUE | $51.5\Omega \pm 2.6\Omega$ or $76.8\Omega \pm 3.8\Omega$ |
| BLUE – YELLOW | $51.5\Omega \pm 2.6\Omega$ or $76.8\Omega \pm 3.8\Omega$ |
| YELLOW - RED | $51.5\Omega \pm 2.6\Omega$ or $76.8\Omega \pm 3.8\Omega$ |

※ The motor resistance value is different depending on the temperature and the maker.

C5. 4-way valve

4-way Resistance Measurement check


Measure the resistance value of the both 4-way pin with multi meter resistance measuring mode.
If the measurement value is $21\text{K}\Omega \pm 20\%$, judge it as normal



- ※ Be sure to pay attention as it is high pressure.
- Be sure to pay attention as it is high pressure.
- Wear insulated gloves and be careful skin does not contact PCBA
- ※ When measuring the bottom side, do it after scraping the coating gently.

4-way PCBA output check


After operation of heating mode, measure the voltage across the PCBA Connector.
If the rated voltage is $220\text{V} \pm 10\%$, judge PCBA as normal.
→ If heating mode is not operated under the PCBA normal output, replace 4-way.

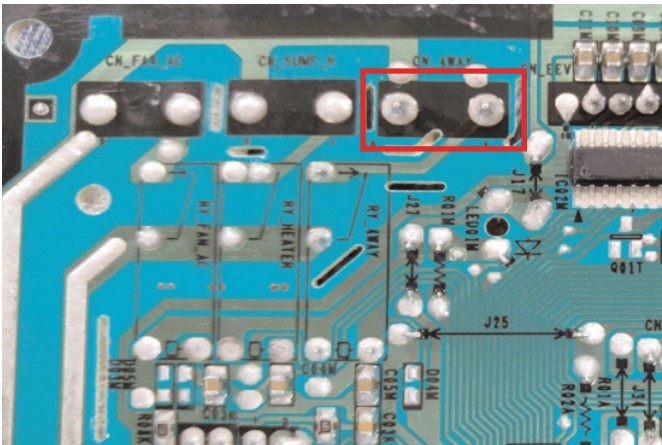

C6. EEV


EEV Resistance Measurement check

Measure the resistance value of each EEV pin with multi meter resistance measuring mode.
Judge the normality referring to the value of the table below.

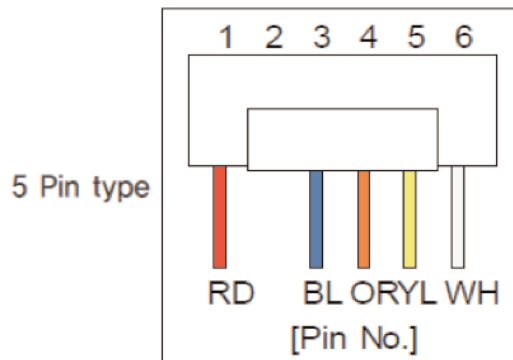


[Table]

| Measurement Pin | Normal Standard |
|-----------------|------------------------|
| No.1 – No.3 | $45\Omega \pm 5\Omega$ |
| No.1 - No.4 | $45\Omega \pm 5\Omega$ |
| No.1 – No.5 | $45\Omega \pm 5\Omega$ |
| No.1 - No.6 | $45\Omega \pm 5\Omega$ |

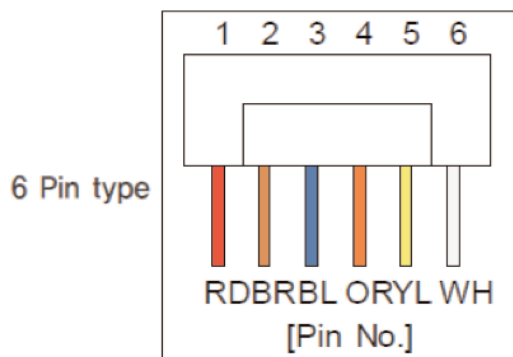

[Table]

| Measurement Pin | Normal Standard |
|-----------------|------------------------|
| No.1 - No. 3 | $45\Omega \pm 5\Omega$ |
| No.1 -No. 5 | $45\Omega \pm 5\Omega$ |
| No.2 -No. 4 | $45\Omega \pm 5\Omega$ |
| No.2 -No. 6 | $45\Omega \pm 5\Omega$ |

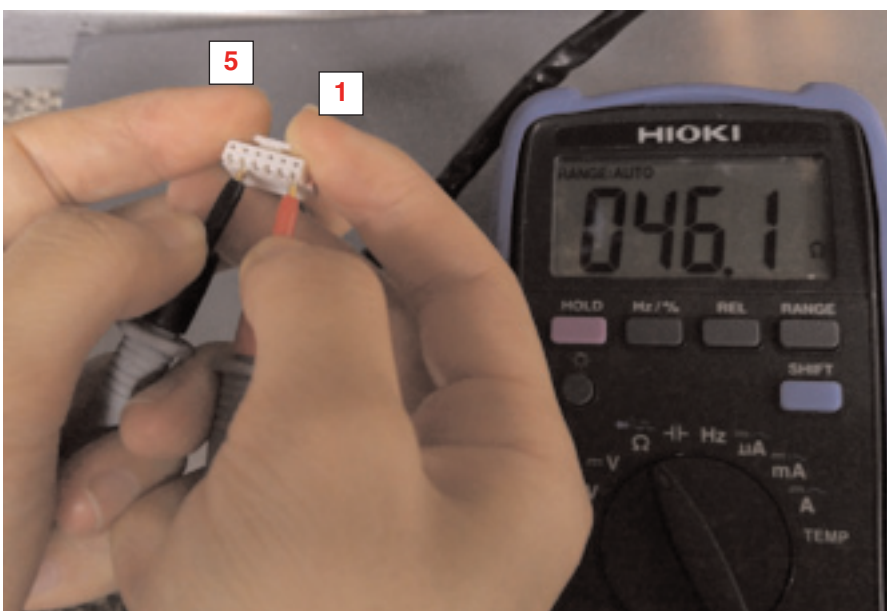

※ There may be some value difference depending on the type of the EEV.

C7. Etc.

C7-1. Sump-Heater

Sump_Heater Resistance Measurement check

Measure the resistance value of the both sump heater pin with multi meter resistance measuring mode.
If the measurement value is $800\text{K}\Omega \pm 20\%$, judge it as normal.




C7-2. Reactor Connection

Reactor PCBA Fastening check - Type common

Check whether reactor is connected by measuring whether the both fastening parts of PCBA reactor became to be short by multi meter under power-off.

Measure the both ends of CN_Coil1 & CN_Coil2 , and it is normal if they become to be short.

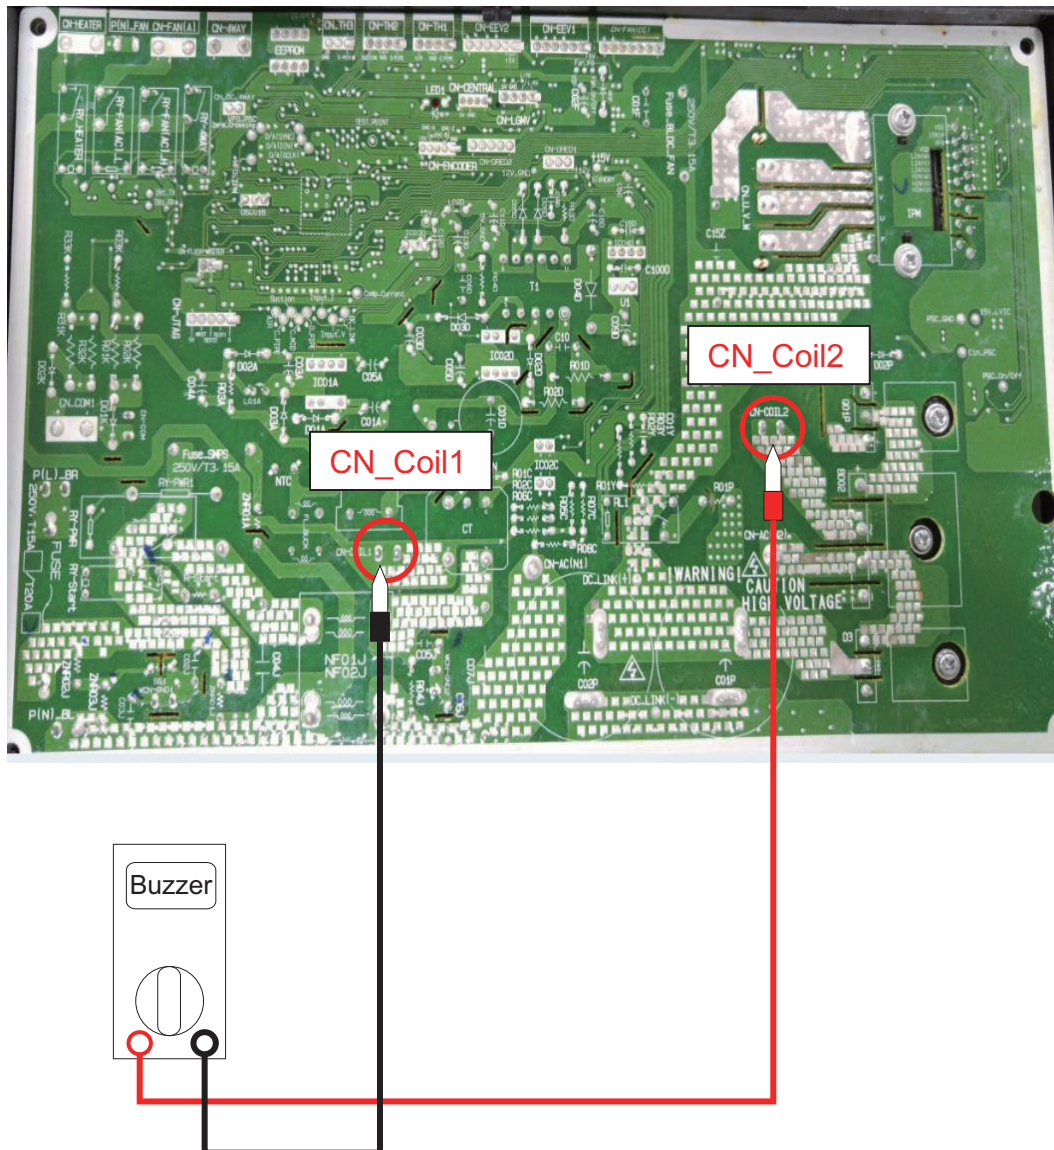

C7-3. Communication Line



Check the resistance of the connecting wires

Measure the resistance value of the both ends of the same-color connecting wire with the multi meter resistance measurement mode.

Be sure to wear the insulating gloves when measuring it and if there is no insulating gloves, measure it by twisting the wire to the Probe Pin to prevent human's hands from touching it.


(If touched by both hands, human's resistance is measured.)

When measuring resistance, the resistance value may vary according to the wire length, however the low value (below 1 Ω) should be measured.

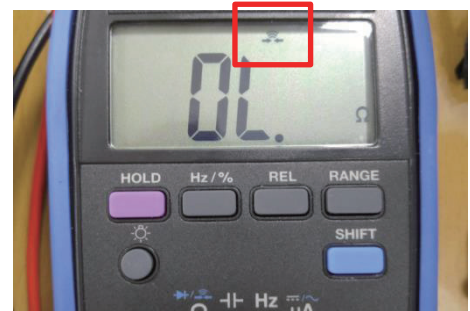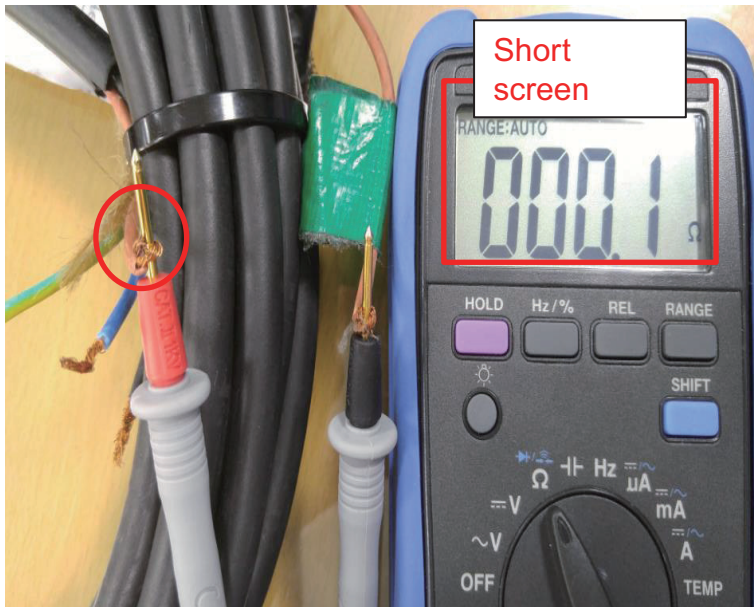

※ Short can be checked by measuring the sound mode.

Also, it should be open when measuring the both ends of the connecting wires with each different colors. Check each connecting status of L – N, L – C, L – G, N – C, N – G, C – G Line.

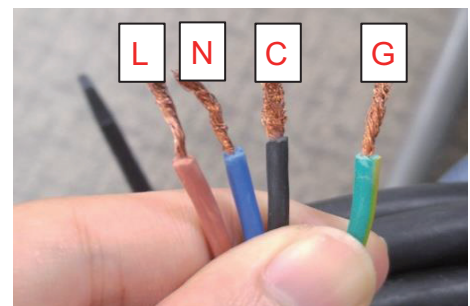

※ They must be opened



C7-4. Main & Terminal Line, Comp Harness

Main power wire & Terminal Jump wire check

Check whether the both ends of the same-color connecting wire is short with multi meter resistance sound mode. When measuring the main power wire, let L,N wire contact No. 1 & No. 2 Plug in turn as it is hard to discriminate Plug and L,N wire.

When contact, consent plug and L, N wire should be matched 1 : 1.



For jump wire, check whether the color connecting wire is short with sound mode, and if brown wire is open, check whether the fuse is burnt out.

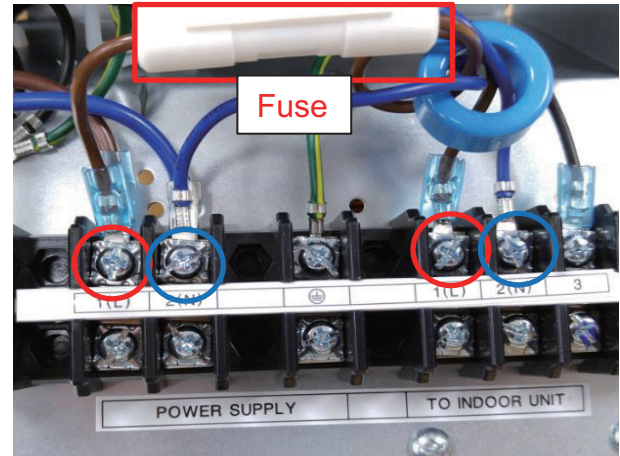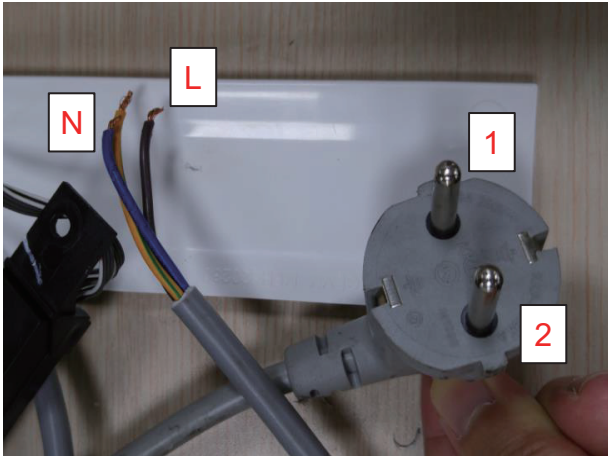

Comp. Wire check

Separate the Comp. Wire line and check whether the both ends of the same-color connecting wire is short with multi meter resistance sound mode.

If there is short between different-color wires, replace the hardness.

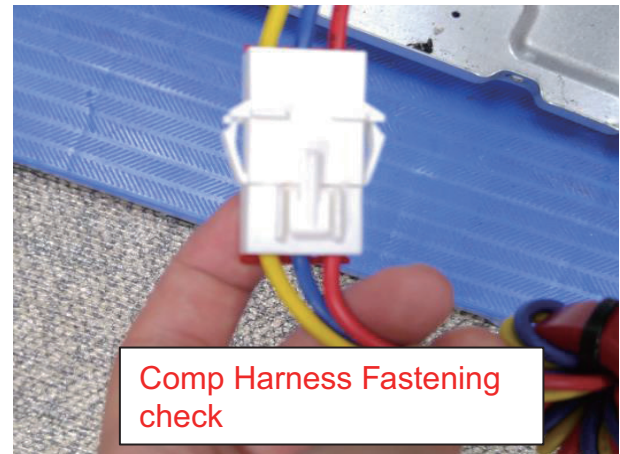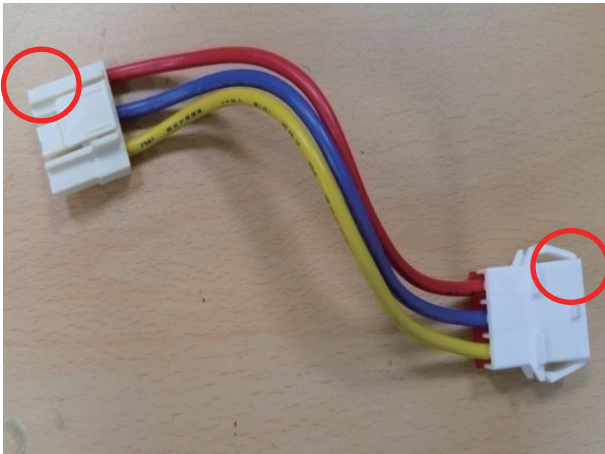



P/NO : MFL41161610

DECEMBER, 2015