



# LG

Life's Good

Internal Use Only

# LED TV


# SERVICE MANUAL

CHASSIS : LU70A

MODEL : 24LH4830 24LH4830-PU

## CAUTION

BEFORE SERVICING THE CHASSIS, READ THE SAFETY PRECAUTIONS IN THIS MANUAL.

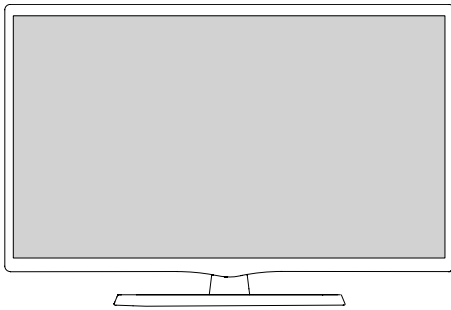

P/NO : MFL69169557 (1609-REV00)

# CONTENTS

<b>CONTENTS .....</b>	<b>2</b>
<b>SAFETY PRECAUTIONS .....</b>	<b>3</b>
<b>SERVICING PRECAUTIONS.....</b>	<b>4</b>
<b>SPECIFICATION .....</b>	<b>6</b>
<b>USB S/W DOWNLOAD.....</b>	<b>9</b>
<b>BLOCK DIAGRAM.....</b>	<b>10</b>
<b>EXPLODED VIEW .....</b>	<b>11</b>
<b>TROUBLESHOOTING GUIDE.....</b>	<b>APPENDIX</b>

# SAFETY PRECAUTIONS

## IMPORTANT SAFETY NOTICE

Many electrical and mechanical parts in this chassis have special safety-related characteristics. These parts are identified by  $\triangle$  in the Exploded View.

It is essential that these special safety parts should be replaced with the same components as recommended in this manual to prevent Shock, Fire, or other Hazards.

Do not modify the original design without permission of manufacturer.

### General Guidance

An isolation Transformer should always be used during the servicing of a receiver whose chassis is not isolated from the AC power line. Use a transformer of adequate power rating as this protects the technician from accidents resulting in personal injury from electrical shocks.

It will also protect the receiver and its components from being damaged by accidental shorts of the circuitry that may be inadvertently introduced during the service operation.

If any fuse (or Fusible Resistor) in this TV receiver is blown, replace it with the specified.

When replacing a high wattage resistor (Oxide Metal Film Resistor, over 1W), keep the resistor 10mm away from PCB.

Keep wires away from high voltage or high temperature parts.

Before returning the receiver to the customer,

always perform an AC leakage current check on the exposed metallic parts of the cabinet, such as antennas, terminals, etc., to be sure the set is safe to operate without damage of electrical shock.

### Leakage Current Cold Check(Antenna Cold Check)

With the instrument AC plug removed from AC source, connect an electrical jumper across the two AC plug prongs. Place the AC switch in the on position, connect one lead of ohm-meter to the AC plug prongs tied together and touch other ohm-meter lead in turn to each exposed metallic parts such as antenna terminals, phone jacks, etc.

If the exposed metallic part has a return path to the chassis, the measured resistance should be between  $1M\Omega$  and  $5.2M\Omega$ .

When the exposed metal has no return path to the chassis the reading must be infinite.

An other abnormality exists that must be corrected before the receiver is returned to the customer.

### Leakage Current Hot Check (See below Figure)

Plug the AC cord directly into the AC outlet.

Do not use a line Isolation Transformer during this check.


Connect 1.5K/10watt resistor in parallel with a 0.15 $\mu$ F capacitor between a known good earth ground (Water Pipe, Conduit, etc.) and the exposed metallic parts.

Measure the AC voltage across the resistor using AC voltmeter with 1000 ohms/volt or more sensitivity.

Reverse plug the AC cord into the AC outlet and repeat AC voltage measurements for each exposed metallic part. Any voltage measured must not exceed 0.75 volt RMS which corresponds to 0.5mA.

In case any measurement is out of the limits specified, there is possibility of shock hazard and the set must be checked and repaired before it is returned to the customer.

### Leakage Current Hot Check circuit

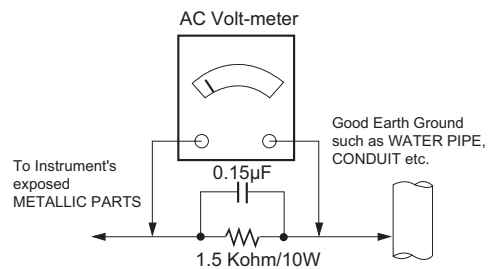

When 25A is impressed between Earth and 2nd Ground for 1 second, Resistance must be less than 0.1

\*Base on Adjustment standard

# SERVICING PRECAUTIONS

**CAUTION:** Before servicing receivers covered by this service manual and its supplements and addenda, read and follow the SAFETY PRECAUTIONS on page 3 of this publication.

**NOTE:** If unforeseen circumstances create conflict between the following servicing precautions and any of the safety precautions on page 3 of this publication, always follow the safety precautions. Remember: Safety First.

## General Servicing Precautions

1. Always unplug the receiver AC power cord from the AC power source before;
  - a. Removing or reinstalling any component, circuit board module or any other receiver assembly.
  - b. Disconnecting or reconnecting any receiver electrical plug or other electrical connection.
  - c. Connecting a test substitute in parallel with an electrolytic capacitor in the receiver.  
**CAUTION:** A wrong part substitution or incorrect polarity installation of electrolytic capacitors may result in an explosion hazard.

2. Test high voltage only by measuring it with an appropriate high voltage meter or other voltage measuring device (DVM, FETVOM, etc) equipped with a suitable high voltage probe. Do not test high voltage by "drawing an arc".

3. Do not spray chemicals on or near this receiver or any of its assemblies.

4. Unless specified otherwise in this service manual, clean electrical contacts only by applying the following mixture to the contacts with a pipe cleaner, cotton-tipped stick or comparable non-abrasive applicator; 10% (by volume) Acetone and 90% (by volume) isopropyl alcohol (90%-99% strength)  
**CAUTION:** This is a flammable mixture.

Unless specified otherwise in this service manual, lubrication of contacts in not required.

5. Do not defeat any plug/socket B+ voltage interlocks with which receivers covered by this service manual might be equipped.
6. Do not apply AC power to this instrument and/or any of its electrical assemblies unless all solid-state device heat sinks are correctly installed.
7. Always connect the test receiver ground lead to the receiver chassis ground before connecting the test receiver positive lead.

Always remove the test receiver ground lead last.

8. Use with this receiver only the test fixtures specified in this service manual.  
**CAUTION:** Do not connect the test fixture ground strap to any heat sink in this receiver.

## Electrostatically Sensitive (ES) Devices

Some semiconductor (solid-state) devices can be damaged easily by static electricity. Such components commonly are called Electrostatically Sensitive (ES) Devices. Examples of typical ES devices are integrated circuits and some field-effect transistors and semiconductor "chip" components. The following techniques should be used to help reduce the incidence of component damage caused by static by static electricity.

1. Immediately before handling any semiconductor component or semiconductor-equipped assembly, drain off any electrostatic charge on your body by touching a known earth ground. Alternatively, obtain and wear a commercially available discharging wrist strap device, which should be removed to prevent potential shock reasons prior to applying power to the

unit under test.

2. After removing an electrical assembly equipped with ES devices, place the assembly on a conductive surface such as aluminum foil, to prevent electrostatic charge buildup or exposure of the assembly.
3. Use only a grounded-tip soldering iron to solder or unsolder ES devices.
4. Use only an anti-static type solder removal device. Some solder removal devices not classified as "anti-static" can generate electrical charges sufficient to damage ES devices.
5. Do not use freon-propelled chemicals. These can generate electrical charges sufficient to damage ES devices.
6. Do not remove a replacement ES device from its protective package until immediately before you are ready to install it. (Most replacement ES devices are packaged with leads electrically shorted together by conductive foam, aluminum foil or comparable conductive material).
7. Immediately before removing the protective material from the leads of a replacement ES device, touch the protective material to the chassis or circuit assembly into which the device will be installed.  
**CAUTION:** Be sure no power is applied to the chassis or circuit, and observe all other safety precautions.
8. Minimize bodily motions when handling unpackaged replacement ES devices. (Otherwise harmless motion such as the brushing together of your clothes fabric or the lifting of your foot from a carpeted floor can generate static electricity sufficient to damage an ES device.)

## General Soldering Guidelines

1. Use a grounded-tip, low-wattage soldering iron and appropriate tip size and shape that will maintain tip temperature within the range of 500 °F to 600 °F.
2. Use an appropriate gauge of RMA resin-core solder composed of 60 parts tin/40 parts lead.
3. Keep the soldering iron tip clean and well tinned.
4. Thoroughly clean the surfaces to be soldered. Use a mall wire-bristle (0.5 inch, or 1.25cm) brush with a metal handle. Do not use freon-propelled spray-on cleaners.
5. Use the following unsoldering technique
  - a. Allow the soldering iron tip to reach normal temperature. (500 °F to 600 °F)
  - b. Heat the component lead until the solder melts.
  - c. Quickly draw the melted solder with an anti-static, suction-type solder removal device or with solder braid.  
**CAUTION:** Work quickly to avoid overheating the circuit board printed foil.
6. Use the following soldering technique.
  - a. Allow the soldering iron tip to reach a normal temperature (500 °F to 600 °F)
  - b. First, hold the soldering iron tip and solder the strand against the component lead until the solder melts.
  - c. Quickly move the soldering iron tip to the junction of the component lead and the printed circuit foil, and hold it there only until the solder flows onto and around both the component lead and the foil.  
**CAUTION:** Work quickly to avoid overheating the circuit board printed foil.
  - d. Closely inspect the solder area and remove any excess or splashed solder with a small wire-bristle brush.

#### *IC Remove/Replacement*

Some chassis circuit boards have slotted holes (oblong) through which the IC leads are inserted and then bent flat against the circuit foil. When holes are the slotted type, the following technique should be used to remove and replace the IC. When working with boards using the familiar round hole, use the standard technique as outlined in paragraphs 5 and 6 above.

#### *Removal*

1. Desolder and straighten each IC lead in one operation by gently prying up on the lead with the soldering iron tip as the solder melts.
2. Draw away the melted solder with an anti-static suction-type solder removal device (or with solder braid) before removing the IC.

#### *Replacement*

1. Carefully insert the replacement IC in the circuit board.
2. Carefully bend each IC lead against the circuit foil pad and solder it.
3. Clean the soldered areas with a small wire-bristle brush. (It is not necessary to reapply acrylic coating to the areas).

#### *"Small-Signal" Discrete Transistor*

##### *Removal/Replacement*

1. Remove the defective transistor by clipping its leads as close as possible to the component body.
2. Bend into a "U" shape the end of each of three leads remaining on the circuit board.
3. Bend into a "U" shape the replacement transistor leads.
4. Connect the replacement transistor leads to the corresponding leads extending from the circuit board and crimp the "U" with long nose pliers to insure metal to metal contact then solder each connection.

#### *Power Output, Transistor Device*

##### *Removal/Replacement*

1. Heat and remove all solder from around the transistor leads.
2. Remove the heat sink mounting screw (if so equipped).
3. Carefully remove the transistor from the heat sink of the circuit board.
4. Insert new transistor in the circuit board.
5. Solder each transistor lead, and clip off excess lead.
6. Replace heat sink.

#### *Diode Removal/Replacement*

1. Remove defective diode by clipping its leads as close as possible to diode body.
2. Bend the two remaining leads perpendicular y to the circuit board.
3. Observing diode polarity, wrap each lead of the new diode around the corresponding lead on the circuit board.
4. Securely crimp each connection and solder it.
5. Inspect (on the circuit board copper side) the solder joints of the two "original" leads. If they are not shiny, reheat them and if necessary, apply additional solder.

#### *Fuse and Conventional Resistor*

##### *Removal/Replacement*

1. Clip each fuse or resistor lead at top of the circuit board hollow stake.
2. Securely crimp the leads of replacement component around notch at stake top.
3. Solder the connections.

**CAUTION:** Maintain original spacing between the replaced component and adjacent components and the circuit board to prevent excessive component temperatures.

#### *Circuit Board Foil Repair*

Excessive heat applied to the copper foil of any printed circuit board will weaken the adhesive that bonds the foil to the circuit board causing the foil to separate from or "lift-off" the board. The following guidelines and procedures should be followed whenever this condition is encountered.

#### *At IC Connections*

To repair a defective copper pattern at IC connections use the following procedure to install a jumper wire on the copper pattern side of the circuit board. (Use this technique only on IC connections).

1. Carefully remove the damaged copper pattern with a sharp knife. (Remove only as much copper as absolutely necessary).
2. Carefully scratch away the solder resist and acrylic coating (if used) from the end of the remaining copper pattern.
3. Bend a small "U" in one end of a small gauge jumper wire and carefully crimp it around the IC pin. Solder the IC connection.
4. Route the jumper wire along the path of the out-away copper pattern and let it overlap the previously scraped end of the good copper pattern. Solder the overlapped area and clip off any excess jumper wire.

#### *At Other Connections*

Use the following technique to repair the defective copper pattern at connections other than IC Pins. This technique involves the installation of a jumper wire on the component side of the circuit board.

1. Remove the defective copper pattern with a sharp knife. Remove at least 1/4 inch of copper, to ensure that a hazardous condition will not exist if the jumper wire opens.
2. Trace along the copper pattern from both sides of the pattern break and locate the nearest component that is directly connected to the affected copper pattern.
3. Connect insulated 20-gauge jumper wire from the lead of the nearest component on one side of the pattern break to the lead of the nearest component on the other side. Carefully crimp and solder the connections.  
**CAUTION:** Be sure the insulated jumper wire is dressed so the it does not touch components or sharp edges.

# SPECIFICATION

NOTE : Specifications and others are subject to change without notice for improvement.

## 1. Application Range

This spec sheet is applied all of the TV with LU70A chassis.

## 3. Test method

- 1) Performance : LGE TV test method followed
- 2) Demanded other specification
  - Safety : UL, CSA, IEC specification
  - EMC: FCC, ICES, IEC specification

## 2. Test condition

Each part is tested as below without special notice.

- 1) Temperature : 25 °C ± 5 °C (77 °F ± 9 °F),  
CST : 40 °C ± 5 °C
- 2) Relative Humidity : 65 % ± 10 %
- 3) Power Voltage

Market	Input voltage	Frequency	Remark
North America	AC 100~240V	50/60Hz	Standard Voltage of each product is marked by models

- 4) Specification and performance of each parts are followed each drawing and specification by part number in accordance with BOM.
- 5) The receiver must be operated for about 5 minutes prior to the adjustment.

## 4. General Specification

No	Item	Specification	Remarks	
1	Receiving system	ATSC / NTSC-M / 64 & 256 QAM		
2	Available Channel	1) VHF : 02~13 2) UHF : 14~69 3) DTV : 02-69 4) CATV : US 01~135 , KOREA 01~158 5) CADTV : US 01~135, KOREA 01~158		
3	Input Voltage	AC 100 ~ 240V 50/60Hz	AC 100 ~ 240V 50/60Hz	
4	Market	NORTH AMERICA		
5	Screen Size	23.6 inch Wide (1366x768)	HD	
6	Aspect Ratio	16:9		
7	Tuning System	FS		
8	Module	Edge LED	V236BJ1-LE2(CMI)	HD
			MV236WHM-N10(BOE)	HD
9	Operating Environment	1) Temp : 0 ~ 40 deg 2) Humidity : ~ 80 %		
10	Storage Environment	1) Temp : -20 ~ 60 deg 2) Humidity : ~ 85 %		

## 5. Feature

No	Item	EA	Specification	Remarks
1	Component & Composite Input	1	AV Input & Y, Pb, Pr Input	Rear
2	HDMI Input	2	HDMI Input 1	Rear
			HDMI Input 2	Rear
3	USB	1	Upgrade / Mpeg2 (USB2.0)	Side
4	Digital audio Out	1	Optic (SPDIF)	Rear
5	LAN	1	LAN	Rear

## 6. Supported video resolutions

### - Component input(Y, CB/PB, CR/PR)

No.	Resolution	H-freq(kHz)	V-freq(Hz)	Pixel clock(MHz)	Proposed
1	720*480	15.75	60.00	13.513	SDTV ,DVD 480I
2	720*480	15.73	59.94	13.500	SDTV ,DVD 480I
3	720*480	31.50	60.00	27.027	SDTV 480P
4	720*480	31.47	59.94	27.000	SDTV 480P
5	1280*720	45.00	60.00	74.250	HDTV 720P
6	1280*720	44.96	59.94	74.176	HDTV 720P
7	1920*1080	33.75	60.00	74.250	HDTV 1080I
8	1920*1080	33.72	59.94	74.176	HDTV 1080I
9	1920*1080	67.50	60.00	148.500	HDTV 1080P
10	1920*1080	67.43	59.94	148.352	HDTV 1080P
11	1920*1080	27.00	24.00	74.250	HDTV 1080P
12	1920*1080	26.97	23.97	74.176	HDTV 1080P
13	1920*1080	33.75	30.00	74.250	HDTV 1080P
14	1920*1080	33.71	29.97	74.176	HDTV 1080P


**- HDMI Input (DTV / PC)**

No.	Resolution	H-freq(kHz)	V-freq(Hz)	Pixel clock(MHz)	Proposed	Remarks
HDMI-PC						
1	640*350	31.46	70.09	25.17	EGA	
2	720*400	31.46	70.08	28.32	DOS	
3	640*480	31.46	59.94	25.17	VESA(VGA)	
4	800*600	37.87	60.31	40.00	VESA(SVGA)	
5	1024*768	48.36	60.00	65.00	VESA(XGA)	
6	1152*864	54.34	60.05	80.00	VESA	
7	1280*1024	63.98	60.02	108.00	VESA (SXGA)	FHD only
8	1360*768	47.71	60.01	85.50	VESA (WXGA)	
9	1920*1080	67.50	60.00	148.5	WUXGA(Reduced Blanking)	FHD only
HDMI-DTV						
1	640 * 480	31.46	59.94	25.125	SDTV 480P	
2	640 * 480	31.50	60.00	25.125	SDTV 480P	
3	720 * 480	15.73	59.94	13.500	SDTV 480I	Spec. out but display
4	720 * 480	15.75	60.00	13.514	SDTV 480I	Spec. out but display
5	720 * 480	31.47	59.94	27.00	SDTV 480P	
6	720 * 480	31.50	60.00	27.027	SDTV 480P	
7	1280*720	44.96	59.94	74.176	HDTV 720P	
8	1280*720	45.00	60.00	74.25	HDTV 720P	
9	1920*1080	33.72	59.94	74.176	HDTV 1080I	
10	1920*1080	33.75	60.00	74.25	HDTV 1080I	
11	1920*1080	26.97	23.97	63.296	HDTV 1080P	
12	1920*1080	27.00	24.00	63.36	HDTV 1080P	
13	1920*1080	33.71	29.97	79.120	HDTV 1080P	
14	1920*1080	33.75	30.00	79.20	HDTV 1080P	
15	1920*1080	67.43	59.94	148.350	HDTV 1080P	
16	1920*1080	67.50	60.00	148.50	HDTV 1080P	




# USB S/W DOWNLOAD

- 1) Put the USB Stick to the USB socket.
- 2) Automatically detecting update file in USB Stick.  
- If your downloaded program version in USB Stick is Low, it didn't work. But your downloaded version is High, USB data is automatically detecting. (Download Version High & Power only mode, Set is automatically Download)
- 3) Show the message "Copying files from memory".

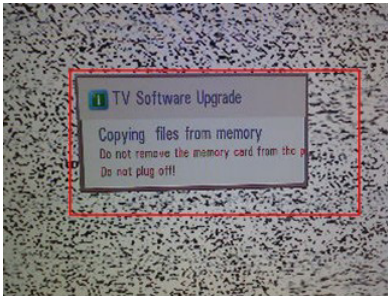


- 4) Updating is starting.

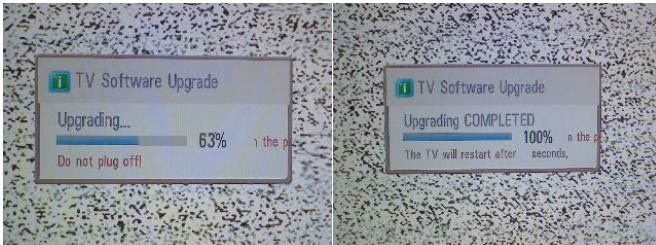

- 5) Updating Completed, The TV will restart automatically.
  - 6) If your TV is turned on, check your updated version and Tool option. (explain the Tool option, next stage)
- \* If downloading version is more high than your TV have, TV can lost all channel data. In this case, you have to channel recover. if all channel data is cleared, you didn't have a DTV/ATV test on production line.
- \* After downloading, have to adjust Tool Option again.
- 1) Push "IN-START" key in service remote control.
  - 2) Select "Tool Option 1" and push "OK" key.
  - 3) Punch in the number. (Each model has their number)

# BLOCK DIAGRAM

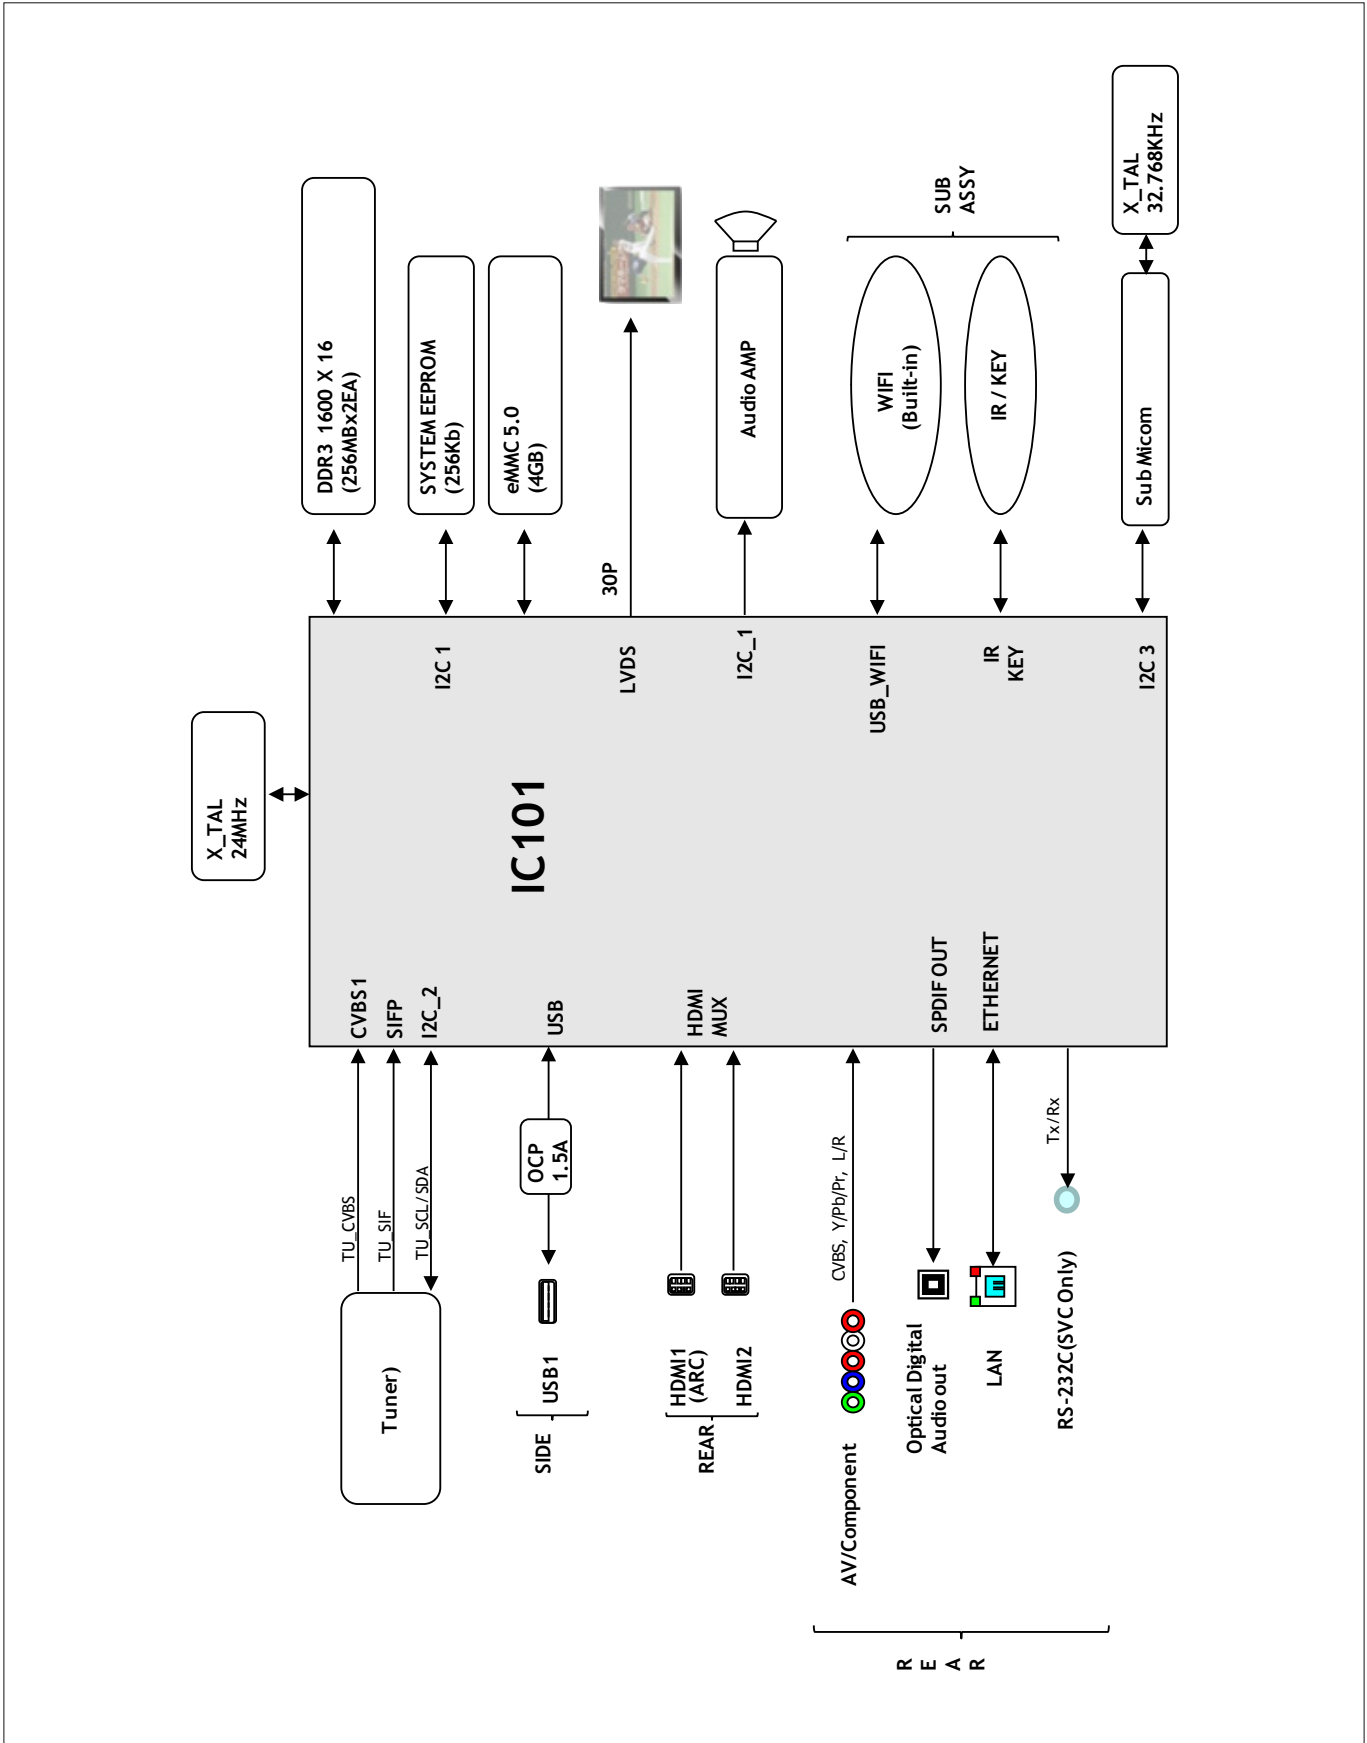


# EXPLODED VIEW

## IMPORTANT SAFETY NOTICE

Many electrical and mechanical parts in this chassis have special safety-related characteristics. These parts are identified by  $\triangle$  in the EXPLODED VIEW.

It is essential that these special safety parts should be replaced with the same components as recommended in this manual to prevent Shock, Fire, or other Hazards.

Do not modify the original design without permission of manufacturer.

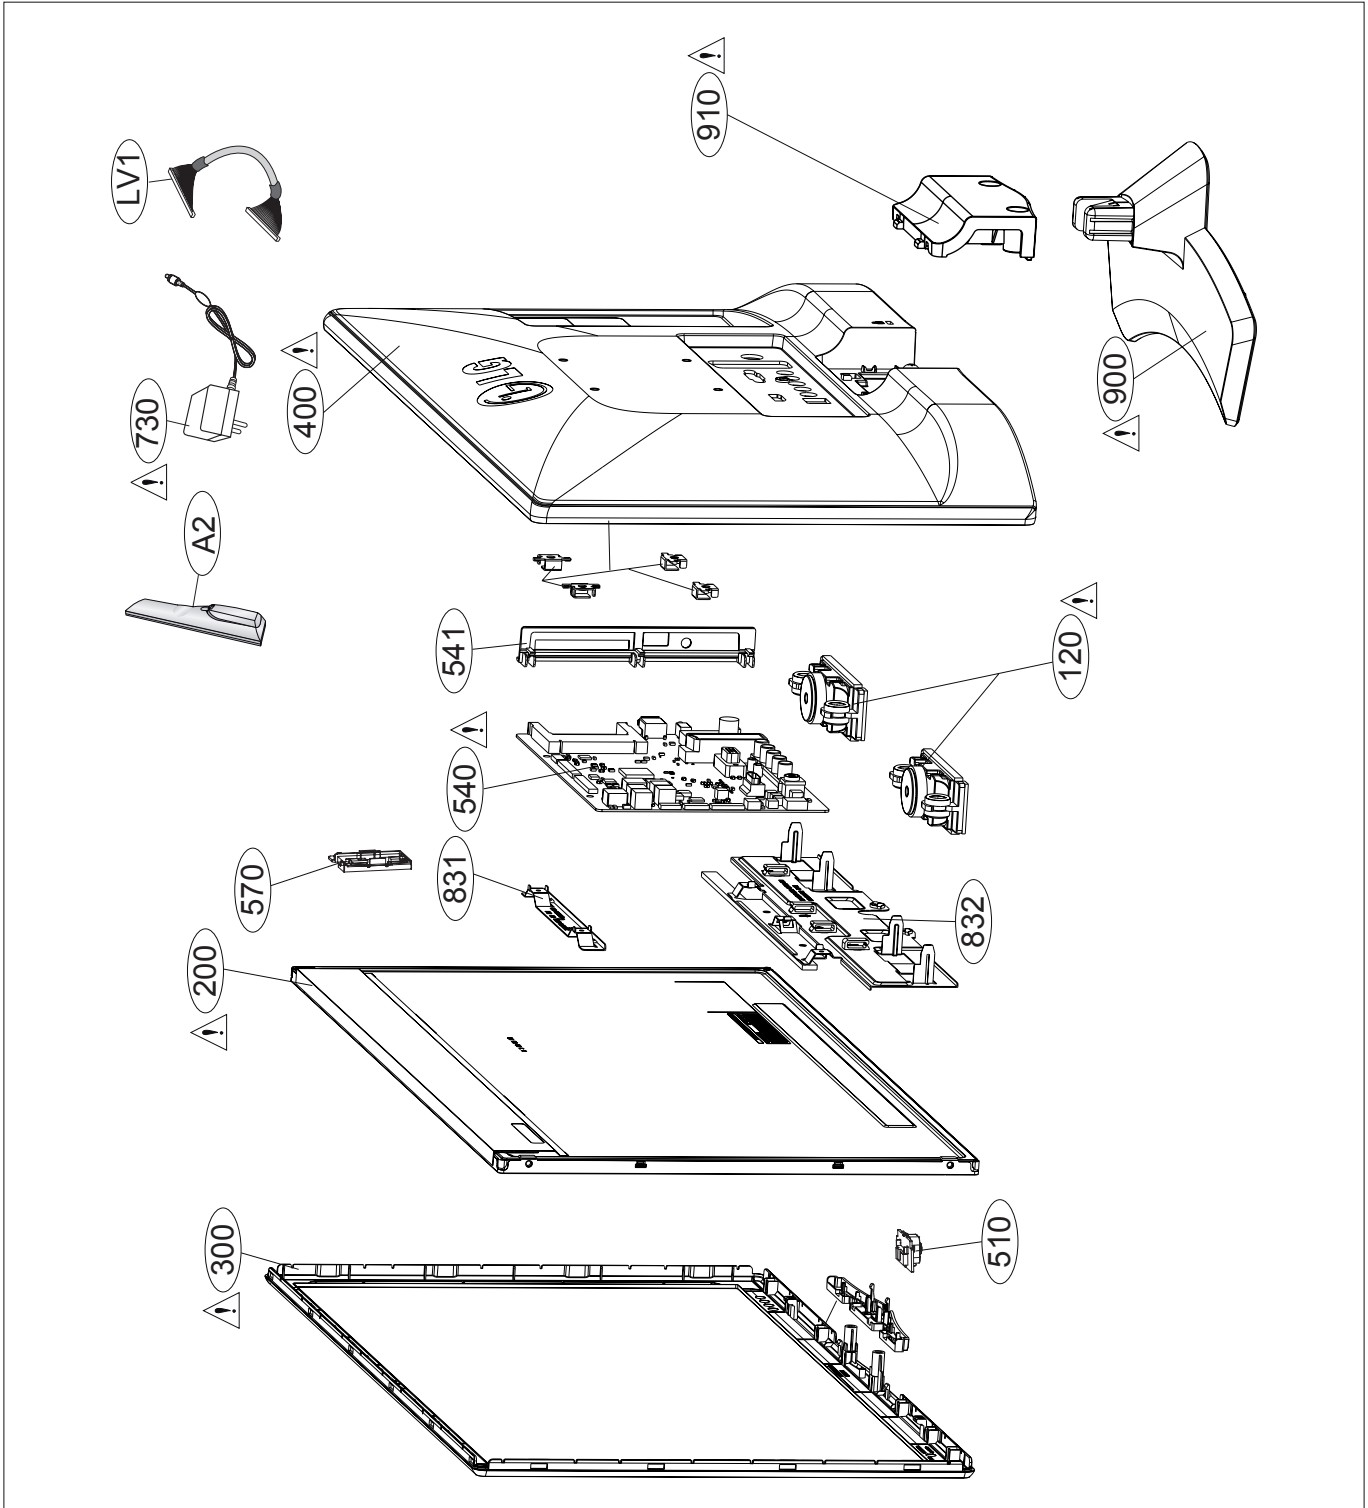



# **TROUBLE SHOOTING GUIDE**

# Contents of Standard Repair Process


\* First of all, Check whether there is SVC Bulletin in GSCS System for these model.

No.	Error symptom (High category)	Error symptom (Mid category)	Page	Remarks
1	A. Video error	No video/Normal audio	1	
2		No video/No audio	2	
3		Tuning fail, Picture broken/ Freezing	3	
4		Color error	4	
5		Vertical/Horizontal bar, residual image, light spot, external device color error	5	
6	B. Power error	No power	6	
7		Off when on, off while viewing, power auto on/off	7	
8	C. Audio error	No audio/Normal video	8	
9		Wrecked audio/discontinuation/noise	9	
10	D. Function error	Remote control & Local switch checking	10	
11		External device recognition error	11	
12	E. Noise	Circuit noise, mechanical noise	12	
13	F. Exterior error	Exterior defect	13	


Standard Repair Process

	<b>Error Symptom</b>	<b>A. Video Error</b>	<b>Established date</b>		<b>1/13</b>
	<b>Content</b>	<b>No video / Normal audio</b>	<b>Revised date</b>		

**First of all, Check whether all of cables between board is inserted properly or not.  
(Main B/D ↔ Adaptor, LVDS Cable, Speaker Cable, IR B/D Cable...)**

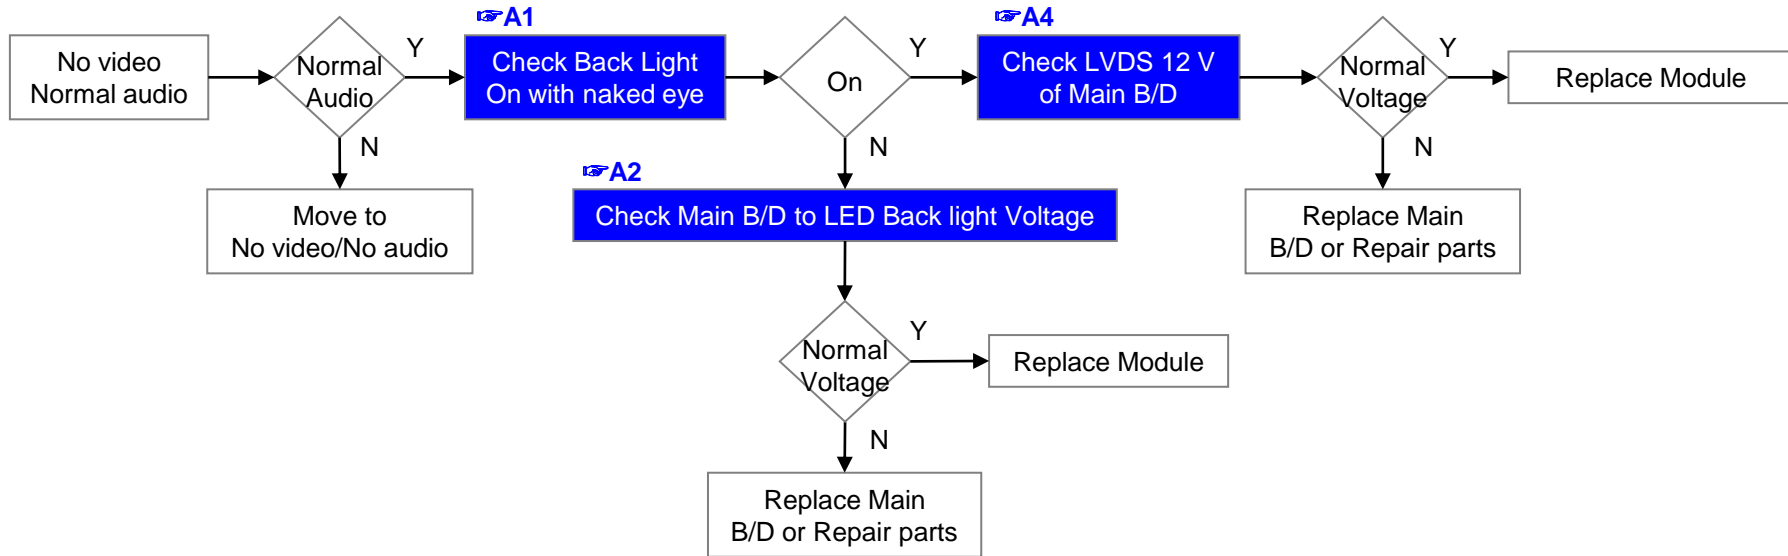


※ Precaution    A3 & A6



Standard Repair Process

	<b>Error Symptom</b>	<b>A. Video Error</b>	<b>Established date</b>		<b>2/13</b>
	<b>Content</b>	<b>No video / No audio</b>	<b>Revised date</b>		

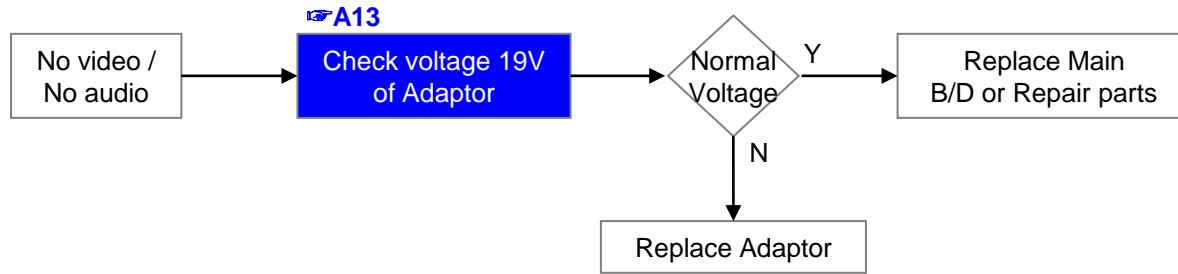




Standard Repair Process

	<b>Error Symptom</b>	<b>A. Video Error</b>	<b>Established date</b>		<b>3/13</b>
	<b>Content</b>	<b>Tuning fail, Picture broken/freezing</b>	<b>Revised date</b>		

A5


Check RF Signal level

- . By using Digital signal level meter
- . By using Diagnostics Setting on OSD  
( Setting → Customer Support(red button on remote control) → Signal Test )
- Signal strength (Normal : over 50%)
- Signal quality (Normal : over 50%)

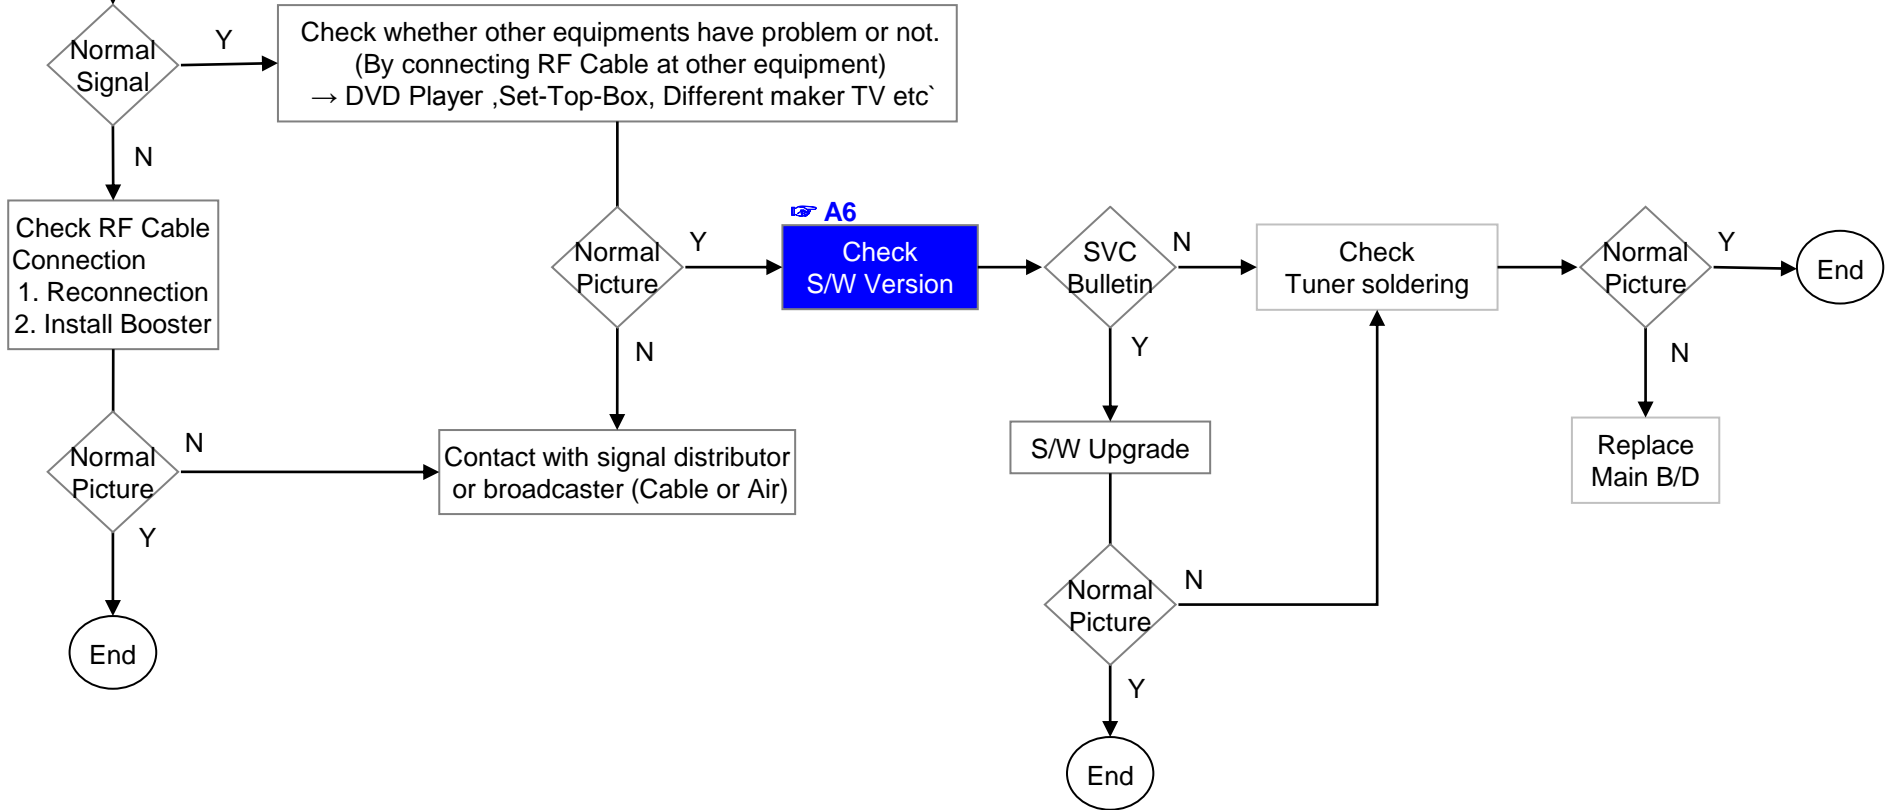

Standard Repair Process


	<b>Error Symptom</b>	<b>A. Video Error</b>	<b>Established date</b>	
	<b>Content</b>	<b>Color error</b>	<b>Revised date</b>	<b>5/13</b>

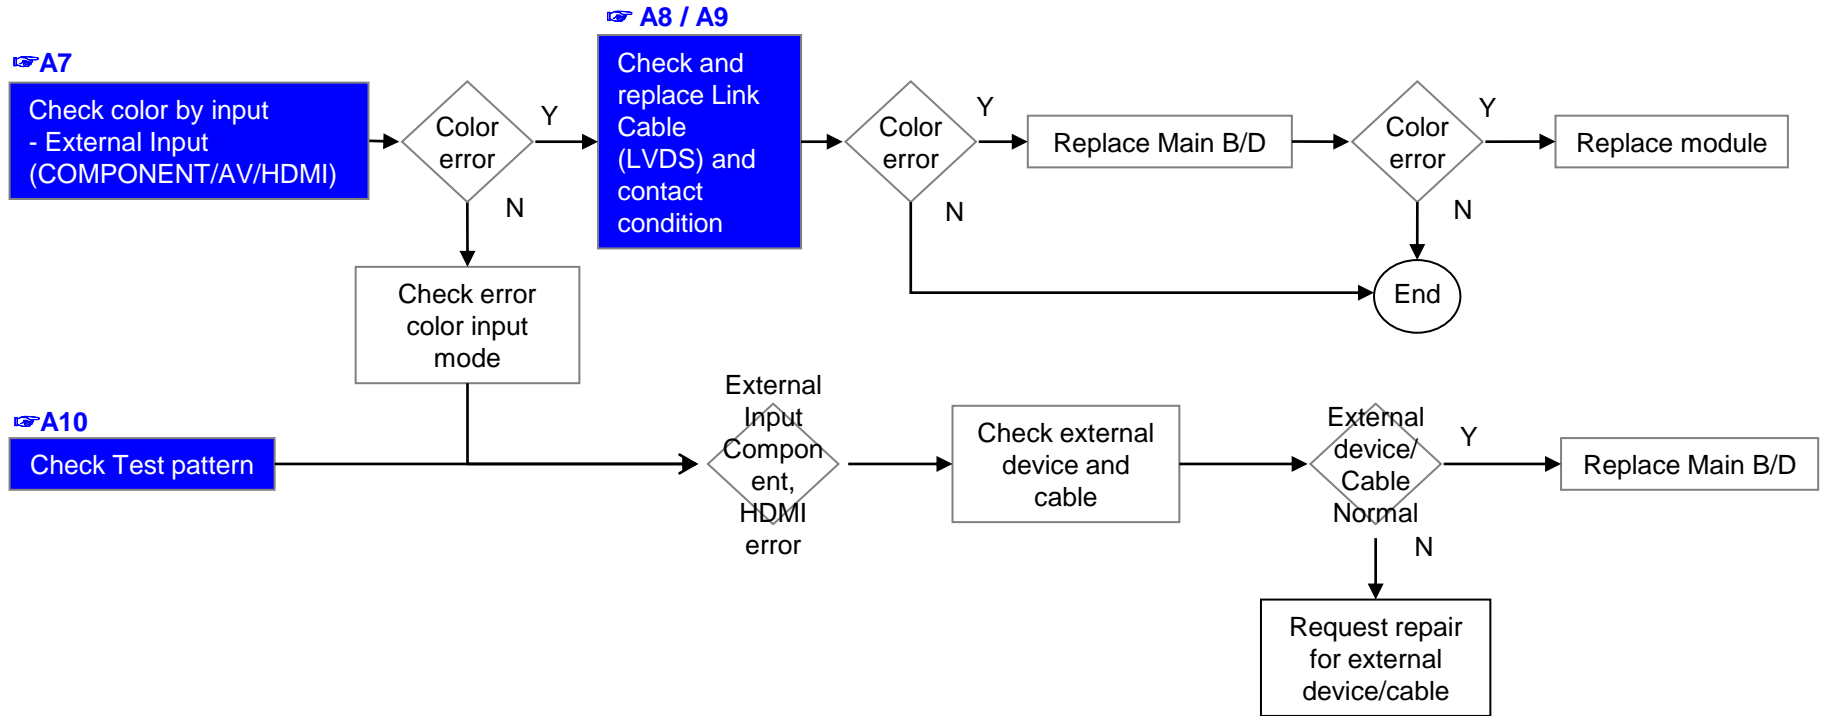


Standard Repair Process

	<b>Error Symptom</b>	<b>A. Video Error</b>	<b>Established date</b>		
	<b>Content</b>	<b>Vertical/Horizontal bar, Residual Image, Light spot, External device Color error</b>	<b>Revised date</b>		<b>6/14</b>

Vertical/Horizontal bar, residual image, light spot

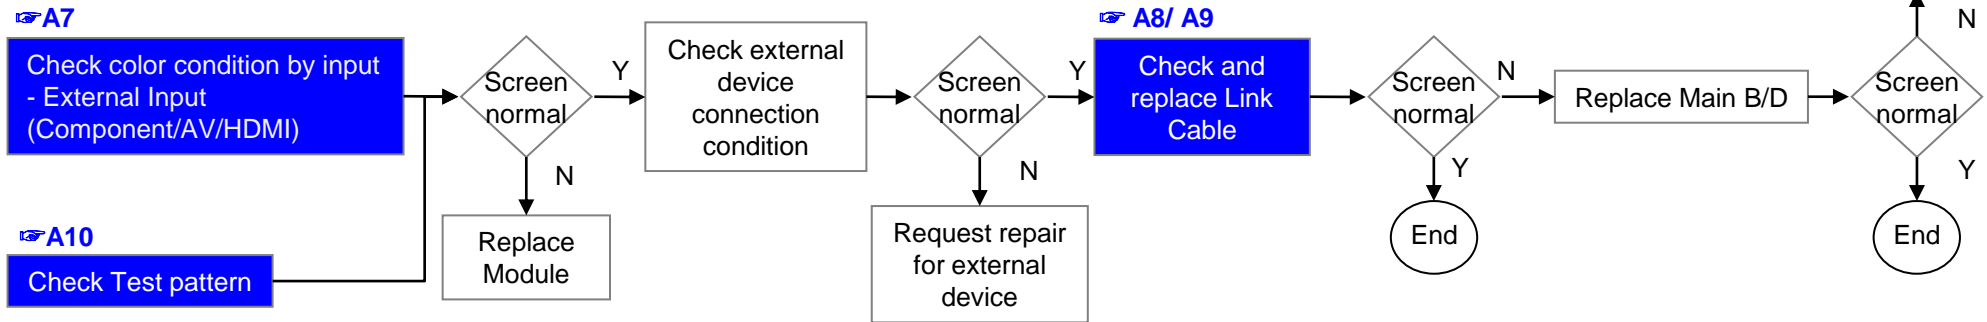


External device screen error-Color error

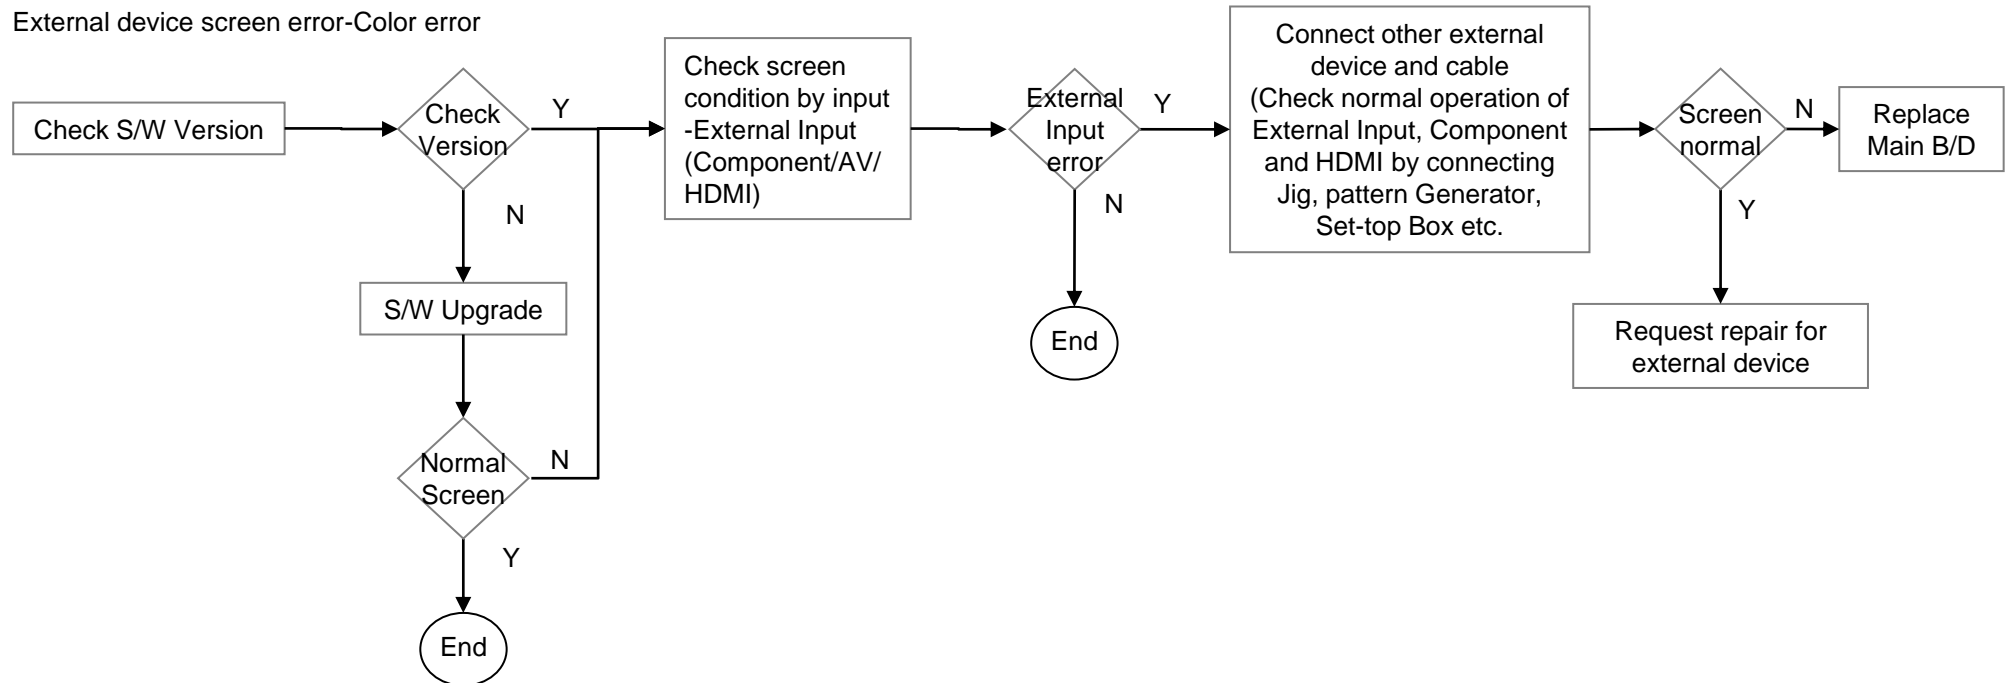


Standard Repair Process

	<b>Error Symptom</b>	<b>B. Power Error</b>	<b>Established date</b>	
	<b>Content</b>	<b>No power</b>	<b>Revised date</b>	<b>7/13</b>

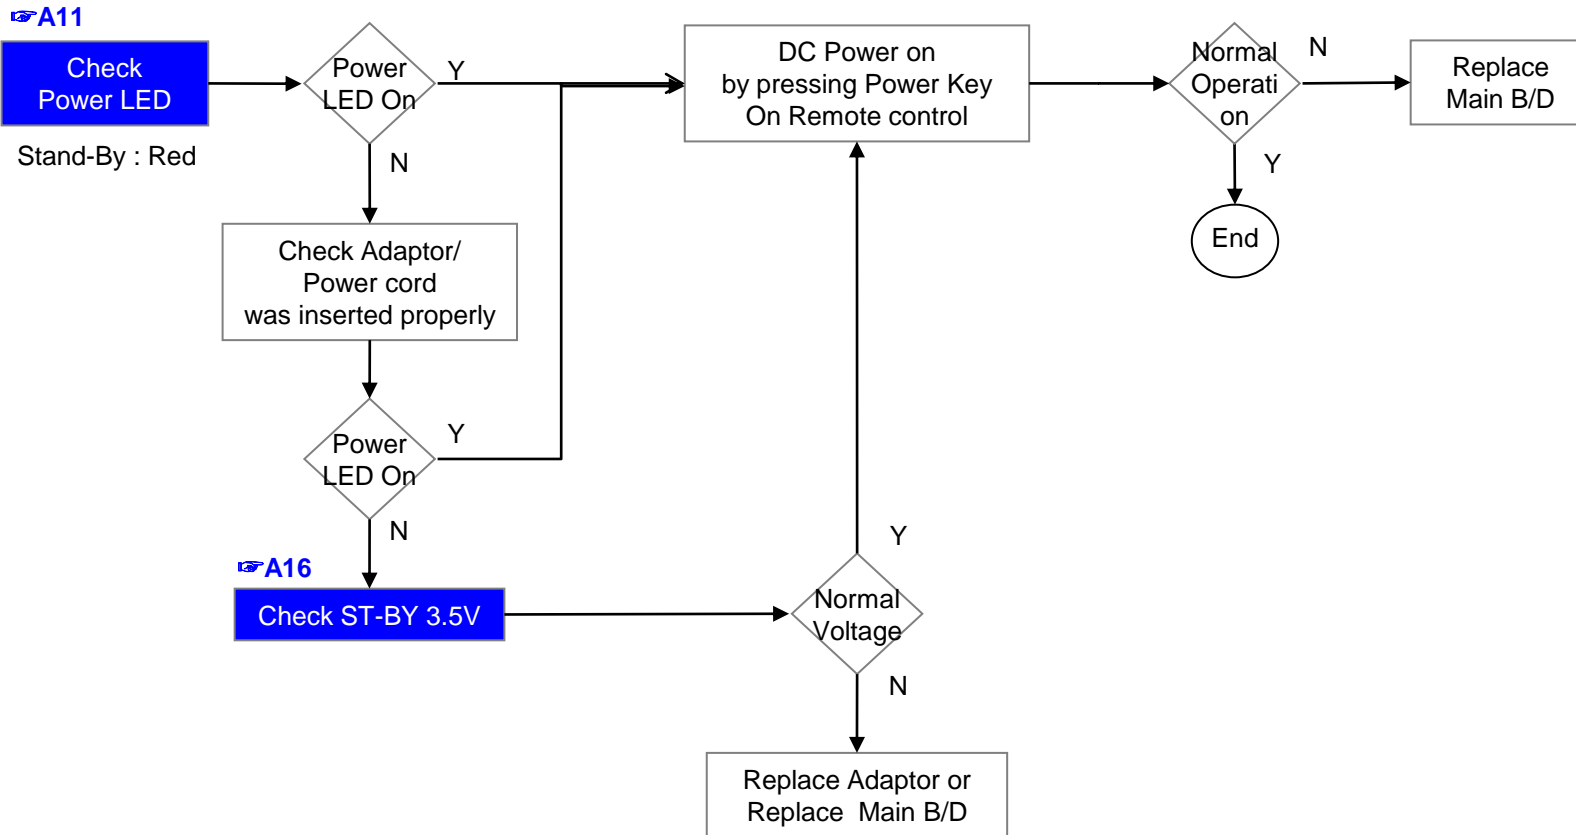

## Standard Repair Process

	<b>Error Symptom</b>	<b>B. Power Error</b>	<b>Established date</b>	
	<b>Content</b>	<b>Off when on/off while viewing, power auto on/off</b>	<b>Revised date</b>	<b>8/13</b>

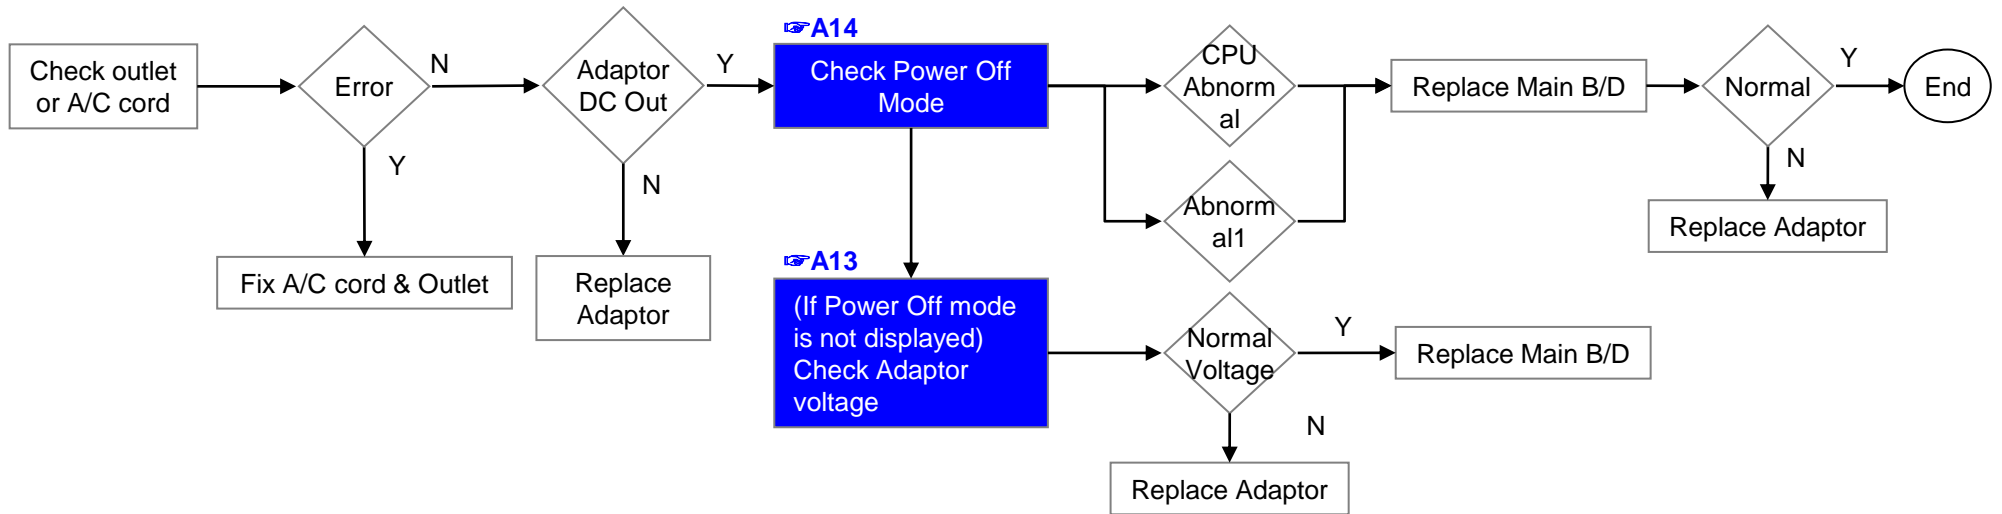


\* Please refer to the all cases which can be displayed on power off mode.

Status	Power off List	Explanation
Normal	"POWEROFF_REMOTEKEY"	Power off by REMOTE CONTROL
	"POWEROFF_OFFTIMER"	Power off by OFF TIMER
	"POWEROFF_SLEEPTIMER"	Power off by SLEEP TIMER
	"POWEROFF_INSTOP"	Power off by INSTOP KEY
	"POWEROFF_AUTOOFF"	Power off by AUTO OFF
	"POWEROFF_ONTIMER"	Power off by ON TIMER
	"POWEROFF_RS232C"	Power off by RS232C
	"POWEROFF_RESREC"	Power off by Reserved Record
	"POWEROFF_RECEND"	Power off by End of Recording
	"POWEROFF_SWDOWN"	Power off by S/W Download
	"POWEROFF_UNKNOWN"	Power off by unknown status except listed case
Abnormal	"POWEROFF_ABNORMAL1"	Power off by abnormal status except CPU trouble
	"POWEROFF_CPUABNORMAL"	Power off by CPU Abnormal


Standard Repair Process

	<b>Error Symptom</b>	<b>C. Audio Error</b>	<b>Established date</b>		
	<b>Content</b>	<b>No audio / Normal video</b>	<b>Revised date</b>		<b>9/13</b>

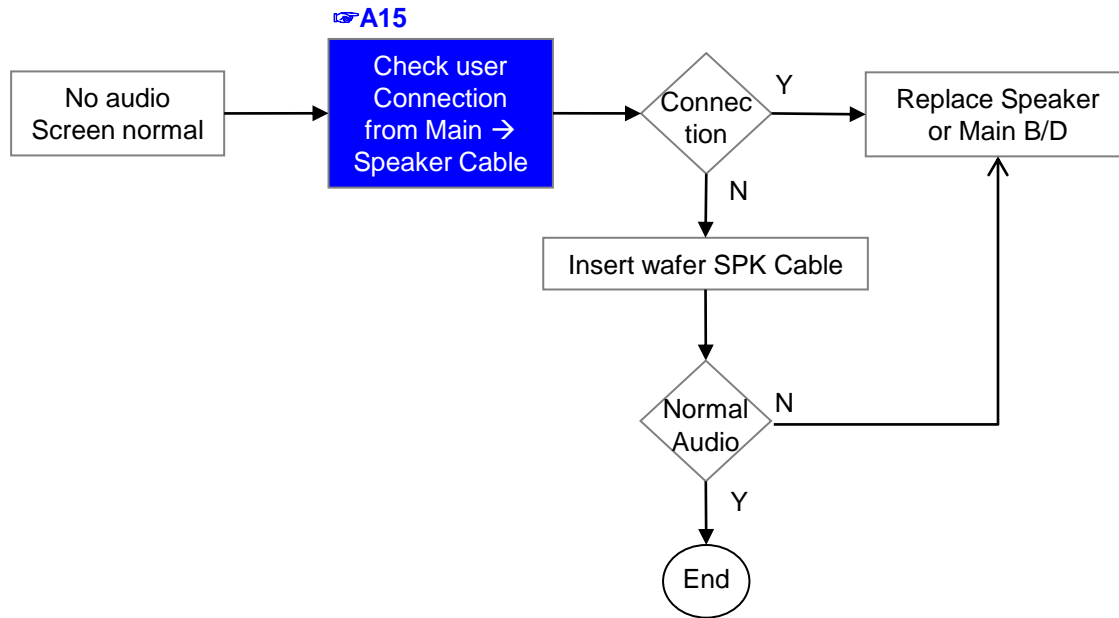


Standard Repair Process

Error Symptom	C. Audio Error	Established date	
Content	Wrecked audio / Discontinuation / Noise	Revised date	10/14

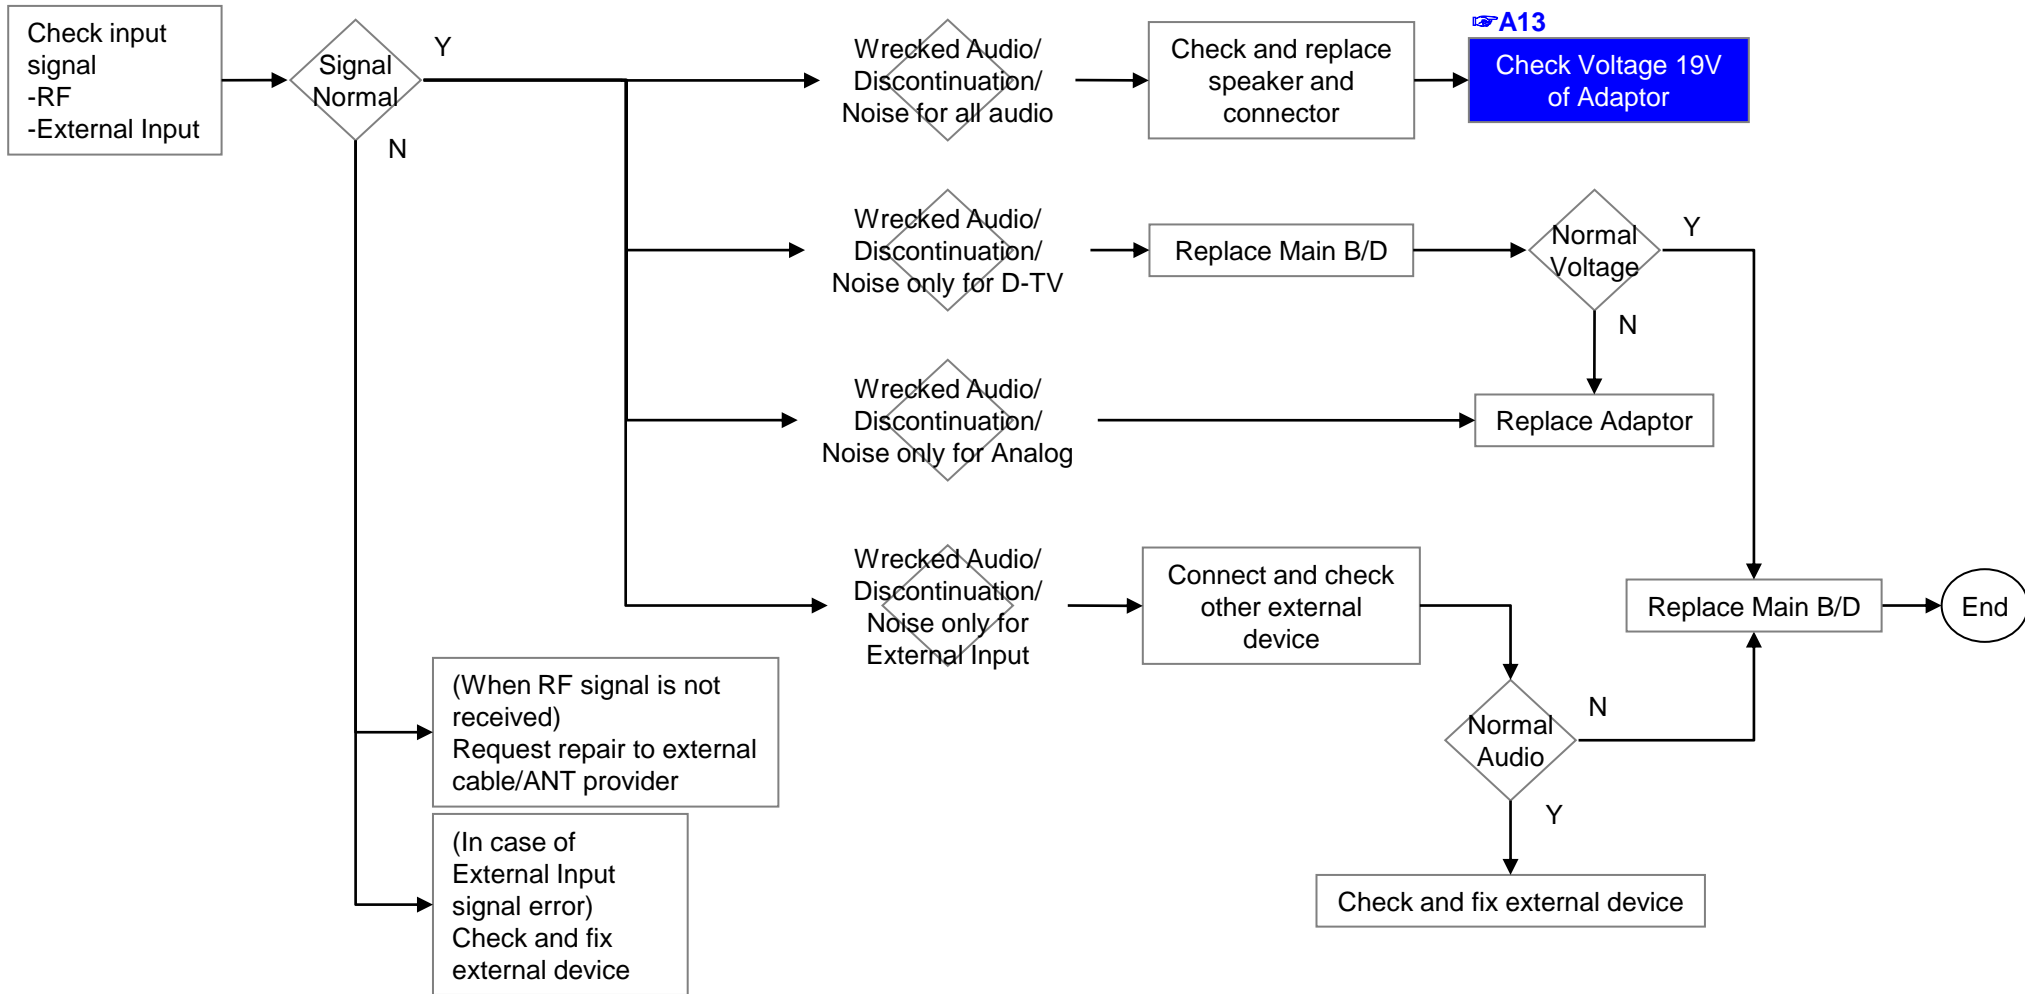

Standard Repair Process


	<b>Error Symptom</b>	<b>D. Function Error</b>	<b>Established date</b>		<b>10/13</b>
	<b>Content</b>	<b>Remote control &amp; Local switch checking</b>	<b>Revised date</b>		

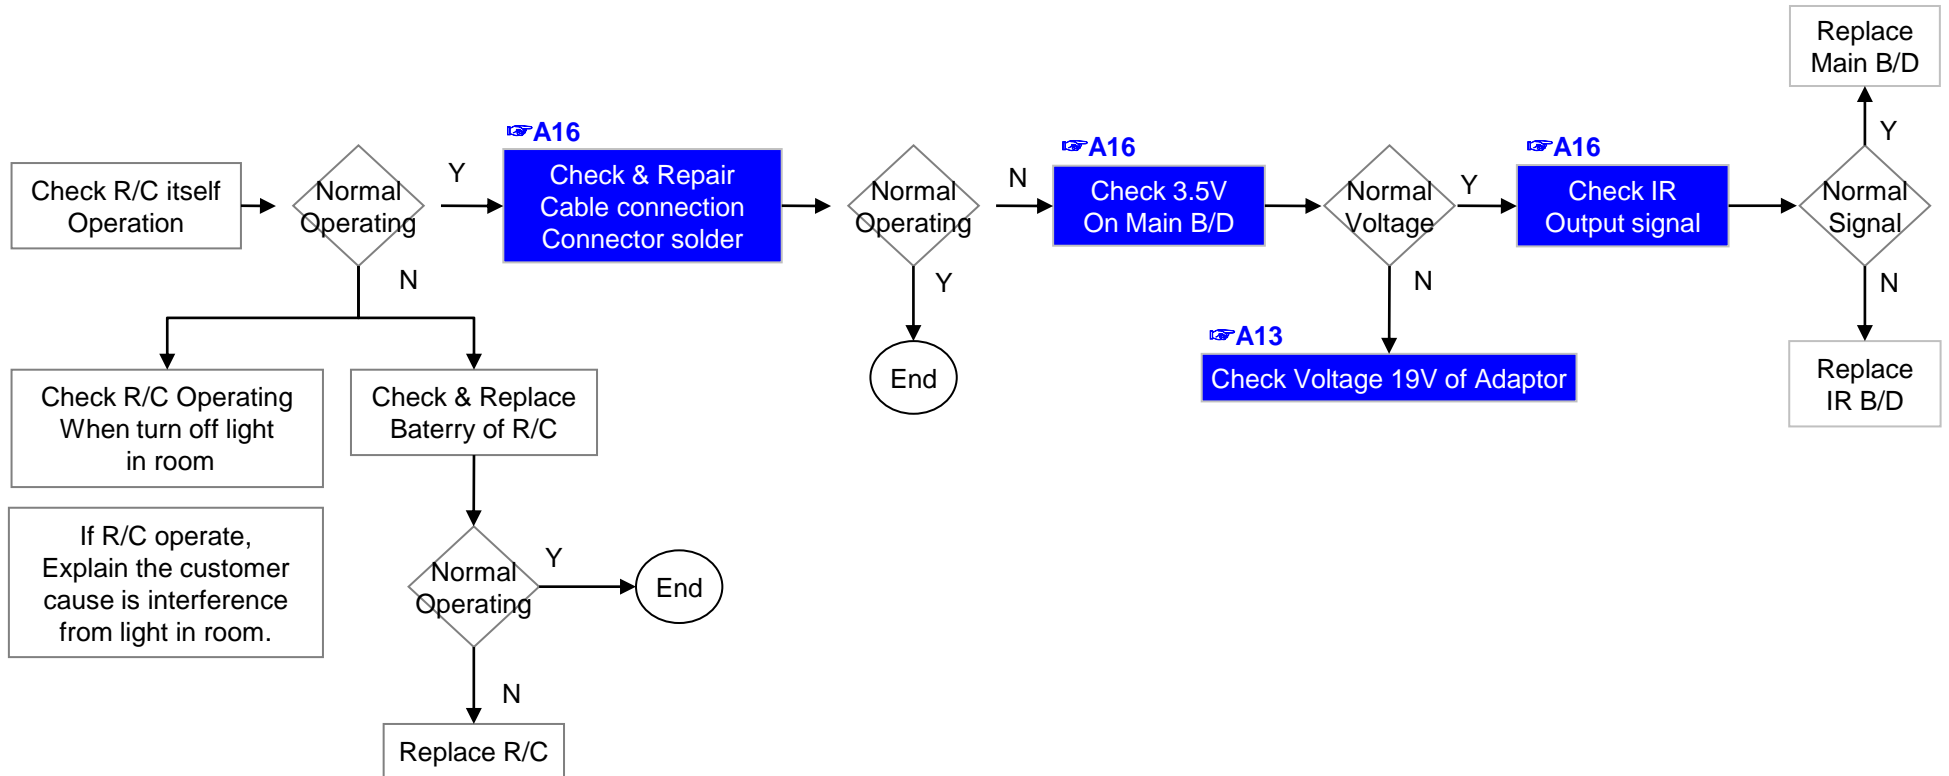




Standard Repair Process

	<b>Error Symptom</b>	<b>D. Function Error</b>	<b>Established date</b>		<b>11/13</b>
	<b>Content</b>	<b>External device recognition error</b>	<b>Revised date</b>		

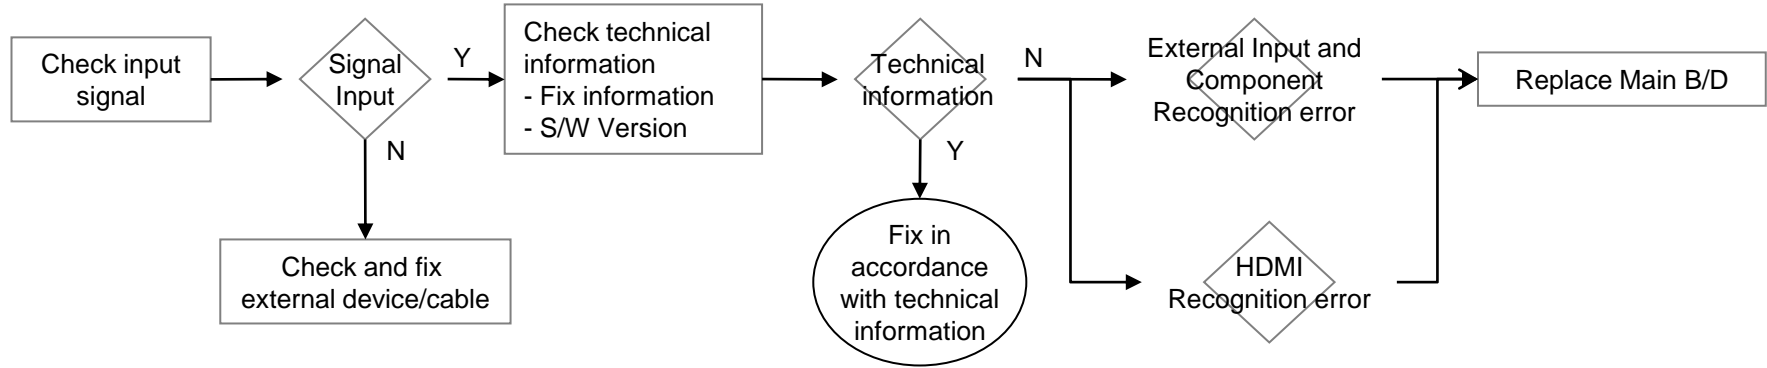


Standard Repair Process

	<b>Error Symptom</b>	<b>E. Noise</b>	<b>Established date</b>		
	<b>Content</b>	<b>Circuit noise, Mechanical noise</b>	<b>Revised date</b>		<b>12/13</b>

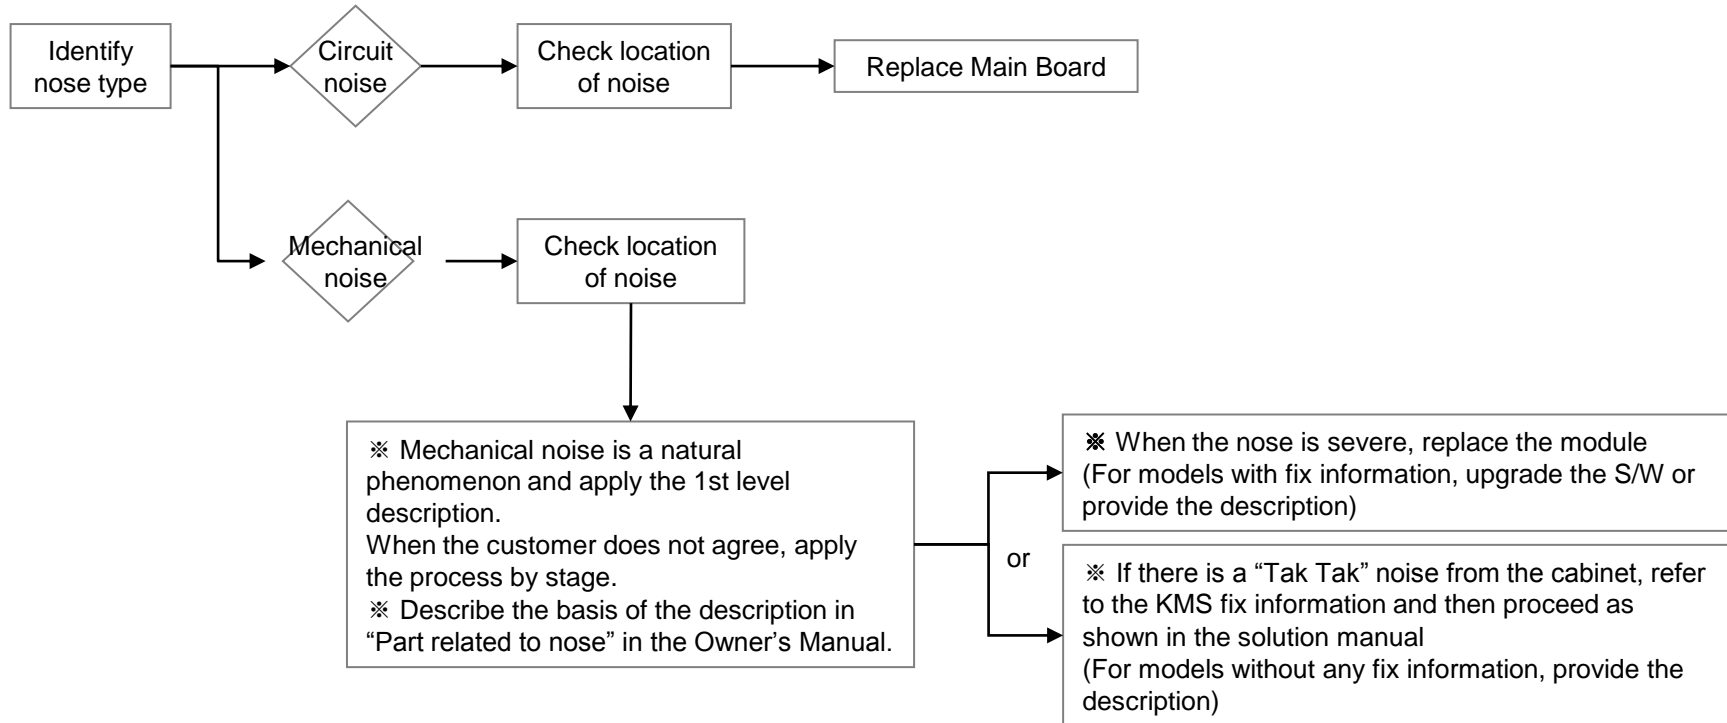

Standard Repair Process

	<b>Error Symptom</b>	<b>F. Exterior Defect</b>	<b>Established date</b>		
	<b>Content</b>	<b>Exterior defect</b>	<b>Revised date</b>		<b>13/13</b>

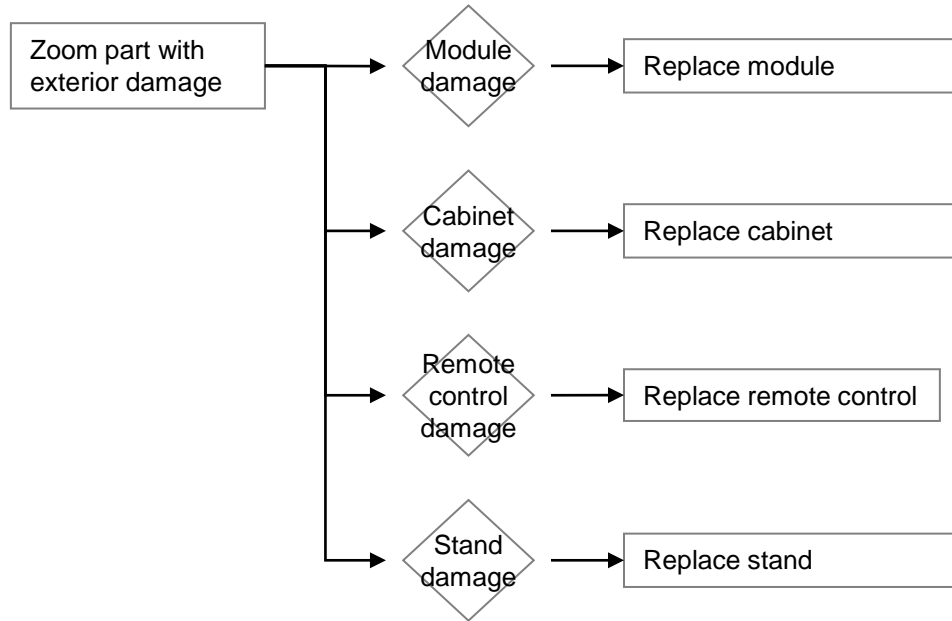

# Contents of Standard Repair Process Detail Technical Manual

\* First of all, Check whether there is SVC Bulletin in GSCS System for these model.

No.	Error symptom	Content	Page	Remarks
1	A. Video error_ No video/Normal audio	Check LCD back light with naked eye	A1	
2		LED driver B+ measuring method	A2	
3		Check White Balance value	A3	
4		Power voltage measuring method	A4	
5	A. Video error_ No video/Video lag/stop	TUNER input signal strength checking method	A5	
6		Version checking method	A6	
7	A. Video error_Color error	Connection diagram	A7	
8		Check Link Cable (LVDS) reconnection condition	A8	
9			A9	
10		Adjustment Test pattern - ADJ Key	A10	
11	A. Video error_Vertical/Horizontal bar, residual image, light spot	Connection diagram	A8	
12		Check Link Cable reconnection condition	A8	
13			A9	
14	<b>&lt;Appendix&gt;</b> Defected Type caused by T-Con/ Inverter/ Module	Adjustment Test pattern - ADJ Key	A10	
15		Exchange T-Con Board (1)	A-1/5	
16		Exchange T-Con Board (2)	A-2/5	
17		Exchange LED driver Board (PSU)	A-3/5	
18		Exchange Module itself (1)	A-4/5	
		Exchange Module itself (2)	A-5/5	

# Contents of Standard Repair Process Detail Technical Manual

\* First of all, Check whether there is SVC Bulletin in GSCS System for these model.


No.	Error symptom	Content	Page	Remarks
19	B. Power error_No power	Check front display LED	A11	
20		Check power input Voltage & ST-BY 3.5V	A12	
21		Checking method when power is ON	A13	
22		Power voltage measuring method	A4	
23	B. Power error_Off when on, off while viewing	POWER OFF MODE checking method	A14	
24	C. Audio error_No audio/Normal video	Checking method in Setting when there is no audio	A15	
25	D. Function error_ No response in remote control, key error	Remote control operation checking method	A16	

<b>Error Symptom</b>	<b>A. Video Error, No Video/Normal Audio</b>	<b>Established date</b>		<b>A1</b>
<b>Content</b>	<b>Check Back Light On with Naked eye</b>	<b>Revised date</b>		



Power On -> disjoint back case -> check lighting

<b>Error Symptom</b>	<b>A. Video Error, No Video/Normal Audio</b>	<b>Established date</b>		<b>A2</b>
<b>Content</b>	<b>Main Board to LED back light Voltage</b>	<b>Revised date</b>		



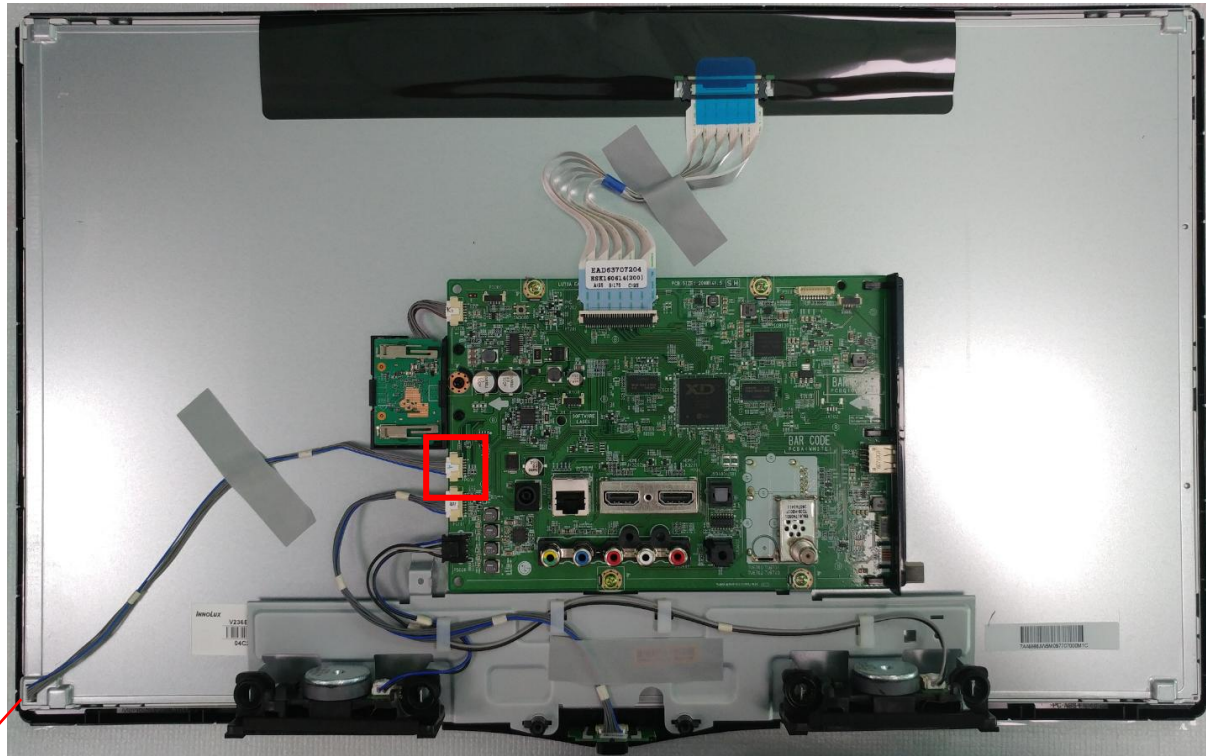


CNT:FCN\_WM13-406-063N or Cvilux\_CI1406M1HRK-NH  
 Pin 1 VLED+ (White Wire)  
 Pin 2 NC  
 Pin 3 NC  
 Pin 4 NC  
 Pin 5 N-  
 Pin 6 N-



Measure DC Voltage applying to LED backlight from Main B/D

<b>Error Symptom</b>	<b>A. Video Error, No Video/Normal Audio</b>	<b>Established date</b>		<b>A3</b>
<b>Content</b>	<b>Check White Balance value</b>	<b>Revised date</b>		

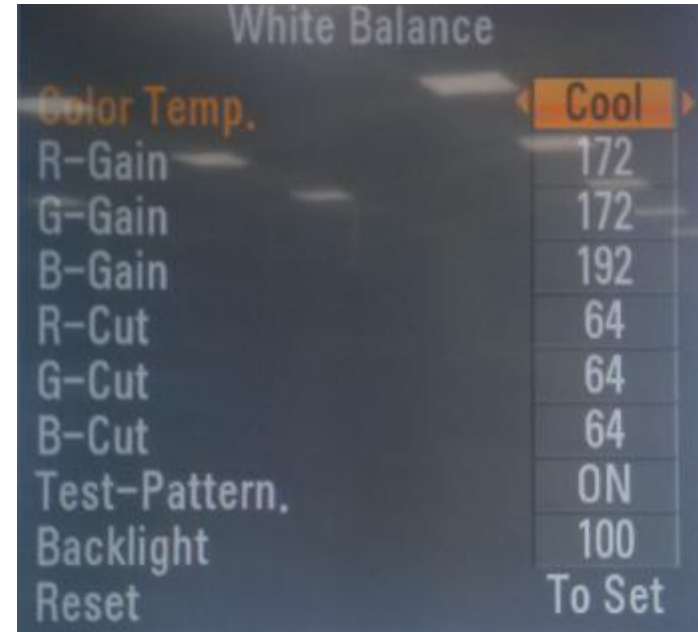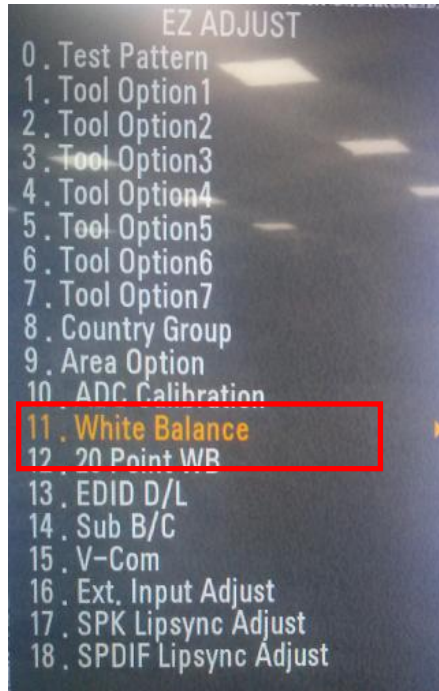

1. Press the ADJ button on the remote control for adjustment
2. Enter into White Balance of item 11
3. After recording the R, G, B (GAIN, Cut) value of Color Temp (Cool/Medium/Warm), re-enter the value after replacing the MAIN BOARD




<b>Error Symptom</b>	<b>A. Video Error, No Video/Normal Audio</b>	<b>Established date</b>		<b>A4</b>
<b>Content</b>	<b>Power Voltage Measuring Method</b>	<b>Revised date</b>		

HD Model : 27 ~ 30 pin




Check LVDS Voltage 12V

	<b>Error Symptom</b>	<b>A. Video Error, Video lag/stop</b>	<b>Established date</b>		<b>A5</b>
	<b>Content</b>	<b>Tuner Input Signal Strength Checking Method</b>	<b>Revised date</b>		

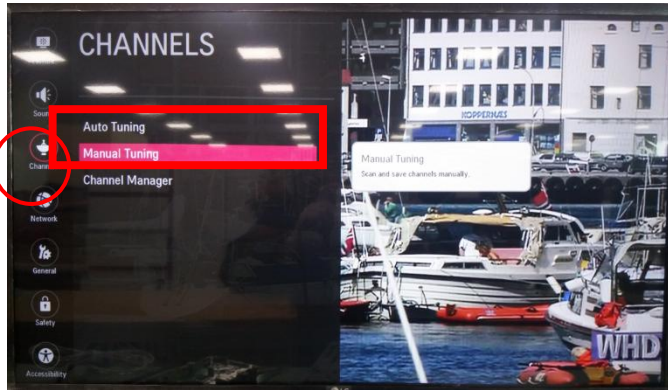

Setting → Channels → Manual Tuning → Select channel

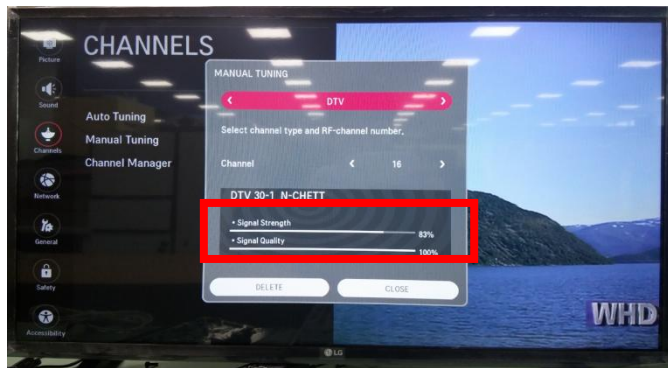


When the signal is strong, use the attenuator (-10dB, -15dB, -20dB etc.)



	<b>Error Symptom</b>	<b>A. Video Error, No Video/Normal Audio</b>	<b>Established date</b>	<b>A6</b>
	<b>Content</b>	<b>Version Checking Method</b>	<b>Revised date</b>	

**Checking SW version method for remote control for adjustment**

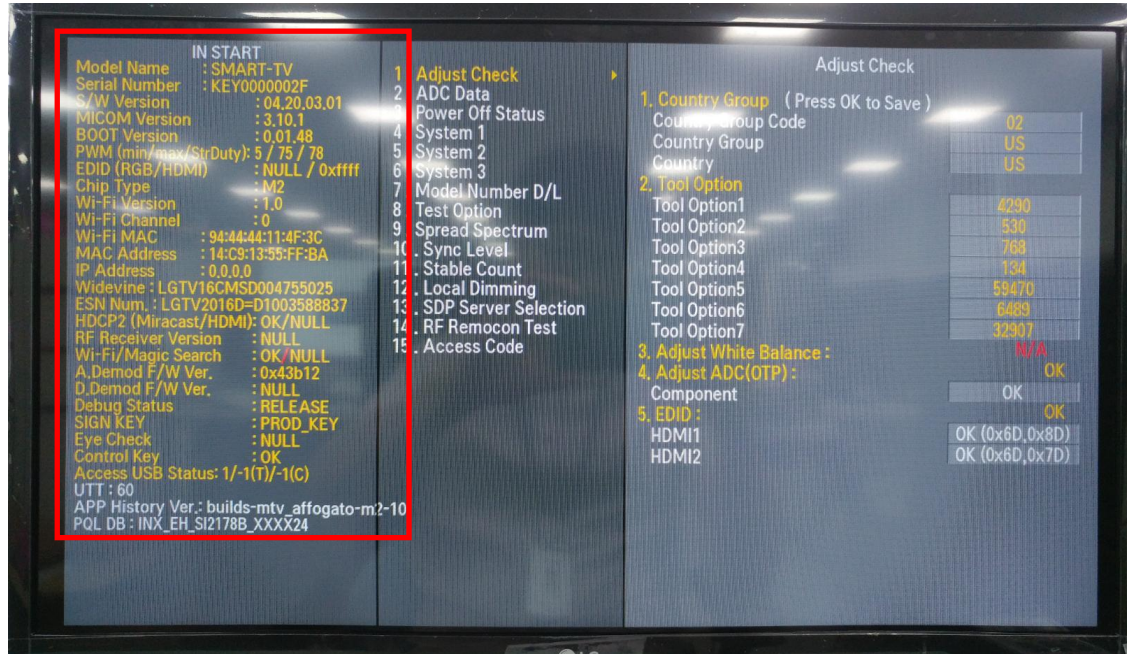

Press the IN-START with the remote control for adjustment


Error Symptom	A. Video Error, Vertical/Horizontal bar, Residual Image, Light spot	Established date		A7
Content	Connection diagram	Revised date		



**As the part connecting to the external input, check the screen condition by signal**








**\* Jack spec. : depending on Model**

<b>Error Symptom</b>	<b>A. Video Error, Color Error</b>	<b>Established date</b>		<b>A8/ A9</b>
<b>Content</b>	<b>Check and replace Link Cable(LVDS) and contact condition</b>	<b>Revised date</b>		

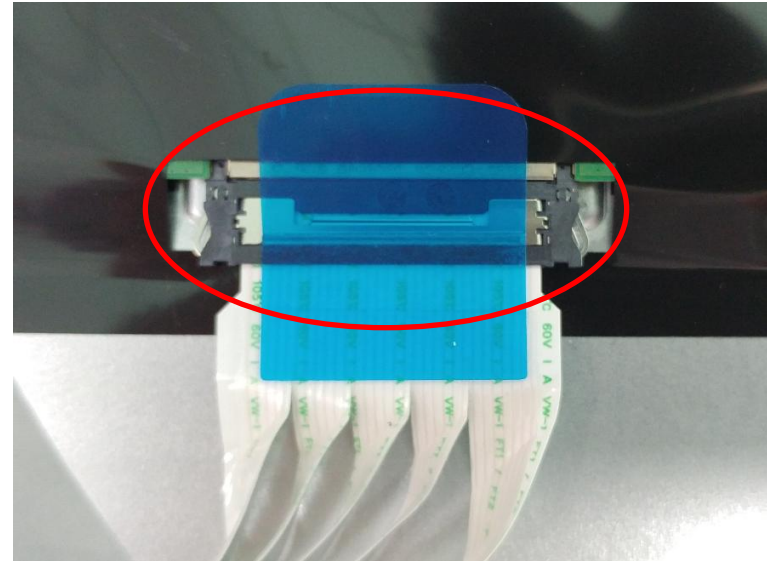

1. Check and replace LVDS Cable
2. Check LVDS connection condition

	<b>Error Symptom</b>	<b>A. Video Error, Color Error</b>	<b>Established date</b>		<b>A10</b>
	<b>Content</b>	<b>Adjustment Test Pattern – ADJ Key</b>	<b>Revised date</b>		

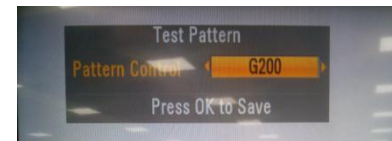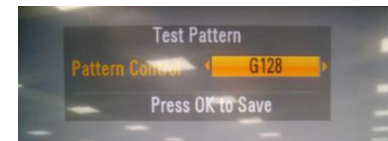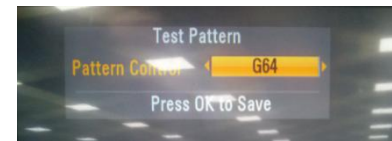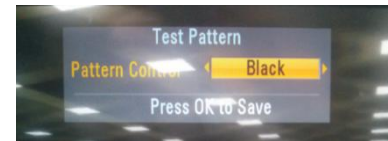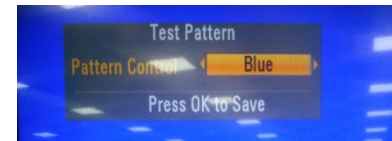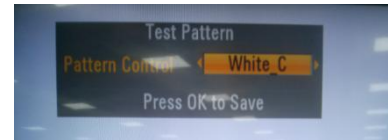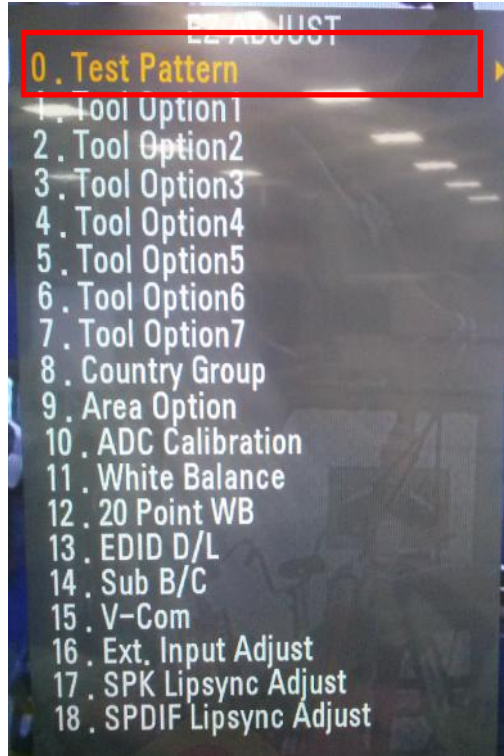


You can view 10 types of patterns using the ADJ Key

Checking item : 1. Defective pixel 2. Residual image 3. MODULE error (ADD-BAR,SCAN BAR..)  
4.Video error (Classification of MODULE or Main-B/D)


## Appendix : Exchange T-Con Board (1)



Solder defect, CNT Broken

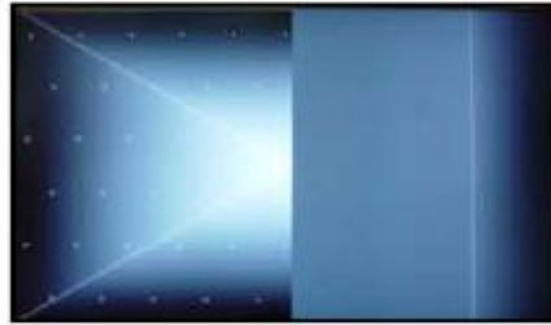


Solder defect, CNT Broken

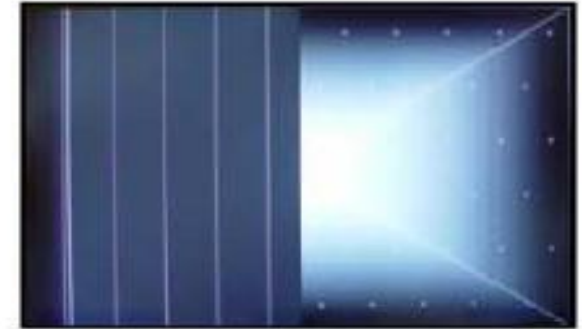

Solder defect, CNT Broken




Solder defect, CNT Broken

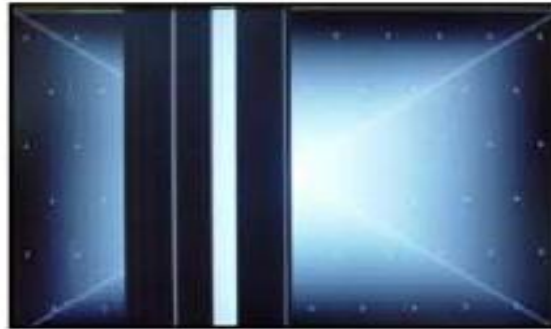

Solder defect, CNT Broken



Abnormal Power Section

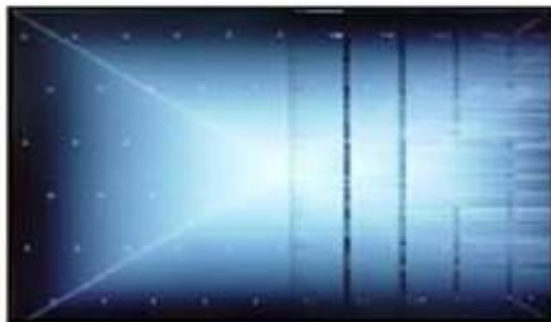

Solder defect, Short/Crack




Abnormal Power Section



Solder defect, Short/Crack

## Appendix : Exchange T-Con Board (2)

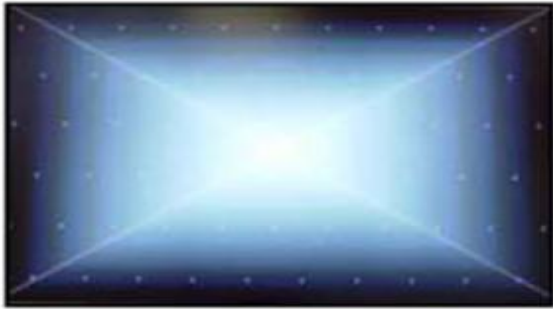

Abnormal Power Section



Abnormal Power Section



Solder defect, Short/Crack




Solder defect, Short/Crack



Fuse Open, Abnormal power section



Abnormal Display

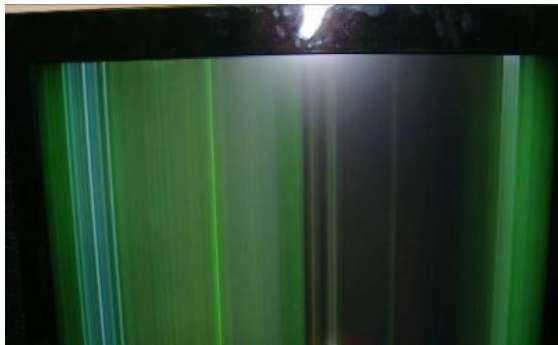

GRADATION



Noise



GRADATION



## Appendix : Exchange the Module (1)




Press damage



Press damage



Press damage

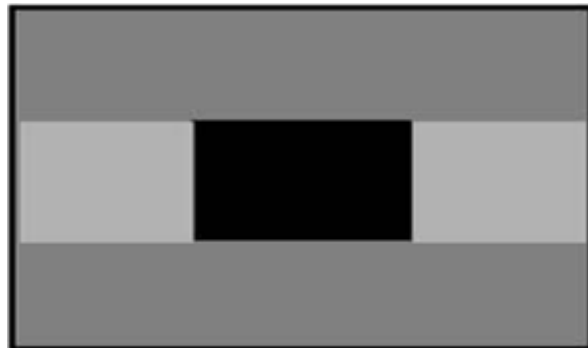

Crosstalk




Crosstalk

**Un-repairable Cases**

**In this case please exchange the module.**

## Appendix : Exchange the Module (2)

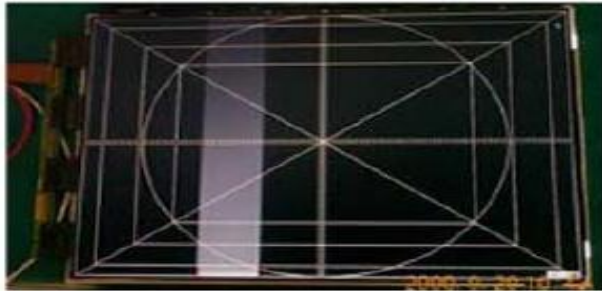

Vertical Block  
Source TAB IC Defect




Vertical Line  
Source TAB IC Defect




Vertical Block  
Source TAB IC Defect



Horizontal Block  
Gate TAB IC Defect

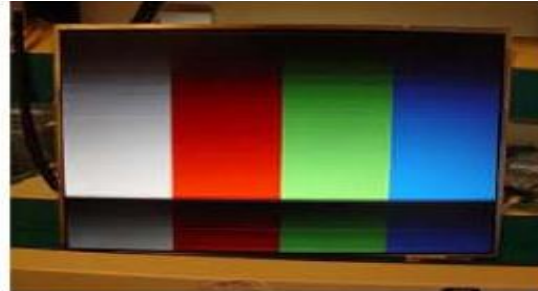

Horizontal Block  
Gate TAB IC Defect

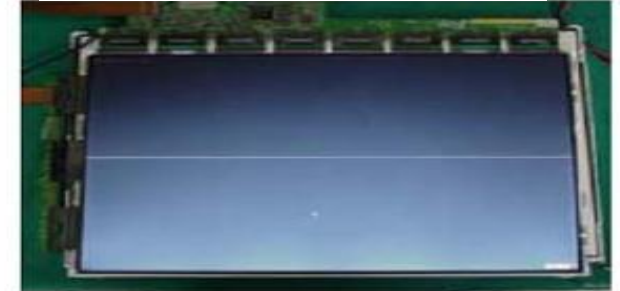

Horizontal line  
Gate TAB IC Defect




Horizontal Block  
Gate TAB IC Defect

### Un-repairable Cases

In this case please exchange the module.


	<b>Error Symptom</b>	<b>B. Power Error, No Power</b>	<b>Established date</b>		<b>A11</b>
	<b>Content</b>	<b>Check front Display LED</b>	<b>Revised date</b>		

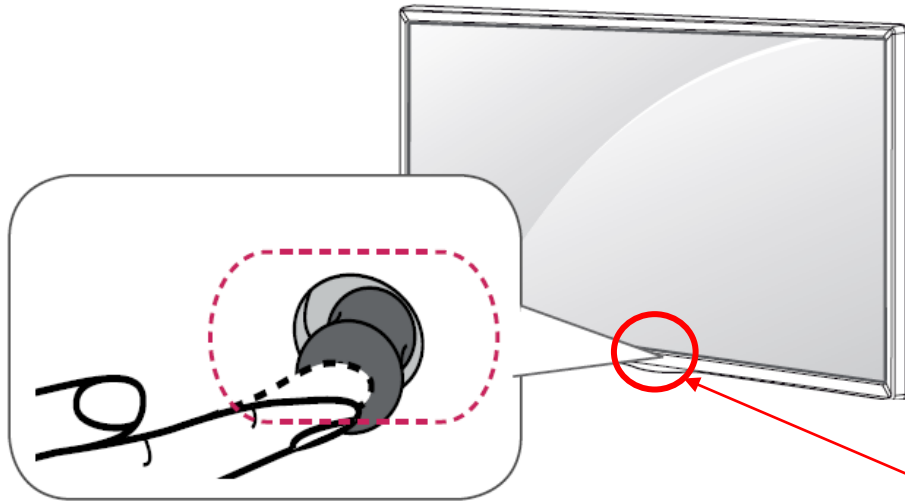

ST-BY condition: Red


Front LED control :  
Setting → Option → Standby Light → On/Off

<b>Error Symptom</b>	<b>B. Power Error, No Power</b>	<b>Established date</b>		<b>A12/ A13</b>
<b>Content</b>	<b>Checking Method When Power is ON</b>	<b>Revised date</b>		

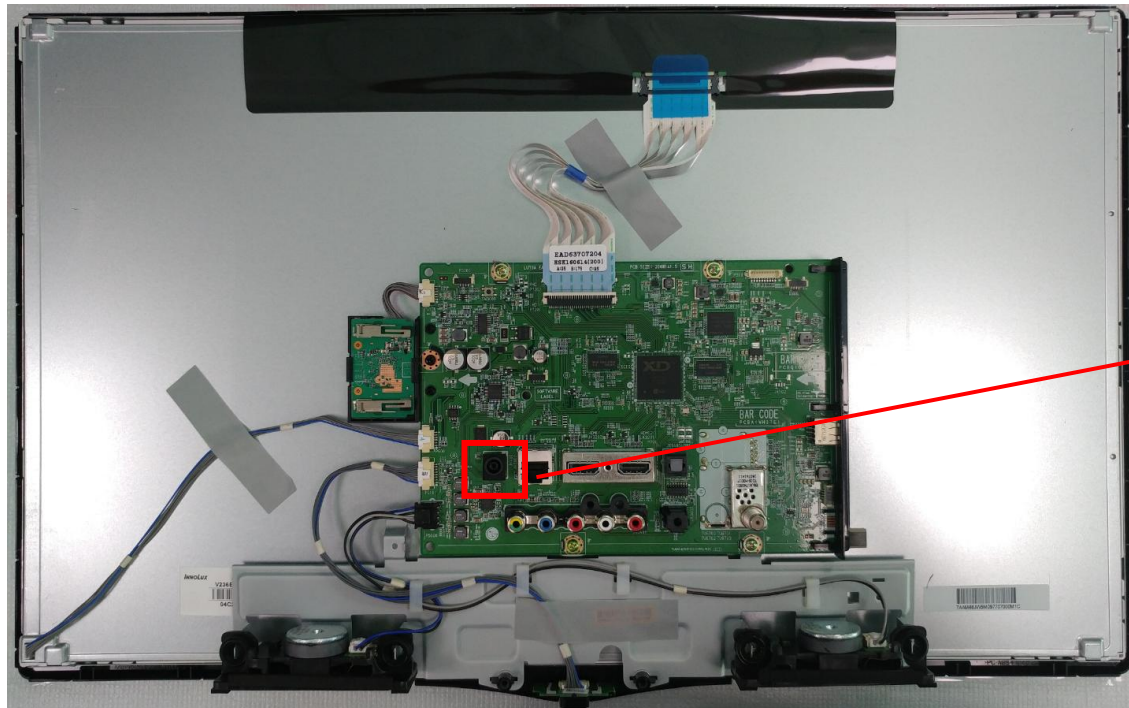


Check Voltage 19V of Adaptor Power

Error Symptom	B. Power Error, Off when on, off whiling viewing	Established date		A14
Content	Power off Mode checking method	Revised date		

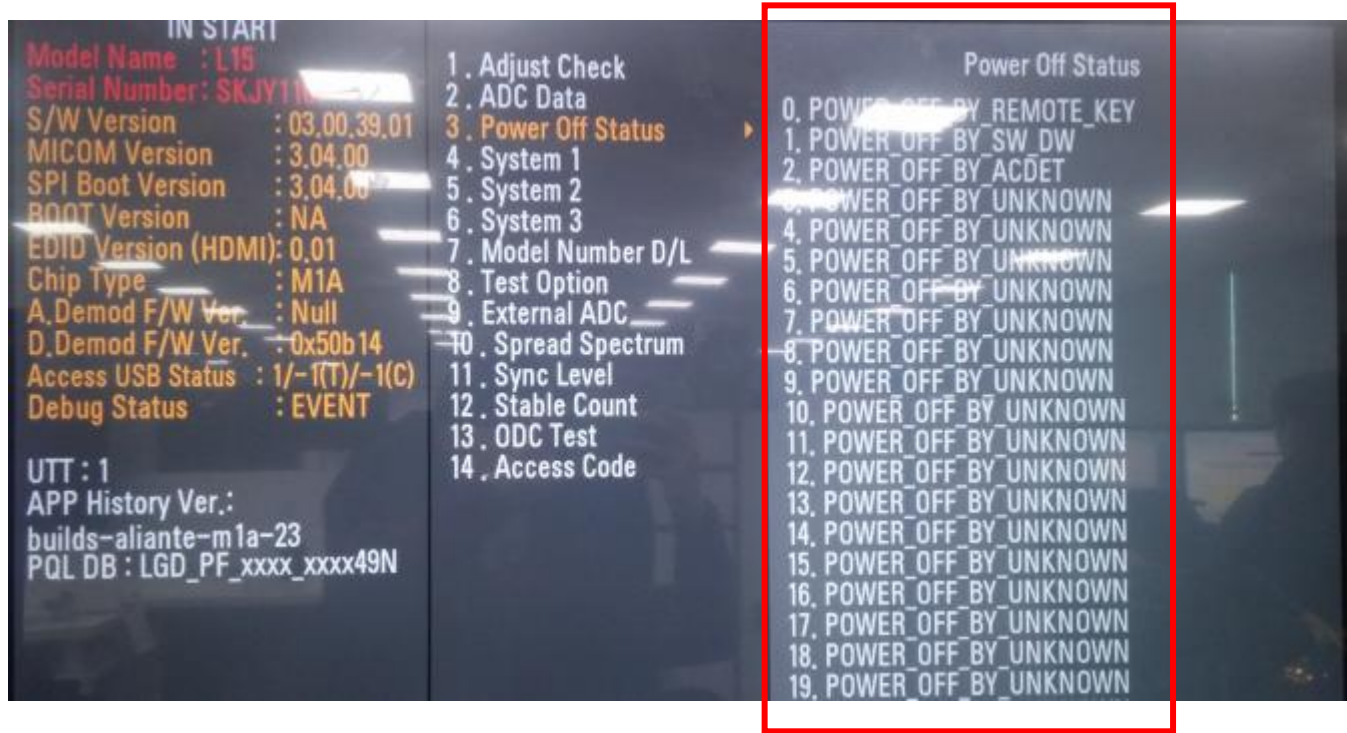


1. Press the IN-START button of the remote control for adjustment
2. Check the entry into adjustment item 3

	<b>Error Symptom</b>	<b>D. Function Error, No Response in remote control, Key error</b>	<b>Established date</b>		<b>A16</b>
	<b>Content</b>	<b>Remote control operation checking method</b>	<b>Revised date</b>		

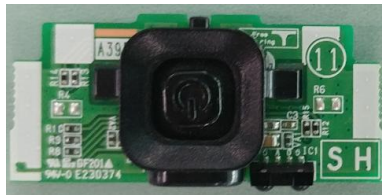

① < Sub Ass'y >

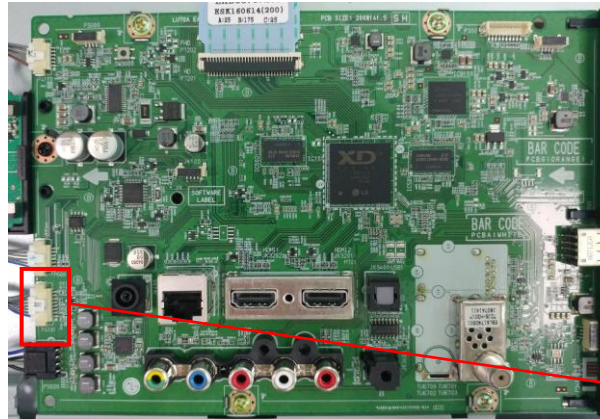


② < Main Ass'y >

③

<b>P4101</b>	
1	+3.4V_ST
2	KEY1
3	KEY2
4	GND
5	LED_R
6	NC
7	GND
8	IR

- 1, 2. Check IR cable condition between IR & Main board
3. Check the 3.4V\_ST Voltage

<b>Error Symptom</b>	<b>C. Audio Error, No Audio/Normal Video</b>	<b>Established date</b>		<b>A15</b>
<b>Content</b>	<b>Checking method in Setting when there is no audio</b>	<b>Revised date</b>		

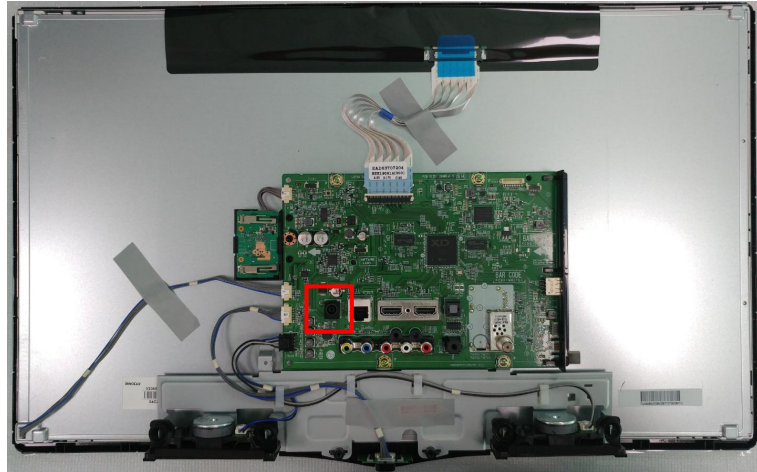

①



②

< Main Ass'y >

1. Check the contact condition of DC jack or 19V input voltage from adapter.
2. Connect the tester RX1 to the speaker terminal and if you hear the “Chik Chik” sound when you touch the GND and output terminal, the speaker is normal.